OWNER/OPERATOR'S MANUAL & ILLUSTRATED PARTS LIST

MODEL:

75-70587 ROTARY SWEEPER, 54" HYD. RS454



WARNING: If incorrectly used this machine can cause severe injury. Those who use and maintain this machine should be trained in its proper use, warned of its dangers and should read the entire manual before attempting to set up, operate, adjust or service the machine.



CALIFORNIA Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

A WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Californie Proposition 65 **Avertissement**

Les échappements des moteurs diesel et certains de leurs composés sont reconnus par l'Etat de Californie pour être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

A AVERTISSEMENT

L'émission du moteur de ce matériel contient des produits chimiques que l'Etat de Californie considère être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

California Advertencia de la Proposicion 65

El estado de California hace saber que los gases de escape de los motores diesel y algunos de sus componentes producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.



ADVERTENCIA

El estado de California hace saber que los gases de escape de este producto contienen productos químicos que producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

IMPORTANT MESSAGE

Thank you for purchasing this Jacobsen product. You have purchased a world class product, one of the best designed and built anywhere.

This product comes with an Owner/Operator's Manual. The useful life and good service you receive from this product depends to a large extent on how well you read and understand this manual. Treat this product properly and adjust it as instructed, and it will give you many years of reliable service.

See a Jacobsen dealer for any service or parts needed. Jacobsen service ensures that you continue to receive the best results possible from Jacobsen products. You can trust Jacobsen replacement parts because they are manufactured with the same high precision and quality as the original parts.

Jacobsen designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this product only as directed in the manual, keep it in good repair and follow safety warnings and instructions. You'll always be glad you did.

Jacobsen, a Textron Company One Bob Cat Lane Johnson Creek, WI 53038-0469

TABLE OF CONTENTS INTRODUCTION / SPECIFICATIONS	FIGURES	PAGE 2
SAFETY		
DECALS		
INSTALLATION INSTRUCTIONS		
OPERATION		10
SERVICE		11, 12
PARTS SECTION		
BRUSH MAIN FRAME PARTS	FIGURE 1	14, 15
HITCH PARTS		
PIVOT FRAME PARTS	FIGURE 3	
HYDRAULIC PARTS		
ELECTRICAL	FIGURE 5	

11-2003 **1**



DESCRIPTION

Clear away leaves and debris on pathways, parking lots, sidewalks, and driveways with this 54 inch wide rotary sweeper. The reversible, hardwearing nylon brush has hydraulically controlled angling for left and right hand operation. Speed and direction of rotation are controlled electrically, from the operator's seat. Caster wheels reduce ground pressure on the broom for longer life.



SPECIFICATIONS

Brush Diameter	24"
Brush Speed	265 RPM
Brush Width	
Overall Width	
Caster Wheels	
Hydraulic Angling	30 degrees left or right
Reversible?	Yes
Variable Speed	
Weight	
1	

These specifications are subject to change without notice.

NOTICE!!!

Unauthorized modifications may present **extreme** safety hazards to operators and bystanders and could also result in product damage.

Jacobsen, a Textron Company strongly warns against, rejects and disclaims any modifications, add-on accessories or product alterations that are not designed, developed, tested and approved by Jacobsen Engineering Department. Any Jacobsen product that is altered, modified or changed in any manner not specifically authorized after original manufacture—including the addition of "after-market" accessories or component parts not specifically approved by Jacobsen—will result in the Jacobsen Warranty being voided.

Any and all liability for personal injury and/or property damage caused by any unauthorized modifications, add-on accessories or products not approved by Jacobsen will be considered the responsibility of the individual(s) or company designing and/or making such changes. Jacobsen will vigorously pursue full indemnification and costs from any party responsible for such unauthorized post-manufacture modifications and/or accessories should personal injury and/or property damage result.



This symbol means:

ATTENTION! BECOME ALERT!

Your safety and the safety of others is involved.

Signal word definitions:

The signal words below are used to identify levels of hazard seriousness. These words appear in this manual and on the safety labels attached to Jacobsen machines. For your safety and the safety of others, read and follow the information given with these signal words and/or the symbol shown above.

ADANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

AWARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

ACAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices or property damage.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage

TEXTRON

GOLF. TURF & SPECIALTY PRODUCTS

MODEL NUMBER SERIAL NUMBER

JOHNSON CREEK, WI MADE IN U.S.A

MODEL NUMBER: This number appears on sales literature, technical manuals and price lists.

SERIAL NUMBER: This number appears only on your mower. It contains the model number followed consecutively by the serial number. Use this number when ordering parts or seeking warranty information.



GENERAL SAFETY

- Read and understand the owner's manual, before attempting to operate this machine.
- Operate all controls from the operator's seat, (if so equipped). NO RIDERS.
- Keep all shields in place and safety switches adjusted properly.
- Do not leave equipment unattended. STOP the engine and remove the key (if so equipped).
- Do not allow minors or the inexperienced to operate this machine.

- Never allow anyone to operate or service this machine while under the influence of alcohol or drugs.
- Keep people and pets a safe distance away from machines using power driven attachments. Injury could result from flying debris.
- Wear all the necessary protective clothing and personal safety devices to protect your head, eyes, ears, hands, and feet.
- Operate the machine only in daylight or in good artificial light.

A DANGER

KEEP HANDS AND FEET AWAY FROM RATATING BRUSH.



BE ALERT FOR DEBRIS IN THE PATH OF THE SWEEPER. OBJECTS CAN BE PROPELLED CAUSING INJURY TO BYSTANDERS OR DAMAGE TO THE ATTACHMENT



WARNING

BEFORE OPERATING THIS MACHINE READ AND UNDERSTAND THE OPERATOR'S MANUAL.

KEEP ALL SHIELDS IN PLACE AND FOLLOW ALL SAFETY RULES.

00-09

Location: Rear of Unit



WARNING

KEEP ALL SHIELDS IN PLACE

DO NOT OPERATE UNIT WITH THIS SHIELD REMOVED

00

Location: Under Chain Shield



WARNING

KEEP ALL SHIELDS IN PLACE

DO NOT OPERATE UNIT WITH SHIELD REMOVED

00-370

Location: Upper and Lower Chain Shields



A CAUTION

KEEP AWAY FROM CLOSE CLEARANCE AREAS ...

00-28

Location: Sides of Hydraulic Tank and Rear Edge of Brush Frame



WARNING

THROWN OBJECTS



REMOVE POTENTIAL THROWN OBJECTS

DO NOT OPERATE BRUSH NEAR BYSTANDERS

STAND CLEAR WHEN

00.00

Location: On Rear of Unit and Both Top Front Corners




Location: On Top of Unit




GENERAL INSTRUCTIONS

Refer to the specific model and engine listings for detailed installation instructions. The outlet locations are suggested, but when the outlet is mounted at a customer specified location, additional wiring may be needed. The wiring must be cut to length, protective mesh installed over the wires and connectors crimped to the wiring. Tie or tape the wires to prevent them from touching the hot manifold or moving parts. In all installations the circuitry must follow the diagram shown here and as outlined in this section.

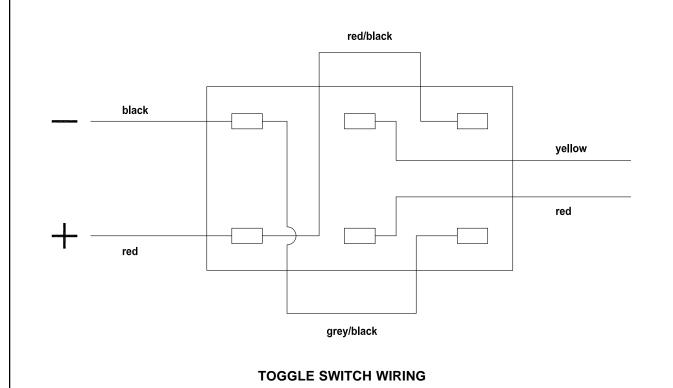

MODEL 230

- 1. Remove the front dash cover.
- 2. Using the drawing below, drill (2) 7/32" holes in the left side of the headlight support.
- 3. Mount the female half of 30-111 electrical outlet to the headlight support using (2) 10-24 X 1/2 screws and nylon locknuts.
- 4. Install the toggle switch into the dash using the existing hole on the bottom edge on the right side of the dash.
- 5. On wire harness 30-403 (red and black wires) attach black wire using 1/4" ring terminal to ground bolt inside dash. Attach red wire to longest stud on circuit breaker inside dash using #10 eye terminal. Wires may be shortened if necessary prior to installing eye terminals.
- 6. On wire harness 30-405 (red and yellow wires) route wires to female outlet and attach using two #10 eye terminals. Wires may be shortened if necessary prior to attaching eye terminals.
- 7. Replace front dash cover.

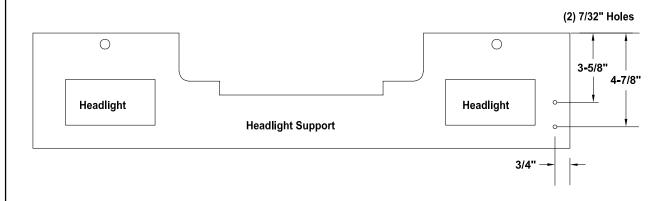


LOCATION OF HOLES TO BE DRILLED



MODEL 430

- 1. Follow drawing below to locate and drill holes for the female half of 30-111 plug assembly. Attach with (2) 10-24 X 1/2 screws and nylon locknuts.
- 2. Install the toggle switch in one of the slots below the dash near the operator's right knee when seated on the tractor. It may be necessary to file slot to allow switch to fit.
- 3. On wire harness 30-403 (red and black wires), red wire attaches to 30 amp breaker under dash using #10 terminal. Attach to the longer of two studs on breaker. Black wire attaches to 1/4" bolt at valve body mount using 1/4" eye terminal. Wires may be shortened if necessary before attaching terminals.
- 4. On wire harness 30-405 (red and yellow wires) route to female half of 30-111 plug assembly and attach using two #10 eye terminals. Wires may be shortened if necessary before attaching wire terminals.

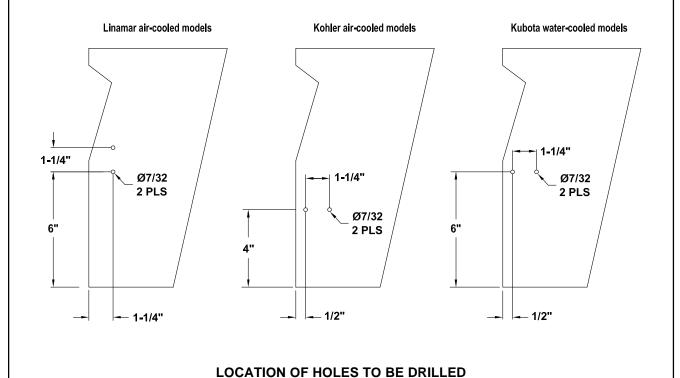



MODEL 525

- 1. Remove the center floor plate.
- 2. Install the supplied 525 switch mount to the top inside corner of the right fender using the top valve body mounting bolt.
- 3. Install toggle switch in switch mount.
- 4. Install the female half of 30-111 outlet to the supplied outlet mount using two #10-24 X 1/2 screws and nylon locknuts.
- 5. Install the outlet mount assembly to the bottom right side of the radiator cowl using the two existing cowl mounting bolts. The outlet assembly should be mounted so the male plug goes in from the front.
- 6. On wire harness 30-403 (red and black wires) attach the supplied fuse holder to the red wire using a butt connector. Attach a 1/4" eye terminal to the other end of the fuse holder. Attach the 1/4" eye terminal to the breaker near the battery inside the battery compartment. Attach a 5/16" eye terminal to the black wire and attach wire to the negative battery post. Wires may be shortened if necessary prior to installing fuse holder and eye terminals.
- 7. On wire harness 30-405 (red and yellow wires) route down through battery compartment along hydraulic hoses, under center floor, and up to female electric connector that was mounted on side of radiator cowl in previous step. Attach two #10 eye terminals to wires and attach wires to female electrical outlet.
- 8. Replace center floor plate.

OPERATING PRECAUTIONS



Observe all Safety Decals.

Keep all Shields in place.

Before leaving tractor, move Forward - Reverse control to neutral position, disengage PTO, set parking brake, and stop engine.

MOUNTING INSTRUCTIONS

- 1. Install drive belt over left hitch arm and move tractor into position until the quick hitch can be latched.
- 2. Stop engine and install drive belt.
- 3. Connect cylinder hoses to the auxiliary outlets.
- 4. Connect the 12V plug to the outlet mounted on the power unit.

ACAUTION

RUNNING BRUSH IN REVERSE MAY THROW DEBRIS IN OPERATOR'S DIRECTION. USE EXTREME CAUTION. OPERATE BRUSH ONLY AT A LOW SPEED.

OPERATING INSTRUCTIONS

- 1. Adjust sweeper angle to the right, left or straight ahead position using the auxiliary hydraulic control lever.
- 2. Engage PTO and set engine speed.
- 3. Lower sweeper by placing lift in FLOAT position.
- 4. Move forward slowly.

ACAUTION

BE ALERT FOR OBJECTS IN THE PATH OF THE SWEEPER. POWER DRIVEN BRUSH MAY THROW OBJECTS CAUSING DAMAGE TO PROPERTY OR INJURY TO BYSTANDERS.



MAINTENANCE

Daily Maintenance:

- » Check for signs of loose or missing bolts etc. Tighten or replace as needed.
- » Remove plastic plug in chain shield and check chain. Lube with roller chain lube or #30 oil. Chain should not run "dry".

Note: Serial number 1001 through 1036 - plastic plug is in bottom shield. Serial number 1037 and up - plastic plug is in top shield.

- » Check oil level in reservoir. Oil level should be approximately 2" from the top. Fill only with Steiner Trans-Hydraulic Oil or Texas Refinery Corp. 6440 Universal Torque Fluid.
- » Inspect hoses for signs of wear, kinks, fatigue, or leaks.
 Note: The quick couplers will leak a small amount of oil when disconnected, so keep hoses clean so that if a leak develops it can be detected early.

AWARNING

If a hydraulic leak is suspected, use a piece of cardboard or wood, not your hands, to check for leaks. Escaping hydraulic oil under pressure can have sufficient force to penetrate skin and cause serious injury.

Weekly Maintenance:

In addition to daily maintenance:

- » Grease (2) brush bearings, (1) swivel ball in pivot frame, (2) caster wheels, and (2) caster pivots.
- Lube and adjust roller chain as needed.
 Serial no. 1001 through 1036 Remove chain shield to inspect and lube chain.
 Serial no. 1037 and up Remove plastic plug from top shield to inspect and lube chain.

Hydraulic System:

» Initial filter and oil change at 50 hours, thereafter, annually or 250 hours, whichever comes first. Oil tank capacity is 5.5 gallons.

Storage:

» Clean entire machine and support on blocks to keep brush off the floor. Weight on the brush bristles will distort the shape of the brush.



ADJUSTMENTS

Drive Chain Adjustment:

Chain tension is set by an idler sprocket mounted on a chain tensioner. Proper tension is 1/4" chain deflection between the brush sprocket and drive sprocket.


Serial no. 1001 through 1036 - Removal of the lower chain shield is necessary to properly check adjustment. If adjustment is needed, loosen the flange bolt which holds the tensioner. Locate the tensioner adjusting bolt (square head set screw). Loosen the locking jam nut on the adjusting bolt. Turn the adjusting bolt until proper tension is achieved. Tighten the flange bolt and the jam nut. Replace the shield.

Serial no. 1037 and up - Remove the plastic plug from the bottom chain shield. Insert a 9/16 socket and socket extension through hole in bottom shield. Loosen flange bolt holding the chain tensioner to the brush frame. Locate the tensioner adjusting bolt (square head set screw). Loosen the locking jam nut on the adjusting bolt. Turn the adjusting bolt until proper tension is achieved. Tighten the flange bolt and the jam nut. Replace plastic plug in shield.

Gauge Wheel Adjustment:

The gauge wheels allow the sweeper to follow the contour of the surface. The height is adjustable in 1/4" increments by moving the spacers on the caster wheel frame. The correct height adjustment is when the broom just touches the surface and provides a "clean sweep". Excessive broom wear and power requirements may result from settings which are too low.


PARTS SECTION

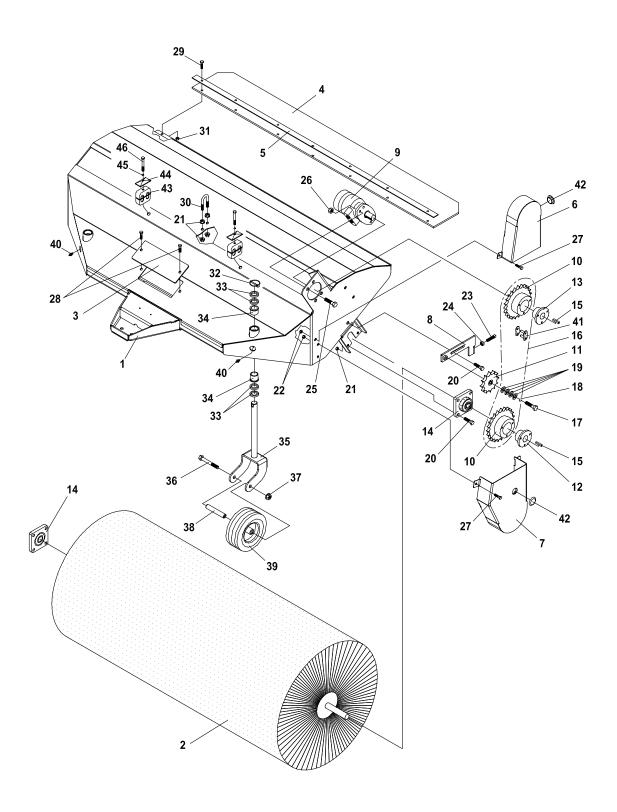

BRUSH MAIN FRAME PARTS

ROTARY SWEEPER

ITEM	PART NO	. DESCRIPTION	QTY	ITEM	PART NO	. DESCRIPTION	QTY
1-1	6124023	FRAME, MAIN BRUSH	1	1-31	64141-2	NUT-WLF 1/4-20	7
1-2	6124037	BRUSH, 24" DIA. X 54" LNG	3 1	1-32	03-025	CLIP, 7/16	2
1-3	6124040	COVER, ACCESS	1	1-33	6112057	SPACER ENGINE PULLEY	40
1-4	6124017	GUARD, FRONT	1	1-34	85-B34	BUSHING-FLANGED	4
1-5	6124016	RETAINER, GUARD	1	1-35	6124030	YOKE, CASTER	2
1-6	6124052	TOP CHAIN GUARD	1	1-36	64123-135	BLT-HEX 1/2-13X5	2
1-7	6124056	BOTTOM CHAIN GUARD	1	1-37	64141-13	NUT WLF 1/2-13	2
1-8	6124057	TENSIONER, CHAIN	1	1-38	6101062	AXLE, CASTER WHEEL	2
1-9	21-118	MOTOR, HYD. 12.0 CIR	1	1-39	53-181	WHEEL, 6.25 X 3.00	2
1-10	83-H60P22	SPROCKET, #60 22-TTH	2	1-40	29-053	GREASE FITTING, 1/4-28	2
1-11	83-6015E0	8 IDLER-SPRKT#60 15-TTH	1	1-41	81-024	CONNECTOR LINK	1
1-12	83-P116	BUSHING	1	1-42	06-058	CAP PLUG, 1-1/8"	1
1-13	83-P120	BUSHING, 1-1/4 P1	1		(SN 1001 -	1036)	
1-14	55-FB2201	6 FLANGE BEARING	2		06-058	CAP PLUG, 1-1/8"	2
1-15	124428	KEY, 1/4" X 1/4" X 1-3/4" LG	2		(SN 1037 -)	
1-16	56-RC60	CHAIN, ROLLER 52-3/8 LNG	G 1				
1-17	64123-05	BLT-HEX 1/2-20X1-1/2	1	1-43	11-067	CLAMP	2
1-18	64006-05	LOCKWSHR-HELICAL 1/2	1	1-44	11-068	PLATE, HOSE CLAMP	2
1-19	F5054	WSHR-MACH 1/2X7/8X.032	A/R	1-45	64006-02	LOCKWASHER-HEL 5/16	2
1-20	64139-24	BLT-WLF 3/8-16 X 1	9	1-46	64123-64	BLT-HEX 5/16-18X2-1/4	2
1-21	64141-4	NUT-WLF 3/8-16	12				
1-22	64141-6	NUT, 5/16-18	4				
1-23	85-SS22	SET SCREW,3/8-16X3	1				
1-24	64001-6	NUT-HEX JAM,3/8-16	1				
1-25	64123-117	BOLT-HEX 1/2-13X1-1/2	4				
1-26	64229-05	LOCKNUT, 1/2-13 NYLON	4				
1-27	64139-08	BOLT-5/16-18X3/4	4				
1-28	64139-02	BLT-WLF 1/4-20X1/2	2				
1-29	64139-04	BOLT-WLF 1/4-20X3/4	7				
1-30	99-K48	U-BOLT, 1"ID X 2-1/4"LONG	3 1				
				1			

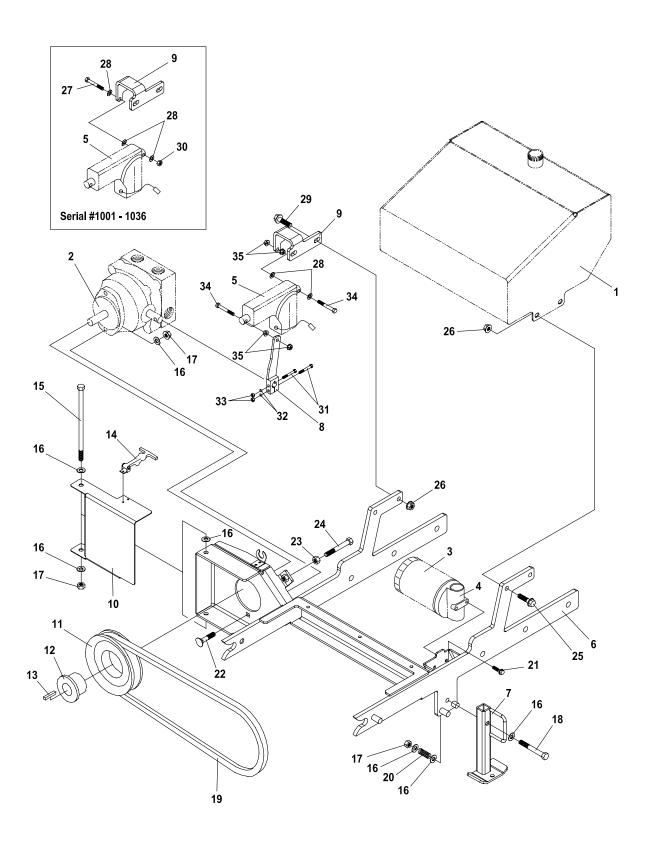


HITCH PARTS


ROTARY SWEEPER

ITEM	PART NO	DESCRIPTION	QTY	ITEM	PART N
2-1	6124045	TANK, HYD. OIL	1	2-31	64205-0
2-2	21-117	PUMP, HYDROSTATIC 16cc	1	2-32	64006-1
2-3	21-093	FILTER, HYDRAULIC	1	2-33	64207-0
2-4	21-095	FILTER HEAD	1	2-34	90-0414
2-5	37-030	ACTUATOR	1		(SN 100°
2-6	6124044	HITCH-FRAME RS454	1		90-0414
	(SN 1001 -	1036)			(SN 1037
	6124074	HITCH-FRAME RS454	1		
	(SN 1037 -)		2-35	64141-2
					(SN 100°
2-7	6124060	STAND, SUPPORT	1		64141-2
2-8	6124064	ARM, ACTUATOR	1		(SN 1037
2-9	6124034	MOUNT-ACTUATOR	1		
	(SN 1001 -	1036)			
	6124071	MOUNT-ACTUATOR	1		
	(SN 1037 -)			
2-10	6124048	SHIELD, PULLEY	1		
		PULLEY, FOR 60" DECK	1		
	83-H17MM		1		
	85-K101		1		
	47-090		1		
		BOLT,3/8-16 X 8	1		
		WSHR .81X.406X16GA	8		
		LOCKNUT-NYLON 3/8-16	4		
		BOLT, 3/8-16X3 HEX	1		
	81-A046	BELT, A46	1		
	41-053		1		
		BLT-WLF 1/4-20X1/2	2		
		BLT-CRG 3/8-16X1-1/4	2		
		NUT-HEX JAM,3/8-16	1		
		SET SCREW, 3/8-16 X 1-1/2	1		
		BLT-WLF 3/8-16 X 1	2		
2-26	64141-4	NUT-WLF 3/8-16	4		
	64123-07		1		
	(SN 1001 -				
2-28	64163-03	WSHR256ID X.62OD X 18	3		
	(SN 1001 -		•		
		WSHR256ID X.62OD X 18	2		
	(SN 1037 -				
2-29	64139-18	BLT-WLF 3/8-16X1-1/4	2		
2-30		LOCKNUT-NYLON 1/4-20	1		
	(SN 1001 -				
	, =	/			


ITEM	PART NO.	DESCRIPTION	QTY
2-31	64205-014	BLT-METRIC M6-1X35	2
2-32	64006-1	LOCKWASHER, 6MM	2
2-33	64207-06	NUT-HEX M6-1	2
2-34	90-0414 (SN 1001 -	BOLT,1/4-20 X 1-3/4 1036)	1
	90-0414 (SN 1037 -	BOLT,1/4-20 X 1-3/4)	2
2-35	64141-2 (SN 1001 -	NUT-WLF 1/4-20 1036)	2
	`	NUT-WLF 1/4-20	4

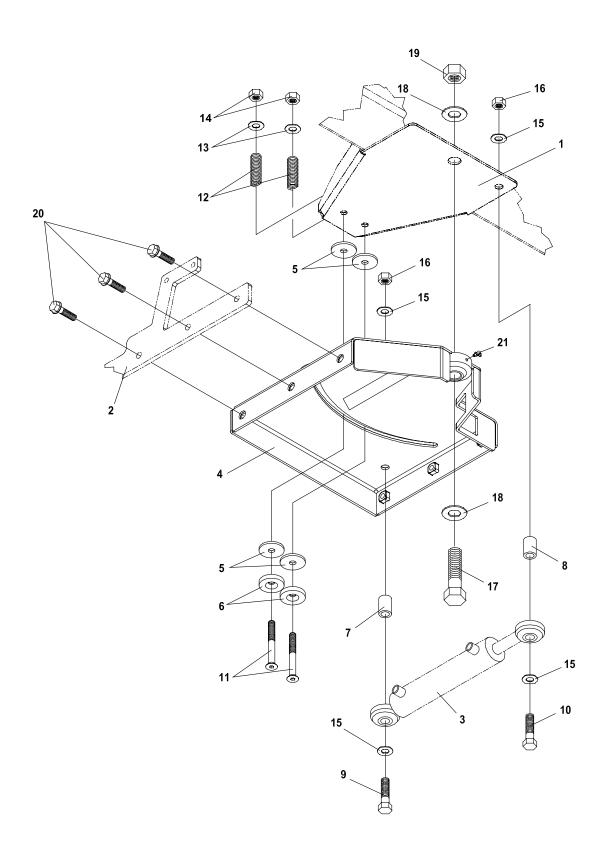

ITEM	PART NO	. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
3-1	6124023	FRAME, MAIN BRUSH	1				
3-2	6124044	HITCH-FRAME RS454	1				
	(SN 1001 -	1036)					
	6124074	HITCH-FRAME RS454	1				
	(SN 1037 -)					
3-3	23-058	CYLINDER, 1-1/2 X 5 DUMF	² 1				
3-4	6124042	PIVOT FRAME	1				
3-5	6124041	WASHER, NYLON	4				
3-6	6124018	WASHER, BACKING	2				
3-7	6124066	SPACER-CYLINDER REAR	1				
3-8	6124067	SPACER-CYLINDER FRON	T 1				
3-9	90-1028	BOLT,5/8-11 X 3-1/2	1				
3-10	90-1032	BOLT,5/8-11 X 4	1				
3-11	99-30	BOLT, 1/2-13 X 4	2				
3-12	41-034	SPRING-COMP 0.968X2.0C)A 2				
3-13	64163-67	WASHER516X1X12GA	2				
3-14	64229-05	LOCKNUT, 1/2-13 NYLON	2				
3-15	64163-16	WASHER-41/64X1, 3/8X12	4				
3-16	99-A10	LOCKNUT, STOVER 5/8-11	2				
3-17	91-1632	BOLT,1-14 X 4	1				
3-18	64163-84	WASHER-1.015 X 1.75 X.12	25 2				
3-19	64151-9	HEX LOCKNUT	1				
3-20	64139-22	BLT-WLF 1/2-13X1	6				
3-21	29-014	GREASE FITTING, 1/4-28 9	0 1				
		,					

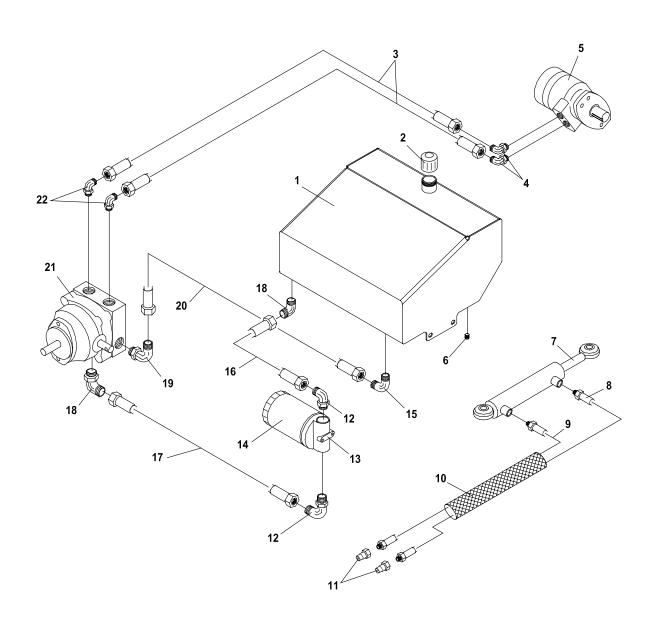

ITEM	PART NO	. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
4-1	6124045	TANK, HYD. OIL	1				
4-2	21-098	CAP, BREATHER	1				
4-3	20-247	HOSE, 5/8 X 81 -10	2				
4-4	25-2503-10	-10 FTG-90-10MORB/-10	2				
4-5	21-118	MOTOR, HYD. 12.0 CIR	1				
4-6	29-054	PIPE PLUG	1				
4-7	23-058	CYLINDER, 1-1/2 X 5 DUMF	P 1				
4-8	20-245	HOSE, 1/4 X 54 -4	1				
4-9	20-246	HOSE, 1/4 X 50 -4	1				
4-10	56-076	SLEEVING, ID 1.53 NYL 12'	' 1				
4-11	23-004	MALE QUICK COUPLER	2				
4-12	25-2503-12	-10 FTG-90-12M ORB/-10M	2				
4-13	21-095	FILTER HEAD	1				
4-14	21-093	FILTER, HYDRAULIC	1				
4-15	25-2503-8-	6 FTG-90-8M ORBX-6M	1				
4-16	20-243	HOSE, 1/2 X 12-3/4 -8	1				
4-17	20-244	HOSE-1/2X19 -8 FJIC X -10	1				
4-18	25-2503-8-	8 FTG-90-8M ORBX-8M	2				
4-19	25-2503-6-	6 FTG-90-6M ORBX-6M	1				
4-20	20-242	HOSE, 3/8 X 19-1/4 -6	1				
4-21	21-117	PUMP, HYDROSTATIC 16c	c 1				
4-22	25-3503-8-	10 FTG-45 -8M ORBX -10M	2				

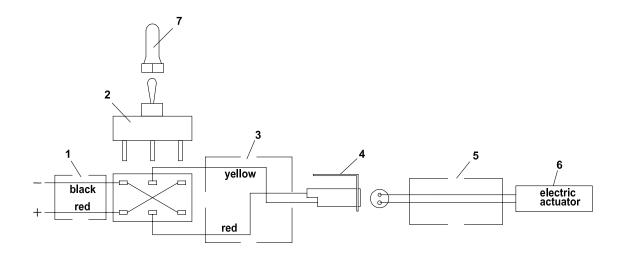

ITEM	PART NO	. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
5-1	30-403	SWITCH	1				
5-2	J0036	SWITCH, TOGGLE	1				
5-3	30-405	CONNECTOR	1				
5-4	30-111	CONNECTOR ASSY	1				
5-5	30-406	ACTUATOR	1				
5-6	37-030	ACTUATOR, ELEC.	1				
5-7	J9505	BOOT NUT	1				
*	30-004D	TERMINAL, 1/4 EYE	1				
	(14 - 16 GA	A.)					
*	30-004E	TERMINAL, 5/16 EYE	1				
	(14 - 16 GA	A.)					
*	30-004H	FUSE HOLDER, 15 AMP	1				
*	30-004J	TERMINAL, #10 EYE	3				
	(14 - 16 GA	•					
*	30-004L	TERMINAL, 14GA	1				

World Class Quality, Performance And Support



Equipment from Jacobsen, a Textron company, is built to exacting standards ensured by ISO 9001 and ISO 14001 registration at all our manufacturing locations.

A worldwide dealer network and factory-trained technicians backed by Textron Parts Xpress provide reliable, high-quality product support.

