



430 Classic

Limited 25th Anniversary Edition

4 - WHEEL DRIVE TRACTOR

Starting Serial No. AB1001

Illustrated Parts Manual



CAUTION

Avoid injuries. Read and understand Operator's manual
before operating tractor or equipment.
It contains instructions for safe operation.



CAUTION

- READ AND UNDERSTAND OPERATORS MANUAL BEFORE OPERATING OR SERVICING.
- OBEY ALL SAFETY INSTRUCTIONS. FAILURE TO DO SO MAY RESULT IN INJURY TO YOU OR OTHERS.
- BE SURE MACHINE IS IN SAFE OPERATING CONDITION BEFORE USE.
- INSPECT MACHINE DAILY. REPLACE ALL WORN OR DAMAGED PARTS.
- KEEP ALL GUARDS AND SHIELDS IN PLACE.
- CHECK OPERATION OF ALL SAFETY INTERLOCK SWITCHES DAILY.
- DO NOT OVERRIDE INTERLOCK SYSTEM, IT IS FOR YOUR PROTECTION.
- DO NOT ALLOW MINORS OR THE INEXPERIENCED TO OPERATE MACHINE.
- KEEP PEOPLE AND PETS A SAFE DISTANCE AWAY FROM MACHINE USING POWER DRIVEN ATTACHMENTS. INJURY COULD RESULT FROM FLYING DEBRIS.

Date of Purchase: Month _____ Day _____ Year _____

Dealer Name _____ Phone _____

Serial Number _____

Model Number _____

ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING SERVICE PARTS



STEINER TURF EQUIPMENT, INC.
289 N. Kurzen Rd., P.O. Box 504
Dalton, Ohio 44618

Telephone: (330) 828-0200
FAX: (330) 828-1008


TABLE OF CONTENTS

PARTS INDEX


ELECTRICAL	SECTION 1	page
Linamar	Fig. 1 - 1	1-2
430 Dash Electrical.	Fig. 1 - 2	1-6
ENGINE	SECTION 2	
Linamar Engine.	Fig. 2 - 1	2-2
HYDRAULICS	SECTION 3	
Primary Hydraulic System	Fig. 3 - 1	3-2
Implement Hydraulic System	Fig. 3 - 2	3-4
Sundstrand Pump	Fig. 3 - 3	3-6
Sundstrand Motor	Fig. 3 - 4	3-8
FRAME, DRIVE PARTS, AXLES	SECTION 4	
Axles and Wheels	Fig. 4 - 1	4-2
Peerless Transaxle	Fig. 4 - 2	4-4
Rear Frame Parts.	Fig. 4 - 3	4-6
Rear Frame Parts (continued)	Fig. 4 - 4	4-8
Hood and Grill Parts	Fig. 4 - 5	4-10
Controls (F/R Lever)	Fig. 4 - 6	4-12
Front Frame Parts	Fig. 4 - 7	4-14
PTO Linkage & Frame	Fig. 4 - 8	4-16
Front Hitch & PTO Parts	Fig. 4 - 9	4-18
DECALS	SECTION 5	
Decals	Fig. 5 - 1	5-2
ACCESSORIES	SECTION 6	
RB430 - Roll Bar	Fig. 6 - 1	6-2
WB150 - Rear Weight Bar	Fig. 6 - 2	6-3
WB153 - 3 Point Hitch Weight Bar	Fig. 6 - 3	6-4
WB140 - Front Weight Bar	Fig. 6 - 4	6-5
PT420 - 3-Point Hitch.	Fig. 6 - 5	6-6
PT420 - 3-Point Hitch Attachment Parts	Fig. 6- 6	6-7
DW100 - Dual Wheels	Fig. 6 - 7	6-8
Optional Hydraulic Cooler	Fig. 6 - 8	6-9
SH430 Sun Shade Canopy	Fig. 6 - 9	6-9

SECTION 1
ELECTRICAL

Linamar Electrical
Figure 1-1

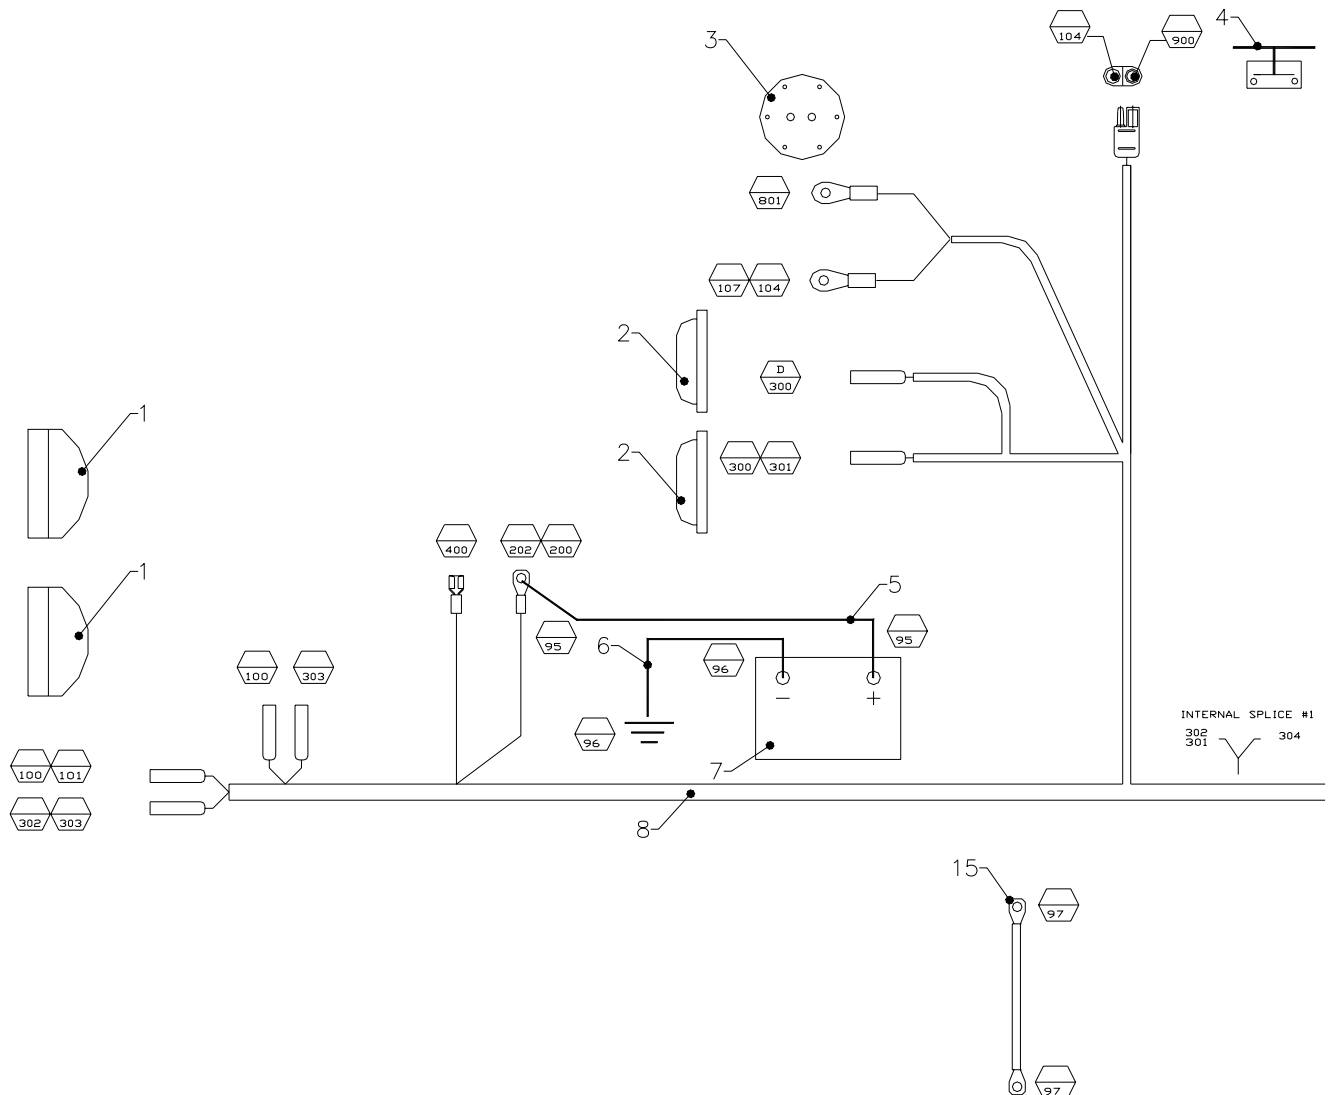

Linamar Electrical
Figure 1-1

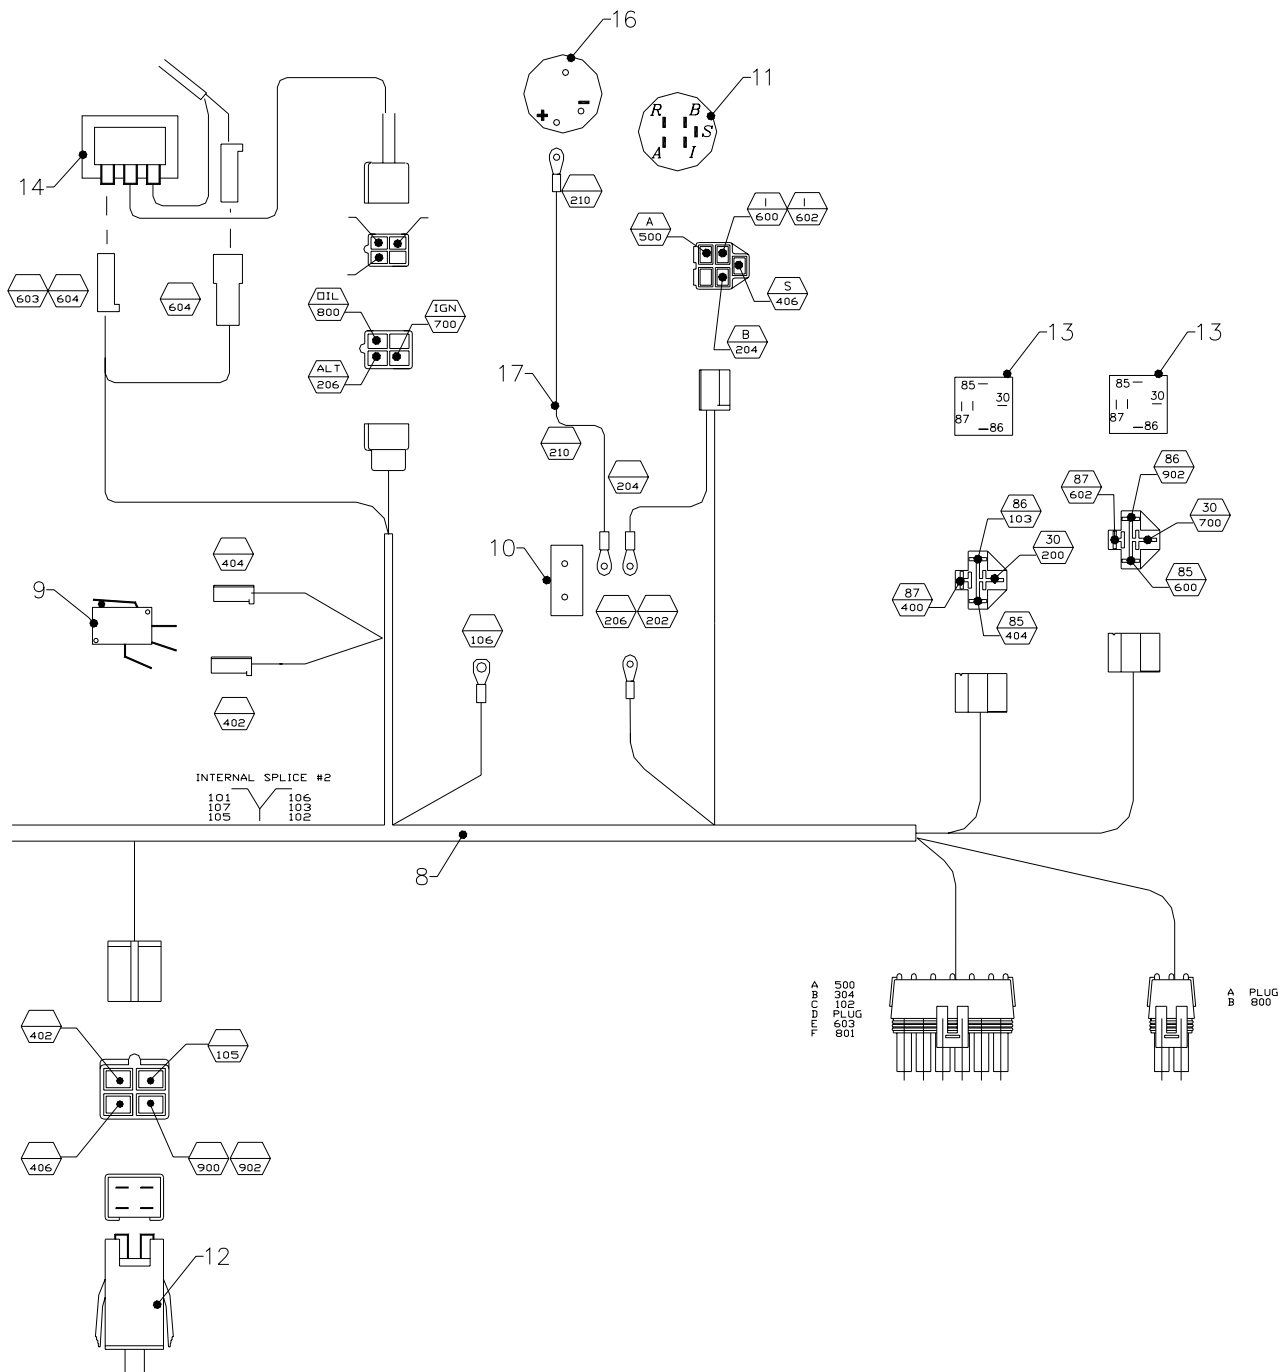


Linamar Engine Electrical Circuit Legend

Circuit No.	Gauge	Color	Destination
95	4	red	+ battery to solenoid battery terminal
96	4	black	- battery to engine mount bolt
97	braided	silver	engine mount bolt to frame
100	16	black	headlight to headlight
101	16	black	headlight to internal splice #2
102	16	black	dash bulk connector to internal splice #2
103	16	black	starter circuit relay (86) to internal splice #2
104	16	black	seat switch to fuel sender
105	16	black	P.T.O. safety switch to internal splice #2
106	14	black	ground bolt to internal splice #2
107	16	black	fuel sender to internal splice #2
200	12	red	starter circuit relay (30) to solenoid battery terminal
202	14	red	(BAT) circuit breaker to solenoid battery terminal
204	14	red	ignition switch (B) to (AUX) circuit breaker
206	16	red	(BAT) circuit breaker to engine connector
210	16	red/white	(AUX) circuit breaker to clock (+)
300	16	yellow	left tail light to right tail light
301	16	yellow	left tail light to internal splice #1
302	16	yellow	left headlight to internal splice #1
303	16	yellow	headlight to headlight
304	16	yellow	bulk dash connector (B) to internal splice #1
400	14	lt. green	starter solenoid to starter circuit relay (87)
402	14	lt. green	P.T.O. safety switch to forward/reverse neutral switch
404	14	lt. green/black	forward/reverse neutral start switch to starter circuit relay(85)
406	14	lt. green/black	P.T.O safety switch to ignition switch (S)
500	16	white	dash bulk connector (A) to ignition switch (A)
600	16	grey/black	ignition switch (I) to safety circuit relay (85)
602	16	grey/black	ignition switch (I) to safety circuit relay (87)
603	16	grey	regulator (AC) to dash bulk connector (E)
604	16	grey	regulator (AC) to engine harness
700	16	lt. blue	engine connector to safety circuit relay (30)
800	16	purple	engine connector to 2 prong dash connector (B)
801	16	pink	fuel sender (S) to dash bulk connector (F)
900	16	brown	seat switch to P.T.O. safety switch
902	16	brown	safety circuit relay (86) to P.T.O. safety switch

Parts List for Figure 1 - 1

1	33-017	Headlight, Sealed Beam	2
2	33-034	Taillight, Red	2
3	35-084	Sender, Fuel Level	1
4	31-032	Switch, Seat	1
5	30-125	Battery Cable, 4 Gauge 48" Long	1
	30-098	Cover, Pos. Battery Terminal	1
	56-081	Sleeving, .77 ID Nylon	3.6 ft.
6	30-127	Battery Cable, 4 Gauge 19" Long	1
	30-105	Cover, Neg. Battery Terminal	1
7	33-015	Battery	1
8	30-289	Wire Harness, 430 Linamar	1
9	31-038	Switch, Neutral Start	1
10	30-059	Breaker, Circuit 30 Amp	1
11	31-044	Ignition Switch, Linamar	1
	31-046	Key, Moulded	1
	31-047	Hardware Set For 31-044	1
	99-G05	Lock Washer, 1-1/8 Inter Tooth	1
12	31-043	Switch, PTO	1
13	35-067	Relay, Sealed Plastic	2
14	13-191-2106	Regulator	1
15	30-291	Strap, Braided Ground	1
16	35-126	Gauge, Clock	1
17	30-375	Wire Harness, Clock Feed	1

430 Dash Electrical
Figure 1 - 2

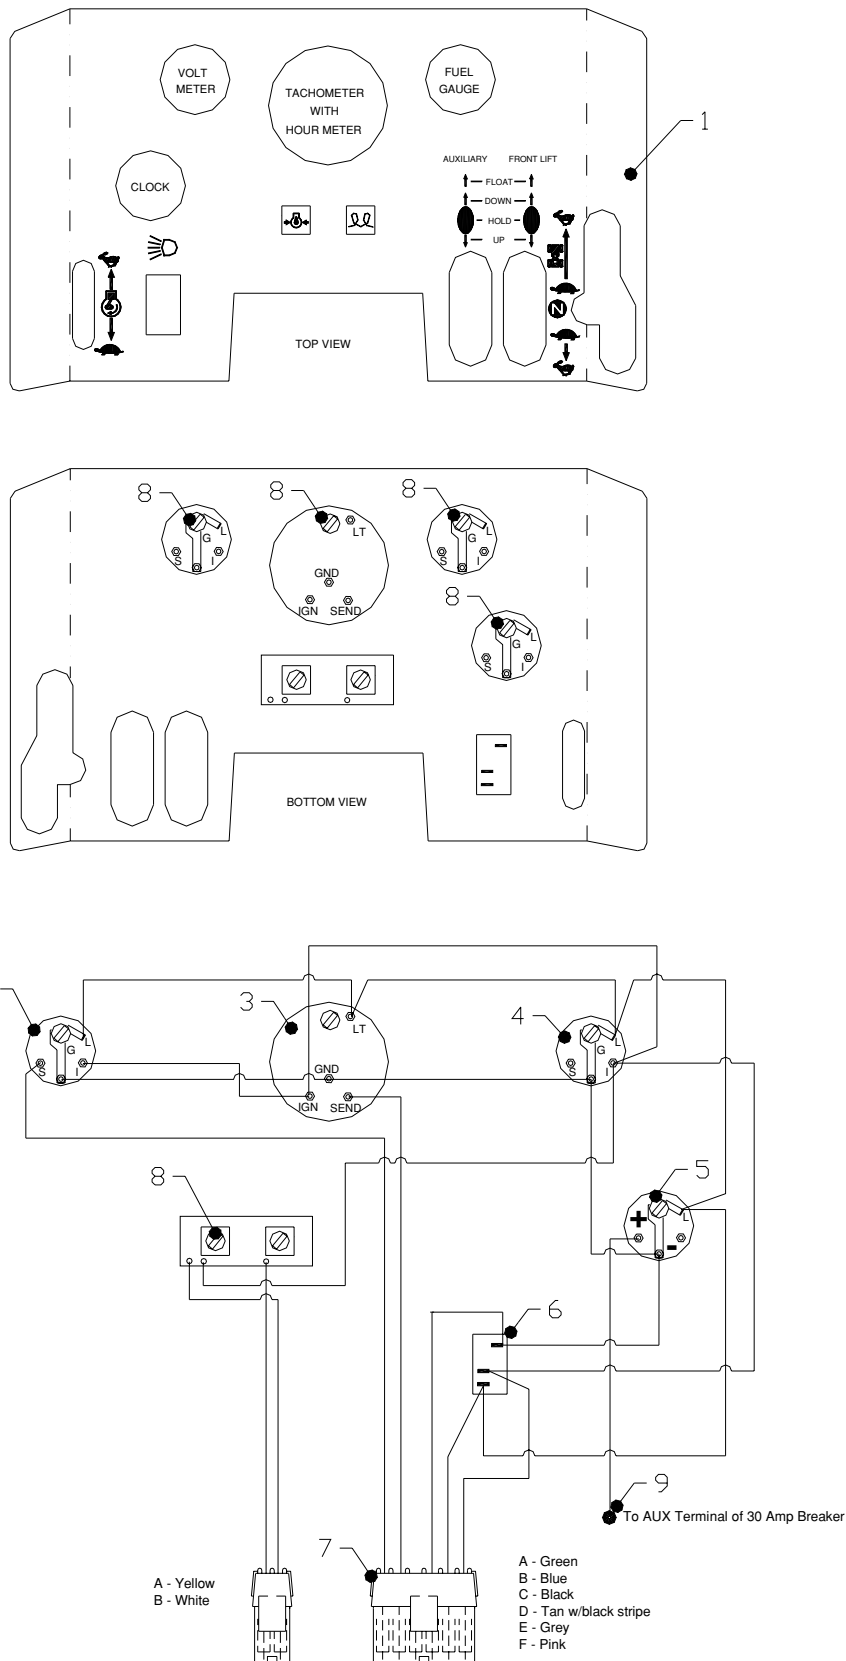

Parts List for Figure 1 - 2


Ref.	Part No.	Description	Quantity
*1	35-119	Instrument Panel, Anniversary	1
2	35-122	Domed Gauge, 430 Fuel	1
3	35-127	Domed Gauge, 430 Tachometer	1
4	35-124	Domed Gauge, 430 Volt Meter	1
5	35-126	Clock	1
6	31-051	Switch, V-Series Rocker On/Off	1
7	30-297	Wire Harness, 430 Instrument Panel / with clock	1
8	33-037	Light, Assembly Module	6
9	30-375	Wire Harness, Clock Feed	1

* Assembly Part No. Includes Ref. 1 - 8


This page is intentionally left blank.

This page is intentionally left blank.


Linamar Engine Parts Figure 2 - 1

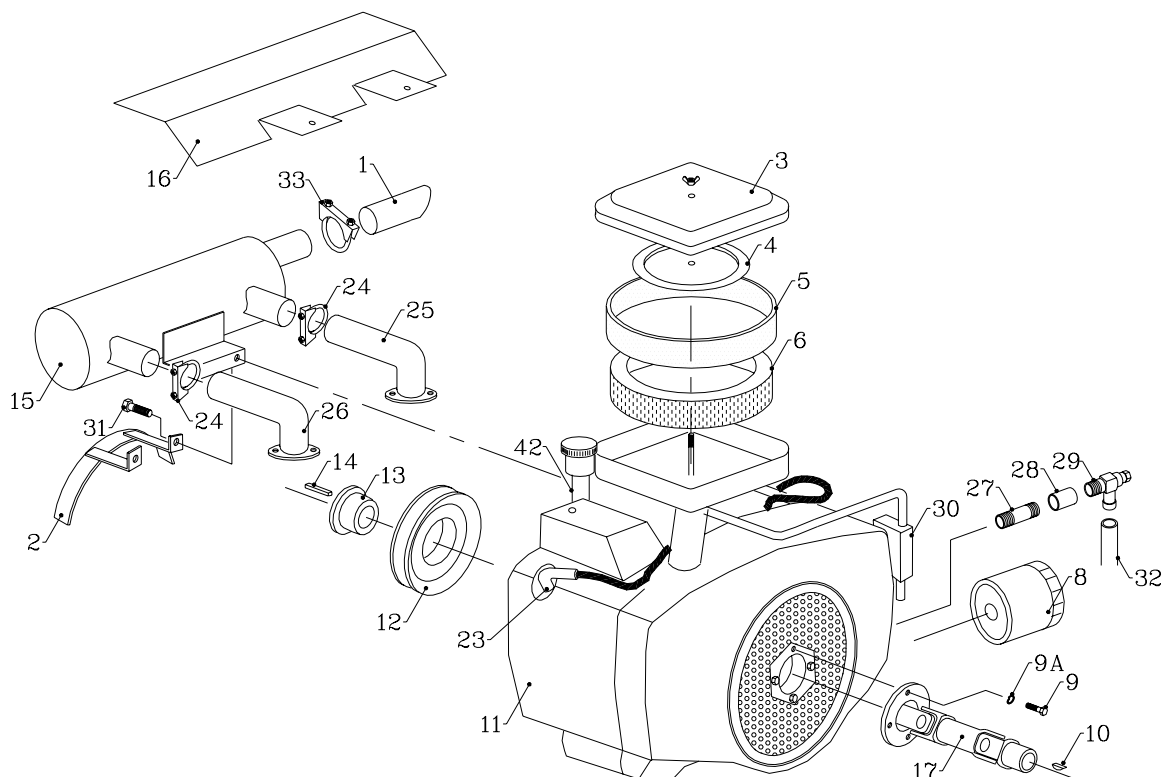

(34) OPTIONAL EXTERNAL MUFFLER

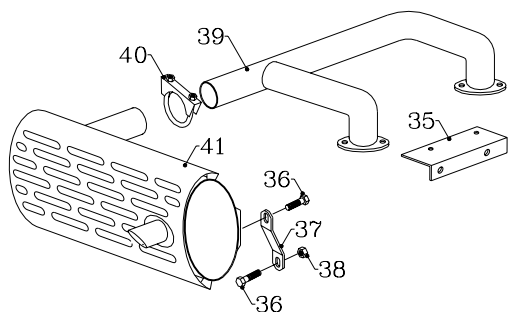

FUEL LINE AND FILTER

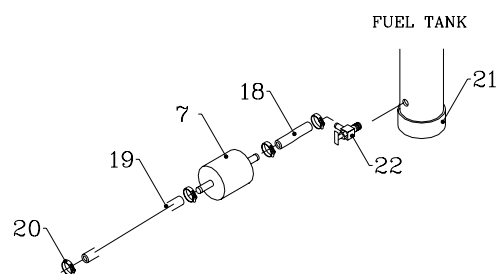


Parts List for Figure 2 - 1

Ref.	Part No.	Description	Quantity
1	64-980	Muffler Extension	1
2	64-740	Bracket, Belt Guard	1
3	13-0140-193-50	Cover, High Capacity Air Cleaner, Chromed	1
4	13-140-1692	Air Filter Plate	1
5	13-140-1912	Precleaner, High Capacity	1
6	13-140-2628-02	Air Filter, High Capacity	1
7	13-021	Fuel Filter	1
8	13-011	Oil Filter, Onan Engine	1
9	99-19	Bolt, 5/16 X 3/4 SHCS	4
9A	99-G02	Lock Washer, 5/16 ID High	4
10	85-W0305	Key, Woodruff 3/16 X 5/8	1
11	C13-060	Engine, LINAMAR LX With Hi-Cap Air Cleaner/ Chrome Parts	1
12	C83-BK60H	Pulley, 6", H1 Bushing Chromed	1
13	C83-H18	Bushing, H1 1/8 Chromed	1
14	85-K0410	Key, Square 1/4 X 1/4 X 1-1/4	1
15	13-018	Muffler, With Bracket	1
16	60-268	Heat Shield	1
17	87-116	U-Joint, Powershaft	1
18	27-001-02	Fuel Line, 2" long	1
19	27-001-54	Fuel Line, 54" long	1
20	11-014	Clamp, Fuel Line	4
21	29-015	Pipe Cap, 2"	1
22	29-016	Valve, Fuel W/O Screen	1
23	13-167-0272	Spark Plug, RS17YX	1
	13-167-1602	Spark Plug Wire	1
24	11-034	Muffler Clamp	2
25	13-154-2343	Manifold, Exhaust Right	1
26	13-154-2344	Manifold, Exhaust Left	1
27	29-062	Pipe Nipple, 3/8 Npt X 2	1
28	29-044	Pipe Coupling, 3/8 Npt	1
29	13-075	Valve, Oil Drain	1
30	13-149-1982	Fuel Pump	1
31	99-K11	Bolt, Flange 3/8 X 3/4	2
32	27-004-08	Hose, 1/2 Push Lock 8" long	1
33	11-028	Clamp, Muffler 1-1/2"	1
34	70-086	Kit, Linamar, External Muffler (includes Ref. 35 - 41)	1
35	64-824	Bracket, Shield Support	1
36	99-K26	Bolt, Flange 1/4 X 3/4	2
37	64-825	Bracket, Muffler Support	1
38	99-E20	Flange Nut, 1/4	2
39	13-541-0377	Manifold, Exhaust Left Outlet	1
40	11-034	Clamp, Muffler 1-1/4"	1
41	14-050	Muffler	1
42	13-0123-1685-02	Dip Stick Tube, Chromed	1

This page is intentionally left blank.

This page is intentionally left blank.

Primary Hydraulic
System Parts
Figure 3 - 1

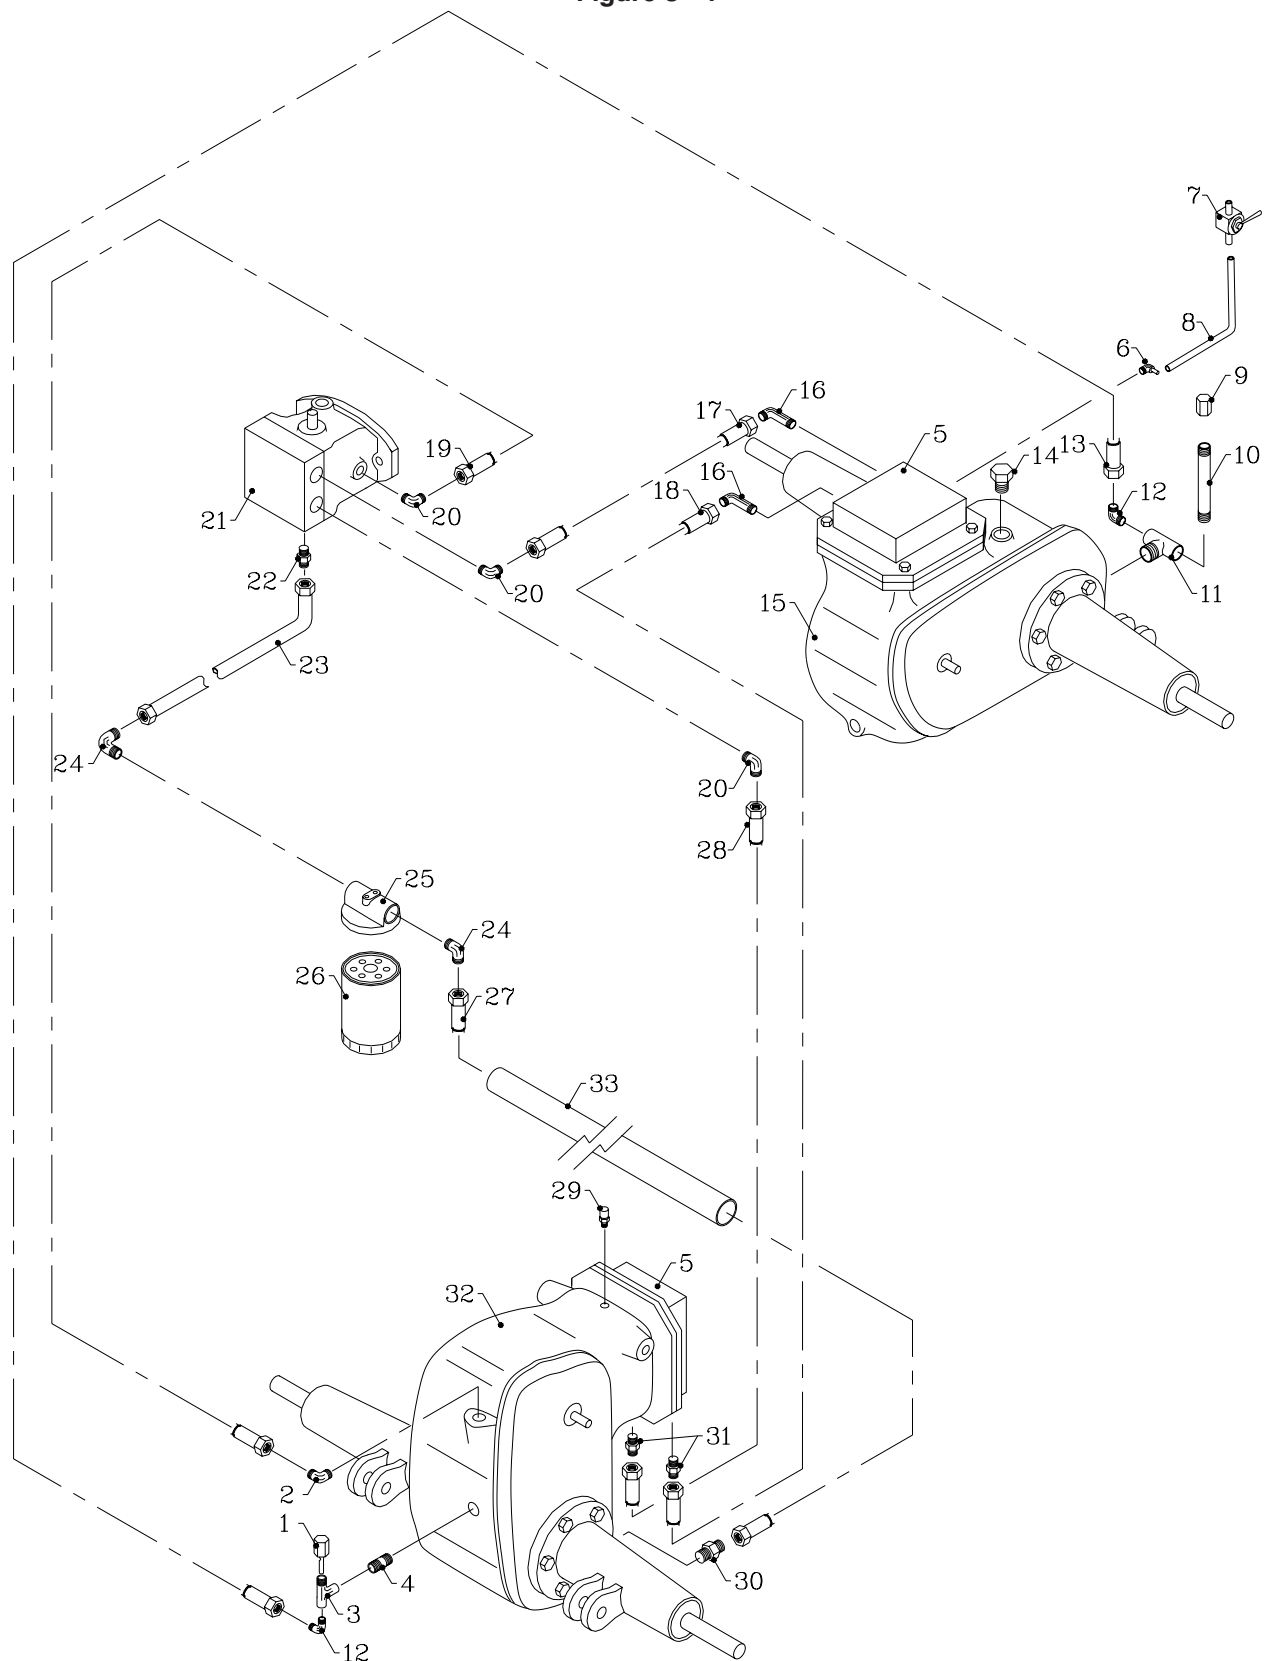


Parts List for Figure 3 - 1

1	24-041	Dipstick, Rear Axle	1
2	25-3103-6-8	Fitting, 45 Deg.	1
3	25-012T-6-6	Fitting, Tee	1
4	29-039	Pipe Nipple, 3/8	1
5	21-004	Sundstrand Motor	2
	21-005	Sundstrand Motor Gasket	1
	90-0610	Bolt, 3/8 x 1-1/4, Hydraulic Motor Mounting	8
	96-06	Lockwasher, 3/8	8
6	29-047	Tube, 1/8 NPT 90 Elbow	1
7	13-082	Valve, Transaxle Vent	1
8	27-001-16	Hose, Transaxle Vent	1
9	29-032	Pipe Cap, 3/8	1
10	29-011	Pipe Nipple, 3/8 X 6	1
11	25-212T-6-6	Fitting, Tee	1
12	25-2103-6-8	Fitting, 90	2
13	22-028	Hose, Push Lock 1/2 X 59	1
14	25-05CP-10	Fitting, Plug	1
15	51-031	Transaxle, Front	1
16	25-6801-LL1/4-8	Fitting, 90	2
17	20-003	Hose, 1/2 X 64	1
18	20-024	Hose, 1/2 X 27	1
19	22-045	Hose, Push Lock 1/2 X 52	1
20	25-2503-8-8	Fitting, 90	3
21	21-078	Pump, Sundstrand	1
*	99-15	Bolt, 1/2 x 1-3/4 SHCS, Pump Mounting	2
*	93-08	Nut, 1/2 NF	2
*	96-08	Lockwasher, 1/2	2
22	24-037	Fitting	1
23	23-060	Tube, Steel Hydraulic	1
24	25-2503-12-12	Fitting, 90 Deg.	2
25	21-095	Filter Head, O-Ring Ports	1
26	21-093	Filter, Hydraulic	1
27	22-041	Hose, Push Lock 3/4 X 43-1/2	1
28	20-044	Hose, 1/2 X 44	1
29	29-106	Fitting, Vented w/Cap	1
30	24-037	Fitting	1
31	25-3503-8-8	Fitting, 45 Deg.	1
32	50-083	Transaxle, Rear	1
*	15-012	Oil, Hydraulic	qt.
*	15-015	Oil, Hydraulic	3.5 gal.
*	15-011	Oil, Hydraulic	55 gal. drum
33	56-076	Sleeving, ID 1.53 Nylon	28 in.
*	95-08	Washer, 1/2 SAE	2

* Not Illustrated


Implement Hydraulic
System Parts
Figure 3 - 2

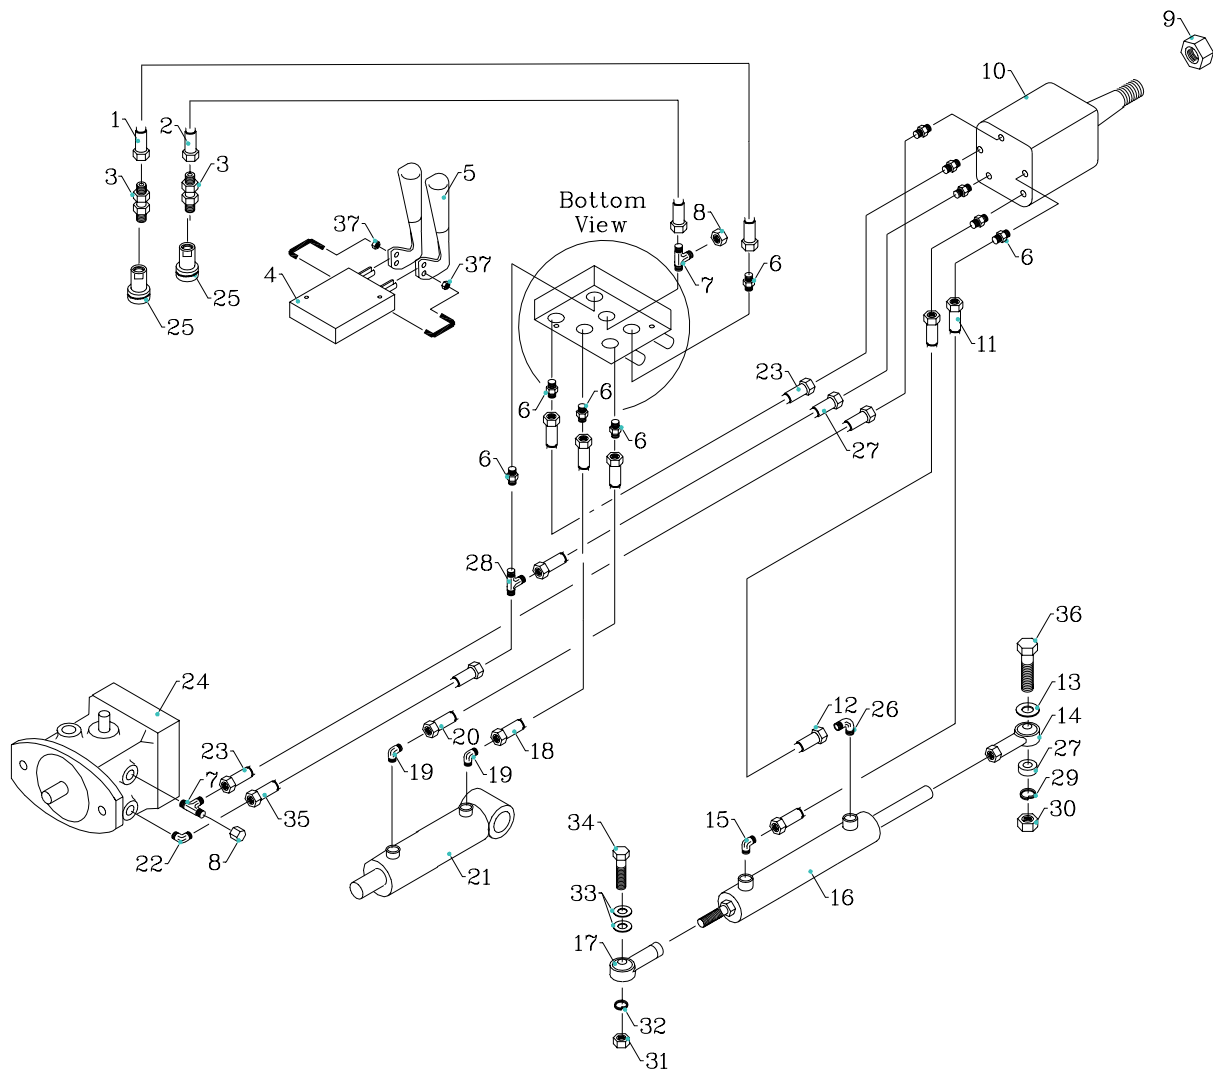

Parts List for Figure 3 - 2

Ref.	Part No.	Description	Quantity
1	20-046	Hose, 1/4 X 13	1
2	20-007	Hose, 1/4 X 20	1
3	25-2706-4-6	Fitting, Str. -4MPT/-6 MJIC BH	2
4	23-035	Valve, 2 Spool	1
	23-041	Detent Kit, for 23-035	1
	23-1607-11	Detent, Spool for 23-035	1
	23-30029249	Seal Kit, for 23-035	1
	23-038A	Clip and Pin for Handles	1
5	64-890	Handle	2
6	25-0503-6-6	Fitting	10
7	25-053T-6-6	Fitting, Run Tee	2
8	25-06CP-6	Fitting, Cap	2
9	99-E11	Nut, Steering Valve	1
10	23-054	Valve, Steering, 5-Port	1
	25-0503-6-6	Fitting	1
	21-SK000011	Seal Kit, Steering Valve	1
	21-402405	Post Outer Seal, Steering Valve	1
	21-478046	Seal, Face for Steering Valve	1
	21-061015	Bushing, Plastic, Steering Valve	1
	21-401443x1	Spring Kit, Steering Valve	1
	99-E16	Acorn Nut, High 5/16 NF	4
11	20-028	Hose, 1/4 X 28	1
12	20-006	Hose, 1/4 X 24	1
13	64-772	Spacer, Steering Cylinder	1
14	43-010A	Rod End, 5/8" (All Steel)	1
15	25-3103-4-6	Fitting, 45 deg.	1
16	24-038	Cylinder, Steering	1
17	43-008A	Rod End, 1/2" (All Steel)	1
18	20-045	Hose, 1/4 X 15	1
19	25-2103-6-6	Fitting, 90 deg.	2
20	20-006	Hose, 1/4 X 24	1
21	23-083	Cylinder, 2-1/4" X 5" Hyd.	1
	21-13175X	Seal Kit for 23-083	1
22	25-2503-6-6	Fitting, 90 deg.	1
23	20-075	Hose, 3/8 X 14	3
24	21-078	Pump, Sundstrand	1
25	23-003	Quick Coupler, Female	2
	23-033	Dust Cover, for 23-003	2
26	25-3103-4-6	Fitting, 45°	1
27	64-735	Spacer, Steering Cylinder	1
28	25-063T-6-6	Fitting, Tee	1
29	96-10	Lock Washer, 5/8	1
30	99-A10NF	Locknut, Stover 5/8 NF	1
31	99-A08NF	Locknut, Stover 1/2 NF	1
32	96-08	Lock Washer, 1/2	1
33	95-08	Flat Washer, 1/2 SAE	1
34	91-0820	Bolt, 1/2 X 2-1/2 NF	1
35	20-082	Hose, 3/8 X 28	1
36	91-1028	Bolt, 5/8 X 3-1/2 NF	1
37	99-E52	Jam Nut, 5/16	2

Sundstrand Series 15
Pump Parts
Figure 3- 3

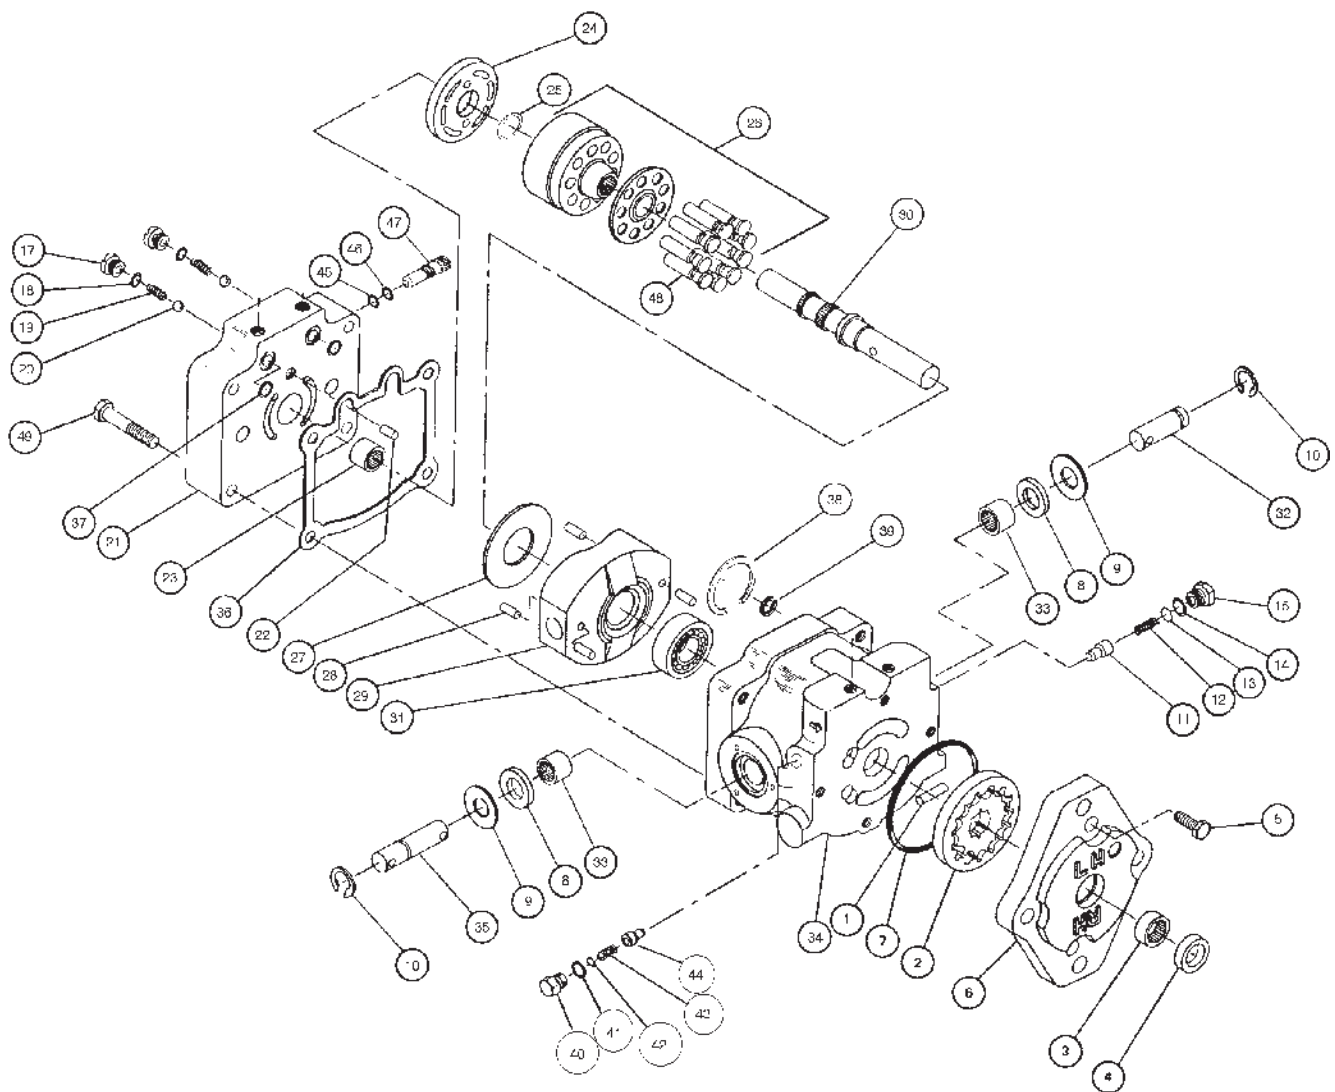


Parts List for Figure 3 - 3

Ref.	Part No.	Description	Quantity
2	21-3104034	Gerotor Assembly (Series 15-2264)	1
3	21-036	Bearing, Charge Pump	1
4	21-048	Seal, Input Shaft	1
5	21-046	Screw, Hex Head 5/16 x 7/8	4
6	21-031	Housing, Charge Pump	1
7	21-038	O-Ring	1
8	21-047	Seal, Control Shaft	2
9	21-049	Washer	2
10	21-045	Ring, Retainer	2
11-15	21-051	Kit, Valve Implement Relief	1
12	21-3102027	Spring, Implement Relief	1
13	21-059	Shim Pack	1
17-20	21-050	Check Valve Kit	1
21	21-023	End Cap, Pump	1
22	21-040	Pin, Locating	1
23	21-034	Bearing, Needle	1
24	21-026	Plate, Valve Pump	1
25	21-092	Retaining Ring	1
26	21-029	Cylinder Block Kit	1
	21-069	Washer, Piston Retaining	1
*	71-009	Tool, Spring Compressor (To service ref. 26)	1
27	21-019	Plate, Thrust	1
28	21-039	Spring Pin	4
29	21-021	Swashplate, Variable	1
30	21-3103848	Shaft, Pump (Series 15-2264)	1
31	21-5000153	Bearing (Series 15-2264)	1
32	21-017	Shaft, Trunnion	1
33	21-066	Bearing, Bronze	1
34	21-3104080	Housing Assembly (Series 15-2264)	1
35	21-018	Shaft, Control	1
36	21-020	Gasket	1
37	21-037	O-Ring	2
38	21-042	Ring, Retaining	1
39	21-044	Ring, Retaining (Series 15-2177)	1
	21-9006300-0087	Ring, Retaining (Series 15-2264)	1
40-44	21-065	Kit, Relief Valve Priority	1
45	21-9004100-0120	O-Ring	1
46	21-9006110-0120	Backup Ring	1
47	21-3103786	Bypass Valve	1
48	21-9510621	Assembly, Piston	9
49	90-0620	Bolt, 3/8 x 2-1/2	4

* Not Illustrated

Sundstrand Series 15
Motor Parts
Figure 3 - 4

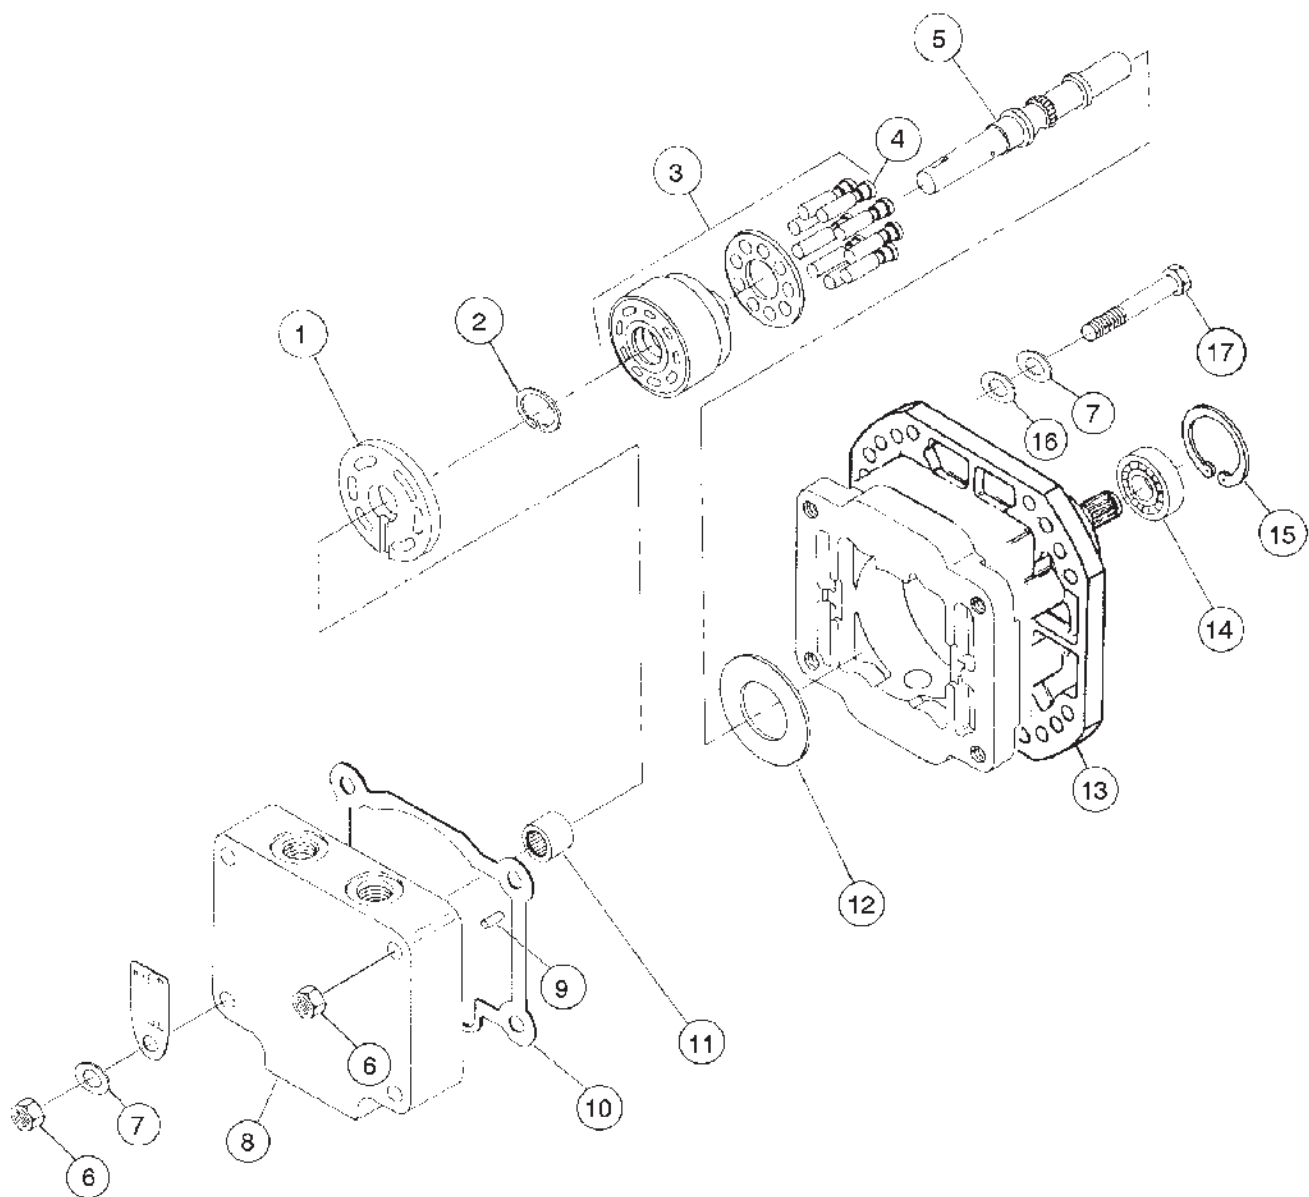


Parts List for Figure 3- 4

1	21-025	Plate, Valve Motor	1
2	21-092	Retaining Ring	1
3	21-029	Cylinder Block Kit	1
	21-069	Washer, Piston Retaining	1
4	21-9510621	Assembly, Piston	9
5	21-022	Shaft, Motor	1
6	92-06	Nut, 3/8	4
7	F3035	Washer, Special	5
8	21-024	End Cap, Motor	1
9	21-040	Pin, Locating	1
10	21-020	Gasket	1
11	21-034	Bearing, Needle	1
12	21-019	Plate, Thrust	1
13	21-030	Housing, Motor (Not Available)	1
14	21-033	Bearing	1
15	21-043	Ring, Retaining	1
16	21-9009640-3700	Washer, Pressure Seal	4
17		Bolt, 3/8 x 3-1/4 Grade 8	4
*	51-011	Pinion Gear	1
*	04-002	Snap Ring, Ext. 5/8" Dia.	1
*	71-009	Tool, Spring Compressor (To service Ref. 3)	1

* Not Illustrated

This page is intentionally left blank.


Axles & Wheels
Figure 4 - 1

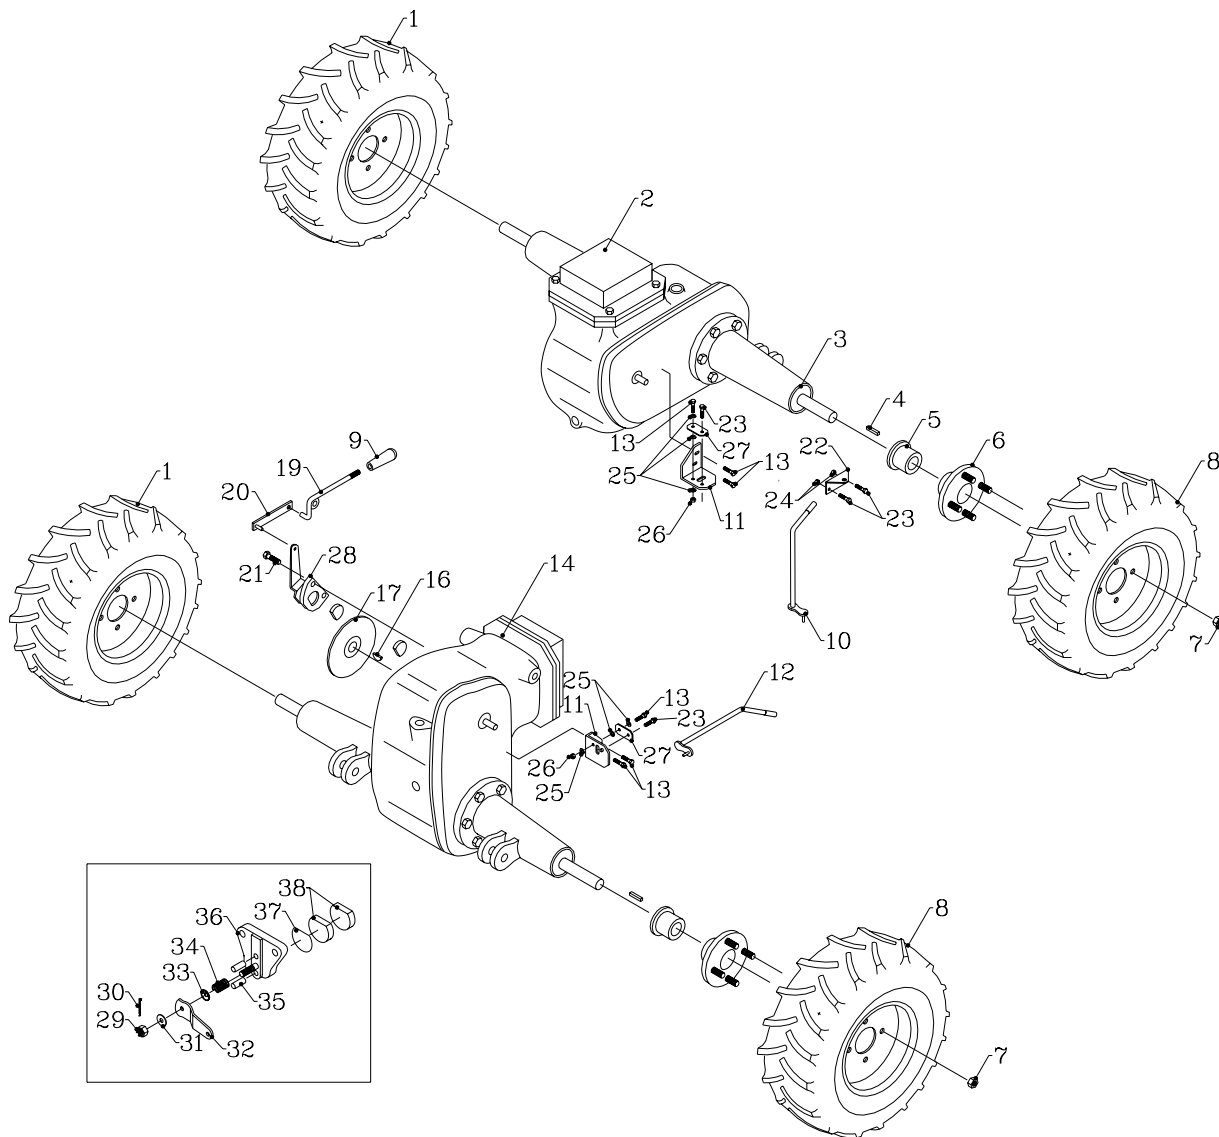

Parts List for Figure 4 - 1

Ref.	Part No.	Description	Quantity
1	53-177	Wheel, Aluminum Rim (Left)	2
	53-043	Tire, 21 x 1100 x 8 (Traction Bar Type)	2
	53-091	Tire, 20 x 1000 x 8 Turfmate	2
	53-178	Rim, Aluminum	1
2	51-031	Transaxle (No Motor)	1
3	51-788073	Seal, Axle Shaft 1-1/4 Dia.	4
4	85-K0410	Key, Square 1/4 x 1/4 x 1-1/4	4
5	83-P120	Bushing, 1-1/4 P1	4
6	53-058	Hub, 4-Bolt	4
	91-0816	Bolt, 1/2 x 2 NF	16
7	99-E60	Flange Nut, 1/2-20 NF Non-Serrated	16
8	53-176	Wheel, Aluminum Rim (Right)	2
	53-043	Tire, 21 x 1100 x 8 (Traction Bar Type)	2
	53-091	Tire, 20 x 1000 x 8 Turfmate	2
	53-178	Rim, Aluminum	1
9	47-114	Knob, Tapered 3/8	1
10	64-833	Transaxle Shifter, Front	1
	47-046	Handle Grip, 3/8 ID x 3/4 Long	1
11	64-831	Locking Shift Lever Bracket	2
12	64-832	Transaxle Shifter, Rear	1
	47-046	Handle Grip, 3/8 ID x 3/4 Long	1
13	90-0406	Bolt, 1/4 x 3/4	6
14	50-083	Transaxle (No Motor)	1
16	85-W0306	Key, Woodruff 3/16 x 3/4	1
17	53-020	Disc, Parking Brake W/1" Hub	1
19	40-034	Lever Assembly, Brake	1
20	40-033	Brake Link	1
21	90-0612	Bolt, 3/8 x 1-1/2	2
22	64-766	Two Lever Shifter Bracket	1
23	99-K26	Bolt, Flange 1/4 x 3/4	4
24	99-E20	Flange Nut, 1/4	2
25	95-04	Flat Washer, 1/4 SAE	6
26	99-A04	Locknut, Stover 1/4	2
27	64-860	Shifter Lock Strap	2
28	53-022	Brake, Caliper Complete (includes items 29 - 38)	1
29	53-02-03018	Nut, Castle	1
30	02-CP0306	Cotter Pin	1
31	94-05	Washer	1
32	53-113	Lever, Brake	1
33	53-98-06370	Cup, Brake	1
34	53-06-03031	Spring, Brake	1
35	53-0503034	Pin, Brake	2
36	REF	Housing, Brake (not available as service part)	1
37	53-03-07506	Plate, Brake	1
38	53-021	Brake Puck, Set of 2	1

Peerless Transaxle
Model 2561
Figure 4 - 2

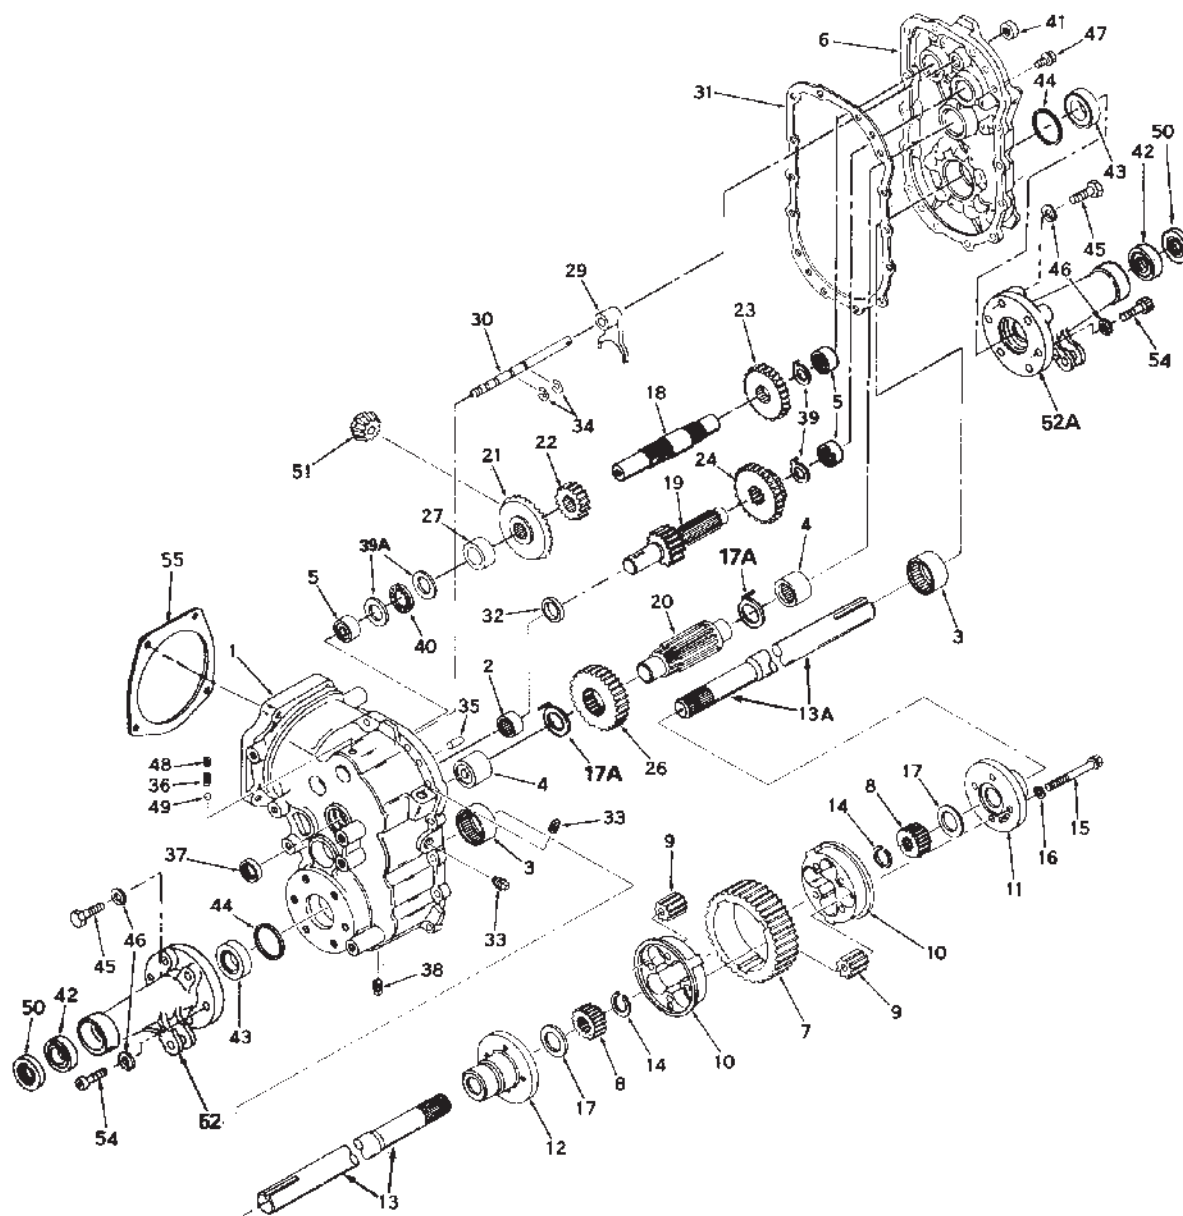


Parts List for Figure 4 - 2

Ref.	Part No.	Description	Quantity
1	70-139	Transaxle Case (Incl. Ref. 2, 3, 4 & 5)	1
2	51-780097	Needle Bearing	1
3	51-780098	Needle Bearing	24
4	51-780099	Needle Bearing	2
5	51-780100	Needle Bearing	3
6	51-772065	Transaxle Case (Incl. Ref. 3, 4, 5)	1
7	51-778084	Ring Gear	1

Parts List for Figure 4 - 2 (continued)

Ref.	Part No.	Description	Quantity
8	51-778085	Side Gear	2
9	51-778086	Pinion Gear	8
10	51-786054	Core Body	2
11	51-774199	Differential Carrier	1
12	51-774200	Differential Carrier	1
13	51-774890	Axle, 18-7/32" long	1
13A	51-774889	Axle, 16-17/32" long	1
14	51-792062	Snap Ring	2
15	51-792063	Differential Bolt	4
16	51-792011	Lockwasher, 3/8	4
17	51-780101	Thrust Washer	2
17A	51-780156	Thrust Washer (tabbed)	2
18	51-776209	Counter Shaft	1
19	51-776122	Brake Shaft	1
20	51-776120A	Output Pinion	1
21	51-778087	Bevel Gear, 30 teeth	1
22	51-778088	Spur Gear, 16 teeth	1
23	51-778096	Spur Gear, 23 teeth	1
24	51-778097	Cluster Gear, 20 & 27 teeth	1
26	51-778098	Output Gear, 37 teeth	1
27	51-786094	Spacer	1
29	51-784195	Shifter Fork	1
30	51-784196A	Shifter Rod	1
31	51-788047	Gasket, Case & Cover	1
32	51-780005	Spacer	1
33	51-792010	Plug, Pipe	2
34	51-792064	Snap Ring	2
35	51-786026	Pin, Dowel	2
36	51-792003	Detent Spring	1
37	89-008	Seal, Oil (788008)	1
38	51-792019	Magnetic Drain Plug	1
39	51-780157	Thrust Washer, Tabbed	2
39A	51-780045	Thrust Washer	2
40	51-780012	Thrust Bearing	1
41	89-007	Oil Seal (788034)	1
42	51-780158	Bearing, Axle	4
43	51-780104	Thrust Bearing	2
44	51-021	O-Ring, Square Cut (788048)	2
45	90-0820	Bolt, 1/2 x 2-1/2	2
46	51-792066	Lockwasher, 1/2	8
47	51-792067	Screw, 5/16 x 1	14
48	51-792068	Detent Set Screw, 1/4 x 1/2	1
49	51-792004	Detent Ball	1
50	51-788073	Seal, Axle	2
51	51-011	Pinion Gear (778093A)	1
52	51-782071	Axle Housing, Left 8.770" long	1
52A	51-782072	Axle Housing, Right 7.970" long	1
54	99-16	Bolt, 1/2 x 2-3/4 SHCS (Left Side)	4
	99-21	Bolt, 1/2 x 1-1/2 SHCS (Right Side)	4
55	21-005	Gasket, Motor (788050)	1



Rear Frame Parts
Figure 4 - 3

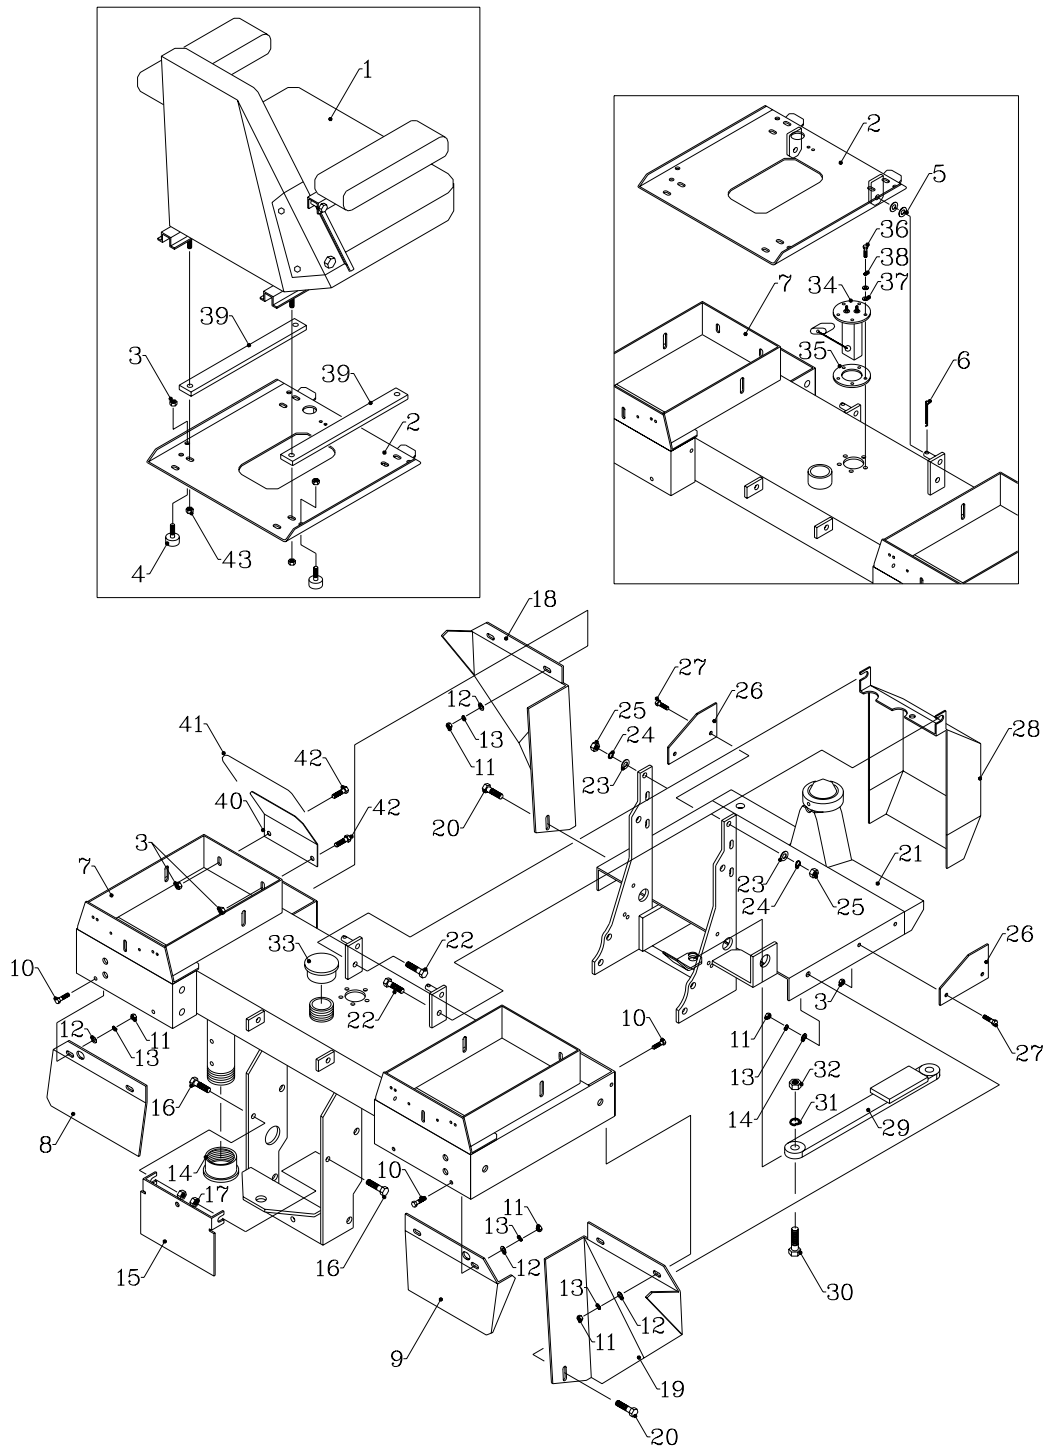

Parts List for Figure 4 - 3

Ref.	Part No.	Description	Quantity
1	47-140	Seat, CR-100 Suspension, Gray W/Steiner Logo	1
*	31-032	Seat Switch	1
*	99-K31	Flange Bolt, 1/4 x 1/2	2
*	30-242	Pigtail for 31-032 Seat Switch	1
*	47-096	Arm Rest, Right	1
*	47-097	Arm Rest, Left	1
*	99-K28	Flange Bolt, 5/16 x 1/2	4
*	47-094	Latch Adjuster Rail	1
*	47-095	Slave Adjuster Rail	1
*	99-23	Bolt, 5/16 x 1/2 Socket Head	4
2	64-978	Seat Plate	1
3	99-E12	Flange Nut, 5/16	8
4	05-019	Bumper, Seat	2
5	95-06	Flat Washer, 3/8 SAE	4
6	02-CP0508	Cotter Pin, 5/32 x 1	2
7	62-831	Fuel Tank	1
8	60-265	Rear Fender, Left	1
9	60-264	Rear Fender, Right	1
10	99-K26	Bolt, Flange 1/4 x 3/4	8
11	99-E20	Flange Nut, 1/4	10
12	94-04	Flat Washer, 1/4	10
13	96-04	Lock Washer, 1/4	10
14	29-015	Pipe Cap, 2"	1
15	60-583	Guard, Rear Transaxle	1
16	99-K11	Bolt, Flange 3/8 x 3/4	2
17	99-E13	Flange Nut, 3/8	2
18	60-267	Front Fender, Left	1
19	60-266	Front Fender, Right	1
20	90-0406	Bolt, 1/4 x 3/4	2
21	62-435	Rear Frame - Treadplate	1
*	64-977	Treadplate Cover, Aluminum	1
22	90-0610	Bolt, 3/8 x 1-1/4	2
23	94-06	Flat Washer, 3/8	2
24	96-06	Lock Washer, 3/8	2
25	92-06	Nut, 3/8	2
26	64-982	Toe Guard, Right	1
*	64-983	Toe Guard, Left	1
27	99-K28	Bolt, Flange 5/16 x 1/2	2
28	C60-277	Rear Motor Shield, Chromed	1
29	62-116	Center Link	1
30	91-1020	Bolt, 5/8 x 2-1/2 NF	2
31	96-10	Lock Washer, 5/8	2
32	93-10	Nut, 5/8 NF	2
33	47-007	Cap, Gas Tank	1
34	35-084	Sender, Fuel Level	1
35	35-086	Gasket, Fuel Level Sender	1
36	01-040	Screw, Mach. 10-32 x 1	5
37	01-028	Washer, Flat #10 SAE	10
38	01-018	Lockwasher, #10	5
39	64-987	Seat Spacer	2
40	64-979	Drip Guard	1
41	56-027	Trim-Loc	14"
42	99-K28	Bolt, Flange 5/16 x 1/2	2
43	07-B08	Nut, Metric M8-1.25	4


Rear Frame Parts (Continued)
Figure 4 - 4

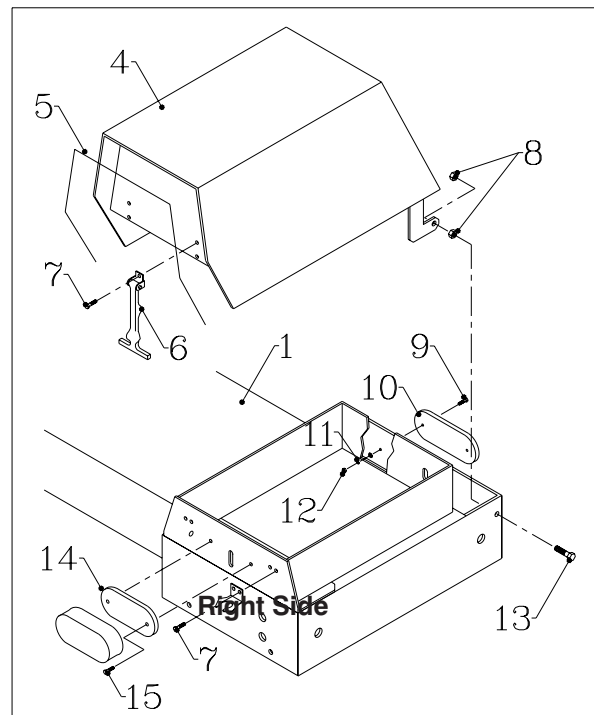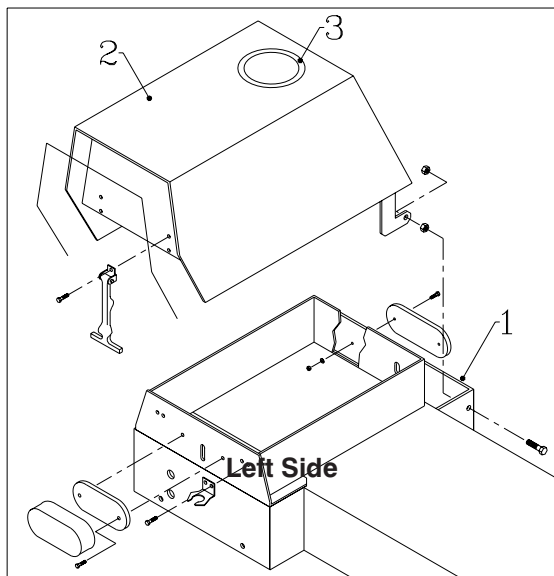

Parts List for Figure 4 - 4

Ref.	Part No.	Description	Quantity
1	62-831	Fuel Tank	1
2	60-681	Lid, Left Toolbox W/ Cupholder	1
3	06-055	Cupholder, Plastic Insert	1
4	60-302	Battery Lid	1
5	56-027-26	Trim-loc	2
6	47-030	Latch, Rubber- 4"	2
7	04-004	Pop Rivet, 3/16 x 1/4 SS.	8
8	99-A04	Locknut, Stover 1/4	8
9	01-025	Screw, Machine 8-32 x 5/8	4
10	33-012	Reflector, Amber Oval	2
11	01-005	Washer, Lock #8	4
12	01-004	Nut, #8-32	4
13	99-K26	Bolt, Flange 1/4 X 3/4	2
14	33-034	Two Bulb Tail Light	2
	33-014	Bulb	1
15	01-007	Screw, 12-24 x 1/2 Type F Hex	4

Hood & Grill Parts
Figure 4 - 5

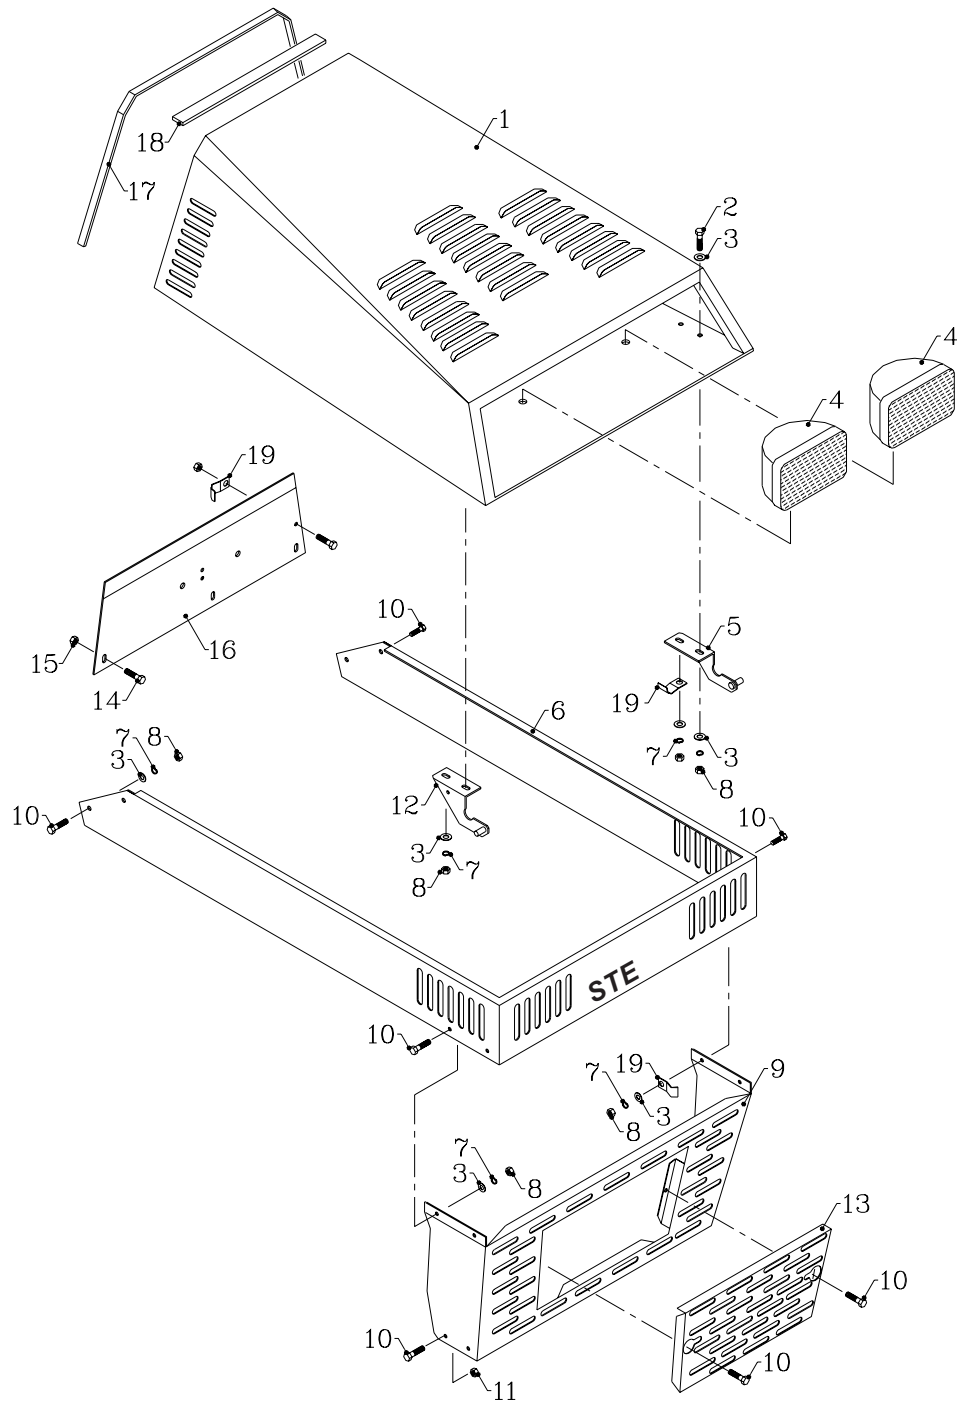


Parts List for Figure 4 - 5

Ref.	Part No.	Description	Quantity
1	60-682	Hood Assembly	1
2	90-0408	Bolt, 1/4 X 1	1
3	94-04	Flat Washer, 1/4	12
4	33-017	Headlight, Sealed Beam	2
	33-018	Bulb, Light Replacement	1
5	64-181	Hood Hinge, Left	1
6	60-685	Side Panel	1
	00-333	Decal, Steiner Die Cut	2
7	96-04	Lock Washer, 1/4	12
8	92-04	Nut, 1/4	12
9	60-580	Grille, Housing	1
*	00-025	Decal, Warning Keep Hands Away	1
*	00-334	Decal, 430 Classic	2
10	99-K26	Bolt, Flange 1/4 X 3/4	14
11	99-E20	Flange Nut, 1/4	4
12	64-182	Hood Hinge, Right	1
13	60-581	Grille, Hatch	1
14	99-K31	Bolt, Flange 1/4 X 1/2	3
15	99-E20	Flange Nut, 1/4	3
16	60-642	Hood Filler Plate	1
17	56-027-36	Trim-loc	1
18	56-003-12	Weatherstrip	1
19	30-082	Clamp, Insulated Half	3

* Not Illustrated


Controls (F/R Lever)
Figure 4 - 6

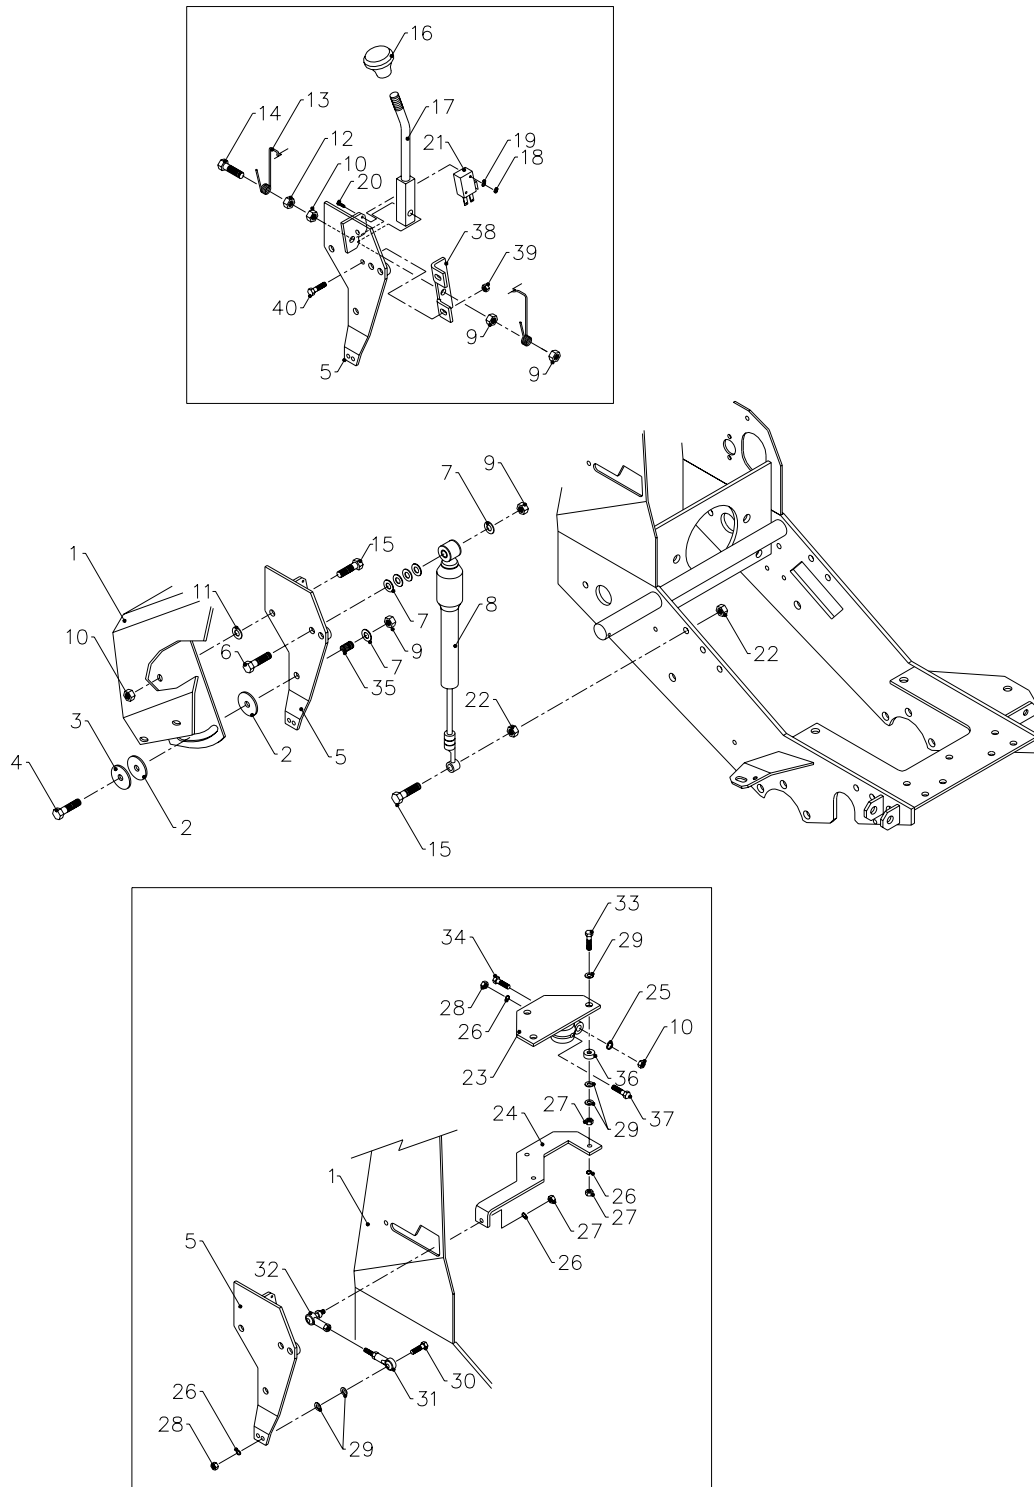

Parts List for Figure 4 - 6

Ref.	Part No.	Description	Quantity
1	62-832	Frame, Front	1
2	05-024	Washer, Friction 0.395 x 1-1/2	2
3	64-799	Washer, 13/32 ID x 1-9/32 OD	1
4	90-0614	Bolt, 3/8 x 1-3/4	1
5	64-944	Forward Reverse Plate	1
6	90-0618	Bolt, 3/8 x 2-1/4	1
7	95-06	Flat Washer, 3/8 SAE	6
8	42-417	Stabilizer, W/Piston Drilled	1
9	99-A06	Locknut, Stover 3/8	3
10	92-06	Nut, 3/8	2
11	94-06	Flat Washer, 3/8 USS	1
12	99-E21	Jam Nut, 3/8	1
13	41-074	Spring	1
14	99-K71	Bolt, Full Thread 3/8 x 3	1
15	90-0612	Bolt, 3/8 x 1-1/2	1
16	47-003	Knob, Large	1
17	40-323	Forward Reverse Handle	1
18	01-039	Washer, Lock #4	2
19	01-038	Nut, #4	2
20	01-037	Screw, Machine #4 x 3/4	2
21	31-038	Switch, Seat, 3 Post	1
22	99-E13	Flange Nut, 3/8	2
23	40-135	Hub, Pump Lever	1
24	40-324	Pump Lever	1
25	96-06	Lock Washer, 3/8	1
26	96-04	Lock Washer, 1/4	6
27	93-04	Nut, 1/4 NF	7
28	92-04	Nut, 1/4	2
29	95-04	Flat Washer, 1/4 SAE	9
30	90-0408	Bolt, 1/4 x 1	1
31	43-004ma	Rod End, 1/4" Male (All Steel)	1
32	43-004s	Rod End, 1/4"Stud (Nylon Race)	1
33	91-0410	Bolt, 1/4 x 1-1/4 NF	3
34	90-0616	Bolt, 3/8 x 2	1
35	41-039	Spring, Comp. 0.563 x 0.625	1
36	05-025	Grommet, 1/4 ID x 5/8 OD	3
37	90-0416	Bolt, 1/4 x 2	1
38	64-945	Mount, Forward-Reverse Handle	1
39	99-E20	Flange Nut, 1/4	2
40	99-K77	Bolt, Button Head Socket 1/4 x 5/8	2

Front Frame Parts
Figure 4 - 7

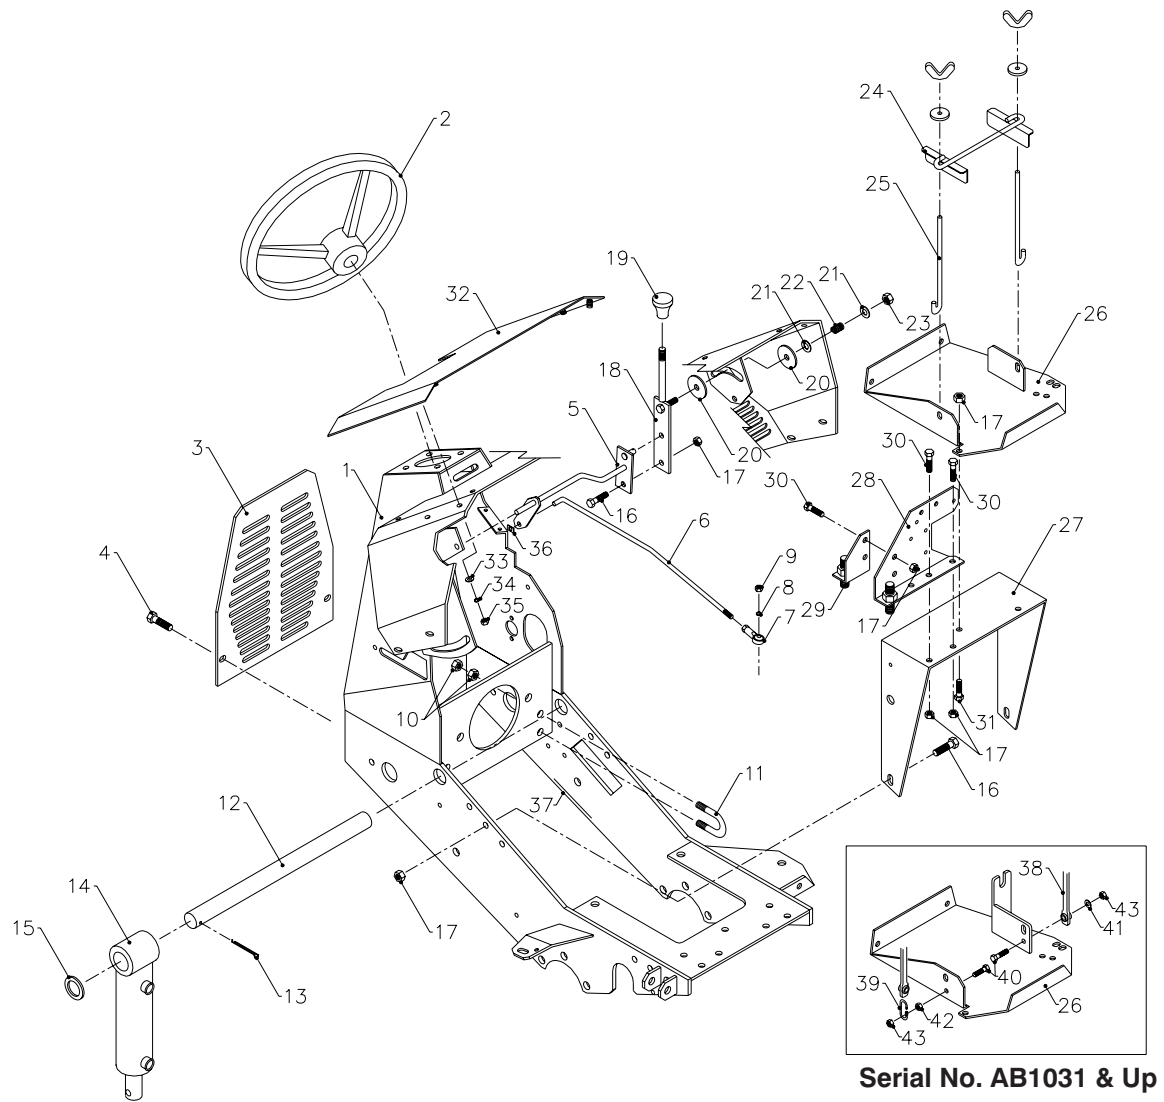


Parts List for Figure 4 - 7

Ref.	Part No.	Description	Quantity
1	62-832	Frame, Front	1
2	47-103	Steering Wheel	1
	47-104	Cap, Steering Wheel Center	1
	00-336	Decal, 25th Anniversary Steering Wheel	1
3	60-303	Pump Access Panel W/Slots	1
4	99-K26	Bolt, Flange 1/4 x 3/4	2
5	42-490	Throttle Linkage	1
6	42-254	Rod, Throttle	1
7	43-004A	Rod End, 1/4" (All Steel)	1
8	96-04	Lock Washer, 1/4	1
9	92-04	Nut, 1/4	1
10	99-E13	Flange Nut, 3/8	4
11	99-F39	U-Bolt, 3/8 x 2" Cut	2
12	80-255	Shaft, Cylinder Mounting	1
13	02-CP0510	Cotter Pin, 5/32 x 1-1/4	1
14	23-083 (REF)	Cylinder, 2-1/4." x 5" Hydraulic (See Fig. 3-2)	
15	99-B13	Washer, Mach 1" ID 14 Ga	1
16	99-K19	Bolt, Flange 5/16 x 3/4	3
17	99-E12	Flange Nut, 5/16	8
18	40-142	Lever, Throttle	1
19	47-114	Knob, Tapered 3/8	1
20	05-043	Washer, Friction 20D x 5/16 ID	2
21	95-05	Flat Washer, 5/16 SAE	2
22	41-055	Spring, Comp. 0.563 x 0.50	1
23	99-A05	Locknut, Stover 5/16	1
24	33-016	Bracket, Battery Hold Down (Serial No. 1001 - 1030)	1
25	99-K32	Bolt, "J" Battery Hold Down (Serial No. 1001 - 1030)	2
26	64-574	Battery Tray, F/26-60 Battery	1
27	64-174	Battery Support	1
28	64-950	Auxillary Valve Bracket	1
29	64-949	Coupler Bracket	1
30	99-K28	Bolt, Flange 5/16 x 1/2	4
31	99-K02	Bolt, Flange 5/16 x 1	1
32	35-119	Dash Panel (See Section 1)	1
33	01-028	Flat Washer, #10 SAE	9
34	01-018	Lockwasher, #10	9
35	F0001	Locknut, Nylon Insert #8-32	9
36	04-SN04	Speed Nut, 1/4	2
37	56-053	Trim-Loc	4 in.
*	47-023	Choke Cable	1
38	S8001	Strap, Urethane (Serial No. 1031 -)	1
39	G8084	Quick Link (Serial No. 1031 -)	1
40	99-K38	Bolt, 1/4 X 1-1/4 Button Head (Serial No. 1031 -)	2
41	94-04	Flat Washer, 1/4 (Serial No. 1031 -)	1
42	99-E20	Flange Nut, 1/4 (Serial No. 1031 -)	1
43	99-A04	Locknut, Stover 1/4 (Serial No. 1031 -)	2

* Not Illustrated


PTO Linkage & Frame Parts
Figure 4 - 8

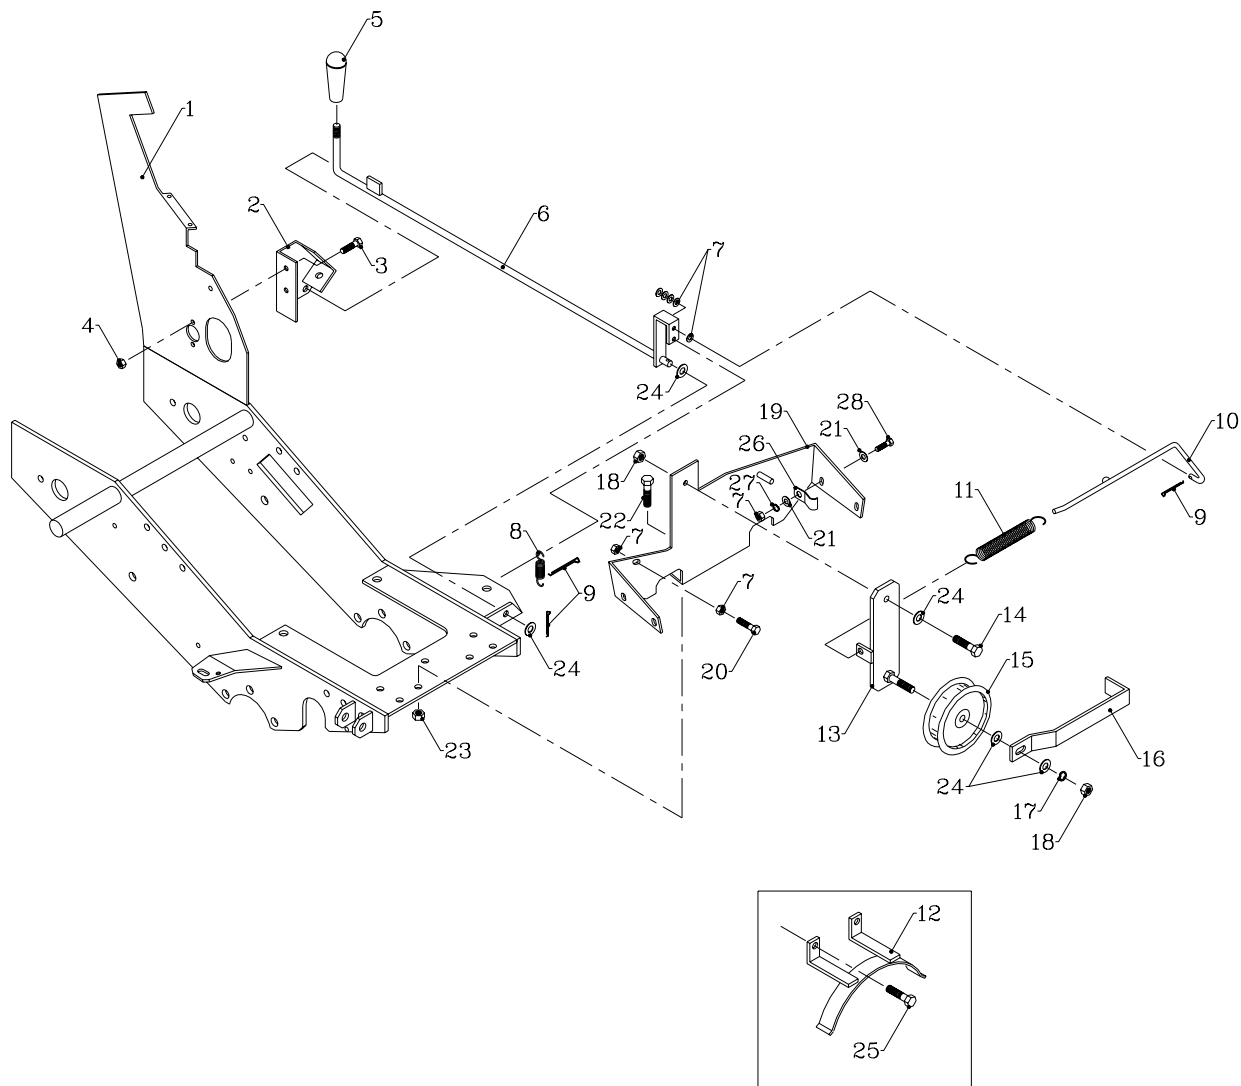

Parts List for Figure 4 - 8

Ref.	Part No.	Description	Quantity
1	62-832	Frame, Front	1
2	64-876	PTO Switch Mounting Bracket	1
3	99-K26	Bolt, Flange 1/4 x 3/4	2
4	99-E20	Flange Nut, 1/4	2
5	47-114	Knob, Tapered 3/8	1
6	40-138	Lever, PTO	1
7	92-04	Nut, 1/4	6
8	41-013	Spring, Ext. 0.50 x 1.938	1
9	02-CP0308	Cotter Pin, 3/32 x 1	3
10	42-251	Linkage, PTO	1
11	41-010	Spring	1
12	64-740	Bracket, Belt Guard	1
13	40-230	Idler Arm, PTO Clutch	1
14	90-0608	Bolt, 3/8 x 1	1
15	83-029	Idler, Flat 4-1/2" OD 3/4" Wide	1
16	64-746	Bracket, Belt Guard	1
17	96-06	Lock Washer, 3/8	1
18	99-A06	Locknut, Stover 3/8	2
19	62-817	Support, Front	1
20	90-0406	Bolt, 1/4 x 3/4	1
21	94-04	Flat Washer, 1/4	2
22	99-K11	Bolt, Flange 3/8 x 3/4	2
23	99-E13	Flange Nut, 3/8	2
24	95-06	Flat Washer, 3/8 SAE	5
25	99-K11	Bolt, Flange 3/8 x 3/4	2
26	30-082	Clamp, Insulated Half	1
27	96-04	Lockwasher, 1/4	1
28	90-0408	Bolt, 1/4 x 1	1

Front Hitch, Front Fenders
& PTO Parts
Figure 4 - 9

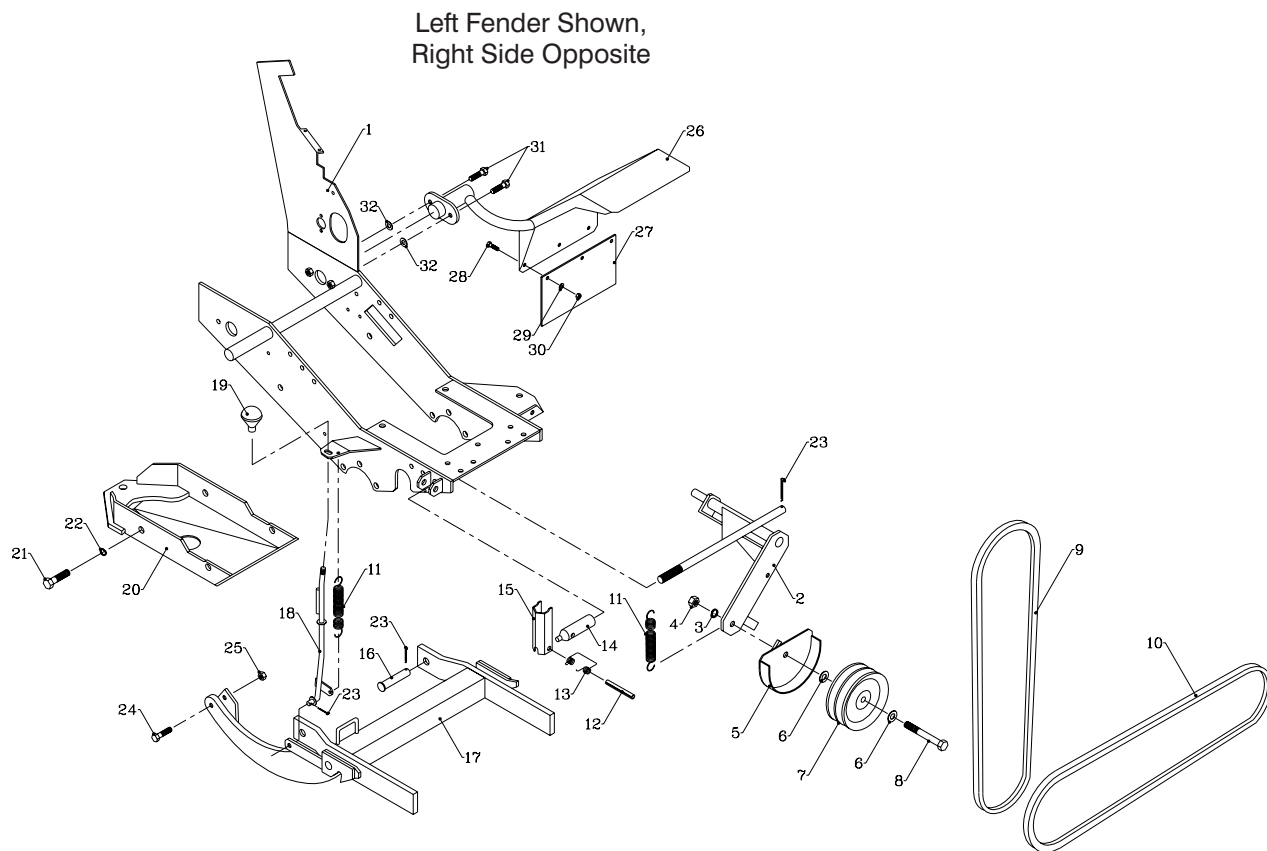

Parts List for Figure 4 - 9

Ref.	Part No.	Description	Quantity
1	62-832	Frame, Front	1
2	62-760	Arm, Idler Slider Bracket	1
3	96-08	Lock Washer, 1/2	1
4	92-08	Nut, 1/2	1
5	64-745	Shield, Double Idler	1
6	95-08	Flat Washer, 1/2 SAE	2
7	C83-026	Idler, 2-Groove 4-3/4 OD Chromed	1
	83-MK173	Bushing	1
	55-6204-	Bearing	1
8	90-0828	Bolt, 1/2 x 3-1/2	1
9	81-B039	Belt, B39	1
10	81-A040	Belt, A40	1
11	41-010	Spring, Ext. .765 x 4.813	2
12	02-RP1224	Roll Pin, 3/8 x 3	1
13	41-062	Spring, Torsion F/PTO	1
14	62-818	PTO Idler Bracket Adj. Nut	1
15	64-859	Idler Lock	1
16	03-1022	Clevis Pin, 5/8 x 2-3/4	1
17	62-833	Front Lift, 430	1
18	40-139	Lever, Front Lift Release	1
19	47-003	Knob, Large	1
20	62-693	Frame, Lower Front	1
21	90-0810	Bolt, 1/2 x 1-1/4	4
22	96-08	Lock Washer, 1/2	4
23	02-CP0308	Cotter Pin, 3/32 x 1	3
24	90-0618	Bolt, 3/8 x 2-1/4	1
25	99-A06	Locknut, 3/8	1
26	60-684	Fender, Front Left	1
*	60-683	Fender, Front Right	1
27	64-981	Mud Flap, Front Fender	2
28	99-K47	Bolt, 1/4 x 3/4, Button Head (3 per side)	6
29	94-04	Flat Washer, 1/4 (3 per side)	6
30	99-A04	Locknut, Stover 1/4 (3 per side)	6
31	99-K13	Bolt, Flange 3/8 x 1 (2 per side)	4
32	95-06	Flat Washer, 3/8 SAE	A/R

* Not Illustrated

This page is intentionally left blank.

Decals
Figure 5 - 1




Location: Black Side Panels




Location: Front Grille




Location: Rear of Fuel Tank

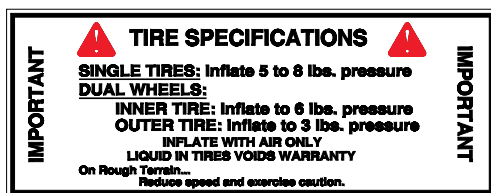


Location: Rear Motor Shield

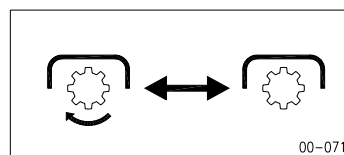

Location: PTO Lever

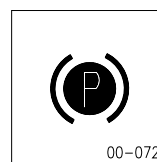


Location: Parking Brake Lever

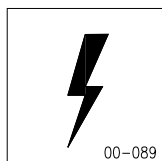


Location: Key Switch



Location: Rear Motor Shield

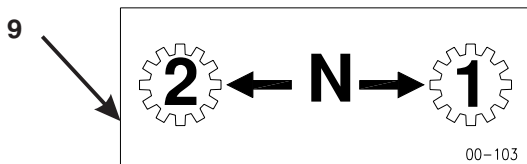

Location: Front Transaxle Shift Lever

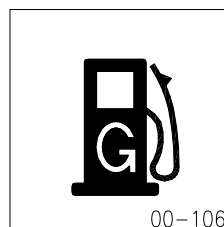

Location: Fuel Tank Filler

Parts List for Figure 5 - 1

Ref.	Part No.	Description	Quantity
1	00-333	Decal, Steiner Domed	2
2	00-025	Decal, Warning Keep Hands Away	1
3	00-060	Decal, Fill With TRC Fluid	1
4	00-071	Decal, PTO Clutch Symbol	1
5	00-062	Decal, Tire Specifications	1
6	00-072	Decal, Parking Brake Symbol	1
7	00-089	Decal, Ignition Symbol	1
8	00-093	Decal, Warning-Read Owner's Manual	1
9	00-103	Decal, Transaxle 2-1 Symbol	1
10	00-106	Decal, Gas Symbol	1

Decals
Figure 5 - 1 (continued)




Location: Rear Fender



Location: Steering Column




Location: PTO Clutch Lever

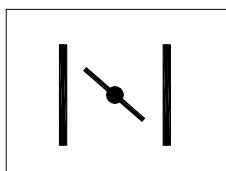


Location: Choke




Location: Center of Steering Wheel

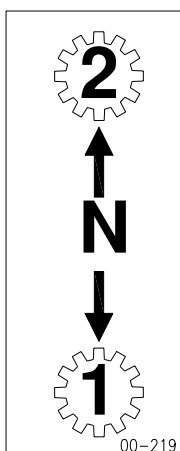

Location: Rear Transaxle Shift Lever

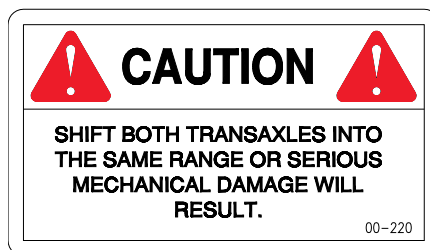

Location: Transaxle Shift Lever

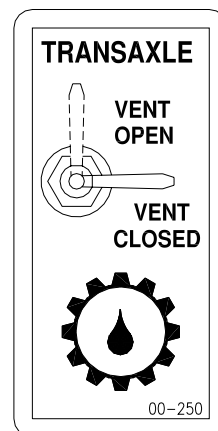

Location: Transaxle Vent Valve



Location: Grille Side Panel




Location: Grille Side Panel

Parts List for Figure 5 - 1 (continued)

Ref.	Part No.	Description	Quantity
12	00-332	Decal, Domed 4-Wheel Drive	2
13	00-200	Decal, Caution Do Not Tow	1
14	00-209	Decal, Made In The U.S.A.	1
15	00-211	Decal, Choke Symbol	1
16	00-336	Decal, 25th Anniversary Steering Wheel	1
17	00-219	Decal, 2-N-1 Vertical	1
18	00-220	Decal, Caution Shift Both Transaxles	2
19	00-334	Decal, 430 Classic	2
20	00-250	Decal, Transaxle Vent	1
21	00-335	Decal, Domed 25th Anniversary	2
Not illus.	00-341	Decal Package (consists of 1 each of the following:)	
	00-332	Decal, Domed 4-Wheel Drive	
	00-333	Decal, Steiner Domed	
	00-334	Decal, 430 Classic	
	00-335	Decal, Domed 25th Anniversary	
	00-336	Decal, 25th Anniversary Steering Wheel	

This page is intentionally left blank.

MODEL RB430
Roll Bar Attachment
Figure 6 - 1

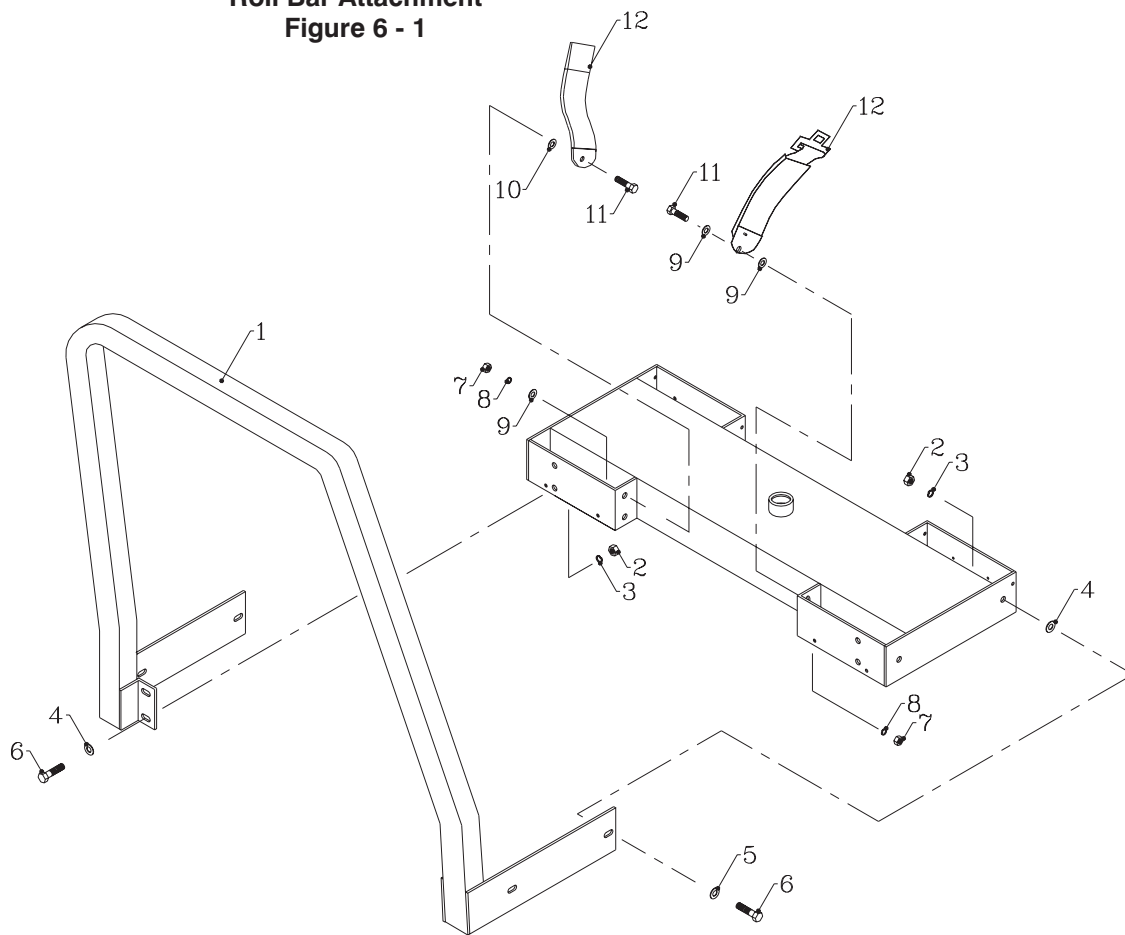


Parts List for Figure 6 - 1

Ref.	Part No.	Description	Quantity
1	62-664	Roll Bar (Not Available as a Service Part)	1
2	92-08	Nut, 1/2	8
3	96-08	Lock Washer, 1/2	8
4	94-08	Flat Washer, 1/2	8
5	95-08	Flat Washer, 1/2 SAE	4
6	90-0812	Bolt. 1/2 x 1-1/2	8
7	92-07	Nut, 5/16	2
8	96-07	Lock Washer, 7/16	2
9	94-07	Flat Washer, 7/16	3
10	99-B12	Washer, 1/4 x 17/32 x 1-1/8	1
11	90-0710	Bolt, 7/16 x 1-1/4	2
12	47-059	Seat Belt Set	1
*	00-180	Decal, 4-Wheel Drive	2
*	00-170	Decal. RB420	2

* Not Illustrated


MODEL WB150
Rear Weight Bar Attachment
Figure 6 - 2

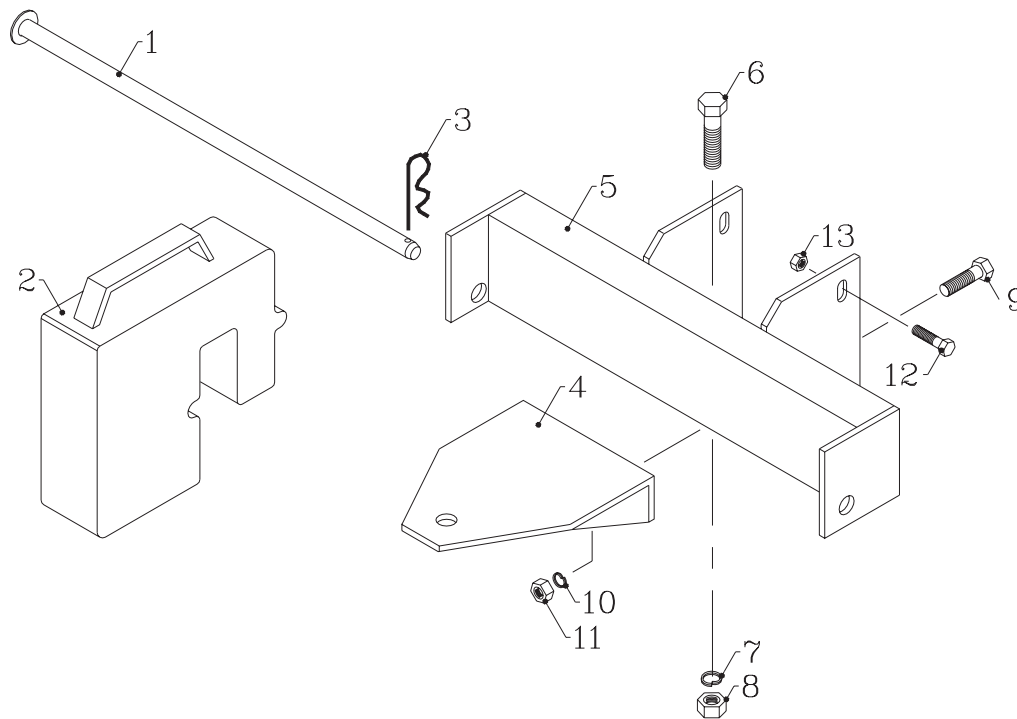

Parts List for Figure 6 - 2

1	42-467	Rod, Weight Security	1
2	62-540	Weight, 50# Tractor Ballast	4
3	02-PP0420	Presto Pin, 1/8 X 2-9/16	1
4	62-542	Tractor Weight Bar Drawbar Ext	1
5	62-541	Tractor Weight Bar	1
6	90-1012	Bolt, 5/8 X 1-1/2	1
7	96-10	Lock Washer, 5/8	1
8	92-10	Nut, 5/8	1
9	90-0810	Bolt, 1/2 X 1-1/4	2
10	96-08	Lock Washer, 1/2	2
11	92-08	Nut, 1/2	2
12	90-0608	Bolt, 3/8 X 1	2
13	99-E13	Flange Nut, 3/8	2


**MODEL WB153
3-Point Hitch
Rear Weight Bar Attachment
Figure 6 - 3**

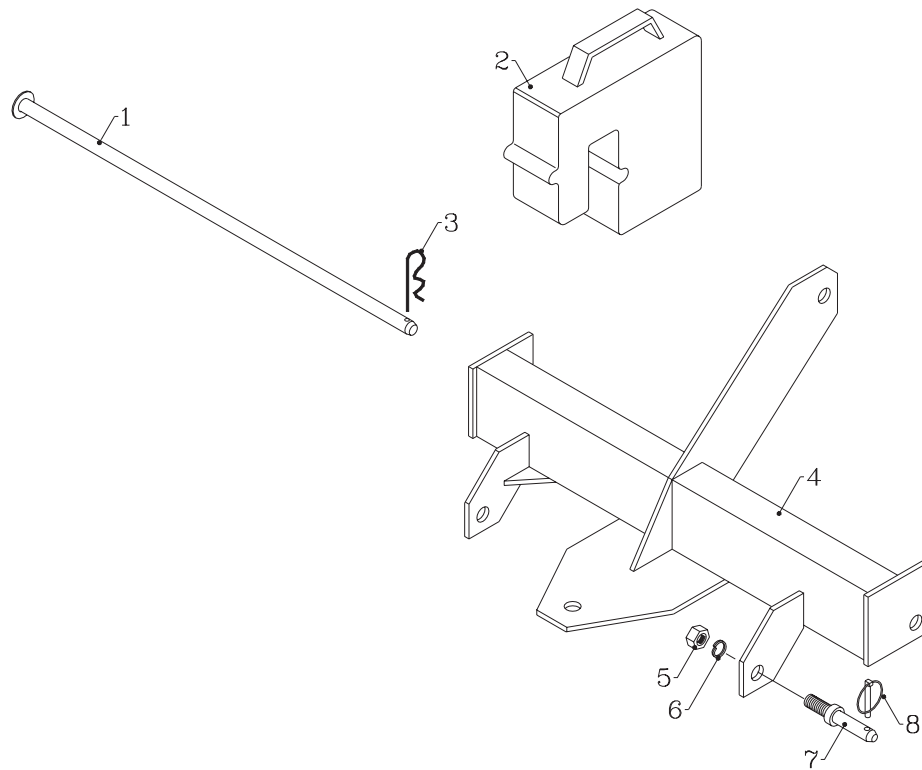

Parts List for Figure 6 - 3


1	42-432	Rod, Weight Security (3-Pt)	1
2	62-540	Weight, 50# Tractor Ballast	4
3	02-PP0524	Presto Pin, 5/32 x 2-15/16	1
4	62-707	Frame, 3-Pt Weight Bar	1
5	92-10	Nut, 5/8	2
6	96-10	Lock Washer, 5/8	2
7	03-010	Lift Pin, Cat. "O"	2
8	03-015	Clip, Cat. "O"	2

MODEL WB140
Front Weight Bar Attachment
Figure 6 - 4

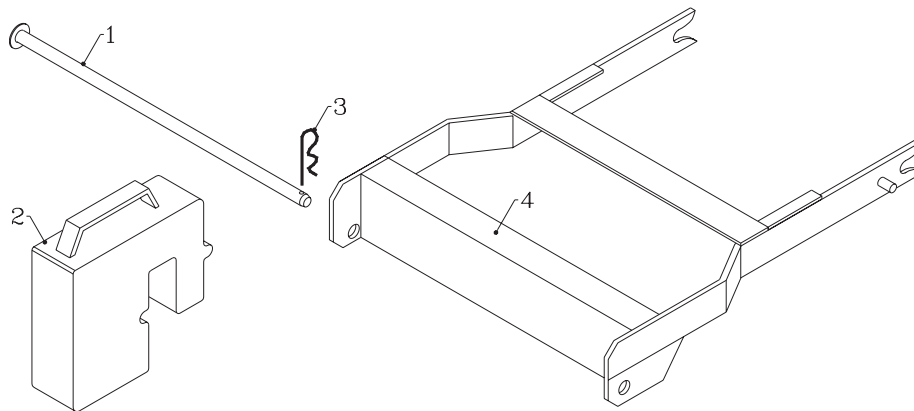


Parts List for Figure 6 - 4

1	42-467	Rod, Weight Security	1
2	62-540	Weight, 50# Tractor Ballast	4
3	02-PP0524	Presto Pin, 5/32 X 2-15/16	1
4	62-665	Frame, Front Weight Bar	1

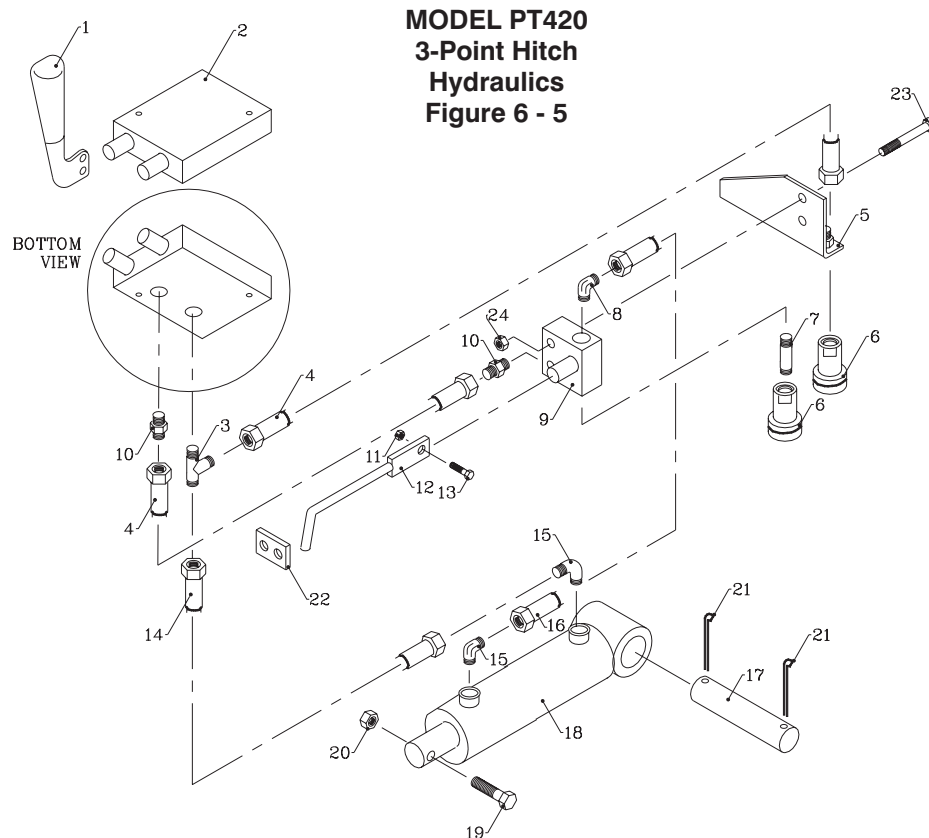**Parts List for Figure 6 - 5**

1	64-890	Handle, Control	2
2	23-035	Valve, 2 Spool	1
3	25-053T-6-6	Fitting, Run Tee	1
4	20-026	Hose, 1/4 X 17	2
5	64-175	Coupler Bracket	1
6	23-003	Quick Coupler, Female	2
	23-033	Dust Cover, For 23-003	2
7	29-046	Pipe Nipple, 1/4 Npt X 2	1
8	25-2503-6-6	Fitting, 90°	1
9	23-036	Valve, Selector 3 Way	1
10	25-0503-6-6	Fitting, Str -6 M ORB/-6 M JIC	1
11	99-A04	Locknut, Stover 1/4	1
12	40-143	Lever, Selector Valve	1
13	90-0408	Bolt, 1/4 x 1	1
14	20-010	Hose, 1/4 X 65	1
15	25-2103-6-6	Fitting, 90 deg	1
16	20-047	Hose, 1/4 X 58	1
17	64-007	Cylinder Pin	1
18	23-005	Cylinder, Lift	1
19	90-0618	Bolt, 3/8 X 2-1/4	1
20	99-A06	Locknut, Stover 3/8	1
21	02-CP0612	Cotter Pin, 3/16 X 1-1/2	2
22	64-899	Mount, 3-Point Hitch Lever	1
23	90-0414	Bolt, 1/4 X 1-3/4	2
24	99-E20	Flange Nut, 1/4	2


MODEL PT420
3-Point Hitch
Attachment Parts
Figure 6 - 6

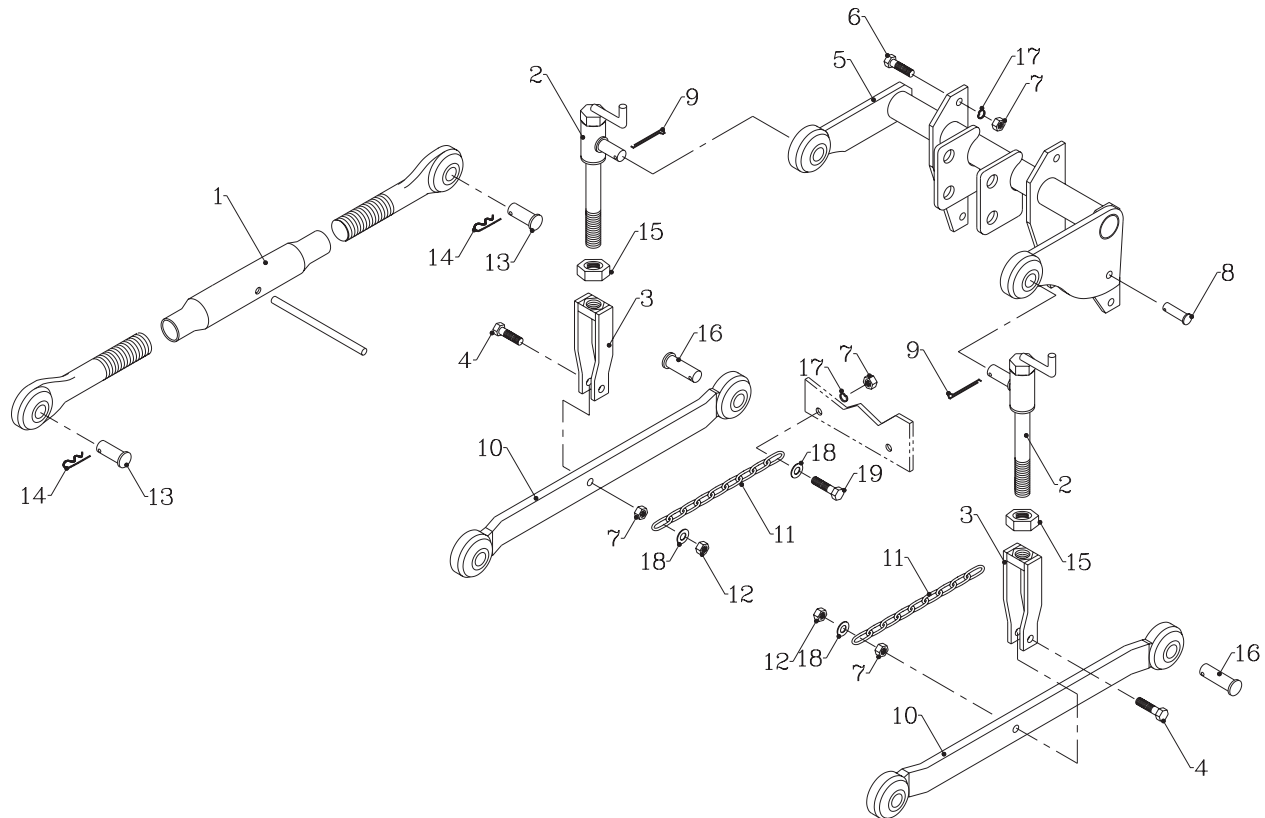

Parts List for Figure 6 - 6

1	47-009	Link, Top Cat."O"	1
2	42-052	Adjuster, Lift	2
3	42-053	Link, Lift	2
4	90-0618	Bolt, 3/8 X 2	2
5	62-120	Rockshaft Assembly	1
6	90-0610	Bolt, 3/8 X 1	4
7	92-06	Nut, 3/8	4
8	03-0610	Clevis Pin, 3/8 X 1-1/4	1
9	02-Cp0508	Cotter Pin, 5/32 X 1	2
10	62-121	Draft Link	2
11	56-018-12	Sway Chain, 12"	2
12	99-A06	Locknut, Stover 3/8	4
13	03-1020	Clevis Pin, 5/8 X 2-1/2	2
14	02-PP0318	Presto Pin, 3/32 X 2-5/16	2
15	99-E30	Jam Nut, 3/4	2
16	03-1022	Clevis Pin, 5/8 X 2-3/4	2
17	96-06	Lock Washer, 3/8	4
18	94-06	Flat Washer, 3/8	4
19	90-0610	Bolt, 3/8 x 1-1/4	2


MODEL DW100
Dual Wheels
Figure 6 - 7

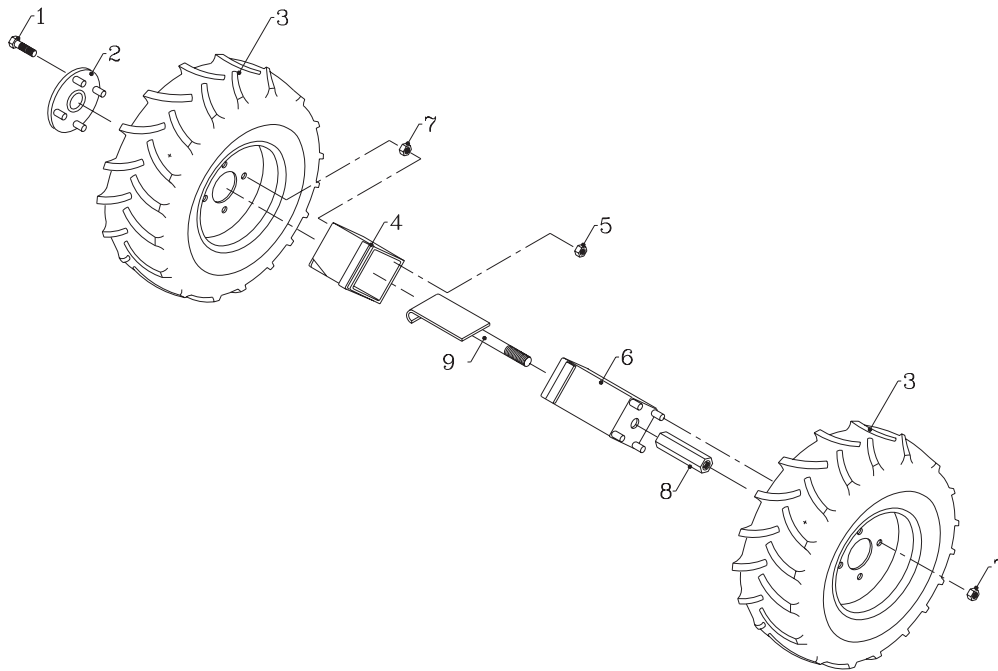

Parts List for Figure 6 - 7

1	99-F37	Bolt, 1/2 X 3 NF	16
2	53-058	Hub, 4-Bolt	4
3	53-015	Wheel, W/21 x 1100 x 8 Rwhd Tire, Left	2
	53-016	Wheel, W/21 x 1100 x 8 Rwhd Tire, Right	2
	53-081	Wheel, W/20 x 1000 x 8 Turfmate	4
4	50-040	Dual, Inner Square Drive	4
5	93-08	Nut, 1/2 NF	16
6	50-041	Dual, Outer Square Drive	4
7	99-E01	Wheel Nut, 1/2 NF	16
8	50-092	Draw Nut	4
9	50-042	Hook Bolt	4

Optional Hydraulic Cooler
Figure 6 - 8

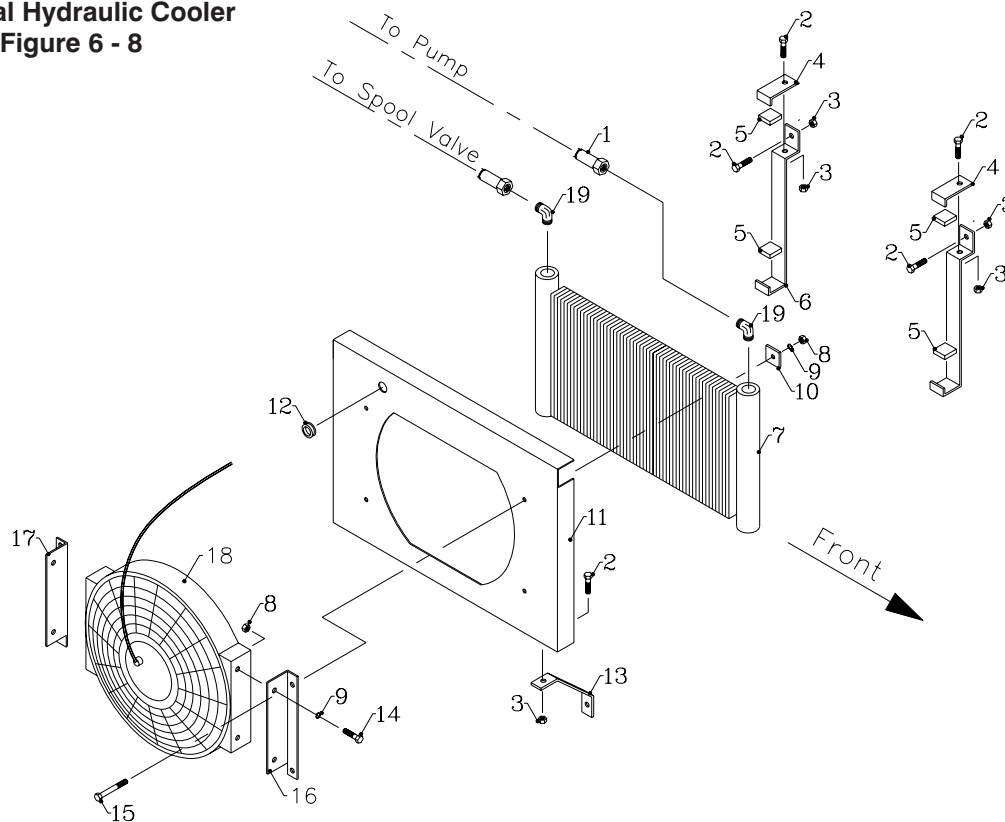


Parts List for Figure 6 - 8

Ref.	Part No.	Description	Quantity
1	20-089	Hose, 3/8 X 56	1
2	99-K31	Bolt, Flange 1/4 X 1/2	5
3	99-E20	Flange Nut, 1/4	5
4	64-792	Bracket, L Type	2
5	56-003	Weatherstrip, 3/4 x 1 x 1" long	4
6	64-793	Bracket, J type	2
7	21-075	Cooler, Hydraulic Oil	1
8	01-013	Nut, #10-32	8
9	01-018	Washer, Lock #10	8
10	64-791	Washer, Square Special	4
11	60-605	Shroud, Oil Cooler Fan	1
12	05-040	Grommet, 3/8 ID X 7/8 OD	1
13	64-794	Strap, Oil Cooler Mounting	1
14	01-029	Screw, Machine 10-32 X 1/2	4
15	01-031	Screw, Machine 10-32 X 2	1
16	64-790	Bracket, Oil Cooler Mount Rightt	1
17	64-789	Bracket, Oil Cooler Mount Left	1
18	35-074	Fan, 12 Volt Cooling	1
19	25-2103-8-6	Fitting, 90 deg.	2
*	31-003	Switch, Push-Pull	1
*	70-073	Kit, Hydraulic Oil Cooling (Includes Ref. 1 - 19)	1

* Not Illustrated

NOTE: The LD300 loader and the BM425 boom mower cannot be mounted on power units equipped with the optional 70-073 hydraulic cooling kit.

MODEL SH430 Sun Shade Canopy

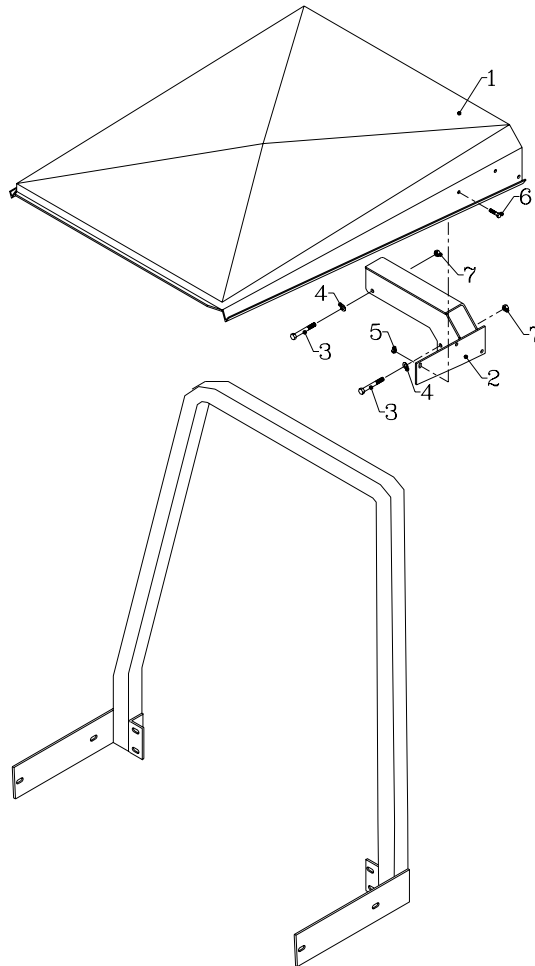

Parts List for Figure 6 - 9

Ref.	Part No.	Description	Quantity
1	6106014	Canopy, 430	1
	6106022	Canopy Headliner	1
	00-002	Decal, Steiner Small	1
2	6106020	Mount, Canopy W/A (RH)	1
	6106021	Mount, Canopy W/A (LH)	1
3	90-0624	Bolt, 3/8-16 X 3 NC	4
4	95-06	Flat Washer, 3/8 SAE	4
5	99-E12	Flange Nut, 5/16-18 NC	6
6	99-K19	Bolt, Flange 5/16-18 X 3/4 NC	6
7	F3013	Nut, Flanged Stover Lock	4