

MAN 4163260
Rev. A 03-2008



MODEL:
75-70890A
TILLER TL348



SCHILLER GROUNDS
CARE

OP/PARTS MANUAL

**CALIFORNIA
Proposition 65 Warning**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

**Californie Proposition 65
Avertissement**

Les échappements des moteurs diesel et certains de leurs composés sont reconnus par l'Etat de Californie pour être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.



AVERTISSEMENT

L'émission du moteur de ce matériel contient des produits chimiques que l'Etat de Californie considère être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

**California Advertencia
de la Proposicion 65**

El estado de California hace saber que los gases de escape de los motores diesel y algunos de sus componentes producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.



ADVERTENCIA

El estado de California hace saber que los gases de escape de este producto contienen productos químicos que producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

**CALIFORNIA
Proposition 65 Warning**

Battery posts, terminals, wiring insulation, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
WASH HANDS AFTER HANDLING.

IMPORTANT MESSAGE

Thank you for purchasing this Schiller Grounds Care, Inc. product. You have purchased a world class product, one of the best designed and built anywhere.

This product comes with an Owner/Operator's Manual. The useful life and good service you receive from this product depends to a large extent on how well you read and understand this manual. Treat this product properly and adjust it as instructed, and it will give you many years of reliable service.

See a Schiller Grounds Care, Inc. dealer for any service or parts needed. Schiller Grounds Care, Inc. service ensures that you continue to receive the best results possible from Schiller Grounds Care, Inc. products. You can trust Schiller Grounds Care, Inc. replacement parts because they are manufactured with the same high precision and quality as the original parts.

Schiller Grounds Care, Inc. designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this product only as directed in the manual, keep it in good repair and follow safety warnings and instructions. You'll always be glad you did.

Schiller Grounds Care, Inc.
One Bob Cat Lane
Johnson Creek, WI 53038-0469

TABLE OF CONTENTS	FIGURES	PAGE
INTRODUCTION		2
SAFETY		3, 4
INSTALLATION		5
OPERATION.....		6
SERVICE.....		7
BELT CHART.....		8
PARTS SECTION.....		9
FRAME & ROTOR PARTS	FIGURE 1	10, 11
DRIVE PARTS	FIGURE 2	12, 13
GEARBOX PARTS	FIGURE 3	14, 15

DESCRIPTION

The TL348 front mounted tiller has a 48 inch working width and a tilling depth of up to 6 inches in loose soil. Power is delivered by the PTO belt drive to a gearbox. The rotor is chain driven, a solid 1-1/2 inch steel shaft with 24 cutting tines. The tiller is designed to work when the power unit is driven in reverse. This allows good control and visibility. Tilling provides an ideal seed bed for garden or turf.



SPECIFICATIONS

Working Width	48"
Working Depth.....	6" Max.
Overall Heigth.....	26"
Overall Width.....	51"
Overall Length	38"
Tines.....	24 Replaceable, Hardened
Drive	Chain drive from gearbox
Operation.....	Tractor in reverse motion
Bearings	Greaseable
Weight	290 lbs.

TILLER

NOTICE !!!

Unauthorized modifications may present **extreme** safety hazards to operators and bystanders and could also result in product damage.

Schiller Grounds Care, Inc. strongly warns against, rejects and disclaims any modifications, add-on accessories or product alterations that are not designed, developed, tested and approved by Schiller Grounds Care, Inc. Engineering Department. Any Schiller Grounds Care, Inc. product that is altered, modified or changed in any manner not specifically authorized after original manufacture—including the addition of “after-market” accessories or component parts not specifically approved by Schiller Grounds Care, Inc.—will result in the Schiller Grounds Care, Inc. Warranty being voided.

Any and all liability for personal injury and/or property damage caused by any unauthorized modifications, add-on accessories or products not approved by Schiller Grounds Care, Inc. will be considered the responsibility of the individual(s) or company designing and/or making such changes. Schiller Grounds Care, Inc. will vigorously pursue full indemnification and costs from any party responsible for such unauthorized post-manufacture modifications and/or accessories should personal injury and/or property damage result.



This symbol means:
ATTENTION!
BECOME ALERT!

Your safety and the safety of others is involved.

Signal word definitions:

The signal words below are used to identify levels of hazard seriousness. These words appear in this manual and on the safety labels attached to Schiller Grounds Care, Inc. machines. For your safety and the safety of others, read and follow the information given with these signal words and/or the symbol shown above.

⚠ DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

⚠ WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

⚠ CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices or property damage.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage

Schiller Grounds Care, Inc.

One Bobcat Lane
Johnson Creek, WI 53038 U.S.A.
Phone: 920-699-2000
Fax: 920-699-3683

MODEL NUMBER

SERIAL NUMBER

MODEL NUMBER: This number appears on sales literature, technical manuals and price lists.

SERIAL NUMBER: This number appears only on your mower. It contains the model number followed consecutively by the serial number. Use this number when ordering parts or seeking warranty information.

GENERAL SAFETY

1. Read and understand the Owner's Manual before attempting to operate this machine.
2. Operate all controls from the operator's seat. **NO RIDERS.**
3. Keep all shields in place and safety switches adjusted properly.
4. Do not leave equipment unattended. STOP the engine and remove the key.
5. Do not allow minors or the inexperienced to operate this machine.
6. Keep people and pets a safe distance away from machine using power driven attachments. Injury could result from flying debris.

OPERATING SAFETY

1. **STOP ENGINE** to make repairs or adjustments. Do not attempt to work on unit or attachments with the engine running.
2. Before leaving the operator's seat:
 - **Disengage PTO drive.**
 - **Set Parking brake.**
 - **Stop Engine.**

DANGER

KEEP HANDS AND FEET AWAY FROM ROTATING TINES.

CAUTION

BE ALERT FOR OBJECTS IN THE PATH OF THE TILLER. REMOVE STONES, STICKS AND DEBRIS WHICH COULD CAUSE DAMAGE TO THE ATTACHMENT.

MOUNTING INSTRUCTIONS

1. This tiller is designed to fit all Steiner power units.
2. Install drive belt over left hitch arm and move tractor into position until the quick hitch can be latched.
3. Install drive belt. Use the correct drive belt for the power unit.
4. A support leg is provided to support the tiller during mounting and unmounting. Raise the leg to the upper position and secure with the safety snap pin before tilling.
5. Use "FLOAT" position while tilling and adjust skid shoes for tilling depth.

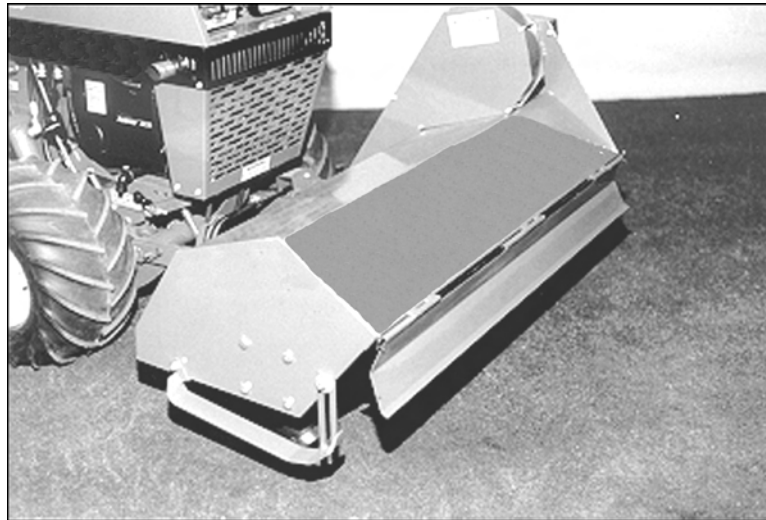 


Photo 1 - Mounted Tiller

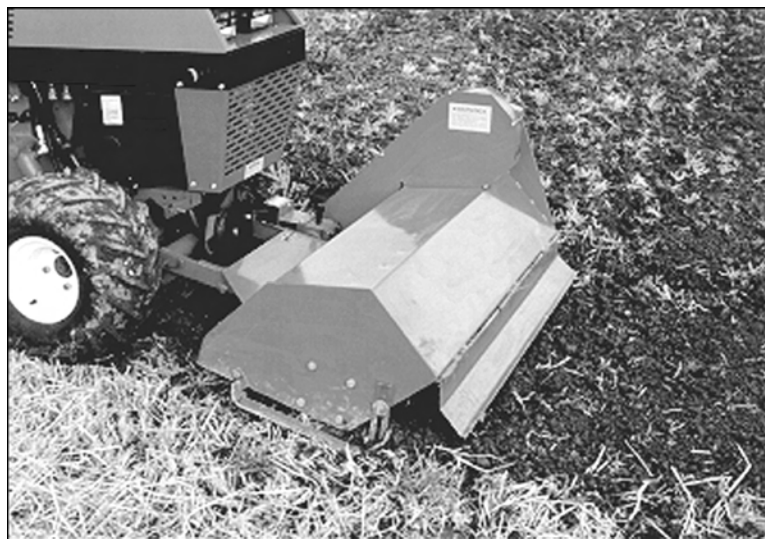 


Photo 2 - Tilling Seed Bed

OPERATING PRECAUTIONS



OBSERVE ALL SAFETY DECALS.

KEEP ALL SHIELDS IN PLACE.

BEFORE LEAVING TRACTOR, MOVE FORWARD - REVERSE CONTROL TO NEUTRAL POSITION, DISENGAGE PTO, SET PARKING BRAKE AND STOP ENGINE.

OPERATING INSTRUCTIONS

1. Mount tiller according to instructions in Section 3.
2. Raise tiller to transport position.
3. Shift transaxle(s) to "LOW" (1) range.
4. Engage PTO and set engine speed to full throttle. (Reduce to one-half throttle for hard or stony soils.)
5. Lower tiller carefully and place lift in "FLOAT" position.
6. Move tractor slowly in reverse travel.
7. Tiller will operate satisfactorily to a depth of approximately 6 inches in loose soil. Loose soil is defined as fresh plowed soil. The tiller works best as a seed bed fitting tool, not a deep tillage tool. (See Photo 2)
8. Adjust the skid shoes for tilling depth. In hard or stony soils it is suggested to first till to a depth of approximately 2 inches, and increase the depth approximately 2 inches for subsequent passes on the previously tilled soil.

⚠ CAUTION

BE ALERT FOR OBJECTS IN THE PATH OF THE TILLER. REMOVE LARGE STONES (OVER 2" IN DIAMETER) FROM THE PATH OF THE TILLER. LARGE STONES OR OTHER OBJECTS MAY CAUSE DAMAGE TO THE TILLER

MAINTENANCE

DAILY (10 HOUR) MAINTENANCE:

1. Check for signs of loose bolts. Replace or tighten.
2. Check oil level in gearbox. Use #90 gear oil - 1/2 full.
3. Remove caplugs and check chains. Lube with roller chain lube or #30 oil. Chain should not run "dry".

ANNUAL (100 HOUR) MAINTENANCE:

1. In addition to daily maintenance, grease all bearings.
2. Remove chain shields. Inspect the chains and sprockets for wear. Lube chain with chain lube or #30 oil. (See Photos 3 & 4)
3. Storage: Clean entire machine.

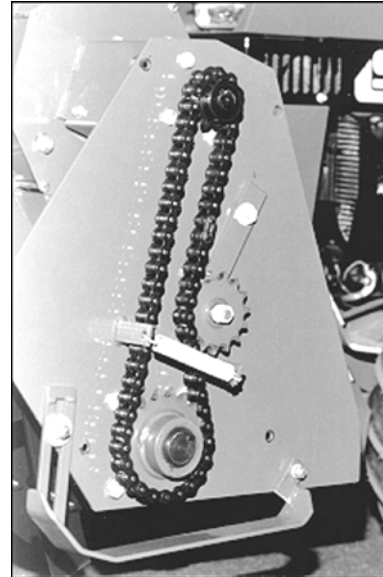 


Photo 3 - Drive Chain

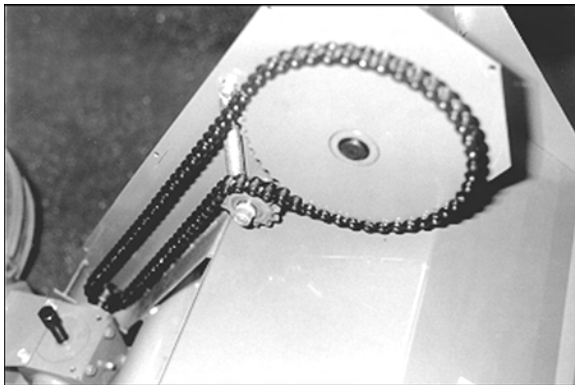 


Photo 4 - Drive Chain

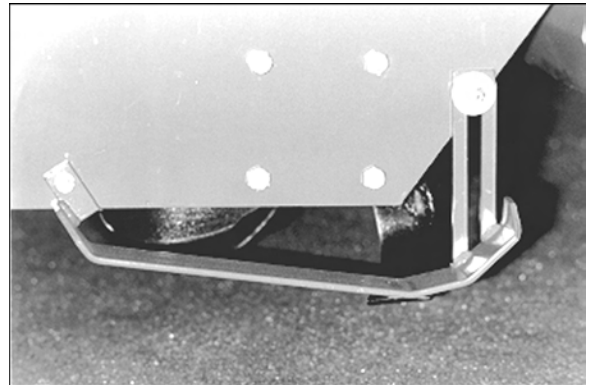 


Photo 5 - Tiller Skid Shoe

ADJUSTMENTS

Skid Shoes: Loosen the two mounting bolts and slide the shoe up or down as needed. Tighten mounting bolts. (See Photo 5)

Drive chain adjustment: The drive chains do not require any adjustment. Spring loaded idlers take up the slack. Replace chains and/or sprockets as normal wear occurs. (See Photo 3 & 4)

Tine replacement: When tines become worn to the extent that they do not dig properly, they should be replaced. Replace with tines at the exact location they were removed. The location of right and left tines is critical for smooth operation. (See Photo 6)

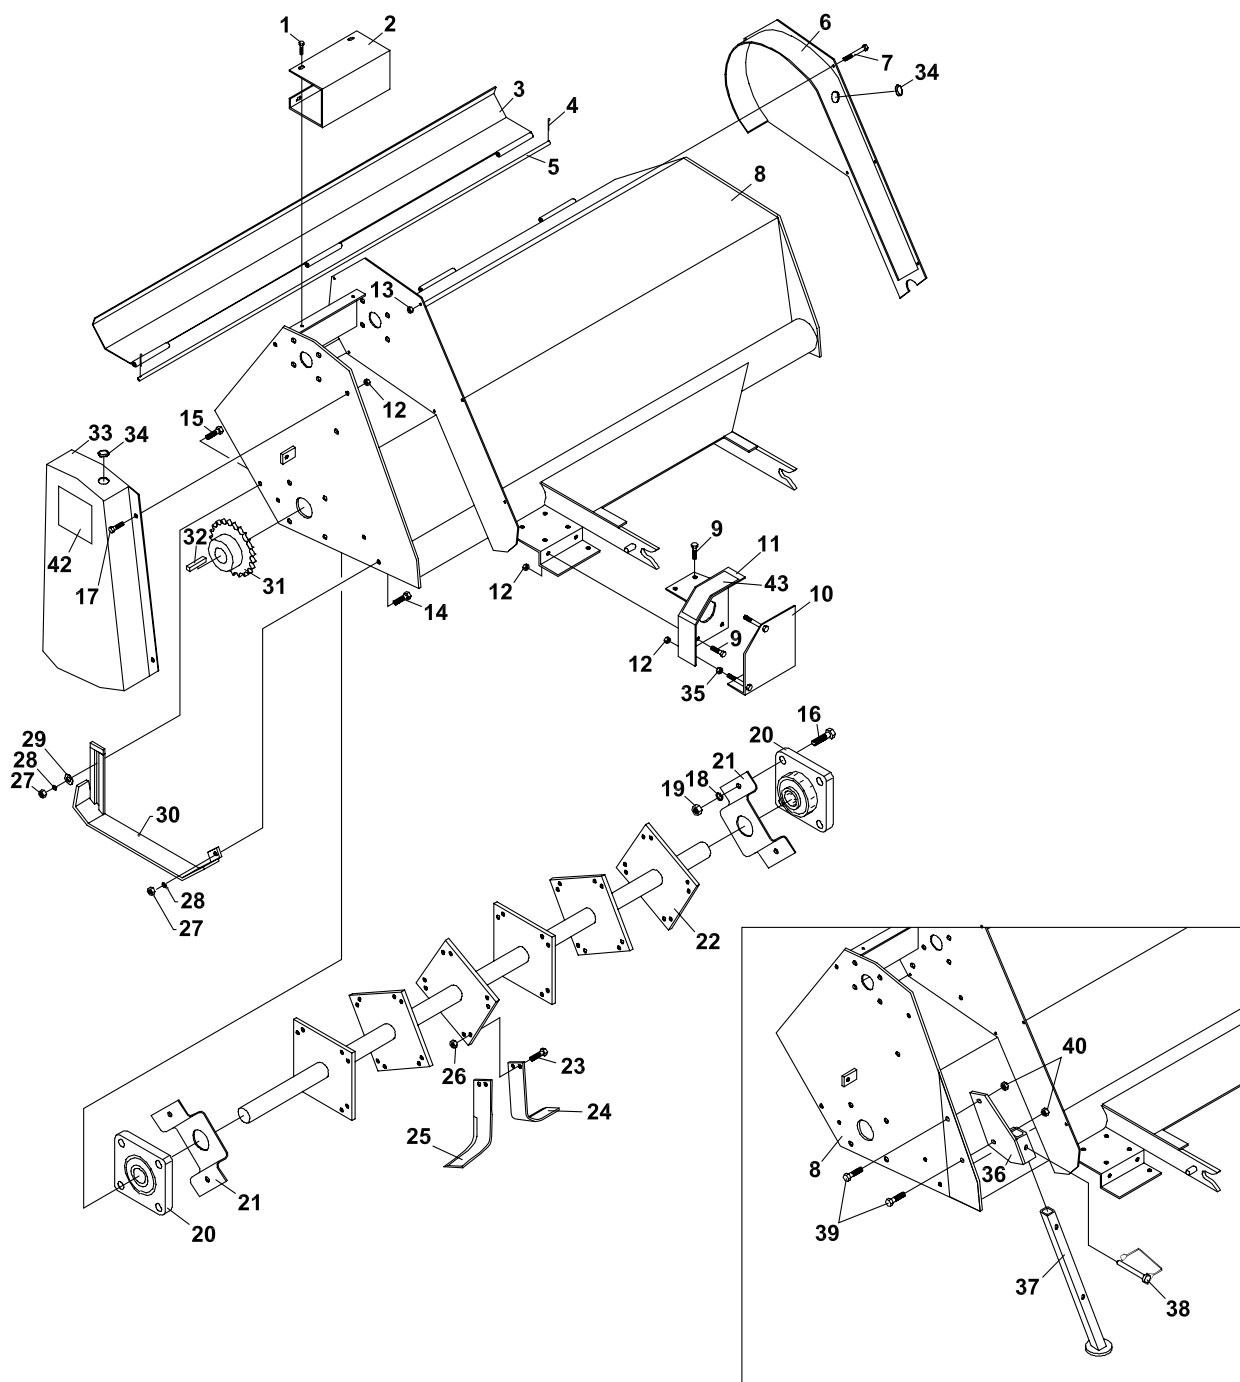 


Photo 6 - Tiller Tines

STEINER BELT CHART												
MODEL	220	230	230 Diesel	235	410	415	420	430	440	425	525	UM428
Tractor PTO Belt	81-A034 W/O El Clutch 81-B033 W/EI Clutch	81-B033	81-B033	4165347	81-B039	81-B039	81-A038 SN: 1001-2999 81-B039 SN: 3000-5000	81-B039	81-B039	81-B042 W/O El Clutch 81-B040 W/EI Clutch	81-B042	81-B029
MR, MW, MD, MX.	81-A040	81-A040	81-B041	81-B041	81-A040	81-A040	81-A040	81-A040	81-A040	81-B041	81-B041	81-B040
Rotary mowers	N/A	N/A	N/A	N/A	N/A	N/A	81-A040	81-A040	81-A040	81-B041	81-B041	N/A
BM425 Boom Mower	N/A	N/A	N/A	N/A	N/A	N/A	81-A040	81-A040	81-A040	81-B041	81-B041	N/A
MC444 Tree Farm Mower	N/A	N/A	N/A	N/A	N/A	N/A	81-A040	81-A040	81-A040	81-B041	81-B041	N/A
RC466 Rough Cut Mower	81-A042 W/O El Clutch 81-A040 W/EI Clutch	81-A040	81-B041	81-B041	N/A	N/A	81-A040	81-A040	81-A040	81-B041	81-B041	81-B040
RM674 & 684 Reel Mowers	81-A045 W/O El Clutch 81-A043 W/EI Clutch	81-A043	81-B043	81-B043	N/A	N/A	81-A043	81-A043	81-A043	81-B044 W/O El Clutch 81-B042 W/EI Clutch	81-B043	81-B042
CS312 Chipper Shredder	N/A	N/A	N/A	N/A	N/A	N/A	81-B041	81-B041	81-B041	81-B041	81-B041	81-B040
GN10KW Generator	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050
LD300 Loader	N/A	N/A	N/A	N/A	N/A	N/A	81-A026	81-A026	81-A026	N/A	N/A	N/A
PB100 & PB200 Power Blower	81-A042 W/O El Clutch 81-A040 W/EI Clutch	81-A040	81-B041	81-B041	81-A040	81-A040	81-A040	81-A040	81-A040	81-B041 W/O El Clutch	81-B041	81-B040
PR348 Power Box Rake	81-A045 W/O El Clutch	81-A043	81-B043	81-B043	N/A	N/A	81-A043			81-B044 W/O El Clutch 81-B042 W/EI Clutch	81-B043	81-B043
RS350 small Rotary Sweeper	81-A042 W/O El Clutch 81-A040 W/EI Clutch	81-A040	81-B040	81-B040	81-A040	81-A040	81-A040	81-A040	81-A040	81-B041 W/O El Clutch 81-B040 W/EI Clutch	81-B040	81-B040
RS454 large Rotary Sweeper	81-A048 W/O El Clutch 81-A046 W/EI Clutch	81-A046	81-B046	81-B046	81-A046	81-A046	81-A046	81-A046	81-A046	81-B046	81-B046	81-B044
SB348 Snowblower SN:1001-1713	81-A055 W/O El Clutch 81-A053 W/EI Clutch	81-A053	81-B054	81-B054	81-A053	81-A053	81-A053	81-A053	81-A053	81-B054 W/O El Clutch 81-B053 W/EI Clutch	81-B054	81-B053
SB348 Snowblower SN:1714-7570665***	81-A053 W/O El Clutch 81-A051 W/EI Clutch	81-A051	81-B051	81-B051	81-A051	81-A051	81-A051	81-A051	81-A051	81-B053 W/O El Clutch 81-B051 W/EI Clutch	81-B051	81-B051
SB448 Snowblower	4165834	4165834	4165850	4165850	4165834	4165834	4165834	105803	105803			
SB454 Snowblower	4165834	4165834	4165850	4165850	4165834	4165834	4165834	105803	105803			
SC101 Stump Cutter	N/A	N/A	N/A	N/A	81-A043	81-A043	81-A043	81-A043	81-A043	81-B045 W/O El Clutch 81-B043 W/EI Clutch	81-B0424	81-B042
TH300 Trencher	N/A	N/A	N/A	N/A	N/A	N/A	81-B050	81-B050	81-B050	81-B051	81-B051	81-B050
TL348 Tiller	81-A042 W/O El Clutch 81-A040 W/EI Clutch	81-A040	81-B041	81-B041	81-A040	81-A040	81-A040	81-A040	81-A040	81-B041 W/O El Clutch 81-B040 W/EI Clutch	81-B041	81-B040
VA242 Vertical Auger	N/A	N/A	N/A	N/A	N/A	N/A	81-A027	81-A027	N/A	N/A	N/A	N/A

PARTS SECTION

FIGURE 1



TILLER


FRAME & ROTOR PARTS

FIGURE 1

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1-1	64197-001	BOLT-5/16-18 X 3/4 SLF TAP	4	1-31	83-602024	SPROCKET-#60 20 TEETH	1
1-2	60-456.17	SHIELD-SHAFT	1	1-32	64164-26	KEY-3/8x3/8x1-1/2 SQ	1
1-3	60-011.17	SHIELD-LEVELING	1	1-33	4154902	S-SHIELD-DRIVE END	1
1-4	64140-1	COTTER PIN-1/8X1	2	1-34	06-010	CAP PLUG-1"	2
1-5	42-010.7	HINGE ROD	1	1-35	64229-02	LOCKNUT-NYLON 5/16-18	2
1-6	4154900	S-SHIELD-CHAIN	1	1-36	64-940.7	SUPPORT STAND MOUNT	1
1-7	90-0424	BOLT-1/4 X 3	7	1-37	64-941.7	SUPPORT STAND LEG	1
1-8	62-045.17	MAIN FRAME	1	1-38	03-018	PIN-SAFETY SNAP	1
1-9	64139-08	BOLT-5/16-18X3/4 WLF	4	1-39	64139-21	BLT-WLF 3/8-16X3/4	2
1-10	60-455.7	SHIELD-DRIVE PULLEY	1	1-40	64141-4	NUT-WLF 3/8-16	2
1-11	4154901	S-MNT-DRIVE PULLEY SHLD	1	1-41 *	00-092	DECAL-DANGER SYMBOL	1
1-12	64141-6	NUT, 5/16-18	8	1-42	00-093	DECAL-READ OP MAN	1
1-13	64151-17	LOCKNUT, HEX	7	1-43	00-025	DECAL-KEEP HANDS AWAY	1
1-14	64123-50	BOLT-HEX 3/8-16X1	2	1-44 *	4116761	DECAL-MADE IN USA	1
1-15	64123-16	BLT-HEX 3/8-16X1-1/4	2	1-45 *	4158620	DECAL-STEINER	1
1-16	64123-117	BOLT-HEX 1/2-13X1-1/2	8				
1-17	64139-08	BOLT-5/16-18X3/4	4				
1-18	64006-05	LOCKWSHR-HELICAL 1/2	8				
1-19	64025-19	HEX, NUT 1/2-13	8				
1-20	55-FB22024	BEARING	2				
1-21	60-013.7	SHIELD-BEARING	2				
1-22	80-011.7	ROTOR	1				
1-23	90-0710	BOLT-7/16 X 1-1/4	48				
1-24	79-011.7	TINE-LEFT	12				
1-25	79-010.7	TINE-RIGHT	12				
1-26	64229-04	S LOCKNUT-NYLN 7/16-14	48				
1-27	64025-05	NUT-3/8-16 HEX	4				
1-28	64006-03	LOCKWASHER	4				
1-29	99-B10	FLATWASHER	2				
1-30	79-012.7	SKID SHOE-RIGHT	1				
	79-013.7	SKID SHOE-LEFT	1				

* NOT ILLUSTRATED

 FIGURE 2

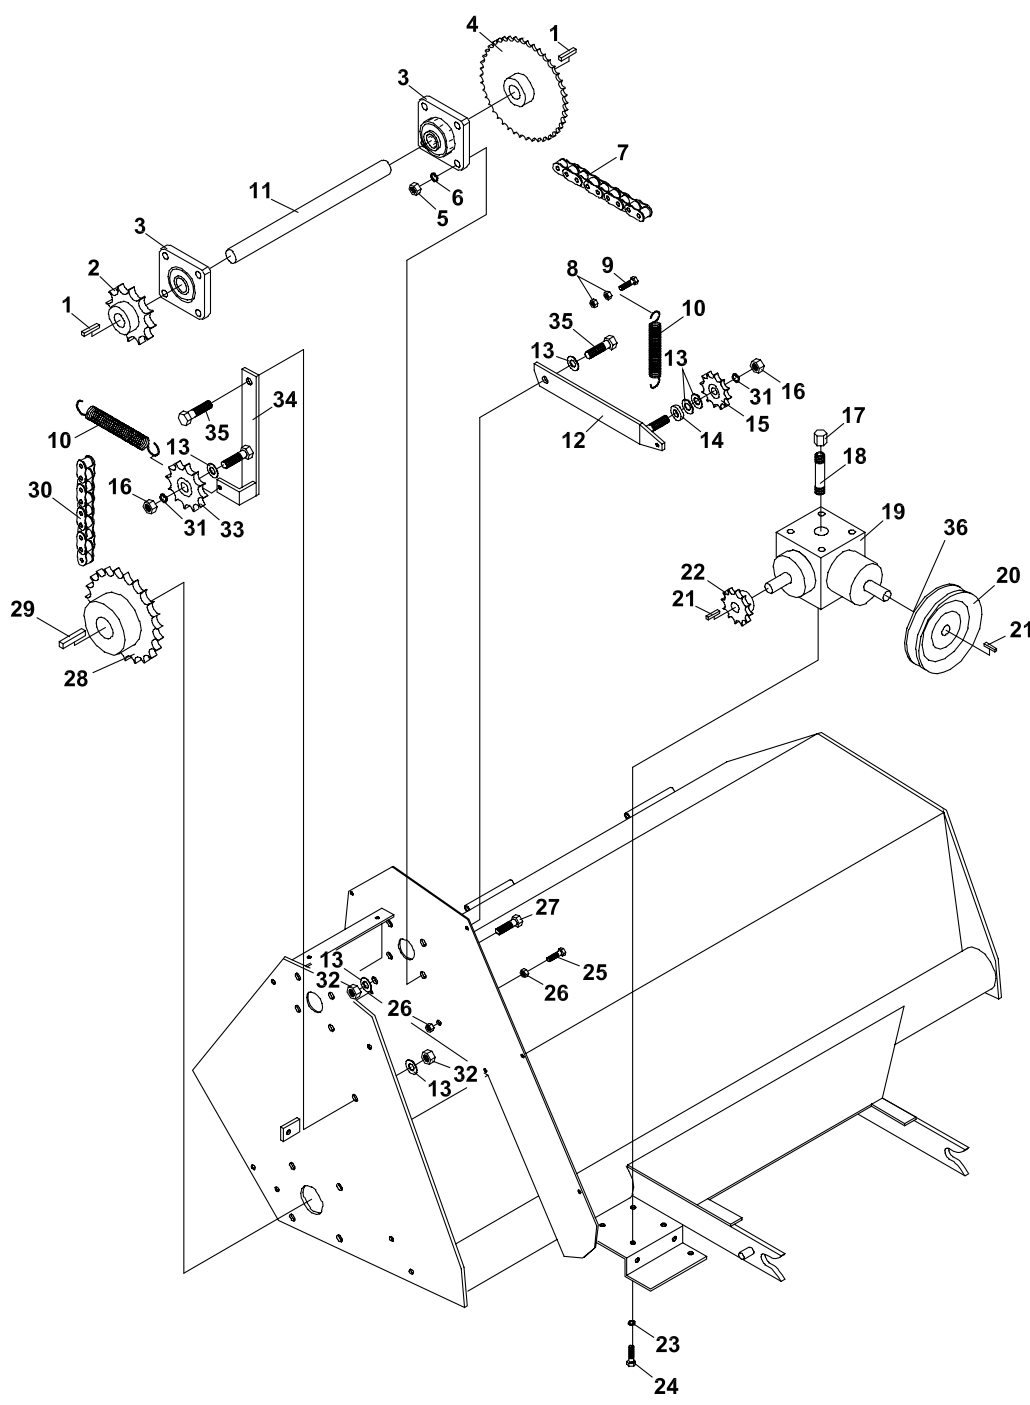

TILLER

DRIVE PARTS

FIGURE 2

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
2-1	64164-10	1/4X1/4X1-1/4 MACH KEY	2				
2-2	83-H601016	SPROCKET-#60 - 10 TEETH	1				
2-3	55-FB22016	BEARING	2				
2-4	83-504516	SPROCKET-#50 - 45 TEETH	1				
2-5	92-07	NUT-7/16	8				
2-6	64006-06	LOCKWASHER	8				
2-7	56-RC50-64	ROLLER CHAIN-63-5/8"	1				
	81-053	CONNECTING LINK	1				
2-8	64141-6	NUT, 5/16-18	2				
2-9	99-K02	FLANGE BOLT-5/16 X 1	1				
2-10	41-010	SPRING-5"	2				
2-11	80-020	JACKSHAFT	1				
2-12	40-017.7	IDLER ARM	1				
2-13	64163-67	WASHER-.516X1X12GA	6				
2-14	99-B12	SPACER-1/4" THICK	1				
2-15	83-5013E08	IDLER SPROCKET-#50	1				
2-16	64025-19	HEX, NUT 1/2-13	2				
2-17	24-042	PIPE CAP-1/4 VENTED	1				
2-18	29-109	PIPE NIPPLE-1/4 X 2-1/2	1				
2-19	87-209	GEARBOX	1				
2-20	83-BK5012	GEARBOX-PULLEY	1				
2-21	64164-11	KEY-3/16X3/16X1-1/4 SQ	2				
2-22	83-H501012	SPROCKET-#50 - 10 TEETH	1				
2-23	64006-02	LOCKWASHER-5/16	4				
2-24	64123-68	BOLT-HEX 5/16-18X1	4				
2-25	64123-89	BOLT-HEX 1/4-20X3/4	1				
2-26	64025-01	NUT-1/4-20 HEX	2				
2-27	90-0710	BOLT-7/16 X 1-1/4	8				
2-28	83-602024	SPROCKET-#60 - 20 TEETH	1				
2-29	64164-26	KEY-3/8x3/8x1-1/2 SQ	1				
2-30	56-RC60-44	ROLLER CHAIN-43-1/2"	1				
	81-024	CONNECTOR LINK-#60	1				
2-31	64006-05	LOCKWSHR-HELICAL 1/2	2				
2-32	64229-05	LOCKNUT, 1/2-13 NYLON	2				
2-33	83-6015E08	IDLER SPROCKET-#60	1				
2-34	40-018.7	IDLER ARM	1				
2-35	64123-39	BOLT-HEX 1/2-13X1-1/4	2				
2-36 *	64044-18	SET SCREW	1				

* NOT ILLUSTRATED

FIGURE 3

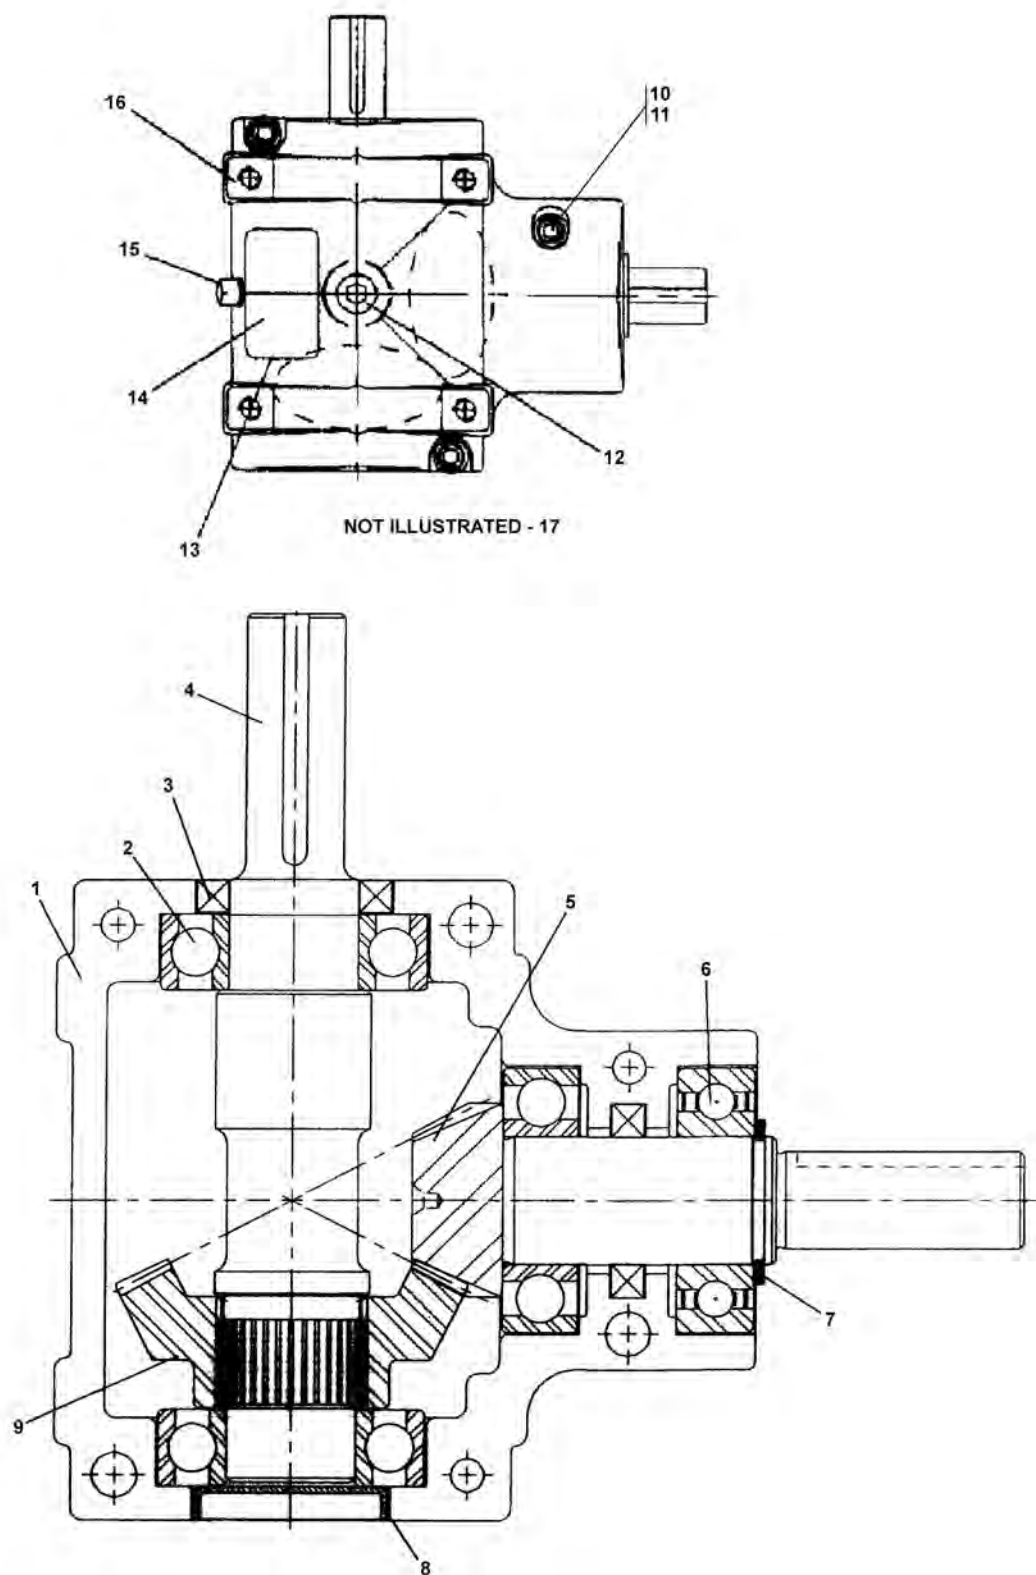 


FIGURE 3

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
	87-209	GEARBOX					
3-1	87-CM003582	HOUSING HALF	1				
3-2	87-CM153437	BALL BEARING	3				
3-3	87-CM301374	SEAL	2				
3-4	87-CM226423	THRU SHAFT	1				
3-5	87-CM108068	INTEGRAL SHFT&PINION	1				
3-6	87-CM153429	BALL BEARING	1				
3-7	87-CM620013	RETAINING RING	1				
3-8	87-CM640110	EXPANSION PLUG	1				
3-9	87-CM108514	GEAR RH	1				
3-10	87-CM412320	CAP SCREW	6				
3-11	87-CM410506	LOCKWASHER	6				
3-12	87-CM410001	PIPE PLUG-SOLID	2				
3-13	87-CM800573	I.D. TAG	1				
3-14	87-CM802876	I.D. TAG COVER	1				
3-15	87-CM410068	PIPE PLUG-SOLID	1				
3-16	87-CM003756	HOUSING HALF	1				
3-17 *	87-CM800326	GEAR LUBE (OZ.)	5				

*NOT ILLUSTRATED

SCHILLER GROUNDS CARE, INC.
ONE BOB-CAT LANE
P.O. BOX 469
JOHNSON CREEK, WI 53038
920-699-2000
www.schillergc.com



©Schiller Grounds Care, Inc. 2010