

# **MODEL:**

**75-70644A**TURBINE BLOWER PB200

# PARTS MANUA

### **CALIFORNIA**

### **Proposition 65 Warning**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

# **A** WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

# Californie Proposition 65 Avertissement

Les échappements des moteurs diesel et certains de leurs composés sont reconnus par l'Etat de Californie pour être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

# **A** AVERTISSEMENT

L'émission du moteur de ce matériel contient des produits chimiques que l'Etat de Californie considère être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

# California Advertencia de la Proposicion 65

El estado de California hace saber que los gases de escape de los motores diesel y algunos de sus componentes producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

# **▲** ADVERTENCIA

El estado de California hace saber que los gases de escape de este producto contienen productos químicos que producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

# CALIFORNIA Proposition 65 Warning

Battery posts, terminals, wiring insulation, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

WASH HANDS AFTER HANDLING.

### **IMPORTANT MESSAGE**

Thank you for purchasing this Schiller Grounds Care. Inc. product. You have purchased a world class product, one of the best designed and built anywhere.

This product comes with an Owner/Operator's Manual. The useful life and good service you receive from this product depends to a large extent on how well you read and understand this manual. Treat this product properly and adjust it as instructed, and it will give you many years of reliable service.

See a Schiller Grounds Care. Inc. dealer for any service or parts needed. Schiller Grounds Care. Inc. service ensures that you continue to receive the best results possible from Schiller Grounds Care. Inc. products. You can trust Schiller Grounds Care. Inc. replacement parts because they are manufactured with the same high precision and quality as the original parts.

Schiller Grounds Care. Inc. designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this product only as directed in the manual, keep it in good repair and follow safety warnings and instructions. You'll always be glad you did.

# Schiller Grounds Care. Inc. One Bob Cat Lane Johnson Creek, WI 53038-0469

TABLE OF CONTENTS DESCRIPTION / SPECIFICATIONS	FIGURES	<b>PAGE</b> 2
SAFETY		3, 4
INSTALLATION		6
	FIGURE 1	
MOUNTING ASSEMBLY	FIGURE 2	12, 13
	FIGURE 3	
	FIGURE 4	
	FIGURE 5	
BELT CHART	FIGURE 6	19

04-2011

# **DESCRIPTION / SPECIFICATIONS**



### **DESCRIPTION**

The PB200 Turbine Power Blower is designed to attach to the quick-hitch of Steiner power units. Noise pollution will not be a concern with this turbine power blower. Quiet but powerful, it quickly cleans walkways, parking lots, leaves, debris, and more.

### Features:

- Nozzle rotation 360 degrees continuous
- · Nozzle rotation by hydraulic motor
- Kickstand for easy hookup
- · Axial flow turbine design
- Quiet operation
- Direct airflow to either side or front from operator's seat
- · Quick-Hitch, Front-Mount
- Caster Wheel follows ground contours
- Steel bumper protects nozzle

### **SPECIFICATIONS**

Overall Width	.27"
Overall Height	
Overall Length	.67"
Weight	.235 lbs.
WeightWeight on caster wheel	.195 lbs.
Air flow	.8000 cfm
Wind speed	
Wind speed (deflected to front)	.78 mph
Sound level (while seated in operator's seat)	.91 dBA

<sup>\*</sup> These specifications are subject to change without notice.

### NOTICE !!!

Unauthorized modifications may present **extreme** safety hazards to operators and bystanders and could also result in product damage.

Schiller Grounds Care. Inc. strongly warns against, rejects and disclaims any modifications, add-on accessories or product alterations that are not designed, developed, tested and approved by Schiller Grounds Care. Inc. Engineering Department. Any Schiller Grounds Care. Inc. product that is altered, modified or changed in any manner not specifically authorized after original manufacture—including the addition of "after-market" accessories or component parts not specifically approved by Schiller Grounds Care. Inc.—will result in the Schiller Grounds Care. Inc. Warranty being voided.

Any and all liability for personal injury and/or property damage caused by any unauthorized modifications, add-on accessories or products not approved by Schiller Grounds Care. Inc. will be considered the responsibility of the individual(s) or company designing and/or making such changes. Schiller Grounds Care. Inc. will vigorously pursue full indemnification and costs from any party responsible for such unauthorized post-manufacture modifications and/or accessories should personal injury and/or property damage result.



This symbol means:

# ATTENTION! BECOME ALERT!

Your safety and the safety of others is involved.

### Signal word definitions:

The signal words below are used to identify levels of hazard seriousness. These words appear in this manual and on the safety labels attached to Schiller Grounds Care. Inc. machines. For your safety and the safety of others, read and follow the information given with these signal words and/or the symbol shown above.

### **▲** DANGER

**DANGER** indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

# **AWARNING**

**WARNING** indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

### CAUTION

**CAUTION** indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices or property damage.

### CAUTION

**CAUTION** used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage

# Schiller Grounds Care, Inc.

One Bobcat Lane
Johnson Creek, WI 53038 U.S.A
Phone: 920-699-2000
Fax: 920-699-3683

MODEL NUMBER

**MODEL NUMBER:** This number appears on sales literature, technical manuals and price lists.

**SERIAL NUMBER:** This number appears only on your mower. It contains the model number followed consecutively by the serial number. Use this number when ordering parts or seeking warranty information.

### **GENERAL SAFETY**

- Read and understand the owner's manual, before attempting to operate this machine.
- Operate all controls from the operator's seat, (if so equipped). NO RIDERS.
- Keep all shields in place and safety switches adjusted properly.
- Do not leave equipment unattended. STOP the engine and remove the key (if so equipped).
- Do not allow minors or the inexperienced to operate this machine.

- Never allow anyone to operate or service this machine while under the influence of alcohol or drugs.
- Keep people and pets a safe distance away from machines using power driven attachments. Injury could result from flying debris.
- Wear all the necessary protective clothing and personal safety devices to protect your head, eyes, ears, hands, and feet.
- Operate the machine only in daylight or in good artificial light.

### **OPERATING SAFETY**

1. Do not attempt to work on unit or any attachments with the engine running!

# **AWARNING**

The tractor may coast when the engine stops. Set the parking brake.

- 2. Before leaving the tractor seat:
  - 1. Disengage PTO drive.
  - 2. Set PARKING brake.
  - 3. Stop Engine.

# **ADANGER**

DO NOT ATTEMPT TO CLEAN INLET OR OUTLET AREAS WITH BLOWER RUNNING.

### **ADANGER**

DO NOT OPERATE WITH PERSONS IN THE AREA. HIGH SPEED BLOWER MAY PROPEL OBJECTS CAUSING POSSIBLE INJURY OR DEATH.




BEFORE OPERATING THIS MACHINE
READ AND UNDERSTAND
THE OPERATOR'S MANUAL.
KEEP ALL SHIELDS IN PLACE
AND FOLLOW ALL SAFETY RULES.

**Location: Main Frame** 



**Location: Turbine Housing** 

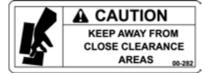

Location: Front of Bumper



 Do not point discharge toward per animals or property. **Location: Discharge Nozzle** 



# ATTACHING THE TURBINE POWER BLOWER

- Open the quick hitch latches and drive the tractor into position, aligning the quick hitch.
   Be sure that both latches are fully engaged and locked.
- Stop the engine! Do not attempt to install the drive belt with the engine running.
- Put the belt over the drive pulley and engage or adjust the double idler assembly.
- Attach the hydraulic hoses to the quickcouplers. Route the hoses in a place where they will not be damaged. If the hydraulic lever movement seems backward, reverse the hoses at the quick-couplers.
- Remove the clip pin from the support stand. Rotate the stand to the highest setting and insert clip pin. This stand is used to dismount the blower and position it at the correct height to simplify attaching the next time.
- A rear weight bar with 2 weights is required when this turbine power blower is attached to the Model 410 or 430 power unit.

NOTE: Always remove rear weights when front mounted attachment is removed!

# OPERATING THE TURBINE POWER BLOWER

### Controls

- The Front Lift lever controls the lift. Normal operation is to have the lever in the "FLOAT" position.
- The Auxiliary Hydraulic lever controls the position of the nozzle. It will rotate in a continuous 360 degree rotation. The downward position directs the airflow in a forward direction.



Always wear eye protection when operating this blower.

### **Operating Instructions**

 Rotate the nozzle downward for forward flow of air. This is especially helpful when working close to buildings.

**NOTE:** When the nozzle is pointing straight down, the positioning decal on top of the nozzle will be centered. (See Photo 1)

 Observe the wind direction and work with the wind whenever possible. The blower works equally well when traveling forward or reverse. When clearing large areas it is advisable to use patterns which blow all the debris in the same direction.

# **A**CAUTION

USE CAUTION WHEN OPERATING NEAR PERSONS, PETS, AND LIGHTWEIGHT OBJECTS WHICH MAY TIP OR ROLL WITH THE HIGH VELOCITY OF THE BLOWER. NOTE THAT THE VELOCITY IS OF HURRICANE RATING.

FLYING DEBRIS CAN ALSO CAUSE DAMAGE TO PERSONS, AUTOS, WINDOWS, ETC.



Photo 1

### **Operator Warnings!**

### Visual check

- Check for damaged or missing parts or fasteners each time the blower is operated. Repair or replace.
- Do not operate if the nozzle or drive have been modified in any way.

### Chemical applications

 Use of the turbine blower to apply spray chemicals is not recommended.

### **Bystanders**

• Warn all bystanders to keep a safe distance away while blower is in operation.

### **Machine stability**

 A rear weight bar with 2 weights is required when this unit is mounted on the Model 410 and 430 power units.

### Nozzle

 Use care that the nozzle does not bump into objects during operation. Do not operate with damaged or bent nozzle.



### **SERVICE SCHEDULE**

### Daily:

- Check for any signs of loose bolts and tighten as needed.
- Check inlet area and outlet nozzle for collection of foreign material and clean as needed.

### 25 hour:

- In addition to daily service, grease the two bearings on the drive shaft, the caster swivel, and caster wheel.
- Lubricate the nozzle base with a dry lubricant spray such as teflon or graphite.

**NOTE:** The turbine has sealed bearings and does not require periodic lubrication.

### **ADJUSTMENTS**


Turbine drive belt:

Remove the drive belt shield. Tighten the drive belt by loosening the front bearing mount bolts, move the drive shaft with the adjusting screw, and re-tighten mount bolts. Replace the shield.


Nozzle rotation belt:

Remove the nozzle drive belt shield. Adjust the belt by loosening the hydraulic motor mounting bolts, and move the pump in the mounting slot. Replace the shield.

# PARTS SECTION

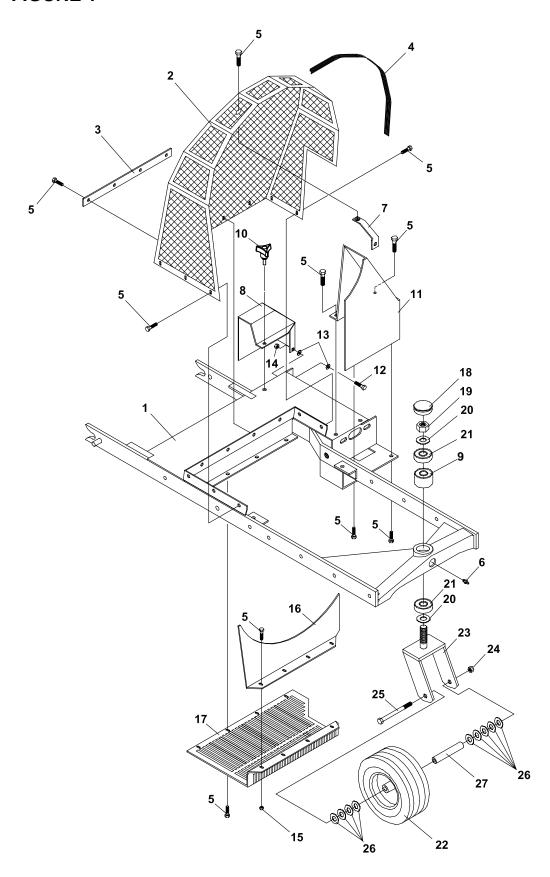


ITEI	M PART NO	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4165649	S-MAIN FRAME	1				
2	6110053.17	INTAKE SCREEN	1				
3	6110015.17	STRAP-RETAINING	1				
4	56-027	TRIM-4'	1				
5	64139-04	BOLT-WLF 1/4-20X3/4	22				
6	85010N	S/B GREASE FITTING	1				
7	4166688	BRACE	1				
8	64-611.7	SHIELD-DRIVE PULLEY	1				
9	4165469	SPACER76 X 1.25 X .188	1				
10	4170936	KNOB-3 PRONG 1/4-20	1				
11	4166687	GUARD	1				
12	64123-54	BOLT, 5/16-18X3/4	1				
13	64163-04	25/64X5/8X16GA WASHER	2				
14	64229-02	LOCKNUT-NYLON 5/16-18	1				
15	64141-2	NUT-WLF 1/4-20	4				
16	6110010.17	GUARD-LOWER	1				
17	6110011.17	INTAKE SCREEN-LOWER	1				
18	53-060	HUB CAP	1				
19	99-AC12NF	NUT, 3/4	1				
20	64163-06	WSHR768/.756X1.25X14	2				
21	55-Z9504AB	BALL BEARING-3/4ID	2				
22	53-112	WHEEL-W/410-4 TIRE	1				
	55-G527	BEARING	1				
23	6110059.7	FRAME-CASTER WHEEL	1				
24	64141-4	NUT-WLF 3/8-16	1				
25	64123-130	BLT-HEX 3/8-16X5-1/2	1				
26	64163-16	WASHER-41/64 X 1-3/8 X 12	2 9				
27	6110046	AXLE	1				
				1			

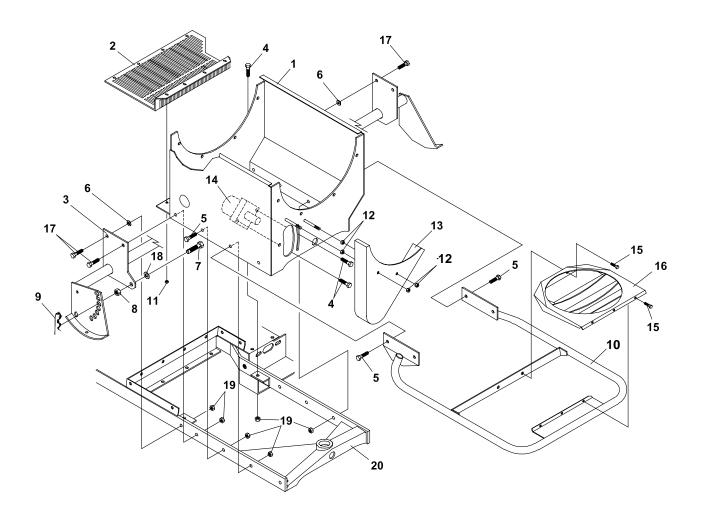

# **MOUNTING ASSEMBLY**




ITEN	A PART NO	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	6110052.17	TURBINE MNTNG STAND	1				
2	6110011.17	INTAKE SCREEN, LOWER	1				
3	6110056.7	KICKSTAND	1				
4	64139-21	BLT-WLF 3/8-16X3/4	4				
5	64139-24	BLT-WLF 3/8-16 X 1	4				
6	64163-87	WASHER, .391X1.375X12GA	A 2				
7	99-F36	BOLT, LEG RETAINER	1				
8	64141-13	NUT WLF 1/2-13	1				
9	64168-1	COTTER-HAIRPIN .12X2-3/8	3 1				
10	4165650	S-BUMPER	1				
11	64141-2	NUT-WLF 1/4-20	4				
12	64141-6	NUT, 5/16-18	4				
13	4166802.17	GUARD-NOZZLE	1				
14	21-135	MOTOR	1				
	21-136	SEAL KIT	1				
15	64139-04	BOLT-WLF 1/4-20X3/4	5				
16	6110051.17	DEFLECTOR CHUTE	1				
17	64139-18	BLT-WLF 3/8-16X1-1/4	4				
18	64163-67	WASHER516X1X12GA	1				
19	64141-4	NUT-WLF 3/8-16	12				
20	4165649	S-MAIN FRAME	1				

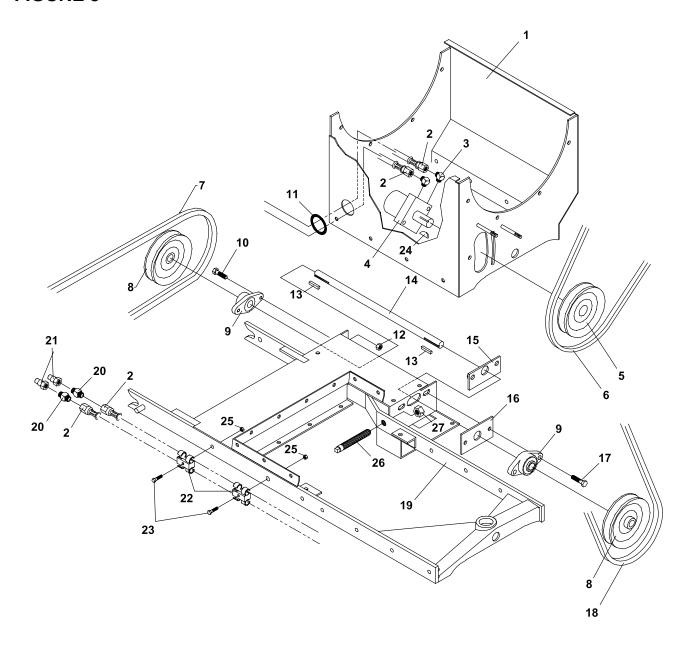

# **DRIVE PARTS / HYDRAULICS**

# TURBINE BLOWER

ITE	M PART NO	. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	6110052.17	TURBINE MNTG STAND	1				
2	20-017	HOSE, 1/4 X 70	2				
3	25-2503-10-6	FITTING-90	2				
4	21-135	MOTOR-HYD	1				
	21-136	SEAL KIT	1				
5	83-BS2816	PULLEY	1				
6	81-A053	BELT-A53	1				
7	SEE BELT CH	HART	1				
8	83-BK5012	PULLEY-5"	2				
9	55-FB23012	BEARING	2				
10	64139-24	BLT-WLF 3/8-16 X 1	2				
11	05-039	GROMMET-1-5/16IDX2OD	1				
12	64141-4	NUT-WLF 3/8-16	2				
13	64164-11	KEY-3/16X3/16X1-1/4	2				
14	6110009	SHAFT-INPUT DRIVE	1				
15	6110057.7	MOUNTING PLATE-BRG	1				
16	6110030.7	SPACER-BRG PLATE	1				
17	64262-013	BLT-FLNGE 3/8-16X1-1/2	2				
18	81-B050	BELT-B50	1				
19	4165649	MAIN FRAME	1				
20	25-0103-4-6	FITTING-STR	2				
21	23-004	QUICK COUPLER-MALE	2				
	4165751	CLAMP, HOSE 1/2"	2				
	64123-283	BLT-HEX, 1/4-20 X 1-3/4	2				
	64164-28	WOODRUFF KEY-1/4 X 1	1				
25	64229-01	NUT-NYLON LOCK 1/4-20	2				
	6110014	BOLT-ADJ 5/8	1				
27	99-E11	NUT, STEERING VALVE	1				

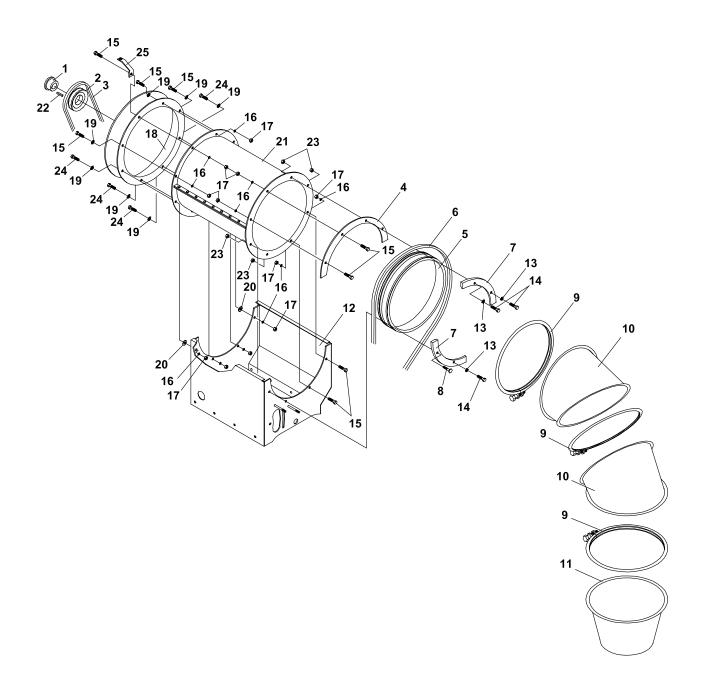




ITE	M PART NO	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	83-H20	BUSHING, 1-1/4" H	1				
2	83-BK65H	PULLEY-6.5" H BUSHING	1				
3	81-B050	BELT-B50	1				
4	6110022.17	SPACER-NOZZLE RING	1				
5	87-14-138ER	BASE-NOZZLE RING	1				
6	81-A053	BELT-A53	1				
7	87-14-1600	SLIDE-NOZZLE	2				
8	6110042	BOLT	1				
9	87-14-139	BANDS-CLAMP	3				
10	87-14-137	ELBOW-45	2				
11	87-14-136B	NOZZLE-10" DIA RND	1				
12	6110052.17	TURBINE MNTNG STAND	1				
13	87-14-1660	WASHER	3				
14	64123-14	BOLT,HEX3/8-24 X 1-3/4	3				
15	64123-21	BLT-HEX 3/8-24X1-1/4	8				
16	64006-03	LOCKWASHER-3/8 HEL	12				
17	64025-04	NUT-3/8-24	12				
18	87-14-221-D	1 BELLMOUTH	1				
19	64163-61	WSHR .81X.406X16GA	7				
20	87-14-1605-A	A SPACER-3/8 X 1 X 3/16	2				
21	87-14-924	BLOWER-TURBINE ASSY	1				
*	00-290	DECAL-ROTATION POS INC	1				
22	64164-10	KEY1/4X1/4X1-1/4 MACH	1				
23	99-A06NF	LOCKNUT, STOVER 3/8-24	4				
24	64123-37	BOLT,HEX 3/8-24 X 1-1/2	4				
25	6110047.17	BRACE-INTAKE SCREEN	1				

### \* NOT ILLUSTRATED

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	00-093	DECAL-OWNER'S MANUAL	1				
2	4116761	DECAL-MADE IN AMERICA	1				
3	00-282	DECAL-CLOSE CLEARANC	E 1				
4	00-286	DECAL-EYE PROTECTION	1				
5	00-375	DECAL-THROWN OBJ HAZ	3				
6	87-BT-4X4	<b>DECAL-BUFFALO TURBINE</b>	1				
7	00-290	DECAL-ROT POS IND	1				
				1			

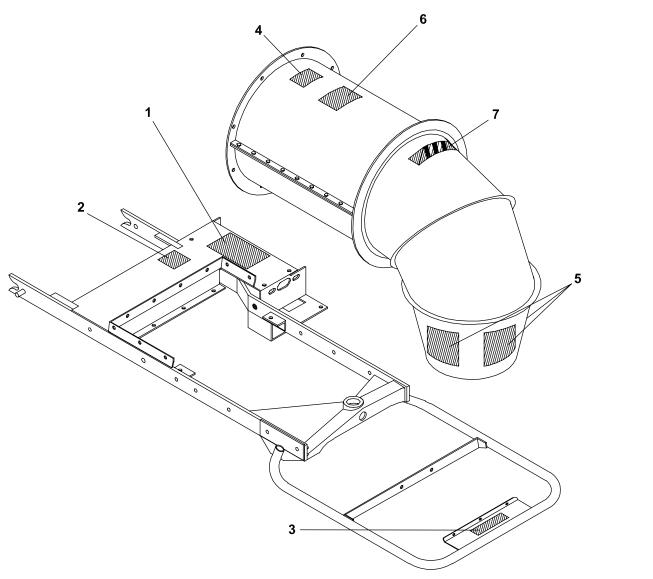

				STE	STEINER BELT CHART	SELT C	HART					
MODEL	220	230	230 Diesel	235	410	415	420	430	440	425	525	UM428
Tractor PTO Belt	81-A034 W/O EI Clutch 81-B033 W/EI Clutch	81-B033	81-B033	4165347	81-B039	81-B039	81-A038 SN: 1001-2999 81-B039 SN:3000-5000	81-B039	4166636 5LX44	81-B042 W/O EI Clutch 81-B040 W/EI Clutch	81-B042	81-B029
MR, MW, MD, MX. Rotary mowers	81-A040	81-A040	81-B041	81-B041	81-A040	81-A040	81-A040	81-A040	81-B041	81-B041	81-B041	81-B040
BM425 Boom Mower	N/A	N/A	N/A	N/A	N/A	Α⁄Ν	81-A040	81-A040	81-B041	81-B041	81-B041	Y/A
MC444 Tree Farm Mower	N/A	N/A	N/A	N/A	N/A	N/A	81-A040	81-A040	N/A	81-B041	81-B041	N/A
RC466 Rough Cut Mower	81-A042 W/O EI Clutch 81-A040 W/EI Clutch	81-A040	81-B041	81-B041	N/A	ΑN	81-A040	81-A040	81-B041	81-B041	81-B041	81-B040
RM674 & 684 Reel Mowers	81-A045 W/O EI Clutch 81-A043 W/EI Clutch	81-A043	81-B043	81-B043	N/A	N/A	81-A043	81-A043	81-B044	81-B044 W/O EI Clutch 81-B042 W/EI Clutch	81-B043	81-B042
CS312 Chipper Shredder	N/A	N/A	N/A	Y/N	N/A	N/A	81-B041	81-B041	81-B041	81-B041	81-B041	81-B040
GN10KW Generator	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050	81-B050
LD300 Loader	N/A	N/A	N/A	N/A	N/A	N/A	81-A026	81-A026	N/A	W/N	N/A	N/A
PB100 & PB200 Power Blower	81-A042 W/O EI Clutch 81-A040 W/EI Clutch	81-A040	81-B041	81-B041	81-A040	81-A040	81-A040	81-A040	81-B041	81-B041 W/O EI Clutch	81-B041	81-B040
PR348 Power Box Rake	81-A045 W/O EI Clutch 81-A043 W/EI Clutch	81-A043	81-B043	81-B043	N/A	N/A	81-A043		81-B044	81-B044 W/O EI Clutch 81-B042 W/EI Clutch	81-B043	81-B043
RS350 small Rotary Sweeper	81-A042 W/O EI Clutch 81-A040 W/EI Clutch	81-A040	81-B040	81-B040	81-A040	81-A040	81-A040	81-A040	81-B041	81-B041 W/O EI Clutch 81-B040 W/EI Clutch	81-B040	81-B040
RS454 large Rotary Sweeper	81-A048 W/O EI Clutch 81-A046 W/EI Clutch	81-A046	81-B046	81-B046	81-A046	81-A046	81-A046	81-A046	81-B045	81-B046	81-B046	81-B044
SB348 Snowblower SN:1001-1713	81-A055 W/O EI Clutch 81-A053 W/EI Clutch	81-A053	81-B054	81-B054	81-A053	81-A053	81-A053	81-A053	81-B054	81-B054 W/O EI Clutch 81-B053 W/EI Clutch	81-B054	81-B053
SB348 Snowblower SN:1714-7570665***	81-A053 W/O EI Clutch 81-A051 W/EI Clutch	81-A051	81-B051	81-B051	81-A051	81-A051	81-A051	81-A051	81-B052	81-B053 W/O EI Clutch 81-B051 W/EI Clutch	81-B051	81-B051
SB448 Snowblower		4165834	4165850	4165850	4165834	4165834	4165834	105803	105803 4165834			
SB454 Snowblower		4165834	4165850	4165850	4165834	4165834	4165834	105803	105803 4165834			
SC101 Stump Cutter	N/A	N/A	N/A	N/A	81-A043	81-A043	81-A043	81-A043	81-B044	81-B045 W/O EI Clutch 81-B043 W/EI Clutch	81-B0424	81-B042
TH300 Trencher	N/A	N/A	N/A	N/A	N/A	N/A	81-B050	81-B050	81-B050	81-B051	81-B051	81-B050
TL348 Tiller	81-A042 W/O EI Clutch 81-A040 W/EI Clutch	81-A040	81-B041	81-B041	81-A040	81-A040	81-A040	81-A040	81-B041	81-B041 W/O EI Clutch 81-B040 W/EI Clutch	81-B041	81-B040
VA242 Vertical Auger	N/A	N/A	N/A	A/N	N/A	Ϋ́	81-A027	81-A027	N/A	N/A	N/A	N/A

