

LITTLE WONDER®

BRC-26 HYDRO 26" LITTLE WONDER BRUSH CUTTER

MODELS:
5126-22-59 HONDA GXV390



MAN 4169575
Rev A. 07-2013
Original Language Instructions

SET-UP / PARTS MANUAL

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

⚠ WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

CALIFORNIA

Proposition 65 Warning

Battery posts, terminals, wiring insulation, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

WASH HANDS AFTER HANDLING.

BRUSH CUTTER

IMPORTANT MESSAGE

Thank you for purchasing this Schiller Grounds Care, Inc. product. You have purchased a world class product, one of the best designed and built anywhere.

This machine comes with an Operation and Safety Manual, Parts and Service Manual, and Engine Manual. The useful life and good service you receive from this machine depends to a large extent on how well you read and understand these manuals. Treat your machine properly, lubricate and adjust it as instructed, and it will give you many years of reliable service.

Your safe use of this Schiller Grounds Care, Inc. product is one of our prime design objectives. Many safety features are built in, but we also rely on your good sense and care to achieve accident-free operation. For best protection, study the manuals thoroughly. Learn the proper operation of all controls. Observe all safety precautions. Follow all instructions and warnings completely. Do not remove or defeat any safety features. Make sure those who operate this machine are as well informed and careful in its use as you are.

See a Schiller Grounds Care, Inc. dealer for any service or parts needed. Schiller Grounds Care, Inc. service ensures that you continue to receive the best results possible from Schiller Grounds Care, Inc. products. You can trust Schiller Grounds Care, Inc. replacement parts because they are manufactured with the same high precision and quality as the original parts.

Schiller Grounds Care, Inc. designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this machine only as directed in the manuals, keep it in good repair and follow safety warnings and instructions. You'll always be glad you did.

Schiller Grounds Care, Inc.
1028 Street Road
Southampton, PA 18966-4217
PHONE 877-596-6337 • FAX 215-357-8045

TABLE OF CONTENTS	FIGURES	PAGE
SAFETY.....		4-6
SET-UP INSTRUCTIONS / CONTROLS.....		7
MAINTENANCE		8-10
ADJUSTMENTS		11-13
BELT REPLACEMENT		14
STORAGE		15
TROUBLESHOOTING		16-17
SPECIFICATIONS / WARRANTY		18
PARTS SECTION		19
DRIVE ASSEMBLY	FIGURE 1	20, 21
MAIN FRAME ASSEMBLY	FIGURE 2	22, 23
CUTTERDECK ASSEMBLY	FIGURE 3	24, 25
HANDLE ASSEMBLY	FIGURE 4	26, 27



This Operator / Parts Manual is part of the machine. Suppliers of both new and second-hand machines must make sure that this manual is provided with the machine.

NOTICE !!!

Unauthorized modifications may present **extreme** safety hazards to operators and bystanders and could also result in product damage.

Schiller Grounds Care, Inc. strongly warns against, rejects and disclaims any modifications, add-on accessories or product alterations that are not designed, developed, tested and approved by Schiller Grounds Care, Inc. Engineering Department. Any Schiller Grounds Care, Inc. product that is altered, modified or changed in any manner not specifically authorized after original manufacture-including the addition of "after-market" accessories or component parts not specifically approved by Schiller Grounds Care, Inc. will result in the Schiller Grounds Care, Inc. Warranty being voided.

Any and all liability for personal injury and/or property damage caused by any unauthorized modifications, add-on accessories or products not approved by Schiller Grounds Care, Inc. will be considered the responsibility of the individual(s) or company designing and/or making such changes. Schiller Grounds Care, Inc. will vigorously pursue full indemnification and costs from any party responsible for such unauthorized post-manufacture modifications and/or accessories should personal injury and/or property damage result.



This symbol means:
ATTENTION!
BECOME ALERT!

Your safety and the safety of others is involved.

Signal word definitions:

The signal words below are used to identify levels of hazard seriousness. These words appear in this manual and on the safety labels attached to Schiller Grounds Care, Inc. machines. For your safety and the safety of others, read and follow the information given with these signal words and/or the symbol shown above.

⚠ DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

⚠ WARNING


WARNING indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

⚠ CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices or property damage.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage.

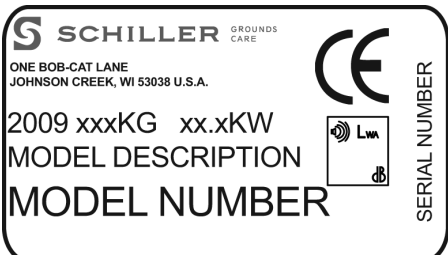

MODEL NUMBER: This number appears on sales literature, technical manuals and price lists and serial tag.

SERIAL NUMBER: This number appears only on your unit. It contains the model number followed consecutively by the serial number. Use this number when ordering parts or seeking warranty information.

OPERATOR PREPARATION AND TRAINING

READ THE OPERATION & SAFETY MANUAL



- If an operator or mechanic cannot read English, it is the owner's responsibility to explain this material to them. If any portion of this material is unclear, contact your factory representative for clarification.
- Become familiar with the safe operation of the equipment, operator controls and safety signs. Be prepared to stop the engine quickly in an emergency. Do not operate or allow another person to operate this machine if there are any questions about safety.
- All operators and mechanics should be trained. The owner is responsible for training the users.
- Wear appropriate clothing, including safety goggles or safety glasses with side shields when operating. Wear substantial footwear and long pants. Do not operate barefoot or wearing open sandals. Long hair, loose clothing or jewelry may get tangled in moving parts.
- Wear appropriate hearing protection.
- Wear safety glasses.
- Never allow children, unskilled or improperly trained people to operate this equipment. Local regulations can restrict the age of the operator.
- Do not put hands or feet near or under rotating parts. Keep clear of the front deck opening at all times.
- Never pick up or carry the unit while the engine is running.
- Keep warning labels and this operator's manual legible and intact. Replacement labels and manuals are available from the factory.
- Do not operate machine while under the influence of drugs or alcohol, or any other condition of impairment.
- The owner/user can prevent and is responsible for accidents or injuries occurring to themselves, other people, or property.

SITE PREPARATION AND CIRCUMSTANCES

- Evaluate the terrain to determine how to safely perform the job. Only use accessories and attachments approved by the manufacturer.

- Clear the area to be cut of objects such as rocks, toys, wire or any other debris that may be thrown or get tangled in the brush cutter.
- Be sure the area is clear of pets and people, especially young children. Never assume they will remain where you last saw them. Stop the machine if any enter the area.
- Only cut in daylight or in good artificial light.
- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people or their property.
- Do not cut wet grass as tires may lose traction.

MULTIPLE OPERATORS

- Keep a safe distance between operators when working together.

MACHINE PREPARATION

- Read engine manual.
- Check operator presence interlock system. Adjust or have any problems repaired before using.
- Damage to the engine can occur if there is no oil or oil level is low. Check the oil level and add oil per engine manual as necessary.
- Do not tamper with or defeat safety devices. Keep guards, shields and interlock safety devices in place and in proper working condition. They are for your protection.
- Keep all fasteners such as nuts, bolts, and pins well secured.
- Visually inspect blades, blade bolts and the cutter assembly for wear or damage. Replace worn or damaged blades and bolts to preserve balance.
- Verify that machine and attachments, if any, are in good operating condition.
- Do not engage blades until ready to mow.

MAINTENANCE SAFETY**In general**

- Maintain machine according to manufacturer's schedule and instructions for maximum safety and best results.
- Park machine on level ground.
- Never allow untrained personnel to service machine.
- Guards should only be removed by a qualified technician for maintenance or service. Replace when work is completed.
- Adjust or repair only after the engine has been stopped and the blade has stopped moving.
- Disconnect spark plug wire(s) before doing any maintenance.
- Replace parts if worn, damaged or faulty. For best results, always replace with parts recommended by the manufacturer.
- Do not dismantle the machine without releasing or restraining forces which may cause parts to move suddenly.
- Provide adequate support, e.g. jack stands for lifted machine or parts if working beneath.
- Do not put hands or feet near or under rotating parts.
- Clean up spilled oil or fuel thoroughly.
- Replace faulty mufflers.
- To reduce fire hazards, keep the engine, muffler, and fuel storage area free of grass, leaves, debris buildup or grease.
- Never attempt to make adjustments while the engine is running except for repairs or adjustments as specifically noted, such as for carburetor adjustment, where the engine must be running. Keep hands and feet clear of moving parts in these circumstances.

Blades

- The blade is sharp and can cut. Use extra caution when handling. Remove obstructions with care. Wrap the blade or wear gloves.
- Only replace or sharpen blade. Never straighten or weld it.
- Keep other people away from the blade.

WARNING**Fuel**

- Petrol (gasoline) is flammable; petrol (gasoline) vapors are explosive. Use extra care when handling.
- Store only in containers specifically designed for fuel.
- When refueling or checking fuel level:
 - Stop the engine and allow to cool;
 - Do not smoke;
 - Refuel outdoors only;
 - Use a funnel;
 - Do not overfill;
 - If fuel is spilled, do not attempt to start the engine until the spill is cleaned up and vapors have cleared.
- Replace caps on fuel containers and tanks securely.

Sparks from static electricity can start fires or cause explosions. Flowing fuel can generate static electricity. To prevent static electricity sparks:

- Keep containers electrically grounded. Do not fill containers in a vehicle or on a truck or trailer bed with a plastic liner. Fill containers on the ground away from the vehicle.
- When practical, remove petrol (gasoline) powered equipment from the truck or trailer and refuel it on the ground. If equipment must be refueled on the truck or trailer, refuel from a portable container rather than a dispenser nozzle.
- Keep the dispenser nozzle in contact with the rim of the fuel tank or container opening until fueling is complete. Do not use a nozzle lock-open device.
- If fuel is spilled on clothing change it immediately.

STORAGE SAFETY

- Stop the engine and allow to cool before storing.
- Drain the fuel tank outdoors only.
- Store fuel in an approved container in a cool, dry place.
- Keep the machine and fuel containers in a locked storage place to prevent tampering and to keep children from playing with them.
- Do not store the fuel container or equipment with gasoline in the tank inside a building where fumes may reach an open flame or spark.
- Appliances such as furnaces and water heaters with a pilot light have an open flame.
- Keep petrol (gasoline) storage area free of grass, leaves and excessive grease to reduce fire hazard.
- Clean grass and debris from cutting units, drives, mufflers and engine to help prevent fires.
- Clean up any spilled gasoline or oil in the storage area.

WARNING

SET-UP INSTRUCTIONS

1. Unpack the unit.
2. Move the parking brake lever to the "OFF" position.
3. Pull the free-wheel rod until the enlarged boss on the rod comes through the key hole on the back of the machine. Slide the rod down the slot to latch the boss on the outside of the rear cover. Roll the machine off the pallet.
4. Connect the blade control linkage. Make sure the linkage is adjusted to fully engage the clutch. This will prevent clutch slippage when the blade is under load. Excessive clutch slippage will cause premature failure of the clutch mechanism.
5. Fill the engine with the proper grade of oil. See engine manual for oil specifications.
6. Read the operation and safety manual before starting. The operator manual is located in the tube on the front of the handle support.
7. Run the engine for 5 minutes before engaging the blade to ensure full lubrication.

CONTROLS

BLADE CONTROL LEVER (A)

Hold down the lever to engage the blade for cutting.
Release the lever to disengage and stop the blade.

TRACTION CONTROL LEVER (B)

Push the thumb lever down to go in the reverse direction. Pushing the lever further increases reverse speed.


Pull the bottom lever up to move in the forward direction. Pulling the lever further increases forward speed to the maximum set by the Speed Adjustment Knob.

SPEED ADJUSTMENT KNOB (C)

Turn the knob clockwise to decrease maximum speed.
Turn the knob counterclockwise to increase maximum speed.

FREE WHEEL ROD (D)

Pull the free-wheel rod until the enlarged boss comes through the keyhole on the rear engine deck cover, then slide the rod down the slot to latch it to free wheel or push the machine without the engine running. Raise the rod until the enlarged boss pops back behind the rear engine deck cover to engage the transmission.

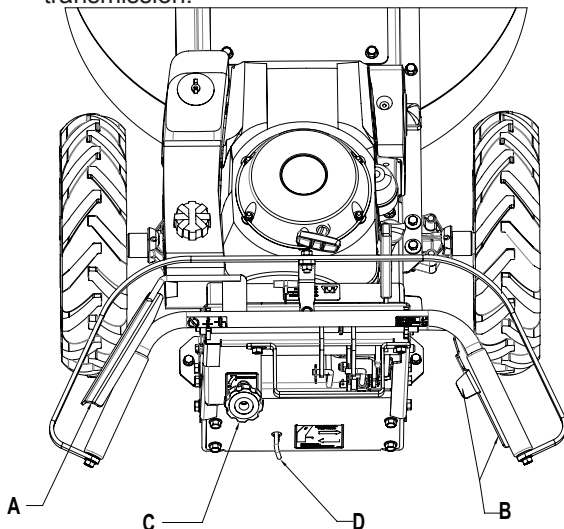

THROTTLE CONTROL (E)

Controls engine speed. Pushing the lever forward makes the engine speed go faster, while pulling the lever back slows down the speed of the engine. Pulling the lever all the way back stops the engine.

ENGINE STARTER CORD (F)

Pull the cord to turn the engine over to start it. See operation section p. 12.

PARK BRAKE (G)


Pull lever up to engage the park brake.
Push lever down to disengage park brake.

FUEL VALVE (H)

Move to the "OFF" position to shut off the fuel whenever transporting the machine by trailer or truck or during storage. Move to the "ON" position before starting the engine.

CHOKE (I)

Pull the choke control loop to the rear to engage the choke.
Push the loop toward the engine to disengage the choke.

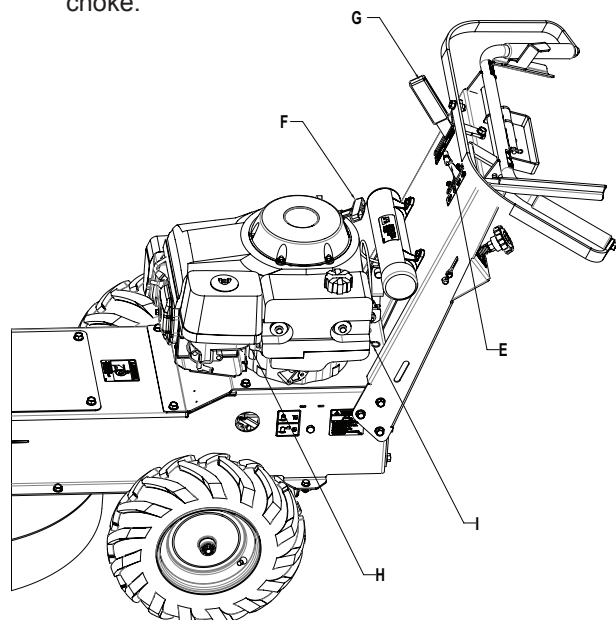

MAINTENANCE



WARNING

Stop the engine and remove spark plug wire before performing any maintenance.

When replacement parts are required, use genuine Schiller Grounds Care, Inc. parts or parts with equivalent characteristics, including type, strength and material. Failure to do so may result in product malfunction and possible injury to the operator and/or bystanders.

Carbon monoxide present in the exhaust is an odorless and deadly gas. Never start or run the engine where exhaust fumes can collect. Provide enough fresh air to keep fumes from getting too strong.

Replace any warning decals that become illegible immediately.

DAILY MAINTENANCE

Blade Control

To operate the blade, the blade control lever must be held down against the handle. The blade should stop when the lever is released.

To Check:

1. Start the engine and run at 1/2 throttle with the blade disengaged.
2. Engage the blade by holding in the Blade Control Lever. Release the Blade Control Lever and the blade should stop.
3. Repair the machine before using if the Blade Control does not work.

BELTS

- Check condition of belts for damage or wear.
 - Replace broken, worn, or damaged belts.
1. Make sure the engine is off, spark plug is removed, and parking brake is engaged.
 2. Remove the four bolts **Q** securing the Blade belt cover **S**. (Figure 1)
 3. Remove any debris such as leaves, grass, sticks or other build up that might cause a fire or damage.
 4. Inspect the belt and pulleys for damage or wear that could cause problems. Replace damaged or worn parts with Schiller Grounds Care, Inc. parts.
 5. Replace blade belts and pulleys. See Blade Belt / Pulley Replacement instructions.

HARDWARE

- Tighten any hardware (nuts, bolts, etc) that are found loose.
- Replace any broken or missing hardware (nuts, bolts, cotter pins, etc.).

SHIELD PLATES

- Check condition of shield plates for damage or wear.
- Replace broken, worn, or damaged shield plates.

TIRES

Tires are foam filled on models with bar treads. They have a valve stem, but CANNOT be aired. On units with pneumatic tires, maintain tires at 14 psi.

ENGINE

See engine manual for air cleaner service intervals and servicing procedure.

OIL

Check oil level daily. Top off as needed.

Change engine oil after the first 5 hours of operation. Then change as recommended by the engine manufacturer.

1. Remove the drain plug and drain oil while engine is warm.
2. Replace the drain plug, remove dipstick and fill with new oil. See engine manual for oil specifications.
3. Wipe off any oil on unit.
4. Start and run engine for 30 seconds. Stop engine.
5. Wait 30 seconds, then re-check oil level.

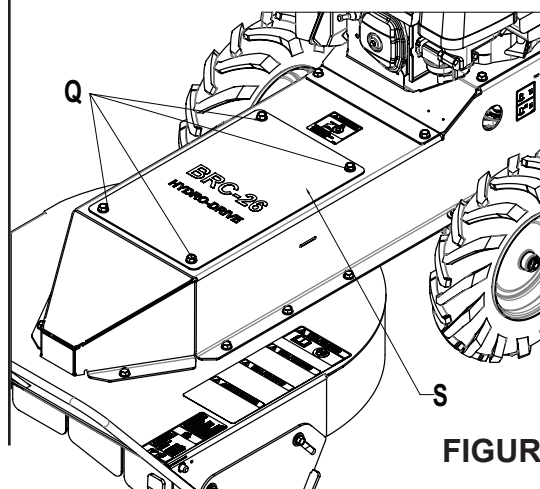


FIGURE 1

6. Top off as necessary. See engine manual for details.

BLADE

Service:

Stop engine and remove spark plug wire before servicing blade.

Wear leather or thickly padded gloves to prevent injury from the blade. Keep hands clear of the blade path:

Use an impact wrench to remove the blade bolt **F**. If an impact wrench is not available; use a socket on a long breaker bar or a box wrench to loosen the blade bolt. If additional leverage is needed, slip a pipe or thick walled tube over the breaker bar or wrench.

- Check blade for damage.
- Replace broken, bent, cracked or otherwise damaged blade.
- Do not weld or straighten blade.
- If the blade is good, it may be turned over to use the second set of cutting edges.
- If all edges are dull, the blade may be sharpened or replaced.
- Use of another manufacturer's blades may be dangerous.


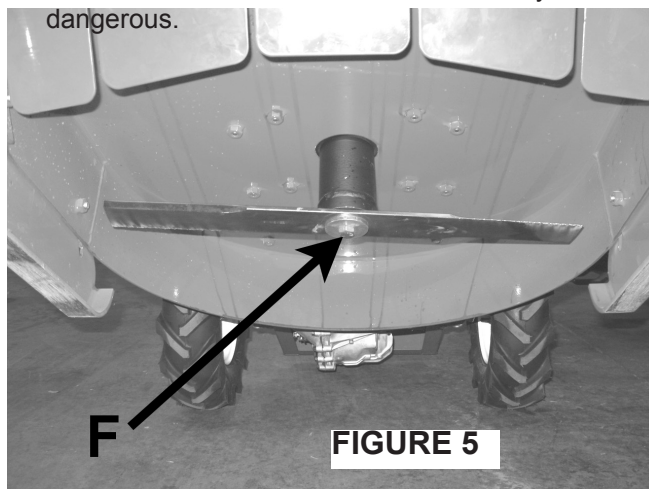


FIGURE 5

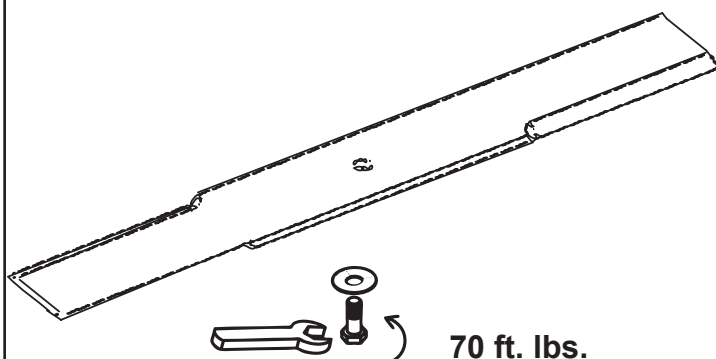


70 ft. lbs.

Sharpening:

Wear the appropriate personal protective equipment when sharpening the blade.

- Inspect the blade before sharpening..
- Replace broken, bent, cracked or otherwise damaged blade.
- Do not weld or straighten blade.
- Maintain cut angle of 30°.
- Do not over heat blades when sharpening.

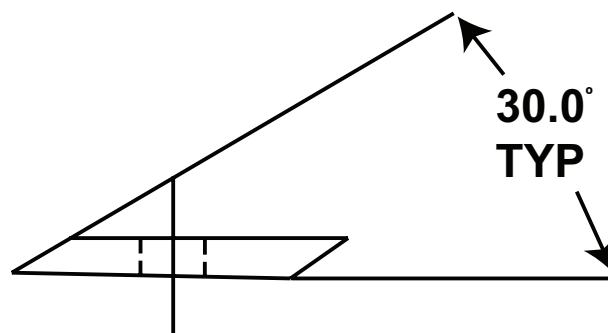

Blade Balance:

Maintain blade balance at 5/8 oz-in (19.4 g-cm) or less. Failure to keep blades balanced causes excess vibration, wear and shortened life of most components of the machine.

To balance a blade:

1. Sharpen blade first
2. Balance the blade at the center.
3. Attach a 1/8 oz. (3.9 g) weight at a distance of 5" (127mm) from center on the light end. This should make the light end the heavy end.
 - If it does, the blade is balanced.
 - If it does not, file or grind the heavy end until the addition of the weight makes the light end the heavy end.

LUBRICATION

There are 6 grease fittings on the machine.

A--Blade Spindle- Grease 1 pump once a season.

CAUTION: Do not over grease or the bearing seals can be popped out or crushed.


B--Transaxle Idler Pivot- Grease once a season.

C--Brake Bellcrank- Grease once a season.

D--Traction Bellcrank- Grease once a season.

E--Clutch Pivot Blade--Grease once a season.

F--Park Brake Lever--Grease once a season.

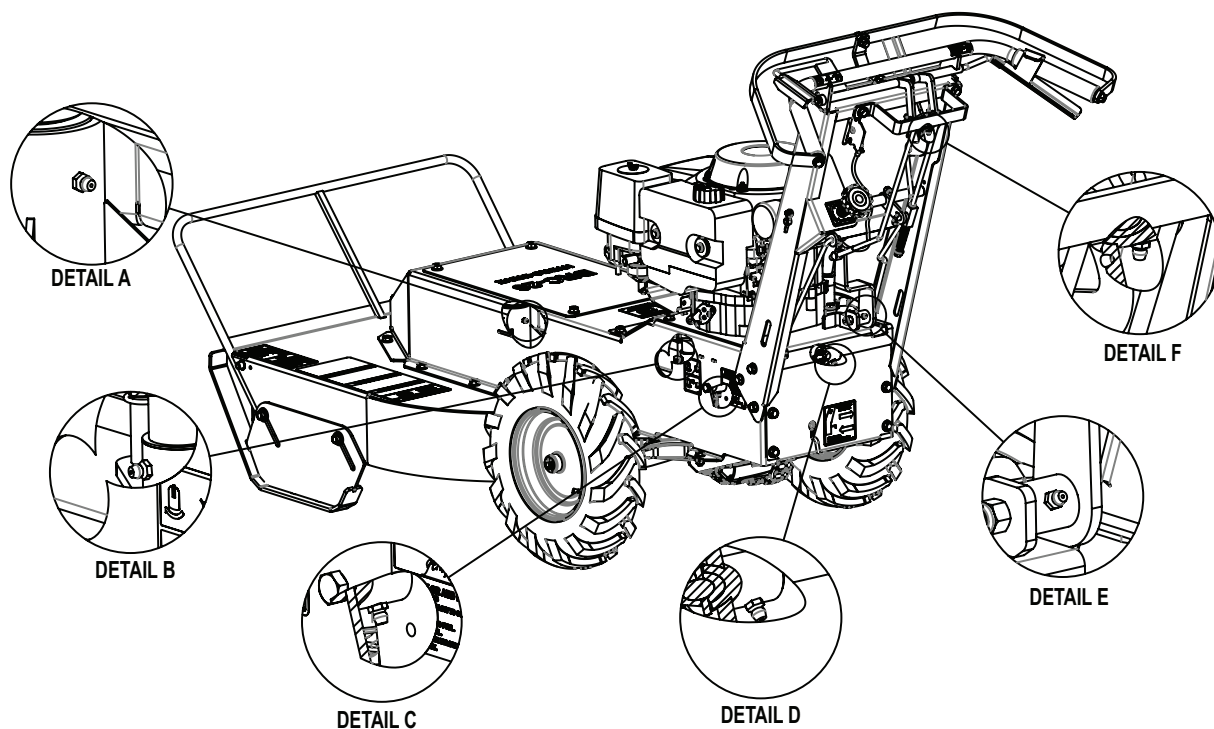

BELTS

Under tensioned V-belts can slip and squeal. This generates excess heat and results in cracking and premature belt failure. Over-tensioned belts reduce belt and bearing life.

Properly tensioning and aligning a belt drive will allow the belt drive to perform at it's maximum level.

Stop the engine and remove the spark plug wire before making any belt adjustments.

Adjust belt tension after the first five hours of operation. Then tension as required.



BLADE BELT ADJUSTMENT

There should be a maximum of 1/2" deflection with 5 lbs pressure in the middle of the non idler side of the belt.

1. Remove the four bolts **Q** holding the Blade belt cover **S** on. (**Figure 1**)
2. Loosen the bolt **U** holding the small pulley just enough to move the pulley back and forth. (**Figure 2**)
3. Slide the small pulley firmly against the belt and tighten bolt **U**. Check the tension and readjust if necessary.
4. Replace the Blade belt cover **S**.

TRANSAXLE BELT ADJUSTMENT


The belt has a spring loaded idler and does not require adjustment.

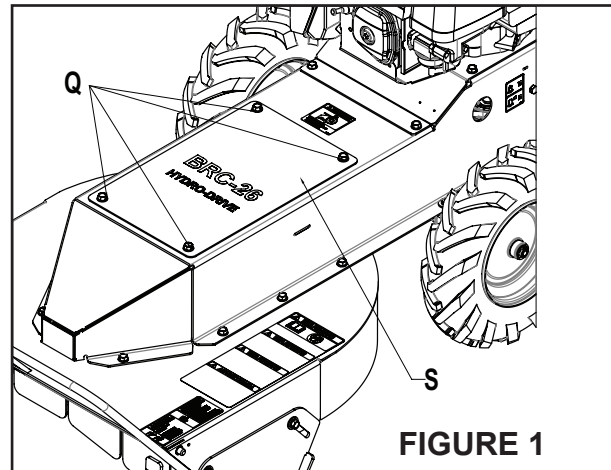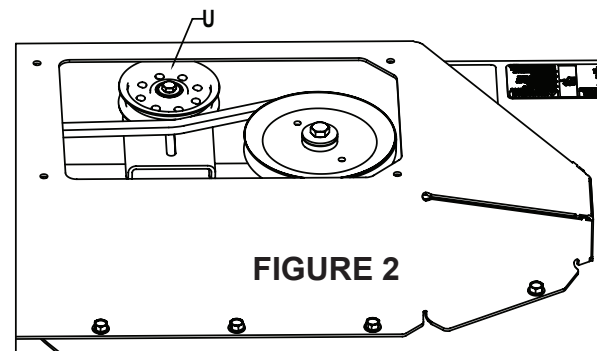**FIGURE 1****FIGURE 2**

BLADE HEIGHT ADJUSTMENT

Stop the engine and remove the spark plug wire before making any belt adjustments.

1. Place a block under the deck to securely hold it at the height desired.
2. Loosen the two bolts **H** holding the skid plates **G** on each side of the machine. **(Figure 1)**
3. Move the skid plates to sit as level as possible on the ground. Retighten bolts **H** and remove block.

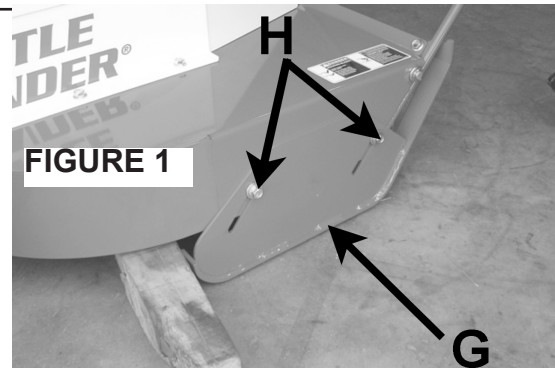

MAXIMUM TRAVEL SPEED ADJUSTMENT

1. To decrease maximum travel speed of the machine, turn the speed adjustment knob **A** clockwise. **(Figure 2)**
2. To increase maximum travel speed of the machine turn the speed adjustment knob **A** counter clockwise.

LINKAGE ADJUSTMENTS

Stop the engine and remove the spark plug wire before making any belt adjustments.

REVERSE:

Maximum reverse speed is limited by the traction bellcrank hitting a stop inside the main frame. **(Figure 2)**


FORWARD:

The traction control lever should just contact the handle at maximum speed.

To Adjust Forward Speed: **(Figure 2)**

1. Turn the Speed adjustment knob **A** all the way in the "fast" direction (counter-clockwise). Remove the hairpin cotter connecting the lower traction rod **B** to the lever on the traction cross shaft. Remove the rod from the cross shaft.
2. Pull up on the rod until all the travel of the linkage is used. Squeeze the traction lever to the handle. Adjust the rod by turning it in or out of the swivel **C** at the traction bellcrank until it just goes into the hole in the cross shaft lever **E**.
3. Reinstall the rod in the cross shaft lever and secure with the hairpin cotter from step 1.

The spring **F** on the traction linkage allows the traction lever to be squeezed to the handle when the speed control knob is set to less than maximum speed. If the preload on the spring is not sufficient, the nut may be tightened to compress the spring more.

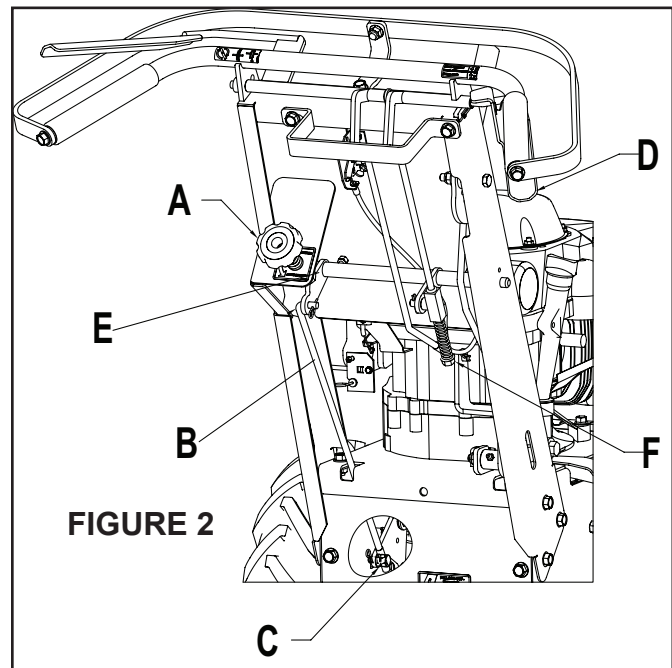

BLADE CONTROL LINKAGE

The effective length of the blade control rod may be adjusted by turning the rod **J** in or out of the swivel where it connects to the blade bellcrank **L**. Adjust the rod so there is about a 1/8" (3 mm) space between the bellcrank and the rear cover when the blade control lever is engaged (held to the handle). (Figure 3)

PARKING BRAKE LINKAGE




The parking brake linkage has a spring that applies force to the transaxle brake arm in the 'ON' position. There should be some space or free "play" in the brake linkage between the spring and the transaxle brake arm in the 'OFF' position. The brake lever should snap over center and lock in the engaged position.

1. Push and pull on the machine. The wheels should skid. If the wheels turn, disconnect the brake rod **K** at the brake lever and turn out of the swivel **M** below the engine deck 1 or 2 turns. Reconnect the brake rod and check the adjustment by pulling and pushing the machine again. Continue adjusting until the machine skids with the brake 'ON'. Be sure there is free 'play' in the 'OFF' position so the brake doesn't drag during operation. If a satisfactory adjustment has been made skip to step 4. (Figure 3)
2. If adjustment cannot be obtained that will lock the wheels with the brake 'ON' and maintain free 'play' in the 'OFF' position the brake may need to be adjusted. This adjustment will not normally be required.
3. Remove the cotter pin from the brake adjusting castle nut **N**. (Figure 4) Tighten the nut 1/6 of a turn at a time. Check the adjustment each time until the wheels lock up with the brake 'ON' and the linkage has free 'play' in the 'OFF' position. When a satisfactory adjustment has been found, reinstall the cotter pin to maintain the position of the castle nut.
4. Reinstall the brake rod to the brake lever and secure with hairpin cotter from step 1.

DO NOT OVER ADJUST! Over adjustment will cause brake drag resulting in excess heat and brake wear.

TRANSAXLE NEUTRAL ADJUSTMENT

1. The transaxle comes from the factory with the neutral position set. It should never require adjustment. If it needs adjustment, raise the rear of the machine and support it securely on jack-stands with the wheel off the ground.
2. Loosen bolt **O** on the transaxle. Start the engine.
3. Rotate plate **P** to the position where the wheels will no longer turn. Retighten bolt **O**. (Figure 5)

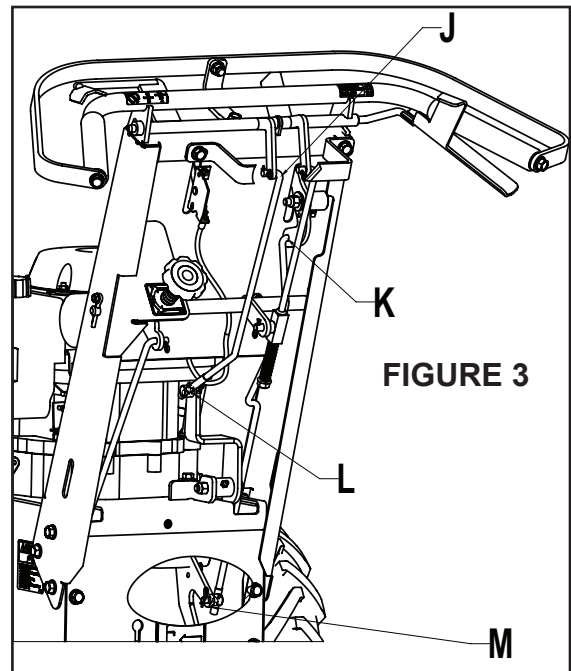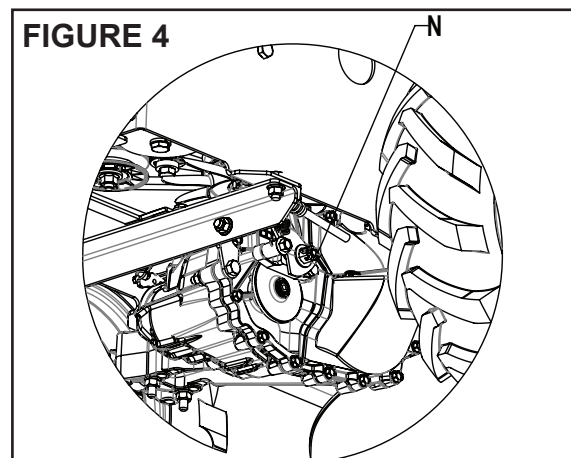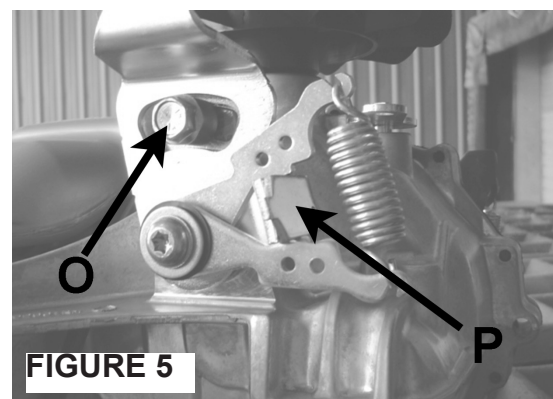STORAGE**FIGURE 3****FIGURE 4****FIGURE 5**

BELT REPLACEMENT

Stop the engine and disconnect the spark plug wire before attempting to replace any belt.

TRANSAXLE BELT REPLACEMENT

1. Remove the four bolts **Q** holding the rear cover **R**. (Figure 1)
2. Reach through the access hole on the right side of the machine with a spring removal tool and remove the transaxle belt tensioning spring **T** to relieve the tension on the transaxle belt. (Figure 2)
3. Remove the transaxle belt.
4. Install the new transaxle belt.
5. Reconnect the transaxle belt tensioning spring **T**. Reinstall rear cover removed in step 1.

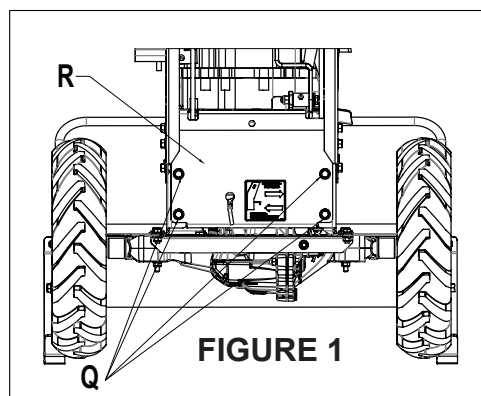


FIGURE 1

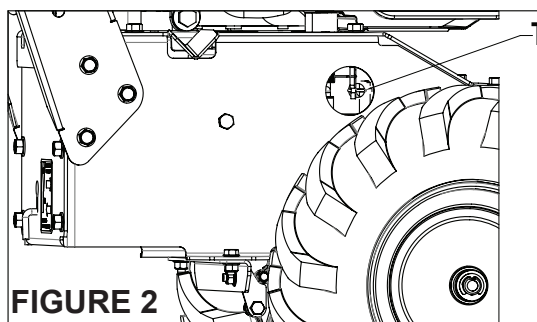


FIGURE 2

BLADE BELT REPLACEMENT

1. Follow steps 1-3 in transaxle belt replacement section on this page.
2. Remove the four bolts **V** holding the blade belt cover **S** on. (Figure 3)
3. Loosen the bolt **U** securing the blade belt idler and slide the idler toward the side of the tunnel to loosen the belt. (Figure 4)
4. Remove the blade belt from the spindle pulley and from around the blade clutch. Install new belt.
5. Tension the new belt by pushing the idler firmly against the belt and tightening the bolt. There should be about 1/2" deflection at the center of the long span with 5 lbs. force.
6. Reinstall the top belt cover **S**.
7. Reinstall the transaxle belt and tensioning spring **T**.
8. Reinstall rear cover **R**.

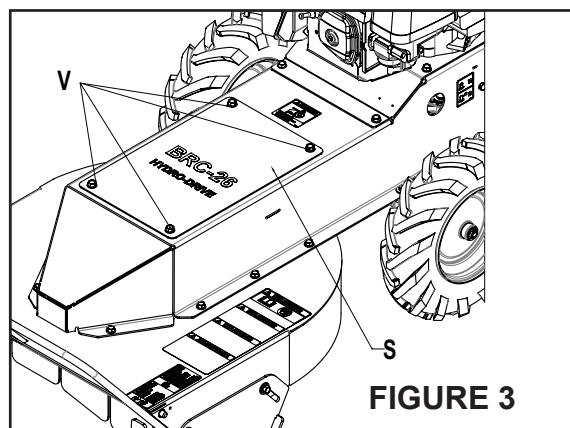


FIGURE 3

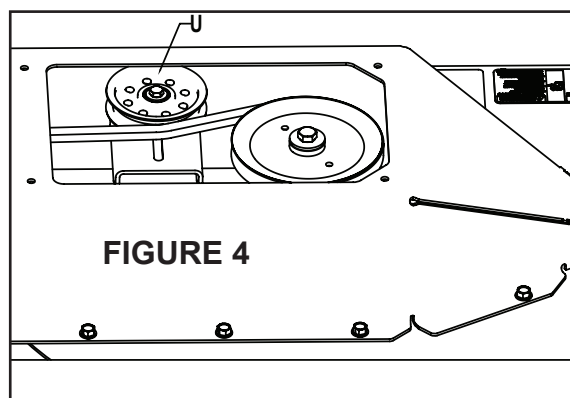


FIGURE 4

To prevent possible explosion or ignition of vaporized fuel, do not store equipment with fuel in tank or carburetor in an enclosure with open flame (for example, a furnace or water heater pilot).

DAILY STORAGE

1. Stop the engine and engage the parking brake.
2. Check engine oil level and air filter element.
3. Close fuel valve located below air cleaner to keep fuel from draining into engine.
4. Remove any material stuck under the deck.


EXTENDED STORAGE

Before the equipment is put into storage for any period exceeding 30 days:

1. Drain all fuel from the fuel tank and fuel lines.
2. Start the engine and run until all the fuel is used from the carburetor float bowl.
3. While the engine is still warm drain the oil. Refill with the proper weight oil corresponding to what the engine manual says.
4. Lubricate all lubrication points.
5. Clean and oil cutting blades to prevent rust.

To put equipment into operation after an extended storage:

1. Check for loose parts, tighten if necessary.
1. Fill fuel tank with clean fresh fuel.
2. Check oil level and add if necessary.
3. Check fuel lines and system for leaks. Repair any leaks before operating
4. Start the engine and proceed to operate for the intended use.

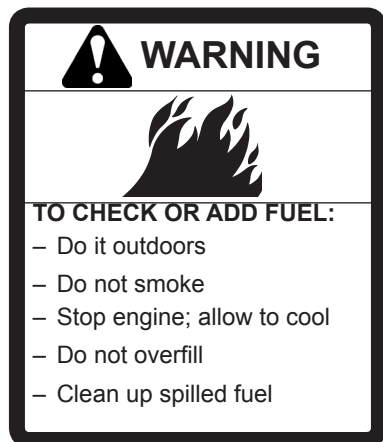

<i>TROUBLESHOOTING</i>	
<i>COMMON PROBLEMS</i>	<i>COMMON CAUSES</i>
ENGINE WILL NOT START. (Check the Engine Manual for more details.)	<ul style="list-style-type: none"> • Refer to the section "Operation" in this manual to verify engine starting procedure. • Check the spark plug connection. • Check that throttle lever is set to the "FAST" position and the choke is "ON". • Check the level of fuel • Check fuel valve is "ON".
ENGINE STARTS BUT DOES NOT RUN PROPERLY OR HAS NO POWER. (Check the Engine Manual for more details.)	<ul style="list-style-type: none"> • Make sure the throttle lever is not set to the slow setting or the choke still in the "ON" position. • Turn the machine off and check the air filter. If it is dirty clean or replace it according to the Engine Manual. • Check the oil level in the engine. Add if necessary. If the oil is too full drain the oil to the proper level. • Check to make sure there is enough fuel. Also make sure the fuel is not old, dirty or the machine has not been stored beyond a month with the same fuel in it. • If the engine still has problems contact your dealer for service.
ENGINE HAS SMOKE COMING FROM IT. (Check the Engine Manual for more details.)	<ul style="list-style-type: none"> • Check to make sure the machine is not running on "CHOKE" • Check to make sure the oil is not overfilled. • Check the air filter for debris and clean if necessary. • Check the engine for debris build up around the exhaust system. • MAKE SURE THE ENGINE HAS HAD THE PROPER TIME TO COOL BEFORE TOUCHING HOT PARTS. • If there is still smoke coming from the engine contact the nearest dealer for service.
ENGINE RUNS AND STARTS BUT THE MACHINE WILL NOT GO FORWARD OR IN REVERSE.	<ul style="list-style-type: none"> • Check that the free wheel lever is pulled out. • Make sure the parking brake is disengaged. • Check to make sure the direction lever is being pressed far enough down or pulled up to make the machine move. • With the engine off and brake engaged, check the transaxle belt is not broken or fallen off the pulley. Replace belt if necessary. • Make sure nothing is lifting the machine up off the wheels.
MACHINE IS DIFFICULT TO GET INTO REVERSE OR FORWARD.	<ul style="list-style-type: none"> • Check linkage for free operation.
THE BELT IS FRAYED OR KEEPS COMING OFF THE PULLEY.	<ul style="list-style-type: none"> • Check the pulley to make sure it is free from damage such as a nick or crack. If the pulley feels rough call a dealer for service and a replacement pulley. • Check the belt for wear and damaged spots. If there are signs of damage or wear on the belt, replace with the correct type of belt. • Check the belt tension. If V-belts are under tensioned, they can slip. Slippage generates heat and will result in cracking and belt failure. Properly tensioning and aligning a belt drive will allow the belt drive to perform at it's maximum level. If belts are over-tensioned, belt and bearing life can be reduced. • If the belt and pulley appear to be in good condition, contact your dealer for service.

<i>TROUBLESHOOTING (cont.)</i>	
<i>COMMON PROBLEMS</i>	<i>COMMON CAUSES</i>
Extra vibration when engaging the blade.	<p>Make sure the throttle lever is set to the “STOP” position, engine has stopped, parking brake is engaged and the blade has stopped spinning before checking blade.</p> <ul style="list-style-type: none">• Check for a broken or bent blade. DO NOT straighten blade. Replace bent or broken blade with a new Schiller Grounds Care, Inc. blade.• If the blade appears to be in good condition, check the bolt connecting the blade and verify that it is tightened and properly seated.• Remove blade and check blade balance• If the problem still persists then contact a local dealer for service.
The blade will not spin.	<ul style="list-style-type: none">• Make sure the Blade lever on the left handle is being held down while the engine is on.• Stop the engine, disconnect the spark plug wire and engage the parking brake before checking. Check the condition of the blade belt. Reinstall, replace or retension as necessary. If the blade still doesn't operate, consult your dealer for service.

SPECIFICATIONS / WARRANTY BRUSH CUTTER

<i>BRC-26 HYDRO SPECIFICATIONS</i>	
Engine:	<i>Honda GVX 390</i>
Displacement:	<i>389cc</i>
Fuel Capacity:	<i>2.2 quarts</i>
Oil Capacity:	<i>1.2 quarts</i>
Transmission:	<i>Hydro-Gear T2</i>
Speed:	<i>Forward: 0 to 4 mph Reverse: 0 to 2mph</i>
Tire Size:	<i>4.80 X 8.0 Bar tread pattern solid foam filled</i>
Cut Width:	<i>26"</i>
Cut Height:	<i>3" to 5"</i>
Operating Weight:	<i>365 lbs</i>
Length:	<i>78"</i>
Width:	<i>32"</i>
Height:	<i>41"</i>
Maximum Operating Slope:	<i>20° Front to back and side to side</i>
Emissions:	<i>50 states certified by Honda and Briggs & Stratton</i>

2 YEAR LIMITED SERVICE & WARRANTY POLICY FOR GASOLINE POWERED BRUSH CUTTER

All **Little Wonder** Gasoline Powered Brush Cutters are guaranteed against defects in material and workmanship, under normal usage, for a period of TWO YEARS from the date of purchase, under the following terms:

Any **Little Wonder** Gasoline powered Brush Cutter or part found to be defective within the warranty period is to be returned to any registered **Little Wonder** dealer.

Engines for all gasoline powered products are warranted separately by the engine manufacturer. Therefore, there are no warranties made, expressed or implied, for engines for gasoline power products by **Little Wonder**.

Transportation charges for parts and units submitted for replacement under this warranty must be borne by the purchaser.


THIS WARRANTY covers manufacturing defects only and does not cover defects resulting from misuse, abuse, negligence, improper handling, care or maintenance, normal wear and tear or non-observance of operating, maintenance or installation instructions, or accident, or if the product has been repaired or altered outside our factory or authorized repair facility in any respect which affects its condition.

Little Wonder's liability is limited to repair or replacement of the defective product or part at our sole discretion. All other liabilities, in particular, liability for damages, including without limitation consequential, special or incidental damages are excluded.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. NO EMPLOYEE, REPRESENTATIVE OR DEALER IS AUTHORIZED TO CHANGE THIS WARRANTY IN ANY WAY OR TO GRANT ANY OTHER WARRANTY.

PARTS SECTION

FIGURE 1

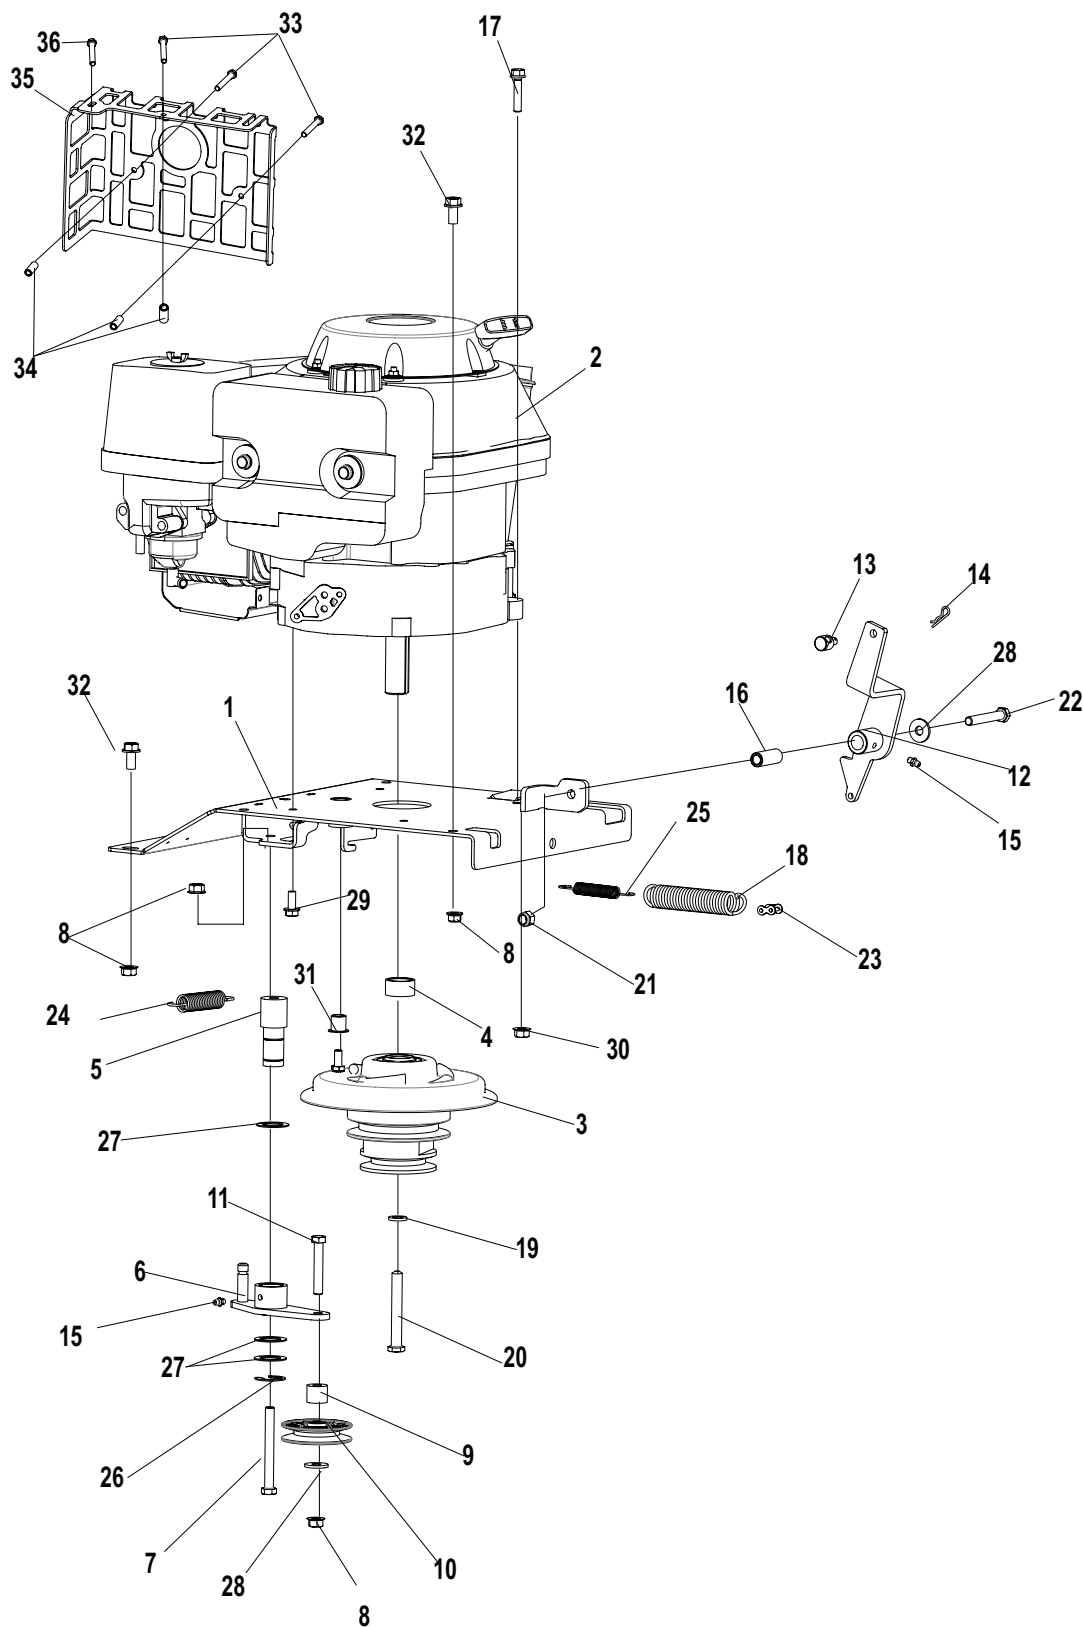


BRUSH CUTTER

FIGURE 1

ITM	PART NO.	DESCRIPTION	QTY	ITM	PART NO.	DESCRIPTION	QTY
1	4167822.10	WLDMT-ENGINE PLATE	1				
2	C100589	ENGINE-HONDA 13HP W/ TANK	1				
3	C100591	CLUTCH-BRAKE	1				
4	4167078	SPACER-CLUTCH	1				
5	4116712	PIN-PIVOT	1				
6	4167419.7	WLDMT-DRIVE IDLER	1				
7	64123-171	BLT-HEX 3/8-16X3-1/2	1				
8	64141-4	NUT-WLF 3/8-16	8				
9	33030-09	IDLER-BUSHING	1				
10	4167427	PULLEY-V IDLER 3"DIA,NYLON	1				
11	64123-100	BLT-HEX 3/8-16 X 2-1/4	1				
12	4169318.17	WLDMT-BLADE BELLCRANK	1				
13	33103	SWIVEL	1				
14	64168-2	COTTER-HAIRPIN .08X1.19	1				
15	85010N	ZERK-1/4-28 STR SELF THREAD	2				
16	4167400	BUSHING-PIVOT	1				
17	64262-009	BLT-FLG HD 5/16-18 X 1-1/2	2				
18	C100610	SPRING, CLUTCH BRAKE	1				
19	64006-06	LOCKWSHR-7/16 HELICAL	1				
20	64123-291	BLT-HEX 7/16-20X3-1/4	1				
21	64229-03	NUT-NYLON LOCK 3/8-16	1				
22	64123-82	BLT-HEX 3/8-16 X 2-1/2	1				
23	4165989	LINK-MASTER #2040	1				
24	38219	SPRING-TENSION	1				
25	4167065	SPRING-CLUTCH RETURN	1				
26	64221-04	E-RING .875	1				
27	64163-65	WASHER-.531 x 2.00 x .125	3				
28	64163-31	WASHER-.531 x 2.00 x .125	3				
29	64139-01	BLT-WLF 5/16-24 X 3/4	2				
30	64268-02	NUT-FL NYLON LOCK 5/16-18	2				
31	38304-03	BEARING-FLANGED PLASTIC	1				
32	64139-21	BLT-WLF 3/8-16 X 3/4	6				
33	910533	SCREW-M5 X 25	3				
34	910158	STANDOFF 5/8	3				
35	4169554	GUARD-MUFFLER GXV390	1				
36	64152-56	SCREW-HS STAP #12X1/2	1				

FIGURE 2

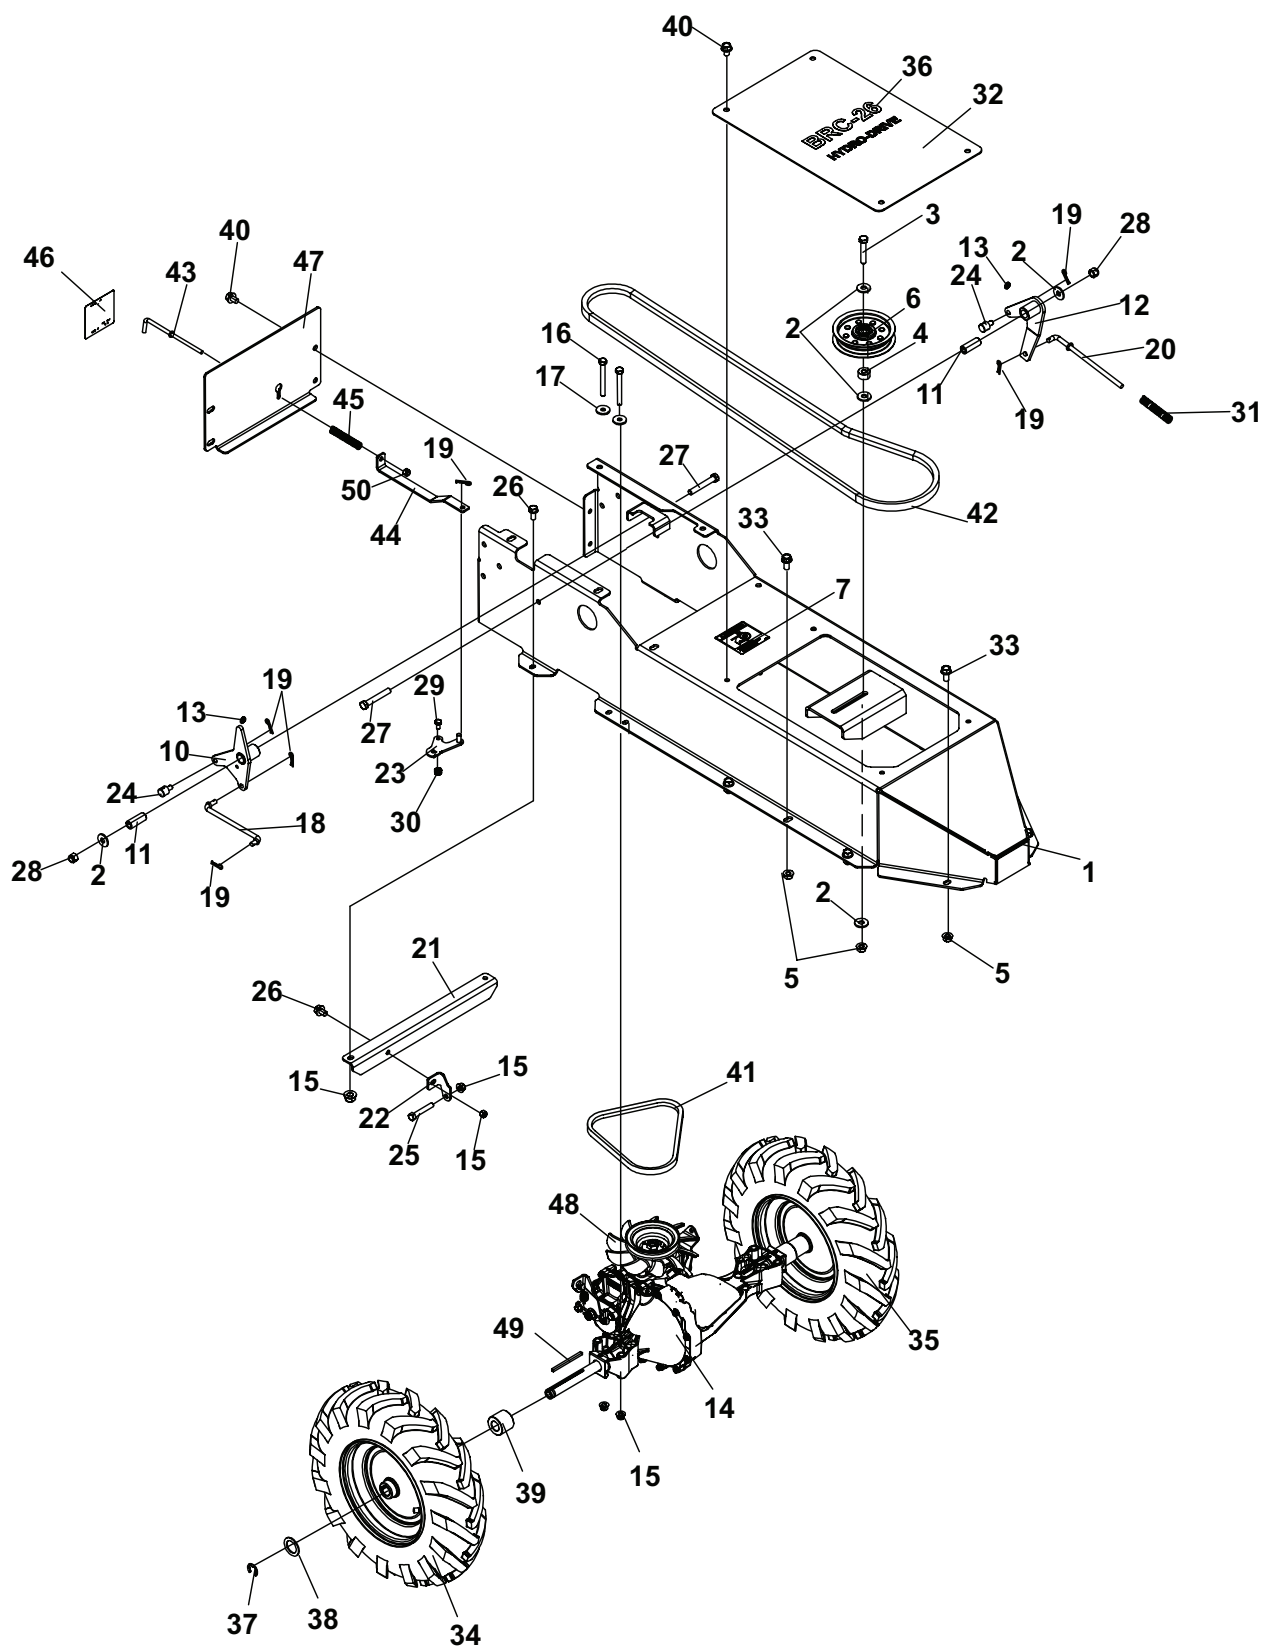

BRUSH CUTTER


MAIN FRAME ASSEMBLY

FIGURE 2

ITM	PART NO.	DESCRIPTION	QTY	ITM	PART NO.	DESCRIPTION	QTY
1	4169386	S-ENGINE DECK EU	1	44	4167410	LINK-FREE WHEEL	1
2	64163-31	WASHER-.531 x 2.00 x .125	5	45	2720544	SPRING-COMPRESSION	1
3	64123-67	BLT-HEX 3/8-16 X 2	1	46	4169368	LABEL- TRANS ENGAGE	1
4	33030-07	IDLER BUSHING	1	47	4169385	S-COVER BACK EU	1
5	64141-4	NUT-WLF 3/8-16	9	48	4167164	S-FAN, TRANSAXLE	1
6	2308000	PULLEY-IDLER 4.00 EOD	1	49	64164-41	KEY-3/16 X 3 SQ	2
7	4169364	LABEL, "ROTATING PARTS"	1	50	64268-01	NUT-FL NYLOC 1/4-20	1
8	4169369	DECAL-FUEL WARNING	1				
9	4167101	DECAL-FUEL SHUT-OFF	1	51*	4167164-01	KIT-TRANS. FAN/PULLEY (REQUIRED IF TRANSAXLE FAN WAS 6")	1
10	4167399.7	WLDMT-BELLCRANK	1				
11	4167400	BUSHING-PIVOT	2				
12	4167451.7	WLDMT-BRAKE BELLCRANK	1				
13	85010N	ZERK-1/4-28 STR SELF THREAD	2				
14	C100585	TRANSAXLE-BRUSHCUTTER	1				
15	64268-02	NUT-FL NYLON LOCK 5/16-18	11				
16	64123-55	BLT-HEX 5/16-18 X 3	4				
17	64163-29	WASHER-21/64 X 1 X 11GA	6				
18	4167390	LINK-TRANSAXLE	1				
19	64168-2	COTTER-HAIRPIN .08X1.19	6				
20	4167522	ROD-BRAKE LOWER	1				
21	4167487.7	BAR-CROSS	1				
22	4167488.7	BRKT-TORQUE	1				
23	4167405.7	WLDMT-FREE WHEEL LEVER	1				
24	33103	SWIVEL	2				
25	64123-56	BLT-HEX 5/16-18X2	1				
26	64262-006	BLT-FLG HD 5/16-18 X 3/4	6				
27	64123-82	BLT-HEX 3/8-16 X 2-1/2	2				
28	64229-03	NUT-NYLON LOCK 3/8-16	2				
29	64123-89	BLT-HEX 1/4-20X3/4	1				
30	64229-01	NUT-NYLON LOCK 1/4-20	1				
31	2188139	SPRING-COMPRESSION	1				
32	4167599.10	COVER-BELT	1				
33	64139-21	BLT-WLF 3/8-16 X 3/4	8				
34	C100593	ASSY-WHEEL 4.8 X 8 BAR, RH	1				
35	C100586	ASSY-WHEEL 4.8 X 8 BAR, LH	1				
36	4167539	DECAL-BRC26	1				
37	64221-08	E-RING .750	2				
38	64163-64	WASHER-.531 x 2.00 x .125	2				
39	C300150	SPACER-1.5OD X .765ID X 1.223	2				
40	64197-016	BLT-TDFM 3/8-16X1/2	8				
41	4167426	BELT-WHEEL DRIVE	1				
42	4167604	BELT-BRUSHCUTTER BLADE	1				
43	4148697	ROD-PULL FREEWHEEL	1				

*NOT ILLUSTRATED

FIGURE 3

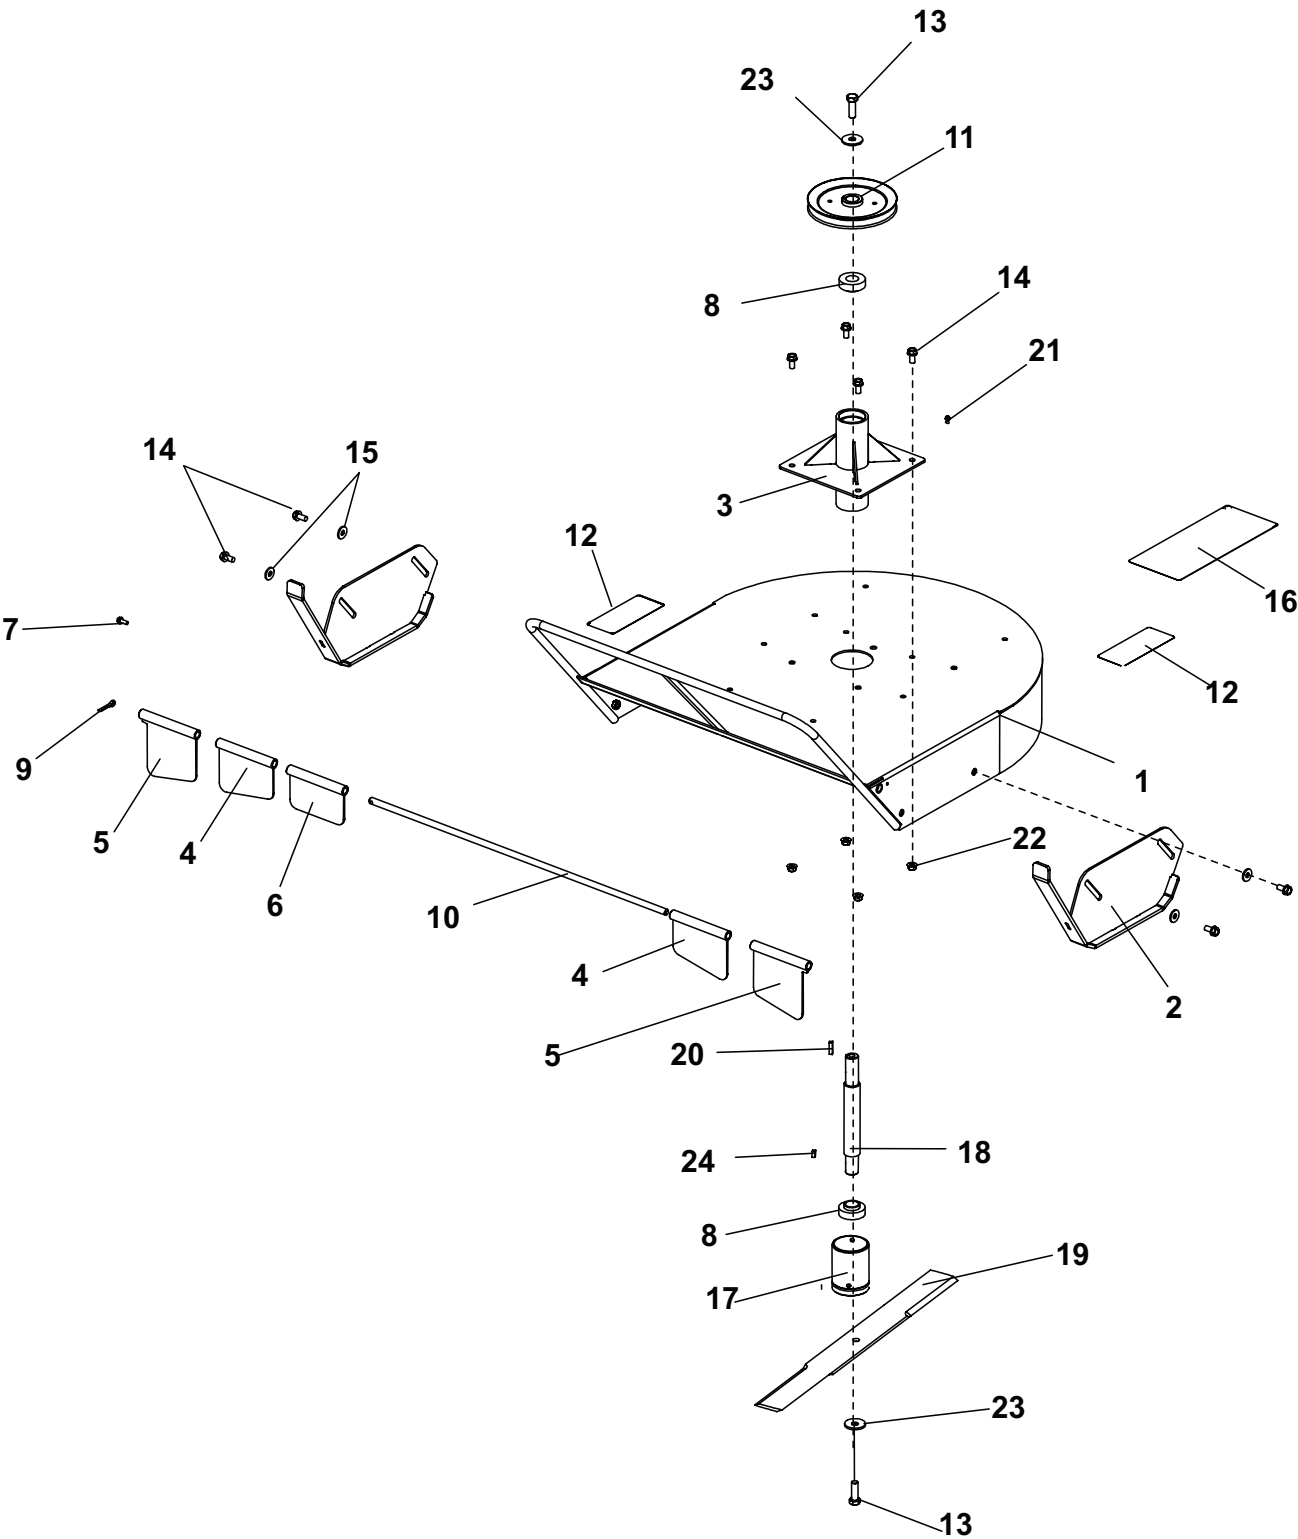

BRUSH CUTTER

CUTTERDECK ASSEMBLY


FIGURE 3

ITM	PART NO.	DESCRIPTION	QTY	ITM	PART NO.	DESCRIPTION	QTY
1	4169388	S-CUTTER DECK EU	1				
2	4167379.17	WLDMT-SKID SHOE	2				
3	4167431.7	WLDMT-HSG BLADE SPINDLE	1				
4	4167532.17	WLDMT-FLAP,INNER 26	2				
5	4167531.17	WLDMT-FLAP,OUTER 26	2				
6	4167533.17	WLDMT-FLAP,CENTER 26	1				
7	64197-025	BLT-TDFM 1/4-20X5/8	1				
8	4167554-01	BEARING-1" SPINDLE	2				
9	64140-18	COTTER PIN-1/4-1	1				
10	4167538	ROD-FLAP SUPPORT 26	1				
11	4167259	PULLEY-7IN DIA 1IN BORE	1				
12	2000760	LABEL-HANDS/ROCKS EU	2				
13	64123-05	BLT-HEX 1/2-20 X 1-1/2	2				
14	64139-21	BLT-WLF 3/8-16 X 3/4	8				
15	64163-31	WASHER-.531 x 2.00 x .125	4				
16	4169365	LABEL, "WARNING"	1				
17	4167486.7	WLDMT-BLADE HUB	1				
18	4167483	SHAFT-BRUSHCUTTER	1				
19	C100584-01	BLADE-BRUSHCUTTER,26 IN	1				
20	64164-12	KEY-1/4X1 SQ	1				
21	85010N	ZERK-1/4-28 STR SELF THREAD	1				
22	64141-4	NUT-WLF 3/8-16	4				
23	64209-14	WSHR-CON. SPRING .531X1.625	2				
24	64164-46	KEY-SQUARE 1/4 X .5 ROUND	1				

HANDLE ASSEMBLY

BRUSH CUTTER

FIGURE 4

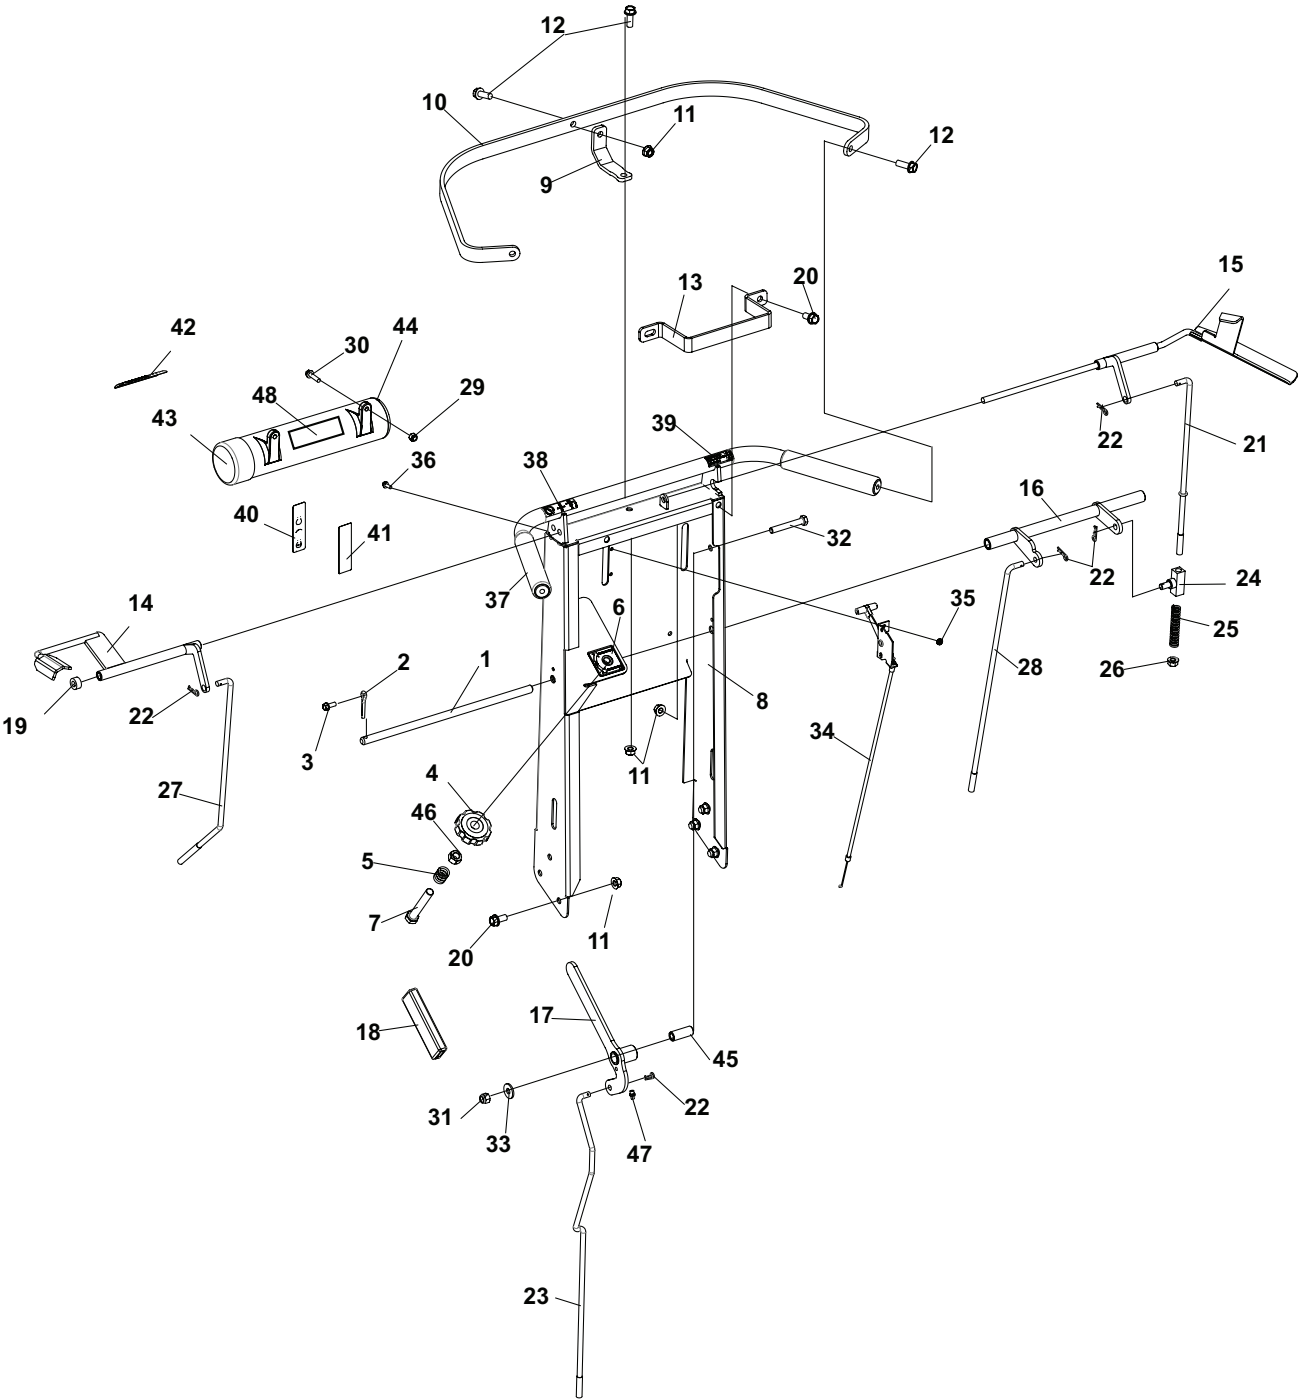

BRUSH CUTTER

HANDLE ASSEMBLY

FIGURE 4

ITM	PART NO.	DESCRIPTION	QTY	ITM	PART NO.	DESCRIPTION	QTY
1	4167387	BAR-TRACTION IDLER PIVOT	1	42	2000735	LABEL-OPER MAN	1
2	64140-18	COTTER PIN-1/4-1	1	43	38061A	CAPS VINYL	1
3	64197-025	BLT-TDFM 1/4-20X5/8	1	44	4169405	TUBE-DOCUMENT	1
4	C400174	KNOB-1/2 IN	1	45	4167400	BUSHING-PIVOT	1
5	C500065	SPRING-SPEED STOP	1	46	64025-19	NUT-1/2-13 HEX	1
6	4169376	DECAL-SPEED CONTROL	1	47	85010N	ZERK-1/4-28 STR SLF-THRD	1
7	64123-293	BLT-HEX 1/2-13 X 3-1/2 FLTHRD	1	48	2000655	LABEL-RED OPS EEC	1
8	4169387	WLDMT-HANDLE (HONDA)	1				
9	C300185.17	BRACE-HANDLE GUARD	1				
10	C400277.17	HANDLE GUARD	1				
11	64141-4	NUT-WLF 3/8-16	10				
12	64139-24	BLT-WLF 3/8-16 X 1	4				
13	C400273.17	GUARD-LINK	1				
14	4167441.17	WLDMT-LEVER, BLADE CNTRL	1				
15	4167444.17	WLDMT-TRACTION LEVER	1				
16	4167448.17	WLDMT-TRACTION IDLER LINK	1				
17	4167570	WLDMT-BRAKE LEVER	1				
18	2188155	GRIP-1/4 X 1 X 4-1/2	1				
19	48428	COLLAR SET .38	1				
20	64139-21	BLT-WLF 3/8-16 X 3/4	8				
21	4167456	ROD-UPPER TRACTION	1				
22	64168-2	COTTER-HAIRPIN .08X1.19	5				
23	4167458	ROD-BRAKE	1				
24	4167472	WLDMT-PLUNGER	1				
25	2188139	SPRING-COMPRESSION	1				
26	64268-03	NUT-FL NYLON LOCK 3/8-16	1				
27	4169319	ROD-BLADE	1				
28	4167474	ROD-TRACTION LOWER	1				
29	64229-01	NUT-NYLON LOCK 1/4-20	2				
30	64262-003	BLT-FLG HD 1/4-20 X 1	2				
31	64229-03	NUT-NYLON LOCK 3/8-16	1				
32	64123-82	BLT-HEX 3/8-16 X 2-1/2	1				
33	64163-31	WASHER-.531 x 2.00 x .125	1				
34	4167549-01	CABLE-THROTTLE (HONDA)	1				
35	64025-15	NUT-HEX #10-24 KEPS	2				
36	64152-46	SCREW-SLT HH 10-24X1/2	2				
37	C100261	FOAM HANDLE GRIP	2				
38	4167546	DECAL-LEFT THUMB	1				
39	4169374	LABEL-TRACTION EU	1				
40	4167525	DECAL-THRTTL SPEED (HONDA)	1				
41	4167548	DECAL-PARKING BRAKE	1				

SCHILLER GROUNDS CARE, INC.
ONE BOB-CAT LANE
P.O. BOX 469
JOHNSON CREEK, WI 53038
920-699-2000
www.schillergc.com



©Schiller Grounds Care, Inc. 2010