

# OPERATOR MANUAL & ILLUSTRATED PARTS LIST

MODEL :

970474 BOSS-VAC PRO™, 12 BUSHEL BAG, COLLECTION SYSTEM

970502 KIT-DECK, 52IN 12 BUSHEL COLLECTION SYSTEM 970503 KIT-DECK, 61IN 12 BUSHEL COLLECTION SYSTEM 970504 KIT-DECK, 72IN 12 BUSHEL COLLECTION SYSTEM

Manual 4170502 Rev. A 03/21/2014



WARNING: If incorrectly used this machine can cause severe injury. Those who use and maintain this machine should be trained in its proper use, warned of its dangers and should read the entire manual before attempting to set up, operate, adjust or service the machine.



### CALIFORNIA Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

#### Californie Proposition 65 Avertissement

Les échappements des moteurs diesel et certains de leurs composés sont reconnus par l'Etat de Californie pour être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

# 

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

# 

L'émission du moteur de ce matériel contient des produits chimiques que l'Etat de Californie considère être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

#### California Advertencia de la Proposicion 65

El estado de California hace saber que los gases de escape de los motores diesel y algunos de sus componentes producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

# 

El estado de California hace saber que los gases de escape de este producto contienen productos quÍmicos que producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

# CALIFORNIA

Proposition 65 Warning

Battery posts, terminals, wiring insulation, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. WASH HANDS AFTER HANDLING.

### IMPORTANT MESSAGE

Thank you for purchasing this Schiller Grounds Care, Inc. product. You have purchased a world class product, one of the best designed and built anywhere.

This product comes with an Owner / Operator's Manual. The useful life and good service you receive from this product depends to a large extent on how well you read and understand this manual. Take care of this product properly and adjust it as instructed, and it will give you many years of reliable service. This manual has been provided to assist you in the safe operations and servicing of this attachment.

See a Schiller Grounds Care, Inc. dealer for any service or parts needed. Schiller Grounds Care, Inc, service ensures that you continue to receive the best results possible from Schiller Grounds Care, Inc. products. You can trust Schiller Grounds Care, Inc. replacement parts because they are manufactured with the same high precision and quality as the original parts.

Schiller Grounds Care, Inc. designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this product only as directed in the manual, keep it in good repair and follow safety warnings and instructions. You'll always be glad you did.

**NOTE:** All photographs and illustrations in the manual may not necessarily depict the actual models or attachment, but are intended for reference only and are based on the latest product information available at the time of publication.

Familiarize yourself fully with the safety recommendations and operating procedures before putting the machine to use. Carefully read, understand and follow these recommendations and insist that they be followed by those who will use this attachment.

### This manual should be kept for future reference.

# Please check if you have received all the parts for your kit with the list of the bag and the list of the box.

Schiller Grounds Care, Inc. One Bob Cat Lane Johnson Creek, WI 53038-0469

| TABLE OF CONTENTS            | PAGE |
|------------------------------|------|
|                              |      |
| DESCRIPTION / SPECIFICATIONS |      |
| SAFETY                       | 3    |
| SAFETY DECALS                | 6    |
| ASSEMBLY INSTRUCTIONS        | 7    |
| VEHICLE PREPARATION          | 11   |
| INSTALLATION                 | 14   |
| ADJUSTMENTS & REMOVAL        | 20   |
| OPERATION                    | 21   |
| SERVICE                      | 22   |
| TROUBLESHOOTING              | 23   |
| DOUBLE PULLEY TABLE          | 25   |
| PARTS SECTION                | 26   |
| TORQUE SPECIFICATION TABLE   | 40   |
| OPTIONS                      | 41   |
|                              |      |

### **DESCRIPTION / SPECIFICATIONS**

### DESCRIPTION

Rear mount 3 baggers 12 bushel collection system.

### **SPECIFICATIONS**

| Thickness of blades:<br>Impellar Axis:<br>Impellar Housing Thickness: | N/a<br>3<br>15.31 in<br>4<br>3/16 in<br>Horizontal<br>11 ga<br>1 in<br>6 in<br>23.75 in back<br>8.75 in<br>60.25 in<br>150 lbs<br>65 lbs<br>150 lbs<br>~480 lbs |
|---|---|
|---|---|

NOTE: Specifications are subject to change without notice.

Record your attachment's serial number and purchase date in the section reserved below. Your dealer requires this information to give you prompt, efficient service when ordering replacement parts. Use only genuine parts when replacements are required.

If warranty repairs are required please present this registration booklet and original sales invoice to your selling dealer for warranty service.

PURCHASE DATE :

### NOTICE !!!!

Unauthorized modifications may present extreme safety hazards to operators and bystanders and could also result in product damage.

Schiller Grounds Care, Inc. strongly warns against, rejects and disclaims any modifications, add-on accessories or product alterations that are not designed, developed, tested and approved by Schiller Grounds Care. Inc Engineering Department. Any Schiller Grounds Care, Inc product that is altered, modified or changed in any manner not specifically authorized after original manufacture-including the addition of "aftermarket" accessories by Schiller Grounds Care, Inc.-will result in the Schiller Grounds Care, Inc. Warranty being voided.

Any and all liability for personal injury and /or property damage caused by any unauthorized modifications, add-on accessories or products not approved by Schiller Grounds Care, Inc. will be considered the responsibility of the individual(s) or company designing and/or making such changes. Schiller Grounds Care, Inc. will vigorously pursue full indemnification and costs from any party responsible for such unauthorized postmanufacture modifications and/or accessories should personal injury and/or property damage result.



This symbol means: ATTENTION ! BECOME ALERT!

Your safety and the safety of others is involved.

### Signal word definitions:

The signal words below are used to identify levels of hazard seriousness. These words appear in this manual and on the safety labels attached to Schiller Grounds Care, Inc. machines. For your safety and the safety of others, read and follow the information given with these signal words and/or the symbols shown above. Regardless of the hazard be extremely careful.

### 

**DANGER** Indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

### **WARNING**

**WARNING** Indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

# 

**CAUTION** Indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices or property damage.

### CAUTION

**CAUTION** Used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage.

Careful operation is your best insurance against an accident. Read this section carefully before operating the vehicle and accessory. This accessory is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury. All operators, no matter how experienced they may be, should read this and other manuals related to the vehicle and accessory before operating. It is the owner's legal obligation to instruct all operators in safe operation of the accessory.

SAFETY

| GLOSSARY:   | PREPARATION:   |
|---|--|
| In this manual, right and left sides are determined by sitting on the seat of the vehicle facing forward.   | <ol> <li>Thoroughly inspect the area where the accessory<br/>is to be used and remove door mats, all foreign<br/>objects and the like.</li> </ol>  |
| In this manual, "accessories" means attachments that you install on the vehicle. TRAINING:  | 2 Disengage all clutches and shift into neutral before starting engine.  |
| <ol> <li>Read this owner's manual carefully. Be thoroughly<br/>familiar with the controls and proper use of the<br/>vehicle and accessory. Know how to stop the unit<br/>and disengage the controls quickly.</li> </ol> | 3. Do not operate the accessory without wearing adequate garments. Avoid loose fitting clothing that can get caught in moving parts. Wear footwear that will improve footing on slippery surfaces. |
| 2. Never allow children to operate the vehicle nor the accessory. Never allow adults to operate the vehicle nor the accessory without proper instructions.  | <ol> <li>Never attempt to make any adjustments while the<br/>engine (motor) is running (except when specifically<br/>recommended by manufacturer).</li> </ol>                                      |
| 3. No one should operate the vehicle nor the accessory while intoxicated or while taking  | <ol> <li>Let the vehicle and accessory adjust to outdoor<br/>temperatures before using.</li> </ol>   |
| <ul><li>4. Keep the area of operation clear of all people,</li></ul>  | <ol> <li>Never use an accessory without proper guards,<br/>plates, or other safety protective devices in place</li> </ol>  |
| particularly small children and pets.   | <ol> <li>Always make sure to wear the appropriate safety<br/>equipment required (glasses, muffs, mask) for<br/>each type of product. See operation section.</li> </ol>                             |
|   | <ol> <li>Always make sure of having safe traction on the<br/>vehicle by using the recommended accessories</li> </ol>   |
|   |  |

#### **OPERATION:**

- 1. Do not put hands or feet near, under or inside rotating parts.
- Exercise extreme caution when operating on or crossing gravel drives, walks or roads. Stay alert for hidden hazards or traffic. Do not carry passengers.
- After striking a foreign object, stop the engine (motor), disconnect the wire from the spark plug(s) and keep wire away to prevent accidental starting. Thoroughly inspect the accessory for any damage and repair damage before restarting and using the accessory.
- 4. If the unit should start to vibrate abnormally, stop the engine (motor) and check immediately for the cause. Vibration is generally a warning of trouble.
- 5. Take all possible precautions when leaving the vehicle unattended. Disengage the power takeoff, lower the attachment, place the transmission into neutral, set the parking brake, stop the engine and remove the contact key.
- Never use the accessories across the face of slopes, go from top to bottom. Exercise extreme caution when using equipment on slopes. Do not attempt to clear a steep slope.
- 7. Never tolerate bystanders in the working zone. Never use an accessory in the direction of bystanders, it might throw gravel or debris that can hurt people or damage property.
- 8. Never operate the accessory at high transport speeds on slippery surfaces. Use care when backing up.
- 9. Do not carry passengers.
- 10. Disengage power to the accessory when it is transported or not in use.
- 11. Never operate the accessory without good visibility or light.

#### MAINTENANCE AND STORAGE

- When cleaning, repairing or inspecting the vehicle and accessory, make certain that all moving parts have stopped. Disconnect wire from the spark plug(s) and keep wire away to prevent accidental starting.
- 2. Check all the bolts and components at frequent intervals to make sure that they are properly tightened.
- 3. Always refer to the owner's manual when you store the accessory and vehicle for a prolonged or an unspecified length of time.
- 4. Maintain or replace safety and instruction labels, as necessary.

### REPLACE IF DECALS ARE DAMAGED SEE PARTS BREAKDOWN FOR DECAL LOCATION



To avoid serious injury from Rotating Blades

- Keep hands and feet away
- Stop engine and let blades stop before removing grass collector or unclogging.

To avoid injury from thrown objects

- Keep area clear of people and pets.
- Remove objects blade may strike and throw.
- Stop blades to cross gravel areas.
- Do not operate without chute, mulcher or entire grass collector in place.

### DECAL #4137371



To avoid injury from machine movement Machine can crush.

- Movement can occur unexpectedly.
- Stay clear while engine is running.
- Stop engine to clean or service.



To avoid injury from rotating parts

• Do not operate with cover removed.

### DECAL #2000735

SAFETY

DFCAI S



Before installing or using:

 Locate, read and make sure to understand all of the owner's manual.

### DECAL #4165975



To avoid serious injury from fan blades Fan blades can cut / crush

- Keep hands and feet away.
- Stop engine and remove spark plug wire before servicing.
- Do not operate without guards in place.

To avoid injury from thrown objects

- Keep bystanders away.
- Do not blow toward people or pets.
- Do not blow toward items that may be damaged by flying debris.

### DECAL #4170258




To avoid injury from thrown objects.

• Do not raise cover while unit is running.

### Tools Required:

Wrench : 7/16, 1/2, 9/16, 3/4" Ratchet Socket : 7/16, 1/2, 9/16, 3/4" Drill bits : 13/64, 9/32, 13/32" Drill Small Cross head (Phillips Drive) screwdriver Small Screw driver with Bit "T25 Torx drive"

Refer to corresponding parts breakdown section for parts identification

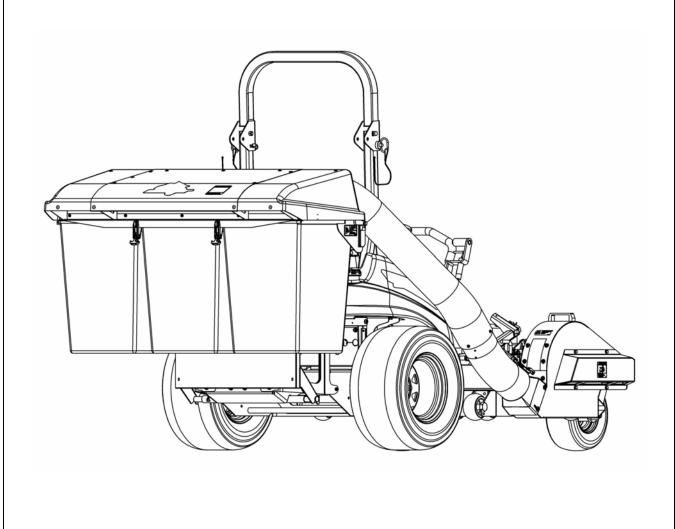

Fully assembled view

b

60

34

93

# BAG COLLECTION SYSTEM

### STEP 1: **GRASS COLLECTOR PREPARATION:**

### Chute :

Remove chute (item 69) from bag in shipping crate .

Using the dimpled marks as a guide:

- Drill four holes 9/32" (item a) •
- Drill two holes 13/64" (item b) •

Install keeper plate (item 60) on chute with one Tapping screw "T25 Torx drive" (item 93).

On chute, choose hole corresponding to your deck size.

| Deck size | Recommended hole |
|-----------|------------------|
| 52 in     | С                |
| 61 in     | С                |
| 72 in     | С                |

\*This chosen hole can be changed depending on the vehicle and discharge tube adjustment.


Install sleeve (item 71) on this chosen hole (on chute) with one machine screw T.H. 1/4 x 3/4 (item 93), one flat washer 5/16" (item 88) and one nylon insert lock nut 1/4" thin (item 86).

Take the blower from the shipping crate.

### **Chute Installation:**

Install the chute (item 69) on the blower as shown. Tighten just enough so that the chute rotates freely.


| REF. | ENGLISH DESCRIPTION                     |   |
|------|---|---|
| 69   | Chute                                   | 1 |
| 82   | Carriage bolt 5/16" n.c. x 3/4 " GR5    | 4 |
| 87   | Nylon insert lock nut 5/16" n.c. (thin) | 4 |
| 89   | Flat washer 3/8" hole                   | 4 |
| 90   | Flat washer 7/16" hole                  | 4 |
|      |   |   |

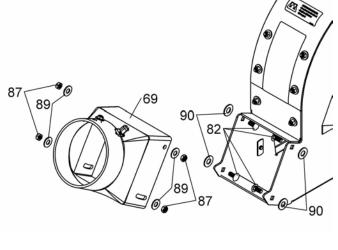



C

R

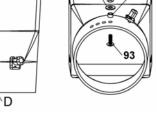

88 86


### **BLOWER ASSEMBLY:**

Take deck kit corresponding to mower deck size.

#### For 52" and 61" decks : Use deck kit #970502 and #970503. Choose one set of holes (A or B) corresponding to your deck size. Set of holes Deck size 52 in А В 61 in Install link tube to blower using corresponding holes. 20 Install blower hitch to blower, as shown. REF. **ENGLISH DESCRIPTION** QTY. 1 Blower hitch 1 2 Link tube 1 Hex. bolt 5/16" n.c. x 3/4" GR5 14 4 Nylon Insert lock Nut 5/16" n.c. 17 1 20 20 Lock washer 5/16" 3 For 72" deck: Use deck kit #970504. Install blower hitch to blower as shown. REF. **ENGLISH DESCRIPTION** QTY. 1 Blower hitch 1 Hex. bolt 5/16" n.c. x 3/4" GR5 3 12 17 Lock washer 5/16" 3 18 12 0 0 **Spring installation:** For 52" and 61" deck: Use deck kits #970502 and #970503. A٠ 16

Insert spring longer end (item A) on tensioner's hole (item B). Bolt other end in the hole on the blower hitch as shown.

| REF. | ENGLISH DESCRIPTION             |   |
|------|---------------------------------|---|
| 11   | Spring                          | 1 |
| 13   | Hex. bolt 1/4" n.c. x 1" GR5    | 1 |
| 16   | Nylon Insert lock Nut 1/4" n.c. | 1 |
| 19   | Flat washer 5/16" hole          | 2 |

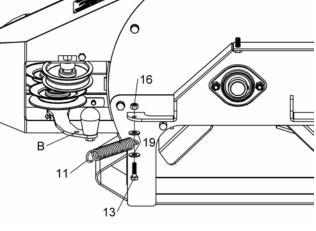


### <u>For 72" deck:</u> Use deck kit #970504.



Insert spring longer end (item A) on tensioner's hole (item B). Bolt other end in the hole on the blower hitch as shown.

| REF. | ENGLISH DESCRIPTION             |   |
|------|---------------------------------|---|
| 9    | Spring                          | 1 |
| 11   | Hex. bolt 1/4" n.c. x 1" GR5    | 1 |
| 14   | Nylon Insert lock Nut 1/4" n.c. | 1 |
| 17   | Flat washer 5/16" hole          | 2 |
|      | •                               |   |

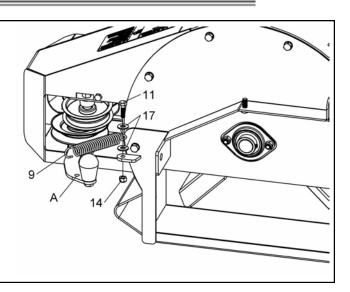


### <u>STEP 2:</u> VEHICLE PREPARATION

#### Removing parts and bracket installation:

### For 52" deck

From mower deck, remove chute (item a), its hardware (items b & c) and belt guard (item d).

By using same knob (item e), install bracket (item 6) from deck kit #970502 on mower deck.

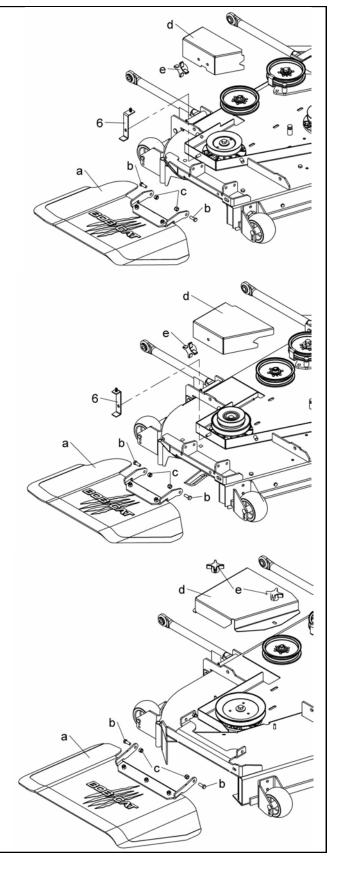

### For 61" deck

From mower deck, remove chute (item a), its hardware (items b & c) and belt guard (item d).

By using same knob (item e), install bracket (item 6) from deck kit #970503 on mower deck.

#### For 72" deck:

From mower deck, remove chute (item a), its hardware (items b & c) and belt guard (item d).

### Baffle and pulley installation:

\*Refer to double pulley table to select the correct double pulley and spacer (supplied with deck kit). For 52" deck, use deck kit #970502.

From mower deck, remove current discharge baffle (item a).

By using same hardware (items b & c), install discharge baffle supplied (item 4) on mower deck.

From mower deck, release tension on spindle drive belt and remove current pulley (item d).

Remove existing stock washer (item w) from spindle drive. Install correct spacer (item 24).

By using same hardware (items e, f & g), install double pulley (item 22) on mower deck.

Re-install belt from mower deck on bottom pulley.

### For 61" deck, use deck kit #970503.

From mower deck, remove current discharge baffle (item a). Keep hardware.

Select set of holes matching with current discharge baffle removed.

By using same hardware (items b & c), install discharge baffle supplied (item 4) on mower deck matching holes.

From mower deck, release tension on spindle drive belt and remove current pulley (item d).

Remove existing stock washer (item w) from spindle drive. Install correct spacer (item 24).

By using same hardware (items e, f & g), install double pulley (item 22) on mower deck.

Re-install belt from mower deck on bottom pulley.

#### For 72" deck, use deck kit #970504.


Using drilling template supplied, drill two holes (13/32") indicated on mower deck.

Install discharge baffle (item 3) on mower deck with two hex. bolts 3/8" n.c. x 1" (item 13) and two nylon insert flange lock nuts 3/8" n.c. (item 16)

From mower deck, release tension on spindle drive belt and remove current pulley (item a).

Remove existing stock washer (item w) from spindle drive. Install correct spacers (item 22 & 23).

By using same hardware (items b, c & d), install double pulley (item 20) on mower deck. Re-install belt from mower deck on bottom pulley.

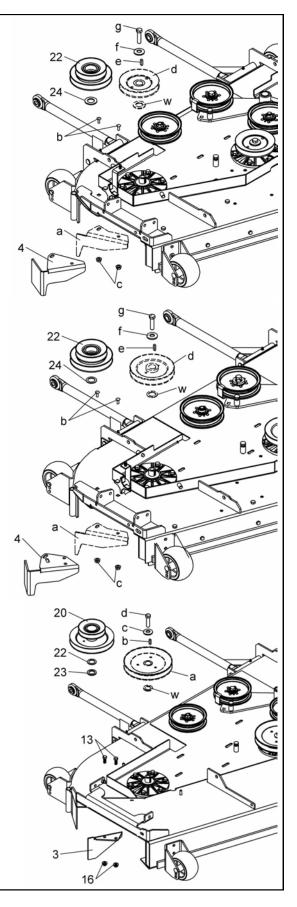

### **VEHICLE PREPARATION**

# BAG COLLECTION SYSTEM

#### Mounting pins installation:

Install mounting pins on left and right side of vehicle's rear bumper as indicated .

**Note:** For vehicles with 72" mower deck, remove rear weight plates (item C) from bumper.

Remove two bolts (item A) and nuts from vehicle. They will be replaced by new ones.

# 

#### Do not remove two lower bolts (item B)

Install shim and mounting hitch from inside vehicle's rear bumper as indicated.

Secure pin on mounting hitch with lock pin.

| REF. | ENGLISH DESCRIPTION               |   |
|------|-----------------------------------|---|
| 2    | Mounting hitch                    | 1 |
| 10   | Pin                               | 1 |
| 11   | Mounting pin                      | 2 |
| 14   | Shim                              | 1 |
| 26   | Lock pin                          | 1 |
| 33   | Hex. bolt 3/8" n.c. x 1 1/2" GR5  | 4 |
| 34   | Hex. bolt 3/8" n.c. x 1 3/4" GR5  | 2 |
| 39   | Nylon Insert lock Nut 3/8" n.c. 6 |   |
| 46   | Flat washer 7/16" hole            | 2 |

# 

#### Counterweight installation:


Remove bolts (item A) and nuts from vehicle. They will be replaced by new ones.

Install counterweight brackets as indicated.

| REF. | ENGLISH DESCRIPTION                |    |
|------|------------------------------------|----|
| 100  | Counterweight bracket              | 1  |
| 101  | Right bracket                      | 1  |
| 102  | Left bracket                       | 1  |
| 103  | Pivot pin                          | 1  |
| 104  | Hair pin 4mm                       | 4  |
| 105  | Hex. bolt 3/8" n.c. x 1" GR5       | 8  |
| 106  | Hex. bolt 3/8" n.c. x 1 1/4" GR5 4 |    |
| 107  | Nylon Insert lock Nut 3/8" n.c.    | 12 |

Install three counterweights (item B) on its bracket. Note : counterweights are supplied with collection system kit deck.

Secure with pivot pin and hair pins.

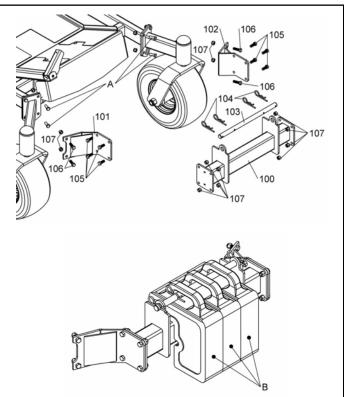


### STEP 3: COLLECTION SYSTEM INSTALLATION:

### THE BLOWER:

#### For 52" and 61" decks: Use deck kits #970502 and #970503.

Install blower on deck with mounting pin (item 3).

Secure with hair pin (item 8).

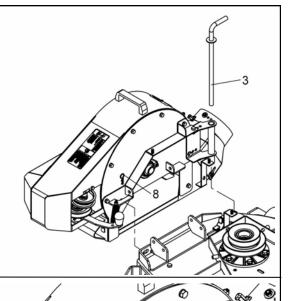

٥

้อ

Ø

Choose between A or B installation

A) Bolts (items 15)  $\implies$  Longer to install and remove but hold tighter.

Secure blower on deck with two bolts (items 15) and nylon lock nuts (items 18).

B) Pins (items 7)  $\implies$  Faster to install and remove but hold less tight.

Secure blower on deck with two pins (items 7) and hair pins (items 9).

### For 72" deck, use deck kit #970504 :

Install blower on deck with mounting pin (item 2).

Secure with hair pin (item 7).

Choose between A or B installation

A) Bolts (items 13)
 ⇒ Longer to install and remove but hold tighter.

Secure blower on deck with two bolts (items 13) and nylon lock nuts (items 15).


B) Pins (items 6)  $\implies$  Faster to install and remove but hold less tight.


Secure blower on deck with two pins (items 6) and hair pins (items 8).

#### **Belt installation :**

For 52", 61" and 72" deck:

Remove belt cover (item 59) from blower. Keep hardware (items 76 & 91).

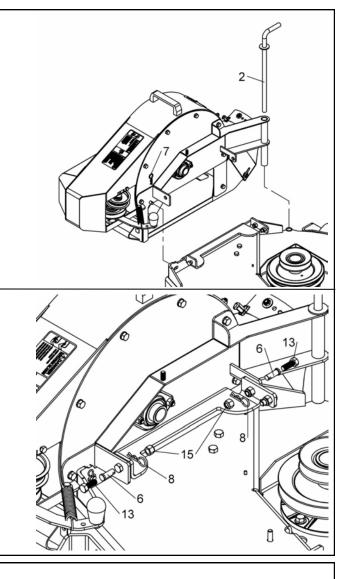

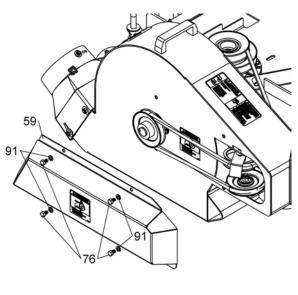


Loose bolt and nut holding belt guide (item 62)

Install belt on all blower pulleys as shown.

Position belt guide approximately the 8 o'clock position and 2 11/16" as shown to make sure it doesn't interference with belt or pulley. Tighten bolt and nut loosen before.


By pulling on tensioner (item 58), install belt on top pulley (item A) (from double pulley previously installed).

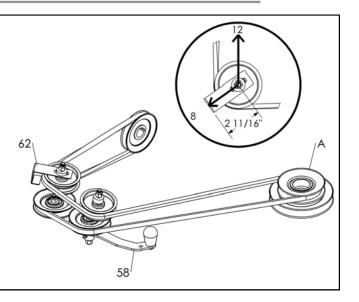

### Belt guard installation:


For 52" and 61" decks : Use deck kits #970502 and #970503.

As shown, install belt guard (item 5) on deck and blower using two knobs (item 10).

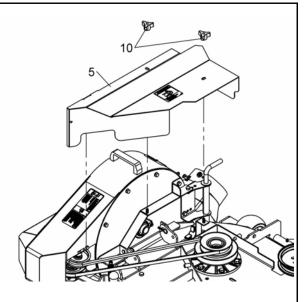

### <u>For 72" deck:</u> <u>Use deck kit #970504.</u>

As shown, install belt guard (item 4) on deck and blower using one knob (item 10) from 72" deck kit and one knob previously removed from deck (item a).

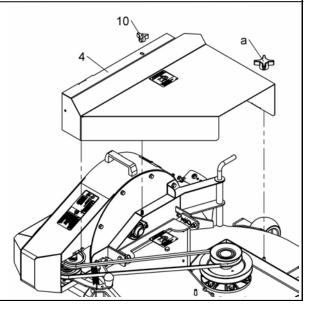

### COLLECTION SYSTEM ASSEMBLY:

Before to remove collection system from crate, remove two carriage bolts (item A) and nylon lock nuts (item B) from two latches.

Release latches.


Tip : install carriage bolt on hole (item C) to keep latches opened during pallet removal only.


### 

### COLLECTION SYSTEM IS HEAVY!

To avoid risk of strain injury, NEVER lift the collection system by hand alone when handling the components or assembly. Use proper lifting device or seek assistance. NEVER be underneath the collection system when it is off the ground. Serious injury including possibility of death could occur if collection system were to drop suddenly. Always wear protective shoes and appropriate gloves when manipulating or using this equipment.

Take collection system from crate and install it on bottom pin already installed on vehicle.

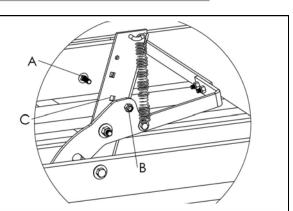

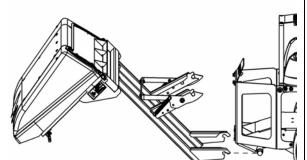


Rotate collector toward vehicle to clip it on top latch (item A).


### **WARNING**

Use latches with extra care! When it is released or not properly installed, the collector will dangerously fall down. Use proper lifting device or seek assistance.

### IMPORTANT:

Secure collector's latch with two carriage bolts 5/16" n.c. x 3/4" (item 37) and two knobs (item 22). (Install one on each side).

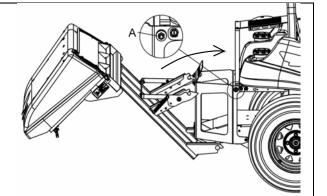

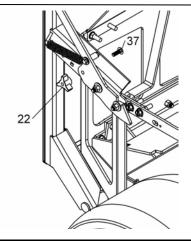

### ASSEMBLY INSTRUCTIONS

# BAG COLLECTION SYSTEM

### Discharge tube:

Remove discharge tube (item 7) from shipping crate .

- Using the dimpled marks as a guide:
- Drill three holes 9/32".

### Adjustment tube :

Remove adjustment tube (item 6) from shipping crate . Choose one set of holes (from A to G) corresponding to your deck size.

| Deck size | Recommended hole |
|-----------|------------------|
| 52 in     | А                |
| 61 in     | В                |
| 72 in     | D                |

\*This chosen set of holes can be changed depending on the vehicle and discharge tube adjustment.

Using the dimpled marks as a guide:

- Drill two holes chosen 9/32".
- Drill two holes 9/32" for handle (item a).

Two holes 13/64" (item b) are already drilled for latch.


### Adjustment tube :


Install latch and handle on adjustment tube .


| REF. | ENGLISH DESCRIPTION                      |   |
|------|--|---|
| 28   | 28 Rubber hitch                          |   |
| 47   | Machine screw T.H. 1/4" n.c. x 1/2"      | 2 |
| 49   | Tapping screw M5 x 12mm "T25 Torx drive" | 2 |
| 30   | Handle                                   | 1 |

### Assemble both tubes together:

Install adjustment tube (item 6) on discharge tube (item 7) with two machine screws T.H. 1/4" x 3/4" (item 48) and two nylon insert lock nuts 1/4" n.c. (thin) (item 40).

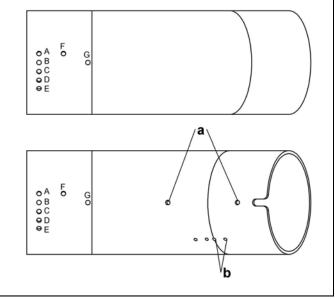


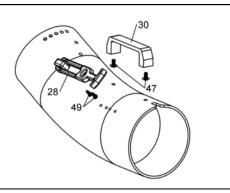

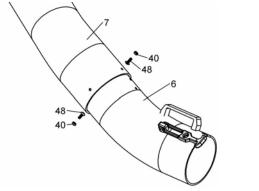

### Discharge tube top section:

Rotate discharge tube's elbow counter clockwise into grass collector's rubber seal.

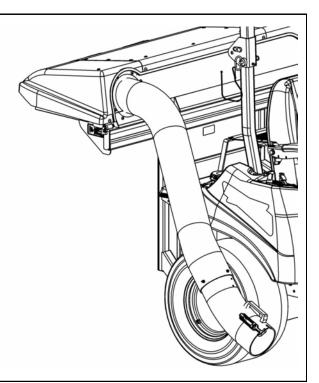

### Discharge tube bottom section:

TIP: Position mower deck's height at mid range position to ease discharge tube assembly.

By using handle, install bottom portion of discharge tube assembly on chute (previously installed on blower).

Make sure the slot (item a) is going over sleeve (item 71) and under the flat washer (item 88).


Latch discharge tube on chute by stretching rubber hitch (item 28) over keeper (item 60).


### Insert bags :

Unlatch two rear latches (item 20) and open lid (item A).

Slide bags (item 24) on frame.

Make sure plastic section is front toward vehicle Close lid and secure it with two rear rubber latches.

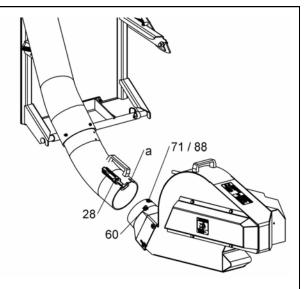

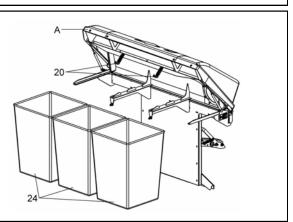

### <u>STEP 4 :</u> ADJUSTMENTS

### ADJUST DISCHARGE TUBE:

It's possible to adjust tube positioning by using another set of holes. If no set of holes corresponds to the need, make sure it is well installed. If it is well installed, it is possible to adjust tube to a proper fit (verify mower deck up and down position). A proper fit corresponds to the tube exiting elbow to be horizontal (from back view) when deck's height is at mowing position.

#### Fix discharge tube assembly :

Note: Drill free hole (item a) when discharge tube assembly is mounted to vehicle. This will allow adequate tire clearance.

By using free hole (item a) on discharge tube (item 7) as drilling template, drill one hole 9/32" on adjustment tube (item 6).

Unlatch and remove discharge tube assembly from chute (previously installed on blower).

Using this new hole, install one machine screw T.H. 1/4" x 3/4" (item 48) and one nylon insert lock nut 1/4" n.c. (thin) (item 40).

As described before, reinstall bottom portion of discharge tube assembly on chute.

### <u>STEP 5 :</u> COLLECTION SYSTEM REMOVAL INSTRUCTIONS:


### **WARNING**

TO PREVENT INJURIES: STOP THE MOTOR. APPLY PARKING BRAKE. REMOVE THE IGNITION KEY. DIS-CONNECT THE WIRE FROM THE SPARK PLUG(S) AND KEEP AWAY FROM SPARK PLUG(S) TO PREVENT ACCIDENTAL STARTING.

1. Using same <sup>[</sup>

# **AWARNING** sections,

2. Follow in reverse the procedure in STEP 3: COLLECTION SYSTEM INSTALLATION.

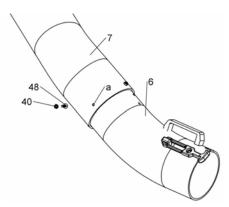

R 17 ft

**A**WARNING

HAZARDOUS AREA ! MAKE SURE THAT NOBODY IS WITHIN A 17 FT RADIUS

WHEN THE VEHICLE IS IN OPERATION.

# BAG COLLECTION SYSTEM

### STEP 6 : OPERATING INSTRUCTIONS:

The collection system is started at the same time as the mower deck. Refer to the mower deck and the vehicle owner's manuals to familiarize yourself with the controls and safety precautions.

### Using collection system

- 1. Start the tractor engine.
- 2. Engage mower deck.
- 3. Follow mowing instructions.

#### **Emptying collection system**

- 1. On flat surface, at the dumping area, stop engine and apply parking brakes.
- 2. Unlatch and open rear lid.
- 3. Slide out one bag at a time.
- 4. Let the bags fall down on the ground to avoid injuries with the heavy weight of a full bag.
- 5. Use handle from bottom of bags to empty bag.
- 6. Reinstall bags. Make sure the plastic section is positioned toward the front of the vehicle.
- 7. Close lid and latch it.

### 



READ THE TRACTOR OWNER'S MANUAL CAREFULLY. BE THOROUGHLY FAMILIAR WITH THE CONTROLS & PROPER USE OF THE ATTACHMENT. KNOW HOW TO STOP THE ATTACHMENT & DISENGAGE THE CONTROLS QUICKLY.

USE EXTRA CARE IN OPERATION. THIS ATTACHMENT CAN CHANGE THE STABILITY OF THE VEHICLE IN OPERATION AND IN STATIC CONDITIONS. CHECK BRAKE OPERATION PRIOR TO ANY USE. ADJUST AND REPAIR ANY PROBLEM BEFORE USING. NEVER OPERATE IN SLOPE MORE THAN 10°.

### 

Use care while operating near obstacles. This attachment adds width and length to vehicle and mower deck. Familiarize yourself with the new vehicle's dimensions.

# **WARNING**

- Always wear protective ear muffs, safety mask and safety glasses when operating the accessory.
- Never use the grass collector without all the guards and the discharge tube correctly installed. The collector and the cover must be in closed position.
- If during the operation, an anomaly occurs (loss of part, breakage, tube stands, etc..); STOP the vehicle immediately and rectify the situation.

# **WARNING**

### CLEARING A CLOGGED DISCHARGE CHUTE:

Hand contact with the rotating impeller inside the discharge chute is a common cause of injury. Never use your hand to clean out the discharge chute.

#### To clear the chute: NEVER USE YOUR HANDS.

- 1. Disengage the clutch.
- 2. Lower mower deck to the ground and set parking brake.
- 3. SHUT THE ENGINE OFF & REMOVE KEY!
- 4. Wait 10 seconds to be sure that **all moving parts** such as the impeller blades have stopped moving.
- 5. Disconnect wire from the spark plug(s) and keep wire away to prevent accidental starting.
- 6. Always use a clean-out tool (a wooden stick that is at least 3 feet long minimum)

### SERVICE SCHEDULE

### 

TO PREVENT INJURIES: STOP THE MOTOR. APPLY PARKING BRAKE. REMOVE THE IGNITION KEY. DISCONNECT THE WIRE FROM THE SPARK PLUG(S) AND KEEP AWAY FROM SPARK PLUG(S) TO PREVENT ACCIDENTAL STARTING.

NEVER GET UNDER THE GRASS COLLECTOR WHEN IT IS RAISED OFF THE GROUND.

### Daily:

- Clean collection system thoroughly and repaint all parts from which paint has worn.
- Check for any signs of loose bolts and tighten as needed. Check mounting bolts at frequent intervals for proper tightness in order to prevent costly repairs. Make sure your grass collector is in safe working condition.
- Check for any signs of damaged components. Repair or replace if needed.
- Verify the wear on the chute, the discharge tube, grass filter, the deflector, the belt and the rubber joint. Repair or replace if needed.

#### 50 Hours:


- Check drive belts for proper tension and signs of cracking.
- Always clean the grease fitting before inserting any grease.
- **Lubricate** the tensioner's pivot with an all purpose SAE lithium based grease.
- Lubricate all the other pivoting points.

#### **BELT REPLACEMENT**

To remove and replace belt, follow in reverse the belt installation procedure in "STEP 3: COLLECTION SYSTEM INSTALLATION."

#### END OF SEASON STORAGE

- 1. Clean collection system thoroughly and repaint all parts from which paint has worn.
- 2. List the replacement parts that will be needed for the next season.
- 3. Store the collection system in a dry place.
- 4. Follow instructions in service schedule above.

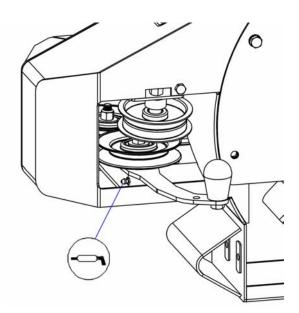

\* Please refer to parts breakdown section for parts identification.

| TROUBLESHOOTING   |   |   |
|---|---|---|
| PROBLEM   | POSSIBLE CAUSES   | CORRECTIVE ACTION   |
| Blower vibrates or is abnormally noisy .                                | Damaged pulley  | Replace pulley  |
|   | Damaged bearing   | Replace the bearing   |
|   | Fan is damaged  | Remove and straighten or replace the fan.   |
|   | Belt is damaged   | Replace the belt.   |
| The blower does not push the grass towards the collection system.       | The chute, the fan or the discharge tube are blocked.   | Dislodge the obstruction with the help of a stick.  |
| Belt shows premature wear   | Not enough tension on the belt.   | Make sure the spring is in good condition.  |
|   | Not the original belt installed.  | Install an original belt.   |
| Belt is snapping, shredding,<br>burning or worn in a specific<br>place. | There is not enough tension on<br>the belt:<br>-the belt is worn which is<br>causing a slack.<br>-the spring is worn out<br>-the tensioner's pivot is not<br>well lubricated. | Replace the belt or the spring. Grease all the pivoting points.   |
|   | Imperfections in the pulleys  | Replace the pulleys.  |
|   | The belt rubs on a belt guide   | Reposition the belt guide.  |
| The chute blocks easily.  | The grass is cut too long.  | Adjust the mower deck to the highest position<br>for the first cut, then lower the mower for a<br>second cut. |
|   | The grass is too humid.   | Wait for the grass to dry out.  |
| Tube in contact with tire   | Not good set of holes used.   | Change set of holes to rotate tube, in order to clear tire.   |

# BAG COLLECTION SYSTEM


| TROUBLESHOOTING   |   |   |  |  |  |  |  |  |  |
|---|---|---|--|--|--|--|--|--|--|
| PROBLEM   | POSSIBLE CAUSES   | CORRECTIVE ACTION   |  |  |  |  |  |  |  |
| Collector doesn't lock on place easily.                       | Collector slots are not well installed<br>on both sides grooves from bottom<br>pin (item 10).     |   |  |  |  |  |  |  |  |
|   | Mounting pins (item 11) are not installed exactly at the right position.                          | Loose mounting bolts (item 34) until collector clip easily in place. Then, re tighten mounting bolts. |  |  |  |  |  |  |  |
|   | Mounting hitch (item 2) is not installed exactly at the right position.                           | Loose mounting bolts (item 33) until collector clip easily in place. Then, re tighten mounting bolts. |  |  |  |  |  |  |  |
|   | Latch is still secured in place by knobs and carriage bolts.                                      | Remove two knobs and carriage bolts (one on each side).   |  |  |  |  |  |  |  |
|   | Too much friction on latches.   | Lubricate latches pivot point.  |  |  |  |  |  |  |  |
| Grass is escaping from collection system.                     | One seal is damaged.  | Replace broken seal.  |  |  |  |  |  |  |  |
| System.   | Collection system is not fully installed (discharge baffle uder the deck is missing for example). |   |  |  |  |  |  |  |  |
|   | Lid is not closed properly.   | Close the lid and latch properly.   |  |  |  |  |  |  |  |
| Discharge tube escapes from chute when mower deck is lowered. | Rubber latch (item 28) is broken or not installed at full tension.                                | Replace latch or install it at full tension.  |  |  |  |  |  |  |  |


\* Please refer to parts breakdown section for parts identification.


# DOUBLE PULLEY TABLE

|         | Doi    | uble Pulle | y           |         |        | Double | e Pulley                    |
|---------|--------|------------|-------------|---------|--------|--------|-----------------------------|
|         |        | 4169425    |             |         |        | 416    | 9426                        |
|         | Use on |            | with Spacer |         | Use on |        | with Spacer(s)              |
| 942302H | 42     | FCA        | -           | 942508J | 72     | ZT2    | (1) 64163-64 & (1) 64163-68 |
| 942311H | 42     | FCA        | -           | 942509J | 61     | ZT2    | -                           |
| 942298H | 48     | FCA        | -           | 942511J | 72     | ZT2    | 64163-64                    |
| 942501J | 52     | ZT2        | 64163-84    | 942516J | 72     | ZT2    | (1) 64163-64 & (1) 64163-68 |
| 942502J | 61     | ZT2        | 64163-64    | 942519J | 72     | ZT2    | (1) 64163-64 & (1) 64163-68 |
| 942504J | 61     | ZT2        | 64163-64    |         |        |        |                             |
| 942506J | 52     | ZT2        | 64163-84    |         |        |        |                             |
| 942514J | 61     | ZT2        | 64163-64    |         |        |        |                             |
| 942515J | 61     | ZT2        | 64163-64    |         |        |        |                             |
| 942520J | 52     | ZT2        | 64163-84    |         |        |        |                             |
| 942521J | 61     | ZT2        | 64163-64    |         |        |        |                             |
| 942522J | 52     | ZT2        | 64163-84    |         |        |        |                             |
| 942523J | 61     | ZT2        | 64163-64    |         |        |        |                             |
| 942525J | 52     | ZT2        | 64163-84    |         |        |        |                             |
| 942526J | 61     | ZT2        | 64163-64    |         |        |        |                             |
| 942704J | 61     | ZT2        | 64163-64    |         |        |        |                             |
| 942706J | 52     | ZT2        | 64163-84    |         |        |        |                             |
| 942722J | 52     | ZT2        | 64163-84    |         |        |        |                             |


SPACER 64163-64

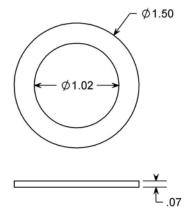

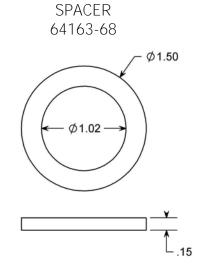


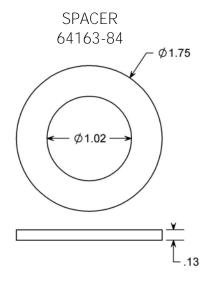


# PARTS SECTION

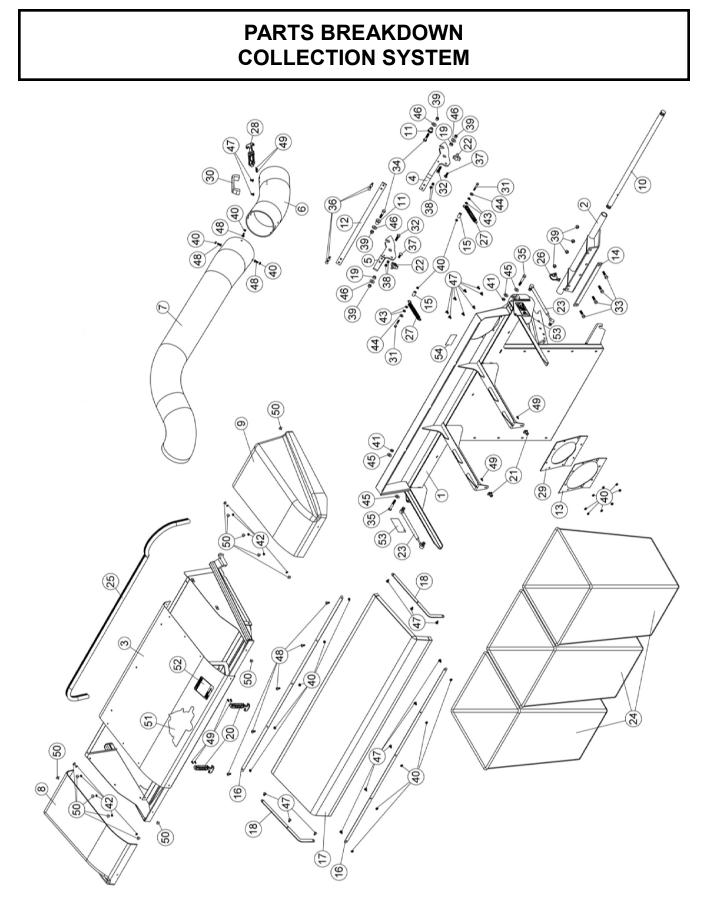

### PARTS BREAKDOWN COLLECTION SYSTEM

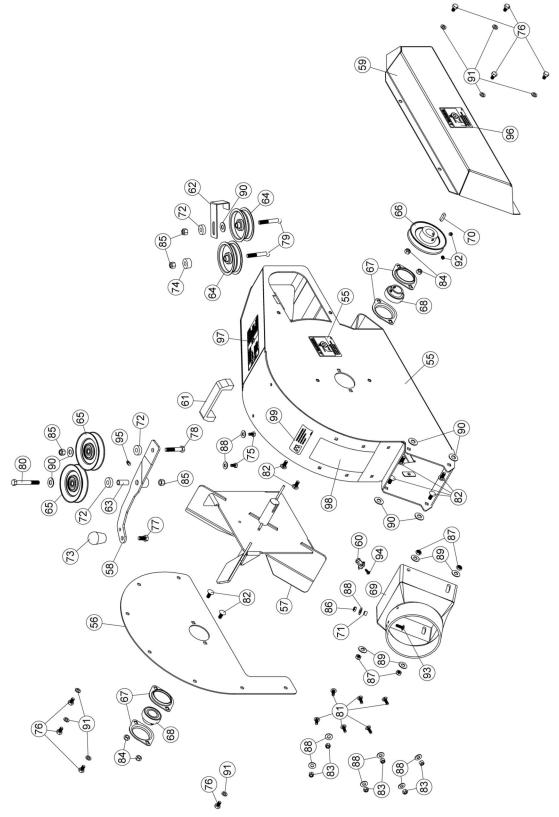

# PARTS BREAKDOWN COLLECTION SYSTEM

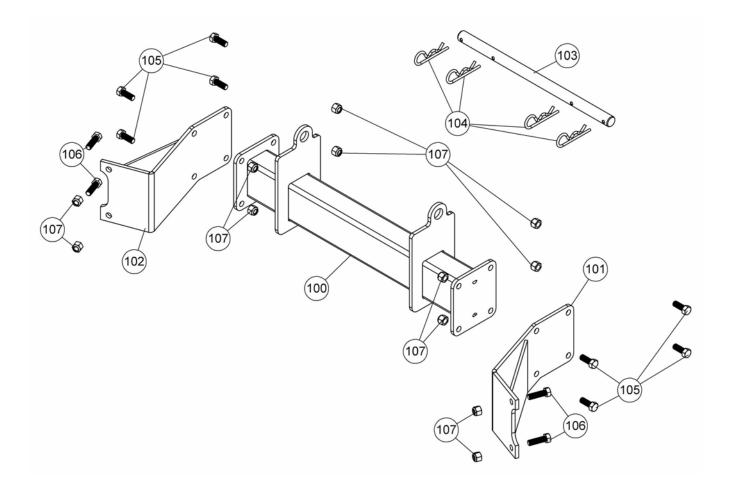

### PARTS LIST COLLECTION SYSTEM

| Ref. | English description | Qty. | Part #    |  |  |  |  |  |
|------|---------------------|------|-----------|--|--|--|--|--|
| 1    | Frame               | 1    | 4170286.7 |  |  |  |  |  |
| 2    | Mounting hitch      | 1    | 4170158.7 |  |  |  |  |  |
| 3    | Lid's frame         | 1    | 4170196.2 |  |  |  |  |  |
| 4    | Right latch         | 1    | 4170162.7 |  |  |  |  |  |
| 5    | Left latch          | 1    | 4170163.7 |  |  |  |  |  |
| 6    | Adjustment tube     | 1    | 4170208   |  |  |  |  |  |
| 7    | Discharge tube      | 1    | 4170209   |  |  |  |  |  |
| 8    | Left cover          | 1    | 4170210   |  |  |  |  |  |
| 9    | Right cover         | 1    | 4170211   |  |  |  |  |  |
| 10   | Pin                 | 1    | 4170160   |  |  |  |  |  |
| 11   | Mounting pin        | 2    | 4170161   |  |  |  |  |  |
| 12   | Link                | 1    | 4170164.7 |  |  |  |  |  |
| 13   | Bracket             | 1    | 4170169.7 |  |  |  |  |  |
| 14   | Shim                | 1    | 4170418.7 |  |  |  |  |  |
| 15   | Sleeve              | 2    | 4170177   |  |  |  |  |  |
| 16   | Bracket             | 2    | 4170197.7 |  |  |  |  |  |
| 17   | Filter              | 1    | 4170199   |  |  |  |  |  |
| 18   | Bracket             | 2    | 4170198.7 |  |  |  |  |  |
| 19   | Sleeve              | 2    | 4170214   |  |  |  |  |  |
| 20   | Rubber hitch        | 2    | 4170216   |  |  |  |  |  |
| 21   | Keeper plate        | 2    | 4170215   |  |  |  |  |  |
| 22   | Knob                | 2    | 4170236   |  |  |  |  |  |
| 23   | Gas spring          | 2    | 4170228   |  |  |  |  |  |
| 24   | Bag                 | 3    | 4170288   |  |  |  |  |  |
| 25   | Seal                | 1    | 4170217   |  |  |  |  |  |
| 26   | Lock pin            | 1    | 4170176   |  |  |  |  |  |
| 27   | Spring              | 2    | 4170229   |  |  |  |  |  |
| 28   | Rubber hitch        | 1    | 4170233   |  |  |  |  |  |
| 29   | Rubber seal         | 1    | 4170165   |  |  |  |  |  |
| 30   | Handle              | 1    | 4170234   |  |  |  |  |  |

# PARTS LIST COLLECTION SYSTEM

| COLLECTION SYSTEM |  |      |                 |  |  |  |  |
|-------------------|--|------|-----------------|--|--|--|--|
| Ref.              | English description                      | Qty. | Part #          |  |  |  |  |
| 31                | Hex. bolt 1/4" n.c. x 1 3/4" GR5         | 2    | 64123-283       |  |  |  |  |
| 32                | Hex. bolt 3/8" n.c. x 1 1/4" GR5         | 2    | 64123-16        |  |  |  |  |
| 33                | Hex. bolt 3/8" n.c. x 1 1/2" GR5         | 4    | 64123-70        |  |  |  |  |
| 34                | Hex. bolt 3/8" n.c. x 1 3/4" GR5         | 2    | 64123-87        |  |  |  |  |
| 35                | Hex. bolt 3/8" n.c. x 2 1/2" GR5         | 2    | 64123-82        |  |  |  |  |
| 36                | Carriage bolt 1/4" n.c. x 1 " GR5        | 4    | 64123-114       |  |  |  |  |
| 37                | Carriage bolt 5/16" n.c. x 1 " GR5       | 2    | 64018-15        |  |  |  |  |
| 38                | Nylon Insert lock Nut 1/4" n.c.          | 4    | 64229-01        |  |  |  |  |
| 39                | Nylon Insert lock Nut 3/8" n.c.          | 8    | 64229-03        |  |  |  |  |
| 40                | Nylon insert lock nut 1/4" n.c. (thin)   | 23   | 64151-38        |  |  |  |  |
| 41                | Nylon insert lock nut 3/8" n.c. (thin)   | 2    | 64229-34        |  |  |  |  |
| 42                | Flat washer #10 hole                     | 10   | 360.P_#10T      |  |  |  |  |
| 43                | Flat washer 1/4" hole                    | 4    | 360.P_1-4T      |  |  |  |  |
| 44                | Flat washer 5/16" hole                   | 2    | 360.P_5-16T     |  |  |  |  |
| 45                | Flat washer 3/8" hole                    | 4    | 64163-61        |  |  |  |  |
| 46                | Flat washer 7/16" hole                   | 4    | 360.P_7-16T     |  |  |  |  |
| 47                | Machine screw T.H. 1/4" n.c. x 1/2"      | 21   | 394.P-1/4X1/2   |  |  |  |  |
| 48                | Machine screw T.H. 1/4" n.c. x 3/4"      | 8    | 394.P-1/4X3/4   |  |  |  |  |
| 49                | Tapping screw M5 x 12mm "T25 Torx drive" | 8    | 408.P-T25-M5x12 |  |  |  |  |
| 50                | Pop-rivet 3/16" LF x 3/8" no AD-66ABSLF  | 14   | 415-3/16LFX3/8  |  |  |  |  |
| 51                | Decal BobCat                             | 1    | 4158401         |  |  |  |  |
| 52                | Caution decal projection                 | 1    | 4170287         |  |  |  |  |
| 53                | Decal pinch point                        | 2    | 4137371         |  |  |  |  |
| 54                | Serial number                            | 1    | #N/A            |  |  |  |  |
| 55                | Frame with safety decals                 | 1    | 4170239.7       |  |  |  |  |
| 56                | Mounting plate                           | 1    | 4170240.7       |  |  |  |  |
| 57                | Fan                                      | 1    | 4170241.7       |  |  |  |  |
| 58                | Tensioner                                | 1    | 4170242.7       |  |  |  |  |
| 59                | Belt guard with safety decal             | 1    | 4170243.7       |  |  |  |  |
| 60                | Keeper plate                             | 1    | 4170215         |  |  |  |  |


### PARTS LIST COLLECTION SYSTEM

| Ref. |   |      |              |  |  |  |  |  |
|------|---|------|--------------|--|--|--|--|--|
| Ret. | English description                     | Qty. | Part #       |  |  |  |  |  |
| 61   | Handle                                  | 1    | 4170234      |  |  |  |  |  |
| 62   | Belt guide                              | 1    | 4170244.7    |  |  |  |  |  |
| 63   | Spacer                                  | 1    | 4170245      |  |  |  |  |  |
| 64   | Flat pulley                             | 2    | 4170246      |  |  |  |  |  |
| 65   | V pulley                                | 2    | 4170247      |  |  |  |  |  |
| 66   | V pulley with set screws                | 1    | 4170248      |  |  |  |  |  |
| 67   | Flangette                               | 4    | 4170249      |  |  |  |  |  |
| 68   | Bearing with set screw                  | 2    | 4170250      |  |  |  |  |  |
| 69   | Chute                                   | 1    | 4170251      |  |  |  |  |  |
| 70   | Key 1/4" x 1/4" x 1.000"                | 1    | 64164-12     |  |  |  |  |  |
| 71   | Sleeve                                  | 1    | 4170252      |  |  |  |  |  |
| 72   | Spacer                                  | 3    | 4170253      |  |  |  |  |  |
| 73   | Knob                                    | 1    | 4170254      |  |  |  |  |  |
| 74   | Spacer                                  | 1    | 4170255      |  |  |  |  |  |
| 75   | Hex. bolt 1/4" n.c. x 1/2" GR5          | 2    | 64123-49     |  |  |  |  |  |
| 76   | Hex. bolt 5/16" n.c. x 1/2" GR5         | 8    | 64123-92     |  |  |  |  |  |
| 77   | Hex. bolt 3/8" n.c. x 3/4" GR5          | 1    | 64123-15     |  |  |  |  |  |
| 78   | Hex. bolt 3/8" n.c. x 2" GR5            | 1    | 64123-67     |  |  |  |  |  |
| 79   | Hex. bolt 3/8" n.c. x 2 1/4" GR5        | 2    | 64123-100    |  |  |  |  |  |
| 80   | Hex. bolt 3/8" n.c. x 3" GR5            | 1    | 64123-75     |  |  |  |  |  |
| 81   | Carriage bolt 1/4" n.c. x 3/4 " GR5     | 6    | 64018-02     |  |  |  |  |  |
| 82   | Carriage bolt 5/16" n.c. x 3/4 " GR5    | 8    | 64018-01     |  |  |  |  |  |
| 83   | Nylon Insert lock Nut 1/4" n.c.         | 6    | 64229-01     |  |  |  |  |  |
| 84   | Nylon Insert lock Nut 5/16" n.c.        | 4    | 64229-02     |  |  |  |  |  |
| 85   | Nylon Insert lock Nut 3/8" n.c.         | 4    | 64229-03     |  |  |  |  |  |
| 86   | Nylon insert lock nut 1/4" n.c. (thin)  | 1    | 64151-38     |  |  |  |  |  |
| 87   | Nylon insert lock nut 5/16" n.c. (thin) | 4    | 336NC.P-5/16 |  |  |  |  |  |
| 88   | Flat washer 5/16" hole                  | 9    | 360.P_5-16T  |  |  |  |  |  |
| 89   | Flat washer 3/8" hole                   | 4    | 64163-61     |  |  |  |  |  |
| 90   | Flat washer 7/16" hole                  | 7    | 360.P_7-16T  |  |  |  |  |  |

### PARTS LIST COLLECTION SYSTEM

| Ref. | English description                      | Qty. | Part #            |  |  |  |  |  |
|------|--|------|-------------------|--|--|--|--|--|
| 91   | Lock washer 5/16"                        | 8    | 64006-02          |  |  |  |  |  |
| 92   | Socket head set screw 5/16" n.c. x 5/16" | 2    | 391NC.N-5/16X5/16 |  |  |  |  |  |
| 93   | Machine screw T.H. 1/4" n.c. x 3/4"      | 1    | 394.P-1/4X3/4     |  |  |  |  |  |
| 94   | Tapping screw M5 x 12mm "T25 Torx drive" | 1    | 408.P-T25-M5x12   |  |  |  |  |  |
| 95   | Grease fitting 1/4" n.f.                 | 1    | 85010N            |  |  |  |  |  |
| 96   | Warning decal belt                       | 2    | 2000577           |  |  |  |  |  |
| 97   | Decal danger mower                       | 1    | 4164269           |  |  |  |  |  |
| 98   | Danger decal chute                       | 1    | 4165975           |  |  |  |  |  |
| 99   | Decal read instructions                  | 1    | 200735            |  |  |  |  |  |
| 100  | Counterweight bracket                    | 1    | 4170151.7         |  |  |  |  |  |
| 101  | Right bracket                            | 1    | 4170152.7         |  |  |  |  |  |
| 102  | Left bracket                             | 1    | 4170153.7         |  |  |  |  |  |
| 103  | Pivot pin                                | 1    | 4170154           |  |  |  |  |  |
| 104  | Hair pin 4mm                             | 4    | 102054            |  |  |  |  |  |
| 105  | Hex. bolt 3/8" n.c. x 1" GR5             | 8    | 64123-50          |  |  |  |  |  |
| 106  | Hex. bolt 3/8" n.c. x 1 1/4" GR5         | 4    | 64123-16          |  |  |  |  |  |
| 107  | Nylon Insert lock Nut 3/8" n.c.          | 12   | 64229-03          |  |  |  |  |  |


# PARTS BREAKDOWN KIT-DECK, 52IN 12BU COLL SYSTEM 970502

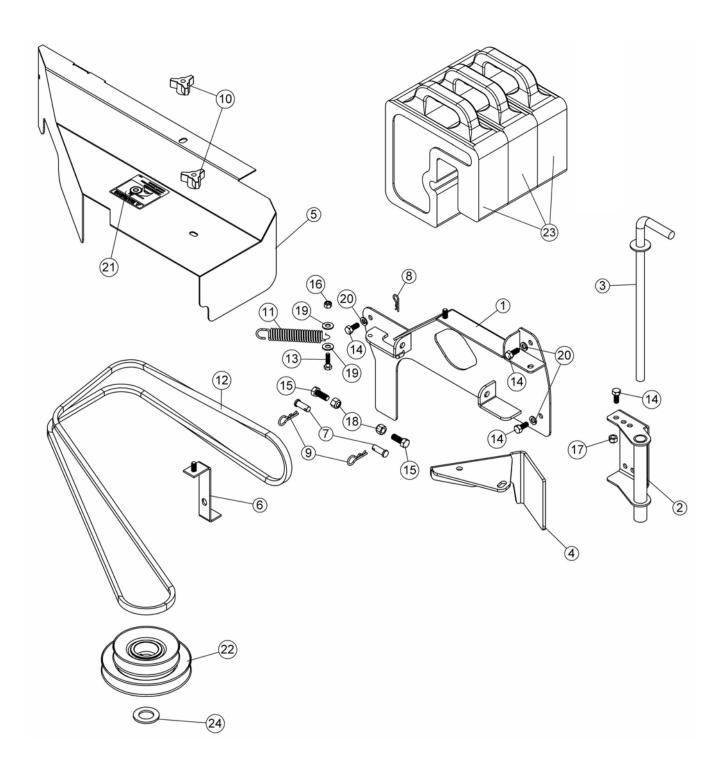

### COLLECTION SYSTEM KIT-DECK


| PARTS LIST<br>KIT-DECK, 52IN 12BU COLL SYSTEM 970502 |                                      |      |             |  |  |  |  |
|--|--------------------------------------|------|-------------|--|--|--|--|
| Ref.   | English description                  | Qty. | Part #      |  |  |  |  |
| 1  | Blower hitch                         | 1    | 4170290.7   |  |  |  |  |
| 2  | Link tube                            | 1    | 4170291.7   |  |  |  |  |
| 3  | Mounting pin                         | 1    | 4170292.7   |  |  |  |  |
| 4  | Baffle                               | 1    | 4170293.7   |  |  |  |  |
| 5  | Belt guard with safety decal         | 1    | 4170294.7   |  |  |  |  |
| 6  | Bracket                              | 1    | 4170295.7   |  |  |  |  |
| 7  | Pin                                  | 2    | 64188-33    |  |  |  |  |
| 8  | Hair pin 2mm                         | 1    | 64168-2     |  |  |  |  |
| 9  | Hair pin 2.5mm                       | 2    | 64168-7     |  |  |  |  |
| 10   | Knob                                 | 2    | 4170236     |  |  |  |  |
| 11   | Spring                               | 1    | 4170296     |  |  |  |  |
| 12   | V-Belt , A-93                        | 1    | 4170297     |  |  |  |  |
| 13   | Hex. bolt 1/4" n.c. x 1" GR5         | 1    | 64123-114   |  |  |  |  |
| 14   | Hex. bolt 5/16" n.c. x 3/4" GR5      | 4    | 64123-54    |  |  |  |  |
| 15   | Hex. bolt 3/8" n.c. x 1" GR5         | 2    | 64123-50    |  |  |  |  |
| 16   | Nylon Insert lock Nut 1/4" n.c.      | 1    | 64229-01    |  |  |  |  |
| 17   | Nylon Insert lock Nut 5/16" n.c. GR5 | 1    | 64229-02    |  |  |  |  |
| 18   | Nylon Insert lock Nut 3/8" n.c.      | 2    | 64229-03    |  |  |  |  |
| 19   | Flat washer 5/16" hole               | 2    | 360.P_5-16T |  |  |  |  |
| 20   | Lock washer 5/16"                    | 3    | 64006-02    |  |  |  |  |
| 21   | Warning decal belt                   | 1    | 2000577     |  |  |  |  |
| 22   | Double Pulley                        | 1    | 4169425     |  |  |  |  |
| 23   | 50lbs tractor ballast weight         | 3    | 62-540.7    |  |  |  |  |
| 24   | Spacer 1.015X1.750X10GA              | 1    | 64163-84    |  |  |  |  |



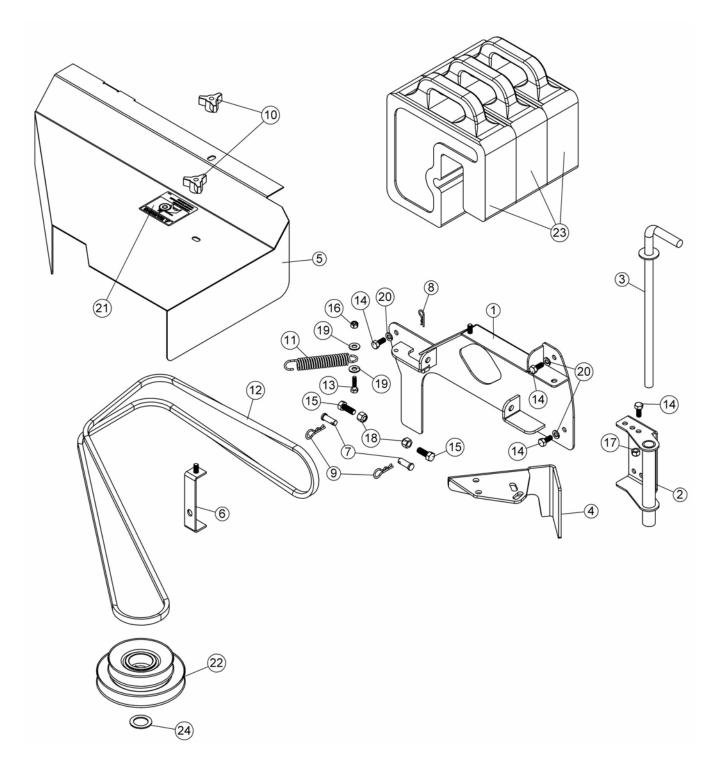

### COLLECTION SYSTEM KIT-DECK

| PARTS LIST<br>KIT-DECK, 61IN 12BU COLL SYSTEM 970503 |                                      |      |             |  |  |  |
|--|--------------------------------------|------|-------------|--|--|--|
| Ref.   | English description                  | Qty. | Part #      |  |  |  |
| 1  | Blower hitch                         | 1    | 4170290.7   |  |  |  |
| 2  | Link tube                            | 1    | 4170291.7   |  |  |  |
| 3  | Mounting pin                         | 1    | 4170292.7   |  |  |  |
| 4  | Baffle                               | 1    | 4170298.7   |  |  |  |
| 5  | Belt guard with safety decal         | 1    | 4170299.7   |  |  |  |
| 6  | Bracket                              | 1    | 4170300.7   |  |  |  |
| 7  | Pin                                  | 2    | 64188-33    |  |  |  |
| 8  | Hair pin 2mm                         | 1    | 64168-2     |  |  |  |
| 9  | Hair pin 2.5mm                       | 2    | 64168-7     |  |  |  |
| 10   | Knob                                 | 2    | 4170236     |  |  |  |
| 11   | Spring                               | 1    | 4170296     |  |  |  |
| 12   | V-Belt , A-92                        | 1    | 4170301     |  |  |  |
| 13   | Hex. bolt 1/4" n.c. x 1" GR5         | 1    | 64123-114   |  |  |  |
| 14   | Hex. bolt 5/16" n.c. x 3/4" GR5      | 4    | 64123-54    |  |  |  |
| 15   | Hex. bolt 3/8" n.c. x 1" GR5         | 2    | 64123-50    |  |  |  |
| 16   | Nylon Insert lock Nut 1/4" n.c.      | 1    | 64229-01    |  |  |  |
| 17   | Nylon Insert lock Nut 5/16" n.c. GR5 | 1    | 64229-02    |  |  |  |
| 18   | Nylon Insert lock Nut 3/8" n.c.      | 2    | 64229-03    |  |  |  |
| 19   | Flat washer 5/16" hole               | 2    | 360.P_5-16T |  |  |  |
| 20   | Lock washer 5/16"                    | 3    | 64006-02    |  |  |  |
| 21   | Warning decal belt                   | 1    | 2000577     |  |  |  |
| 22   | Double Pulley                        | 1    | 4169425     |  |  |  |
| 23   | 50lbs tractor ballast weight         | 3    | 62-540.7    |  |  |  |
| 24   | Spacer 1.015X1.500X14GA              | 1    | 64163-64    |  |  |  |

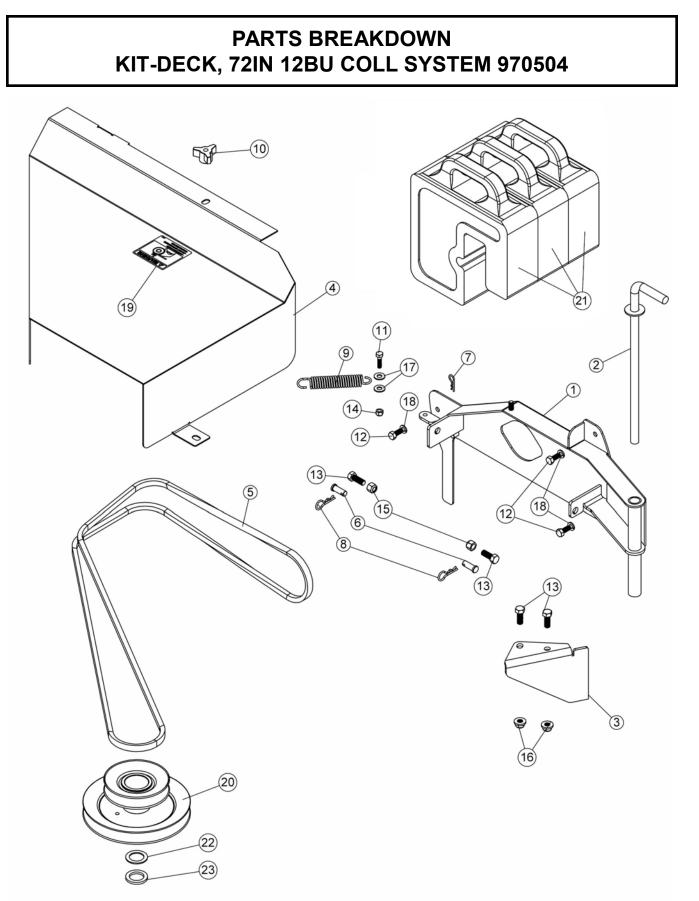

### COLLECTION SYSTEM KIT-DECK

|      | PARTS LIST<br>KIT-DECK, 72IN 12BU COLL SYSTEM 970504 |      |             |  |  |  |  |  |
|------|--|------|-------------|--|--|--|--|--|
| Ref. | English description                                  | Qty. | Part #      |  |  |  |  |  |
| 1    | Blower hitch   | 1    | 4170302.7   |  |  |  |  |  |
| 2    | Mounting pin   | 1    | 4170292.7   |  |  |  |  |  |
| 3    | Baffle   | 1    | 4170303.7   |  |  |  |  |  |
| 4    | Belt guard with safety decal                         | 1    | 4170304.7   |  |  |  |  |  |
| 5    | V-Belt , A-96  | 1    | 4170305     |  |  |  |  |  |
| 6    | Pin  | 2    | 64188-33    |  |  |  |  |  |
| 7    | Hair pin 2mm   | 1    | 64168-2     |  |  |  |  |  |
| 8    | Hair pin 2.5mm                                       | 2    | 64168-7     |  |  |  |  |  |
| 9    | Spring   | 1    | 4170296     |  |  |  |  |  |
| 10   | Knob   | 1    | 4170236     |  |  |  |  |  |
| 11   | Hex. bolt 1/4" n.c. x 1" GR5                         | 1    | 64123-114   |  |  |  |  |  |
| 12   | Hex. bolt 5/16" n.c. x 3/4" GR5                      | 3    | 64123-54    |  |  |  |  |  |
| 13   | Hex. bolt 3/8" n.c. x 1" GR5                         | 4    | 64123-50    |  |  |  |  |  |
| 14   | Nylon Insert lock Nut 1/4" n.c.                      | 1    | 64229-01    |  |  |  |  |  |
| 15   | Nylon Insert lock Nut 3/8" n.c.                      | 2    | 64229-03    |  |  |  |  |  |
| 16   | Nylon insert flange lock nut 3/8" n.c. GR5           | 2    | 64229-03    |  |  |  |  |  |
| 17   | Flat washer 5/16" hole                               | 2    | 360.P_5-16T |  |  |  |  |  |
| 18   | Lock washer 5/16"                                    | 3    | 64006-02    |  |  |  |  |  |
| 19   | Warning decal belt                                   | 1    | 2000577     |  |  |  |  |  |
| 20   | Double Pulley  | 1    | 4169426     |  |  |  |  |  |
| 21   | 50lbs tractor ballast weight                         | 3    | 62-540.7    |  |  |  |  |  |
| 22   | Spacer 1.015X1.500X14GA                              | 1    | 64163-64    |  |  |  |  |  |
| 23   | Spacer 1.015X1.500X9GA                               | 1    | 64163-68    |  |  |  |  |  |

# TORQUE SPECIFICATION TABLE

### GENERAL TORQUE SPECIFICATION TABLE USE THE FOLLOWING TORQUES WHEN SPECIAL TORQUES ARE NOT GIVEN


NOTE: These values apply to fasteners as received from supplier, dry or when lubricated with normal oil. They do not apply if special graphited or moly disulphide greases or other extreme pressure lubricants are used. This applies to both UNF and UNC threads.

| SEE Grade   | No.        | 2      |         |         | 5      |        |         | 8 *      |        |           |        |           |        |
|---|------------|--------|---------|---------|--------|--------|---------|----------|--------|-----------|--------|-----------|--------|
| BOLT HEAD<br>IDENTIFICATION<br>MARKS AS PER GRADE<br>NOTE MANUFACTURING |            | TORQUE |         |         |        | TORQUE |         |          |        |           | TORQUE |           |        |
| BO  | OLT SIZE   | POUN   | DS FEET | NEWTON- | METERS | POUN   | DS FEET | NEWTON-I | METERS | POUND     | S FEET | NEWTON-N  | IETERS |
| Inches  | Millimetre | Min.   | Max.    | Min.    | Max.   | Min.   | Max.    | Min.     | Max.   | Min. Max. | Max.   | Min. Max. | Max.   |
| 1/4"  | 6.35       | 5      | 6       | 6.8     | 8.13   | 9      | 11      | 12.2     | 14.9   | 12        | 15     | 16.3      | 30.3   |
| 5/16"   | 7.94       | 10     | 12      | 13.6    | 16.3   | 17     | 20.5    | 23.1     | 27.8   | 24        | 29     | 32.5      | 39.3   |
| 3/8"  | 9.53       | 20     | 23      | 27.1    | 31.2   | 35     | 42      | 47.5     | 57     | 45        | 54     | 61        | 73.2   |
| 7/16"   | 11.11      | 30     | 35      | 40.7    | 47.4   | 54     | 64      | 73.2     | 86.8   | 70        | 84     | 94.9      | 113.9  |
| 1/2"  | 12.7       | 45     | 52      | 61      | 70.5   | 80     | 96      | 108.5    | 130.2  | 110       | 132    | 149.2     | 179    |
| 9/16"   | 14.29      | 65     | 75      | 88.1    | 101.6  | 110    | 132     | 149.2    | 179    | 160       | 192    | 217       | 260.4  |
| 5/8"  | 15.88      | 95     | 105     | 128.7   | 142.3  | 150    | 180     | 203.4    | 244.1  | 220       | 264    | 298.3     | 358    |
| 3/4"  | 19.05      | 150    | 185     | 203.3   | 250.7  | 270    | 324     | 366.1    | 439.3  | 380       | 456    | 515.3     | 618.3  |
| 7/8"  | 22.23      | 160    | 200     | 216.8   | 271    | 400    | 480     | 542.4    | 650.9  | 600       | 720    | 813.6     | 976.3  |
| 1"  | 25.4       | 250    | 300     | 338.8   | 406.5  | 580    | 696     | 786.5    | 943.8  | 900       | 1080   | 1220.4    | 1464.5 |

\*Thick nuts must be used with grade 8 bolts

| METRIC BOLT TORQUE SPECIFICATIONS |           |            |             |               |            |             |               |  |  |  |
|-----------------------------------|-----------|------------|-------------|---------------|------------|-------------|---------------|--|--|--|
|                                   |           |            | COARSE THRE | EAD           |            | FINE THREA  | D             |  |  |  |
| Size Screw                        | Grade No. | Pitch (mm) | Pounds Feet | Newton-Meters | Pitch (mm) | Pounds Feet | Newton-Meters |  |  |  |
| M6                                | 4T        | 1.00       | 3.6 - 5.8   | 4.9 - 7.9     | -          | -           | -             |  |  |  |
|                                   | 7T        |            | 5.8 - 9.4   | 7.9 - 12.7    |            | -           | -             |  |  |  |
|                                   | 8T        |            | 7.2 - 10    | 9.8 - 13.6    |            | -           | -             |  |  |  |
| M8                                | 4T        | 1.25       | 7.2 - 14    | 9.8 - 19      | 1.00       | 12 - 17     | 16.3 - 23     |  |  |  |
|                                   | 7T        |            | 17 - 22     | 23 - 29.8     |            | 19 - 27     | 25.7 - 36.6   |  |  |  |
|                                   | 8T        |            | 20 - 26     | 27.1 - 35.2   |            | 22 - 31     | 29.8 - 42     |  |  |  |
| M10                               | 4T        | 1.50       | 20 - 25     | 27.1 - 33.9   | 1.25       | 20 - 29     | 27.1 - 39.3   |  |  |  |
|                                   | 7T        |            | 34 - 40     | 46.1 - 54.2   |            | 35 - 47     | 47.4 - 63.7   |  |  |  |
|                                   | 8T        |            | 38 - 46     | 51.5 - 62.3   |            | 40 - 52     | 54.2 - 70.5   |  |  |  |
| M12                               | 4T        | 1.75       | 28 - 34     | 37.9 - 46.1   | 1.25       | 31 - 41     | 42 - 55.6     |  |  |  |
|                                   | 7T        |            | 51 - 59     | 69.1 - 79.9   |            | 56 - 68     | 75.9 - 92.1   |  |  |  |
|                                   | 8T        |            | 57 - 66     | 77.2 - 89.4   |            | 62 - 75     | 84 - 101.6    |  |  |  |
| M14                               | 4T        | 2.00       | 49 - 56     | 66.4 - 75.9   | 1.50       | 52 - 64     | 70.5 - 86.7   |  |  |  |
|                                   | 7T        |            | 81 - 93     | 109.8 - 126   |            | 90 - 106    | 122 - 143.6   |  |  |  |
|                                   | 8T        |            | 96 - 109    | 130.1 - 147.7 |            | 107 - 124   | 145 - 168     |  |  |  |
| M16                               | 4T        | 2.00       | 67 - 77     | 90.8 - 104.3  | 1.50       | 69 - 83     | 93.5 - 112.5  |  |  |  |
|                                   | 7T        |            | 116 - 130   | 157.2 - 176.2 |            | 120 - 138   | 162.6 - 187   |  |  |  |
|                                   | 8T        |            | 129 - 145   | 174.8 - 196.5 |            | 140 - 158   | 189.7 - 214.1 |  |  |  |
| M18                               | 4T        | 2.00       | 88 - 100    | 119.2 - 136   | 1.50       | 100 - 117   | 136 - 158.5   |  |  |  |
|                                   | 7T        |            | 150 - 168   | 203.3 - 227.6 | ]          | 177 - 199   | 239.8 - 269.6 |  |  |  |
|                                   | 8T        |            | 175 - 194   | 237.1 - 262.9 |            | 202 - 231   | 273.7 - 313   |  |  |  |
| M20                               | 4T        | 2.50       | 108 - 130   | 146.3 - 176.2 | 1.50       | 132 - 150   | 178.9 - 203.3 |  |  |  |
|                                   | 7T        |            | 186 - 205   | 252 - 277.8   | ]          | 206 - 242   | 279.1 - 327.9 |  |  |  |
|                                   | 8T        |            | 213 - 249   | 288.6 - 337.4 |            | 246 - 289   | 333.3 - 391.6 |  |  |  |

### **OPTIONS & ACCESSORIES**

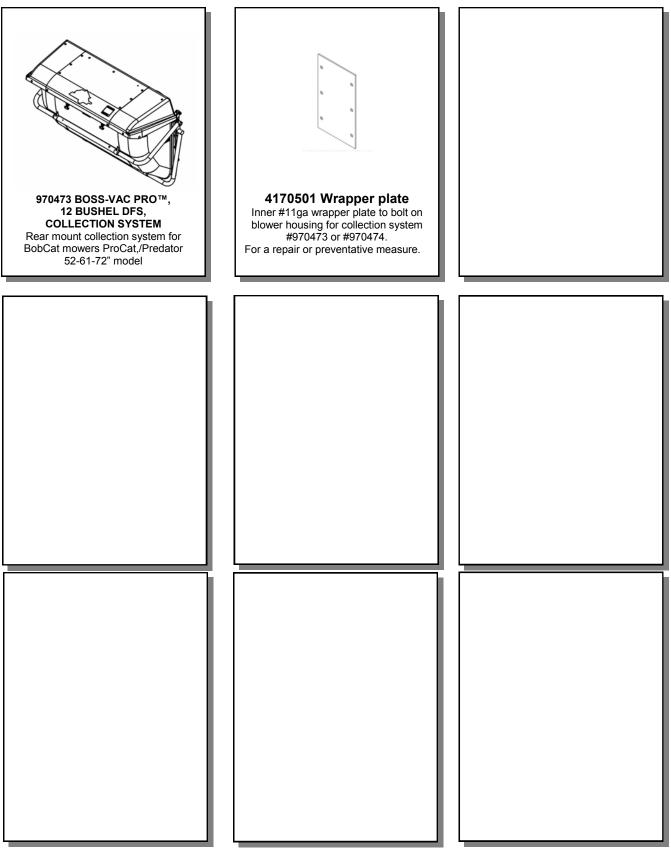

\*These accessories may need other parts\*

SCHILLER GROUNDS CARE, INC. ONE BOB-CAT LANE P.O. BOX 469 JOHNSON CREEK, WI 53038 920-699-2000 www.schillergc.com



©Schiller Grounds Care, Inc. 2010