CLASSEN®

HYDRO-DRIVE SOD CUTTER W/ SWIVEL WHEEL

MODELS:

SCHV-18/5.5-W SCHV-18/8-W



S MANUA

MAN 4170506 Rev. A 03-2014



CALIFORNIA Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

A WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

CALIFORNIA Proposition 65 Warning

Battery posts, terminals, wiring insulation, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

WASH HANDS AFTER HANDLING.

HYDRO SOD CUTTER

IMPORTANT MESSAGE

Thank you for purchasing this Classen product. You have purchased a world class product, one of the best designed and built anywhere.

This product comes with Parts and Operator's Manuals. The useful life and good service you receive from this product depends to a large extent on how well you read and understand this manual. Treat this product properly and adjust it as instructed, and it will give you many years of reliable service.

See a Classen dealer for any service or parts needed. Classen service ensures that you continue to receive the best results possible from Classen products. You can trust Classen replacement parts because they are manufactured with the same high precision and quality as the original parts.

Classen designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this product only as directed in the manual, keep it in good repair and follow safety warnings and instructions. You'll always be glad you did.

Classen 1028 Street Road Southampton, PA 18966

TABLE OF CONTENTS SAFETY	FIGURES	PAGE 2, 3
SPECIFICATIONS		6
PARTS SECTION		7
MAIN FRAME ASSEMBLY	FIGURE 1	8, 9
HANDLE ASSEMBLY	FIGURE 2	10, 11
	FIGURE 3	
POWER TRAIN ASSEMBLY	FIGURE 4	14, 15
KITS		16

03-2014

NOTICE !!!

Unauthorized modifications may present **extreme** safety hazards to operators and bystanders and could also result in product damage.

Classen strongly warns against, rejects and disclaims any modifications, add-on accessories or product alterations that are not designed, developed, tested and approved by Classen Engineering Department. Any Classen product that is altered, modified or changed in any manner not specifically authorized after original manufacture—including the addition of "after-market" accessories or component parts not specifically approved by Classen—will result in the Classen Warranty being voided.

Any and all liability for personal injury and/or property damage caused by any unauthorized modifications, add-on accessories or products not approved by Classen will be considered the responsibility of the individual(s) or company designing and/or making such changes. Classen will vigorously pursue full indemnification and costs from any party responsible for such unauthorized post-manufacture modifications and/or accessories should personal injury and/or property damage result.



This symbol means:

ATTENTION! BECOME ALERT!

Your safety and the safety of others is involved.

Signal word definitions:

The signal words below are used to identify levels of hazard seriousness. These words appear in this manual and on the safety labels attached to Classen machines. For your safety and the safety of others, read and follow the information given with these signal words and/or the symbol shown above.

A DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

AWARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

ACAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices or property damage.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage

Schiller Grounds Care, Inc.

Ine Bobcat LaneJohnson Creek, WI 53038 U.S.APhone: 920-699-2000Fax: 920-699-3683

MODEL NUMBER

SERIAL NUMBER

MODEL NUMBER: This number appears on sales literature, technical manuals and price lists.

SERIAL NUMBER: This number appears only on your machine. It contains the model number followed consecutively by the serial number. Use this number when ordering parts or seeking warranty information.

HYDRO SOD CUTTER

MAINTENANCE SAFETY

In general

- Maintain machine according to manufacturer's schedule and instructions for maximum safety and best results.
- · Park machine on level ground.
- Never allow untrained personnel to service machine.
- Guards should only be removed by qualified maintenance technician for maintenance/service.
 Replace when work is complete.
- Adjust or repair only after the engine has been stopped and the blade has stopped moving.
- Disconnect spark plug wire(s) before doing any maintenance.
- Replace parts if worn, damaged or faulty. For best results, always replace with parts recommended by the manufacturer.
- Do not dismantle the machine without releasing or restraining forces which may cause parts to move suddenly.
- Provide adequate support, e.g. jack stands for lifted machine or parts if working beneath.
- Do not put hands or feet near or under rotating parts.
- · Clean up spilled oil or fuel thoroughly.
- · Replace faulty mufflers.
- To reduce fire hazards, keep the engine, muffler, and fuel storage area free of grass, leaves, debris buildup or grease.

Blades

The sod cutter blade is sharp and can cut. Use extra caution when handling. Remove obstructions with care. Wrap the blade or wear gloves.



- Only replace blade. Never straighten or weld.
- Keep other persons away from blades.

Fuel

 Petrol (gasoline) and diesel fuels are flammable; petrol (gasoline) vapors are explosive. Use extra care when handling.



- Store only in containers specifically designed for fuel.
- When refueling or checking fuel level:
 - · Stop the engine and allow to cool;
 - Do not smoke;
 - Refuel outdoors only;
 - Use a funnel;
 - Do not overfill;
 - If fuel is spilled, do not attempt to start the engine until the spill is cleaned up and vapors have cleared.
 - Replace caps on fuel containers and tanks securely.

Sparks from static electricity can start fires or cause explosions. Flowing fuel can generate static electricity. To prevent static electricity sparks:

- Keep fuel containers electrically grounded. Do not fill containers in a vehicle or on a truck or trailer bed with a plastic liner. Fill containers on the ground away from the vehicle.
- When practical, remove petrol (gas) powered equipment from the truck or trailer and refuel it on the ground. If equipment must be refueled on the truck or trailer, refuel from a portable container rather than a dispenser nozzle.
- Keep the dispenser nozzle in contact with the rim of the fuel tank or container opening until fueling is complete. Do not use a nozzle lock-open device.

Storage Safety

- Stop the engine and allow to cool before storing.
- Drain the fuel tank outdoors only.
- Store fuel in an approved container in a cool, dry place.
- Keep the machine and fuel containers in a locked storage place to prevent tampering and to keep children from playing with them.
- Do not store the machine or fuel container near heating appliances with an open flame, such as a water heater, or an appliance with a pilot light.
- Keep gasoline (petrol) storage area free of grass, leaves and excessive grease to reduce fire hazard.
- Clean grass and debris from cutting units, drives, mufflers and engine to help prevent fires.

SET UP INSTRUCTIONS

To prevent injury, wear appropriate eye protection and stand clear when cutting banding. Banding is under tension and may snap back when cut.

- Remove box top, sleeve and unit.
 Remove the banding attaching the sod cutter to the pallet.
- 2. Roll the sod cutter off the pallet.
- Dispose of pallet, box, and banding in a responsible manner.

GENERAL MAINTENANCE

To keep the sod cutter in good operating condition, perform the following:

- Keep blade sharp; a sharp blade cuts cleaner, faster and more uniformly and places less load on the machine. Sharpen cutting edge on bevel or top side only.
- •Keep drive belt at proper tension and free of oil and dirt at all times.
- Check engine oil level and air filter element daily.
- · Check for loose bolts and connections.
- All grease fittings are pressurized type. Use a good grade Lithium Base Grease or equivalent. Grease eccentric arms sparingly every 4 hours of service, all others daily. Wipe off all grease fittings before and after each greasing (there are a total of 8 grease fittings).
- To make sure the chain on the front drive wheels is tight, you will need to remove the chain guard to check this. If tightening is required, loosen nuts and bolts on the 3/4" pillow block bearings and push the bearings toward the back of the sod cutter until chain is tight. Make sure both bearings go back evenly to keep jackshaft running even with the frame. After doing this, retighten nuts and bolts on the bearing and replace the chain guard.
- Engine (refer to manufacturer's owner's manual).

Engine Oil Level Check

- 1. BEFORE CHECKING OIL:
 - · make certain the engine is level
 - · the engine switch is in the OFF position
 - · the sod cutter blade is NOT engaged
 - · the drive wheels are disengaged.
- 2. Remove the filler cap/dipstick and wipe it clean.
- Insert and remove the dipstick without screwing it into the filler neck. Check the oil level shown on the dipstick.
- 4. If the oil level is low, fill to the edge of the oil filler hole with the recommended oil. SAE 10W-30 is recommended for general use. Refer to engine oil recommendations in engine manual for other viscosities and information.
- 5. Screw in the filler cap/dipstick securely.

Transmission (Gearbox) Oil Level Check

(This unit is bolted to the engine)

- 1. Check the transmission oil level with the engine stopped and in a level position.
- 2. Remove the filler cap/dipstick and wipe it clean.
- 3. Insert and remove the dipstick without screwing it into the filler hole. Check the oil level shown on the dipstick.
- 4. If the oil level is low, add oil to reach the upper limit mark on the dipstick. Use the same oil that is recommended for the engine, SAE 10W-30.
- 5. Screw in the filler cap/dipstick securely.

HYDRO DRIVE OIL LEVEL CHECK

- 1. Check the Hydro Drive oil level with the engine stopped and in a level postion.
- 2. If the oil level is low, add oil to reach the upper limit mark. Use SAE 20W50 oil.

HYDRO SOD CUTTER

STORAGE INSTRUCTIONS

AWARNING

To prevent possible explosion or ignition of vaporized fuel, do not store equipment with fuel in tank or carburetor in enclosure with open flame (for example, a furnace or water heater pilot light).

Daily Storage

- 1. Check engine oil level and air filter element daily.
- 2. Check oil level in gear case. Hydro gear uses 20W50 oil.
- 3. Close fuel valve at bottom of fuel tank.
- 4. Clean cutting blade (grass, dirt, etc.).

Extended Storage

Before the equipment is put into storage for any period exceeding 30 days:

- 1. Drain all fuel from fuel tank and lines (use a hose or fuel line, routed from fuel tank shut-off to proper container).
- 2. Start engine and run until all fuel is used from the carburetor float bowl.
- While engine is warm, check the transmission oil and refill with the proper weight of oil corresponding to the season when the equipment will next be used.
- 4. Remove the spark plug and squirt a small quantity of engine oil into the cylinder. Turn the engine over a few times to distribute the oil.
- 5. Lubricate all lubrication fittings.
- 6. Clean and oil cutting blade to prevent rust.

To put equipment into operation after an extended storage:

- 1. Fill fuel tank with clean fresh fuel.
- 2. Check crankcase oil level, and start engine.
- 3. Check fuel system for fuel leaks.

AWARNING

When replacement parts are required, use genuine **Classen** parts or parts with equivalent characteristics, including type, strength and material. Failure to do so may result in product malfunction and possible injury to the operator and/or bystanders.

Carbon monoxide present in the exhaust is an odorless and deadly gas. Never start or run the engine inside where exhaust fumes can collect. Provide enough fresh air to keep fumes from getting too strong.


Replace any warning decal that becomes illegible immediately.




SCHV-18/5.5-W & SCHV-18/8-W

ENGINE
ENGINE Model SCHV-18/5.5-W4 cycle 5.5 H. P. Honda
Model SCHV-18/8-W4cycle 8 H. P. HondaModel GX24014.8 cu. in. (242 cc)
StarterRecoil
Governor 3400 RPM ± 200 RPM, no load
Clutchspring loaded belt tightener type
REDUCTION
Engine to blade3.03 to1
Engine to drive wheels57.2 to 1
WHEELS:
Drive8" (203 mm) Dia. w/knobby
tread vulcanized to hub
Rear 8 x 1.75 (203 X 45mm) semi-pneumatic tires
CUTTING WIDTH:
SCHV-1818"
LUBRICATION
Hydro Drive20W50
Transmission (Gearbox)10W30
Cutting depthup to 2-1/2"
Blade speed 1122 RPM @ 3400 engine RPM
DIMENSIONS
Width23"
Length59"
Height35"
Wheel Base22"
WEIGHT
Dry Weights
SCHV-18/5.5
SCHV-18/8382 lbs.

PARTS SECTION

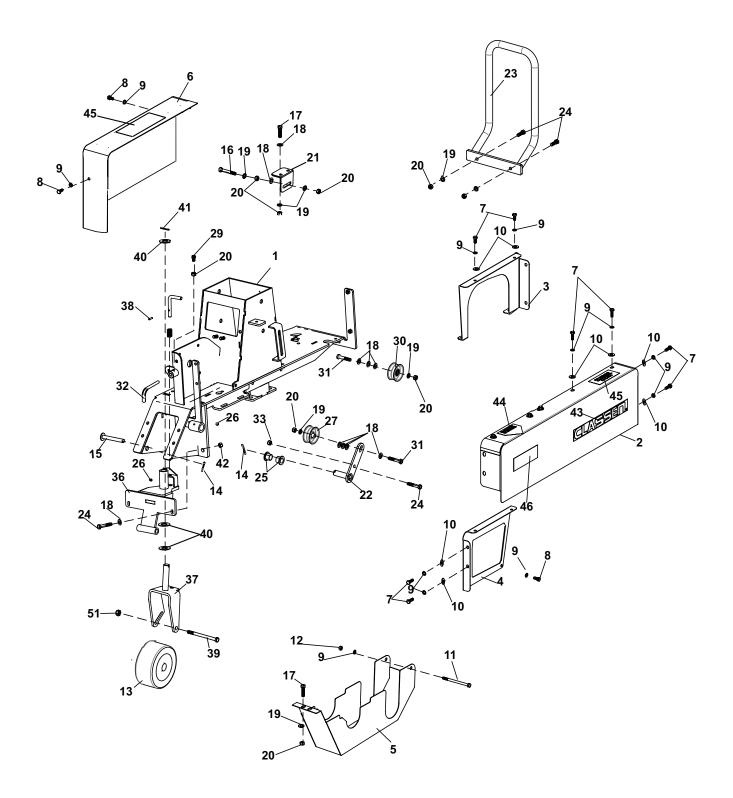


ITE	M PART	NO.	DESCRIPTION	QTY	ITE	M I	PART	NO.	DESCRIPTION	QTY
1	C400386	FRAME	, SOD CUTTER	1	28	6422	1-07	E-RII	NG .375	1
2	C400234.17	LARGE	GUARD	1	29	C100)492	3/8" \	VLIER PIN	1
3	C400267.17	INNER I	ENGINE GUARD, 5.5 H	IP 1	30	C100	010	PULI	LEY, IDLER	1
	C400268.17	INNER I	ENGINE GUARD, 8.0 H	IP	31	C500	0091	BOL	T, 3/8-16 x 2	2
4	C400387.17	TRANSI	MISION COVER, GEAF	R 1	32	C400	251	NUE	TRAL HANDLE	1
5	C400248	CHAIN (GUARD	1	33	C500	041	NUT,	, 3/8-16 LOCK	2
6	C400247	SMALL	GUARD	1	34	C100	0601	SPR	ING, SC SWIVEL WHEEL	1
7	C500133	BOLT, 5	/16-18 x 1	11	35	C300	203	L-PI	N, SWIVEL WHEEL	1
8	C500140	BOLT, 5	/16-18 x 3/4	4	36	C400	391	BASI	E, SWIVEL WHEEL	1
9	C500115	WASHE	R, 5/16 LOCK	16	37	C400	392	FOR	K, SWIVEL WHEEL	1
10	C500083	WASHE	R, 5/16 FLAT	11	38	C100	0607	PIN,	ROLL 7/32" x 1"	1
11	C500219	BOLT, 5	-16-18 x 5	1	39	90-10	048	BOL	T-5/8-11 X 6 NC	1
12	C500101	NUT, 5/1	16-18	1	40	C500)161	WAS	SHER, 1" I.D. x 2" O.D. x 14	4
13	C100017	TIRE &	WHEEL ASSEMBLY,	1	41	C500	182	PIN,	3/16 x 1-1/2 COTTER	1
14	C500016	PIN, 5/3	2" x 1-1/4" COTTER	2	42	C500	081	NUT,	, 3/8-16 WHIZ LOCK	2
15	C300002	PIN, AX	LE	1	43	4170	118	DEC	AL, CLASSEN	2
16	C500154	BOLT, 3	/8-16 x 2-1/2	1	44	8358	92	DEC	AL, DANGER	1
17	C500043	BOLT, 3	/8-16 X 1	4	45	C100	096	DEC	AL, ALL GUARDS ETC.	1
18	C500042	WASHE	R, 3/8" FLAT	10	46	C100)556	DEC	AL, "SCHV-18"	2
19	C500130	WASHE	R, 3/8 LOCK	12	47*	C100)504	SPR	K ARRSTR DECAL	1
20	C500129	NUT, 3/8	3-16	11	48*	C100)490	DEC	AL-HYDRO MAN ROLL	1
21	C300004.7	CLIP, R.	H. BELT ADJUSTMEN	Γ 1	49*	C100)559	DEC	AL-LUBRICATE	1
22	C400443.7	ARM, BI	LADE CLUTCH	1	50*	C100)489	DEC	AL-HYDRO DRIVE	1
23	C400237.17	BUMPE	R, 8.0 HP	1	51	6422	9-16	NUT-	-NYLON LOCK 5/8-11	1
24	C500134	BOLT, 3	/8-16 x 1-1/4	3						
25	C100021		IG, BRASS	2						
26	C500001	GREAS	E FITTING, 1/4 x 28	2				* NO	T ILLUSTRATED	
27	38010-2A	IDLER F	PULLEY	1				NO	I ILLUSIKAIED	

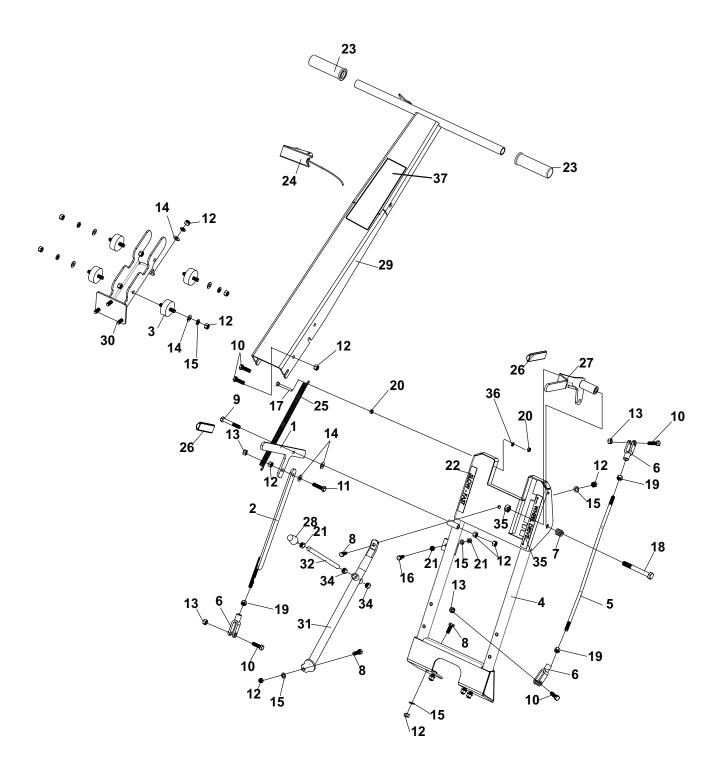


ITE	M PART NO	D. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1		HANDLE, ENGAGEMENT	1				
2		ARM, CUTTING BLADE ADJUST					
3	C100546	MOUNTS., VIBRATION	4				
4	C400380	SCHV MAIN HANDLE	1				
5	C400253	3/8" LINKAGE ARM, SCH	1				
6	C500026	YOKE, 3/8 CLEVIS	3				
7	C500065	SPRING, COMPRESSION	1				
3	C500043	BOLT, 3/8-16 X 1	6				
9	C500154	BOLT, 3/8-16 X 3-1/2	1				
10	C500134	BOLT, 3/8-16 x 1-1/4	7				
11	C500146	BOLT, 3/8-16 x 1-1/2	1				
12	C500129	NUT, 3/8-16	13				
13	C500041	NUT, 3/8-16 LOCK	4				
14	C500042	WASHER, 3/8" FLAT	8				
15	C500130	WASHER, 3/8 LOCK	12				
16	C500133	BOLT, 5/16-18 x 1	7				
17	64123-310	BOLT 1/4-20 X 2	1				
18	C500132	BOLT, 1/2-13 x 4	1				
19	C500025	NUT-3/8-24	3				
20	C500136	NUT, 1/4-20 LOCK	2				
21	C500101	NUT, 5/16-18	5				
22	C100488	HYDRO SPEED DECAL	1				
23	C100018	GRIP, L.H. HANDLE	2				
24	C100486	THUMB THRTTL CNTRL & CABI					
25	C500019	SPRING, SMALL HANDLE	1				
26	C100007	GRIP, RUBBER	2				
27	C400381	CONTROL LEVER	1				
28	C100635	RUBBER BUSHING, TAPERED	1				
29	C400382	SCHV MAIN CONTROL MOUNT					
30	C400383	RUBBER MOUNTING BRCKT	1				
31	C400384	SCHV HANDLE BRACE	1				
32	C400410	T-BOLT HANDLE, ENHANCED	1				
33	C500131	NUT, 1/2-13 LOCK	3				
34	C500131	NUT, 1/2-13	5				
35	C100134	DECAL, WHEEL DRIVE	1				
36	C500137	LOCK WASHER	1				
37	4170024	DECA-SOD CUTTER INSTRU	1				
31	4170024	DECA-SOD COTTEN INSTITU	'				

^{*} NOT ILLUSTRATED

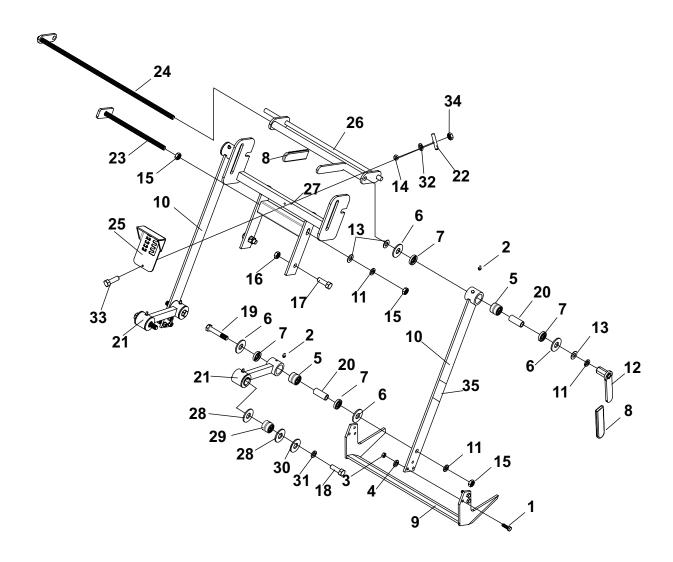

ITEN	M PART NO	O. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	C500133	BOLT, 5/16-18 x 1	6				
2	C500001	GREASE FITTING, 1/4 x 28	6				
3	C500101	NUT, 5/16-18	6				
4	C500115	WASHER, 5/16 LOCK	6				
5	C100003	BEARING	6				
6	C100001	WASHER, 3/4 NYLON	12				
7	C100002	SEAL	12				
8	C100007	GRIP, RUBBER	2				
9	C100016.17	BLADE, 18" CUTTING	1				
10	C800002.7	ARM, BLADE	2				
11	C500006	WASHER, 1/2 LCOK	4				
12	C500007.7	NUT, 1/2 HANDLE	1				
13	C500034	WASHER, 1/2 FLAT	8				
14	C500088	WASHER, 1/4" FLAT	1				
15	C500106	NUT, 1/2-13	5				
16	C500131	NUT, 1/2-13 LOCK	2				
17	C500241	BOLT, 1/2-13 x 1	2				
18	C500151	BOLT, 1/2-20 x 3	2				
19	C500152	BOLT, 1/2-13 X 2-3/4	2				
20	C600001	STEEL SLEEVE	6				
21	C800001.7	ARM, ECCENTRIC ENHANCED	2				
22	C400444.7	WING NUT, DEPTH GAUGE	1				
23	C200004.7	BOLT ,PITCH ADJUSTMENT	1				
24	C200005.7	BOLT, HEIGHT ADJUSTMENT	1				
25		PLATE, DEPTH GAUGE	1				
26	C400001.7	BAR, HIEGHT ADJUSTMENT	1				
27	C400238.7	PITCH ADJUSTMENT BAR	1				
28	C100626	WASHER, PLASTIC 1/4" ENHCE) 2				
29	C100625	BEARING, ENHANCED	2				
30	C400412	WASHER, STEEL ENHANCED	2				
31	C500272	WASHER, 1/2" EXT. TOOTH LO					
32	C500137	WASHER, 1/4 LOCK	1				
33	C500296	BOLT, 1/4 x 2-1/2 CARRIAGE	1				
34	C500068	NUT, 1/4-20 NYLOC	1				
		•					

* NOT ILLUSTRATED

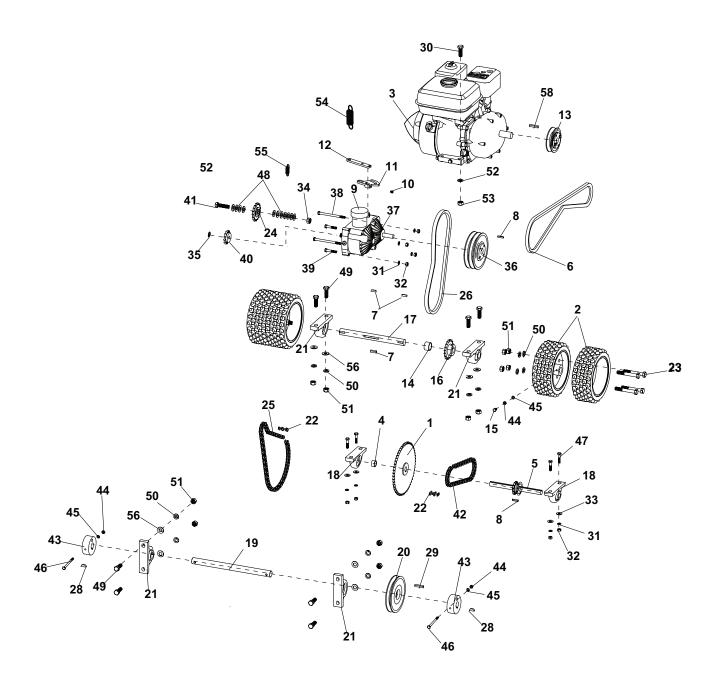

HYDRO SOD CUTTER

ITEN	M PART N	Ο.	DESCRIPTION	QTY	ITEM	PART N	Ο.	DESCRIPTION	QTY
1	C100493	SPRO	CKET, #40x54 w/ HUB	1	37	C100311	HYDR	ROSTAT	1
2	C700024		EEL, 8-5/8 DRIVE	4	38	C500168	BOLT,	5-16-18 x 4-1/2	2
3	C100005	ENGI	NE HONDA 5.5HP	1	39	C500074		5/16-18 X 1-3/4	2
	C100114	ENGI	NE-HONDA 8HP		40	C200044		CKET, 13 TOOTH	1
					41	C500135		1/2-13 x 21/2	1
4	C300204	SPAC	ER, 3/4" JACK SHAFT	1	42	C100495	#40 X	50 ROLLERS & CON LINK	1
5	C200056	S-SPF	ROCKET W/ SHAFT1		43	C700002	HUB,	ECCENTRIC	2
6	C100491	B55 V	-BELT FOR 5.5HP	1	44	C500136	NUT,1	/4-20	4
	C100503	B58 V	-BELT FOR 8 HP		45	C500137	WASH	IER, 1/4 LOCK	4
					46	C500157	BOLT,	1/4-20 x 3-1/2	2
7	C500004	KEY, 1	/4 x 1 SQUARE	3	47	C500147	BOLT,	5/16-18 x 1-1/2	4
8	C500011	KEY, 3	3/16 SQUARE X 1	2	48	C500034	WASH	IER, 1/2 FLAT	18
9	C100339	RESE	RVOIR, HYDROSTAT	1	49	C500174	BOLT,	1/2-13 x 1-3/4	8
10	C500259	SET S	CREW, 5/16-24 x 3/8	1	50	C500006	WASH	HER, 1/2 LOCK	16
11	C400249-1		CH ARM, SCH	1	51	C500106	NUT,		16
12	C400250	SHIFT	ER ARM, SCH	1	52	C500130	WASH	HER, 3/8 LOCK	4
13	C100028	PULLI	EY W/HUB & BOLTS	1		(FOR 8HP	MODEL	.S)	
14	C300001		ER, DRIVE SHAFT	1		C500115		IER, 5/16 LOCK	
15	C500029		1/4-20 x 3/4	2		(FOR 5.5HF	MODE	LS	
16	C200001		CKET W/HUB, DRIVE SHA	FT1					
17	4171051		T, 12" DRIVE	1	53	C500129	NUT, 3		4
18	C100013		ING W/ ECCENTRIC, 3/4"	2		(FOR 8HP I		· ·	
19	C600003		1" ECENTRIC SHAFT	1		C500101		5/16-18	
20	C200002		EY W/HUB & BOLTS, 6"	1		(FOR 5.5HF	MODE	ELS)	
21	C100004		ING W/ECCENTRIC, 1"	4					
22	C100025	-	#40 CONNECTING	2	54	C100027		NG, THROTTLE	1
23	C500158	,	1/2-13 x 3-1/2	8	55	C100492		NG, PLUNGER	1
24	C100043		CKET, #40x17x1/2 IDLER	1	56	64163-67		R516X1X12GA	8
25	C100494		76 ROLLER & CON LINK	1	57*	B222522		ECTOR, EXHAUST	1
26	C100513	B38 V		1		(USED ON	5.5HP (ONLY)	
27	C500001		SE FITTING, 1/4 x 28	4		0500000	IZEV 7	ZNANA COLLA DE	4
28	C500003		1/4 x 7/8 HALF MOON	2	58	C500036	KEY-/	'MM SQUARE	1
29	C500181		1/4 x 1-1/2 SQUARE	1					
30	C500079	,	3/8-16 x 1-3/4	4			*NOT I	LLUCTDATED	
	(FOR 5.5HP						^NOT I	LLUSTRATED	
	C500147		5/16-18 X 1-1/2						
	(FOR 8HP N	NODEL	o)						
31	C500115	WASH	IER, 5/16 LOCK	6					
32	C500101		5/16-18	6					
33	C500083		IER, 5/16 FLAT	4					
34	C500131		1/2-13 LOCK	1					
35	C100433		1/2" SNAP	1					
36	C200054		EAVE, 2BK62H BUSHING	1					
			,						

OPTIONAL KITS (NOT SHOWN ON PARTS ILLUSTRATIONS)

KIT P/N	DESCRIPTION	
C100076	ELECTRICAL SHUT-OFF SWITCH & HARDWARE	
C400037	SET OF 2 SIDE BUMPERS & HARDWARE	



Schiller Grounds Care, Inc.

1028 Street Road • Southampton, PA 18966

Telephone: 1-800-366-6268

TWO YEAR LIMITED WARRANTY

Effective April 1, 2007

For the period of two years from the date of purchase, SCHILLER GROUNDS CARE, INC. will repair or replace for the original purchaser free of charge, any part or parts found upon the examination of our factory authorized service station, or by the factory in Johnson Creek, WI, to be defective in material or workmanship. All transportation charges on parts submitted for repair or replacement under this warranty shall be borne by the purchaser.

This warranty does not include engines or engine parts, tires, batteries, or gearboxes that are covered under separate warranties furnished by their manufacturer or supplier, nor does it include normal maintenance parts, including but not limited to, spark plugs, points, filters, blades, and lubricants.

All service under this warranty will be furnished or performed by our factory authorized service stations.

There is no other expressed warranty. Implied warranties, including those of merchantability and fitness for a particular purpose, are limited to two years from the date of purchase and to the extent permitted by law, any and all implied warranties are excluded. The above remedy of repair and replacement of defective parts is the purchaser's exclusive remedy for any defect, malfunction or breach of warranty. Liability for incidental or consequential damages under any and all warranties is excluded to the extent permitted by law.

NORMAL RESPONSIBILITIES OF THE SELLER AND THE USER

- 1. The Distributor or Dealer is responsible for the proper assembly and preparation of the product for delivery to the end user.
- 2. The User is responsible for reading the Manual and Instructions.
- 3. The User is responsible for proper operation and maintenance as described in the manual.
- 4. The User is responsible for the replacement of wear items such as blades, belts, tires, batteries, etc.
- 5. The User is responsible for damage due to improper operation and maintenance, as well as abuse.

All claims must be received by the factory 30 days after the end of the warranty period to receive warranty consideration.

SCHILLER GROUNDS CARE, INC. 1028 Street Rd. Southampton, PA 18966 1-800-366-6268 www.classenturfcare.com

