

9996001 BC PROCAT 6000 FX730 W/52 SIDE DISCHARGE PW (S/N 0154 thru Present)

9996002 BC PROCAT 6000 FX801 W/61 SIDE DISCHARGE PW (S/N 0172 thru Present)

9996006 BC PROCAT 6000MX FX850 W/61 SIDE DISCHARGE PW (S/N 0235 thru Present)



www.bobcatturf.com

A ADVERTENCIA

El estado de California hace saber que los gases de escape de este producto contienen productos quÍmicos que producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

A WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

CALIFORNIA PROPOSITION 65

WARNING: Cancer and Reproductive Harm - www. P65Warnings.com

ADVERTENCIA: Cáncer y Dãno Reproductivo - www.P65Warnings.ca.gov

IMPORTANT!

It is a violation of California Public Resource Code Section 4442 or 4443 to use or operate the engine on any forest-covered, brush-covered or grass-covered land unless the engine is equipped with a spark arrestor, as defined in Section 4442, maintained in effective working order or the engine is constructed, equipped, and maintained for the prevention of fire.

To acquire a spark arrestor for your unit, see your Engine Service Dealer.

Please refer to the engine manufacturer's information included with the machine.

Labeled power ratings are supplied by the engine manufacturer in accordance with SAE testing and gross/net power rating standards (J1940, J1995, J1349).



IMPORTANT MESSAGE

Thank you for purchasing this Schiller Grounds Care, Inc. product. You have purchased a world class mowing product, one of the best designed and built anywhere.

This machine comes with an Operation and Safety Manual and a separate Setup, Parts and Maintenance Manual. The useful life and good service you receive from this machine depends to a large extent on how well you read and understand these manuals. Treat your machine properly, lubricate and adjust it as instructed, and it will give you many years of reliable service.

Your safe use of this Schiller Grounds Care, Inc. product is one of our prime design objectives. Many safety features are built in, but we also rely on your good sense and care to achieve accident-free operation. For best protection, study the manuals thoroughly. Learn the proper operation of all controls. Observe all safety precautions. Follow all instructions and warnings completely. Do not remove or defeat any safety features. Make sure those who operate this machine are as well informed and careful in its use as you are.

See a Schiller Grounds Care, Inc. dealer for any service or parts needed. Schiller Grounds Care, Inc. service ensures that you continue to receive the best results possible from Schiller Grounds Care, Inc. products. You can trust Schiller Grounds Care, Inc. replacement parts because they are manufactured with the same high precision and quality as the original parts.

Schiller Grounds Care, Inc. designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this machine only as directed in the manuals, keep it in good repair and follow safety warnings and instructions. You'll always be glad you did.

Schiller Grounds Care, Inc. One Bob Cat Lane Johnson Creek, WI 53038-0469

TABLE OF CONTENTS		
SAFETY		
LABELS		
CONTROLS		
PUSHING THE MACHINE		•••••
PRE-OPERATION CHECKLIST		
OPERATION		
MAINTENANCE CHART		
MAINTENANCE RECORD		
MAINTENANCE		24-31
ADJUSTMENTS		
BELT REPLACEMENT		
ACCESSORIES		
SPECIFICATIONS		
PARTS SECTION		
ENGINE DECK ASSEMBLY	FIGURE 1	46, 47
BUMPER/WRAP	FIGURE 2	
FUEL TANKS/CONTROL PANEL	FIGURE 3	
REAR WHEEL ASSEMBLY	FIGURE 4	
CONTROL HANDLE ASSEMBLY	FIGURE 5	
CONTROLS / BRAKE ASSEMBLY	FIGURE 6	
HEIGHT OF CUT ASSEMBLY	FIGURE 7	
BATTERY BOX AND OIL COOLER	FIGURE 8	60, 61
UPPER WIRE HARNESS	FIGURE 9	
LOWER WIRE HARNESS	FIGURE 10	
AIR COOLED HYDRAULICS	FIGURE 11	
SEAT ASSEMBLY	FIGURE 12	
FOLDING ROPS	FIGURE 13	
FOOTPLATE & CASTER ASSEMBLY	FIGURE 14	
52" SIDE DISCHARGE	FIGURE 15	
61" SIDE DISCHARGE	FIGURE 16	
CHUTE, BAFFLES & EDGES	FIGURE 17	
DECALS		



NOTICE !!!

Unauthorized modifications may present **extreme** safety hazards to operators and bystanders and could also result in product damage.

Schiller Grounds Care, Inc. strongly warns against, rejects and disclaims any modifications, add-on accessories or product alterations that are not designed, developed, tested and approved by Schiller Grounds Care, Inc. Engineering Department. Any Schiller Grounds Care, Inc. product that is altered, modified or changed in any manner not specifically authorized after original manufacture-including the addition of "after-market" accessories or component parts not specifically approved by Schiller grounds Care, Inc. ,-will result in the Schiller Grounds Care, Inc. Warranty being voided.

Any and all liability for personal injury and/or property damage caused by any unauthorized modifications, add-on accessories or products not approved by Schiller Grounds Care, Inc. will be considered the responsibility of the individual(s) or company designing and/or making such changes. Schiller Grounds Care, Inc. will vigorously pursue full indemnification and costs from any party responsible for such unauthorized post-manufacture modifications and/or accessories should personal injury and/or property damage result.



This Operator's Manual should be regarded as part of the machine. Suppliers of both new and second-hand machines must make sure that this manual is provided with the machine.



ILEA EL INSTRUCTIVO!

Si no lee Ingles, pida ayuda a alguien que si lo lea para que le traduzca las medidas de seguridad.

SCHILLER GROUNDS CARE

Model XXXXXXX

Serial Number

Schiller Grounds Care, Inc.

One Bobcat Lane Johnson Creek, WI 53038



This symbol means: ATTENTION! BECOME ALERT!

Your safety and the safety of others is involved.

Signal word definitions:

The signal words below are used to identify levels of hazard seriousness. These words appear in this manual and on the safety labels attached to Schiller Grounds Care, Inc. machines. For your safety and the safety of others, read and follow the information given with these signal words and/or the symbol shown above.

ADANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

A WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

CAUTION indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices or property damage.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage

MODEL NUMBER: This number appears on sales literature, technical manuals and price lists.

SERIAL NUMBER: This number appears only on your unit. It contains the model number followed consecutively by the serial number. Use this number when ordering parts or seeking warranty information. Located under seat plate on Frame of unit.

PREPARING FOR SAFE OPERATION

Operator preparation and training

Read, understand, and follow instructions and warnings in the manual and on the machine, engine, and attachments. If you don't understand something or itis unclear; contact your dealer representative for clarification.



- _ Become familiar with the safe operation of the equipment, operator controls and safety signs. Be prepared to stop the engine and attachments guickly in an emergency. Do not operate or allow another person to operate this machine if there are any questions about safety.
- Only allow operators who are responsible, trained, familiar with the instructions, and physically capable to operate or service the machine. the ower is responsible for training the users.
- Wear appropriate clothing, including long _ trousers and safety goggles or safety glasses with side shields when operating mower. Do not operate barefoot or wearing open sandals. Long hair, loose clothing or jewelry may get tangled in moving parts.
- If an operator or mechanic cannot read English, it is the owner's responsibility to explain this material to them.



This machine produced sound levels in excess of 85dBA at the operator's ear. Extended periods of exposure can cause hearing loss.

- Wear hearing protection.
- Never allow children, unskilled or improperly trained people to operate this equipment. Local regulations can restrict the age of the operator.
- Only adults and mature teenagers should operate a mower. Mature teenagers should have adult supervision. Be sure a teenager:
 - 1. Has read and understands the operator manual and understands the risks involved.
 - 2. Is sufficiently mature to use caution; and
 - 3. Is of sufficient size and weight to operate the controls comfortably and to manage the mower without taking risks.

- Data indicates that those operators age 60 years _ and above are involved in a large percentage of riding mower-related injuries. Those operators should evaluate their ability to operate the riding mower safely enough to protect themselves and others from injury.
- Do not carry passengers, especially small children. They may fall off and be seriously injured.
- Keep warning labels and this operator's manual legible and intact. Replacement labels and manuals are available from the factory.
- Do not operate machine while under the influence of drugs or alcohol or any other condition of impairment.
- The owner/user can prevent and is responsible _ for accidents or injuries occurring to themselves, other people or property.



Site preparation and circumstances

- Evaluate the terrain to determine what accessories and attachments are needed to properly and safely perform the job. Only use accessories and attachments approved by the manufacturer.
- Clear the area to be mowed of objects such as rocks, toys, wire or other debris that may be picked up or thrown by the mower.
- Be sure the area is clear of pets and people, _ especially young children. Never assume they will remain where you last saw them. Stop the machine if any enter the area.
- Mow only in daylight or in good artificial light.
- Do not mow wet grass as tires may lose traction. _

MACHINE PREPARATION

- Do not tamper with or defeat safety devices.
 Keep guards, shields and interlock safety devices in place and in proper working condition. They are for your protection.
- Keep all fasteners such as nuts, bolts and pins well secured.
- Visually inspect blades, blade bolts and the cutterdeck assembly for wear or damage. Replace worn or damaged blades and bolts to preserve balance.
- Verify that machine and attachments, if any, are in good operating condition.
- Grass catcher components are subject to wear, damage and deterioration which could expose moving parts or allow objects to be thrown.

FUELING



- Gasoline can be extremely flammable; gasoline vapors are explosive. Use extra care when handling. A fire or explosion from gasoline can burn you or others and /or cause property damage.
- Fill the fuel tank outdoors on level ground, in an open area, when the engine is cold and wipe up any spilled gasoline.
- If the engine has been running, stop the engine and allow to cool for several minutes.
- Do not smoke, stay away from open flames or other possible ignition sources.
- Refuel outdoors, do not refuel in indoors or in an enclosed trailer.
- Use a funnel.
- Do not overfill. Fill to the bottom of the filler neck. The empty space allows for expansion. Overfilling may result in fuel leakage or damage to the engine or emissions system.
- If fuel is spilled, do not attempt to start the engine until the spill is cleaned up and vapors have cleared.
- Replace caps on fuel containers and tanks securely.
- Do not operate without the entire exhaust system in place and in good working condition.



Under certain conditions, static electricity can cause sparks during fueling and start fires or cause explosions. Flowing fuel can generate static electricity. To prevent static electricity sparks:

- Keep fuel containers electrically grounded.
- Do not fill containers in a vehicle or on a truck or trailer bed with a plastic liner. Fill containers on the ground away from the vehicle.
- When practical, remove gas powered equipment from the truck or trailer and refuel it on the ground. If equipment must be refueled on the truck or trailer, refuel from a portable container rather than a dispenser nozzle.
- If a dispenser nozzle must be used, keep the dispenser nozzle in contact with the rim of the fuel tank or container opening until fueling is complete. Do not use a nozzle lock-open device
- Replace caps on fuel cans and tanks securely.
- Fill the fuel tank outdoors.
- Store fuel only in containers specifically designed for fuel.



Gasoline is harmful or fatal if swallowed. Long-term exposure to vapors has caused caner in laboratory animals.

- Avoid prolonged breathing of vapors.
- Keep face away from nozzle and gas tank/container opening.
- Keep away from eyes and skin.
- Do not siphon by mouth.

BOB-CAT =

OPERATING SAFELY A WARNING

Operating engine parts, especially the muffler, become extremely hot. Sever burn can result from contact. Debris such as grass clippings, leaves, brush, etc. can catch fire.

- Allow engine parts, especially the muffler, to cool before touching.
- Remove accumulated debris from engine and muffler area.

Engine exhaust contains carbon monoxide, which is an odorless gas that can kill you.

DO NOT run the engine indoors or in a confined small area (such as an enclosed trailer) where carbon monoxide fumes can collect.

Starting

- Start only according to instructions in this manual or on the machine.
- Lightning can cause severe injury or death. If lightning is seen or thunder is heard in the area, DO NOT operate the machine; seek shelter.
- Be sure all drives are in neutral and parking brake is engaged before starting engine. Use seat belts with the roll bar in the raised and locked position.
- Do not change engine governor settings or overspeed the engine. Operating the engine at excessive speed can increase the hazard of personal injury.

Operation

- Do not put hands or feet near rotating parts or under the machine. Keep clear of the discharge opening at all times.
- This mower was designed for use by one operator. Keep all others away during operation.
- Do not operate when people, especially children, or pets are in the area.
- Stop the machine if anyone enters the area.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Slow down and use caution when making turns and crossing roads and sidewalks.
- Stop blades when not moving.
- Stop blades when crossing surfaces other than grass.
- Do not mow with the discharge deflector raised, removed or altered unless there is a grass collection system or mulch kit in place and working properly.
- Do not start the cutting blades until you are ready to start mowing.

- Use care when approaching blind corners, shrubs, threes, or other objects that may obscure vision.
- Do not direct discharge towards others.
- Avoid discharing material against a wall or obstruction. Material may richochet back toward the operator.
- Obey safety instructions. Failure to do so may cause injury to yourself and/or others.
- Never leave a running machine unattended. Park on level ground, turn off blades, stop engine and remove key before leaving the operator position.

Stopping

- Park the machine on level ground. Stop the engine, remove the key and wait for all parts to stop moving before:
 - Checking cleaning or working on the mower.
 - After striking a foreign object or an abnormal vibration occurs. Inspect and make any necessary repairs before restarting and operating the mower.
 - Before clearing blockages or unclogging.
- Park the machine on level ground. Stop the engine, remove the key and wait for all parts to stop moving.
 - Whenever you leave the mower.
 - Before refueling.
 - Before emptying the grass catcher.
- Be sure all drives are in neutral and parking brake is engaged before starting engine. Use seat belts with the roll bar in the raised and locked position.
- Do not change engine governor settings or overspeed the engine. Operating the engine at excessive speed can increase the hazard of personal injury.

CHILDREN

- Tragic accidents can occur if the operator is not alert to the presence of children Children are often attracted to themachine and the mowing activity. Never assume that children will remain where you last saw them.
- Keep children out of the operating area and under the watchful care of a responsible adult other than the operator.
- Do not carry children, even with the blade(s) shut off. Children could fall off and be seriously injured or interfere with safe machine operation. Children who have been given rides in the past could suddenly appear in the mowing area for another ride and be run over or backed over by the machine.



MOWING SLOPES



Operating on wet grass or steep



slopes can cause sliding and loss of control. Wheels dropping over

edges, ditches, steep banks, or into water can cause roll overs, which may result in serious injury, death or drowning. Slopes are a major factor related to accidents. Operation on slopes requires extra caution.

- DO NOT mow slopes when grass is wet.
- DO NOT mow near drop-offs or water.
- Reduce speed and use extreme caution on slopes. _
- Do not operate machine under any condition where traction, steering, or stability is in question. Tires could slide even if the wheels are stopped.
- Avoid sudden turns or rapid speed changes.
- Keep ROPS in the raised and locked position and use seat belt.
- Do not mow on slopes if uneasy or uncertain. Ultimate responsibility for safe operation on slopes rests with the operator.
- Do not mow excessively steep slopes.
- With ride-on machines, including articulated steering machines, mow up and down slopes, not across, except for zero turn machines. Zero turn machines should mow across slopes.
- With walk-behind machines, mow across slopes, _ not up and down.
- With zero turn machines, mow across slopes, not _ up and down. If the machine will not stay on the slope, it is too steep.
- Mid-mount zero turn (belly mounted deck) machines have much greater traction pointed up slope then down slope. Be aware that traction may be lost going down a slope. Do not operate a mid-mount zero turn on slopes it cannot back up.
- Avoid starting or stopping on a slope. If tires lose traction, disengage the blades and proceed slowly straight down the slope.
- With a zero turn machine, if tires lose traction going _ down a slope, steering control may be regained by speeding up.
- Keep all movement on the slopes slow and gradual. Do not make sudden changes in speed or direction.
- Do not turn on slopes unless necessary, and then turn slowly and downhill when possible.
- Stay away from slopes if the ground is loose or if caught in the rain during mowing.
- Use extra care with grass catchers or other

attachments. These can change the stability of the machine.

- Remove obstacles such as rocks, tree limbs, etc. from the grass cutting area.
- Avoid driving over obstacles such as ruts, holes, rocks and roots whenever possible. Be alert to dips and rises. Uneven terrain can overturn a mower or cause it to slide. Tall grasses can hide obstacles.
- Do not mow drop-offs, ditches or embankments. The machine could suddenly turn over if a wheel runs over the edge or an edge caves in.
- Follow the manufacturer's recommendations for wheel weights or counterweights to improve stability.
- Be aware that operating on wet grass, across _ steep slopes or downhill may cause the mower to lose traction. Loss of traction to the drive wheels may result in sliding and loss of braking and steering. Use a walk behind mower and /or hand trimmer near drop-offs, ditches, steep banks or water.

A WARNING

A ROPS is a Roll Over Protective Structure. The ROPS reduces the risk of serious or fatal injury in the unlikely event of a tip over, although the system cannot protect the operator from all possible injuries. It is not designed, made, or intended to provide protection for a machine that is driven off an embankment, retaining wall or similar situation. A ROPS does not replace the need to exercise care when operating on slopes. **IMPORTANT:**

- The ROPS is an integral and effective safety device. DO NOT remove or alter the ROPS.
- Keep Roll Bar in the raised position and use the _ seat belt.
- There is NO roll over protection when the roll bar is lowered. Lower the roll bar only when necessary. DO NOT use the seat belt when the roll bar is in the lowered position. Raise the roll bar as soon as clearance permits.
- _ Do not cut, drill, modify or repair a ROPS structure in any manner.
- Replace a damaged ROPS. _
- _ Use extreme care when working close to fences, ditches, trees, and on hills.
- Check overhead clearances carefully before driving under any objects.
- _ DO NOT leave the operator's position while unit is runnina.
- DO NOT carry passengers.

TRANSPORTING

Loading a machine onto a trailer or truck increases the possibility of tip-over and could cause serious injury or death.

- Use extreme caution when operating a machine on a ramp.
- Have the ROPS in the up position and use the seat belt when loading or unloading the machine unless the ROPS will not clear the top of an enclosed trailer.
- Use only a full-width ramp; do not use individual ramps for each side of machine.
- Avoid sudden acceleration or deceleration while driving the machine on a ramp as this could cause a loss of control or a tip-over situation.
- Shut off fuel when transporting.
- Secure the machine to the truck or trailer.

TOWING EQUIPMENT SAFETY

- Use extra caution when towing.
- Only tow equipment that has a hitch designed for towing.
- Do not attach towed equipment except at the hitch point.
- Follow manufacturer's recommendations for towed equipment, including weight limits and towing on slopes. The weight of the towed equipment may cause loss of traction or loss of control. The mower will respond differently when towing, particularly on slopes. Towed equipment may cause loss of traction and loss of control. For example, the load on a towed trailer may shift during operation adversely affecting control of the mower and towed equipment.
- Read all safety and operating instructions pertaining to the mower and equipment before towing and understand and familiarize yourself with the limitations of the mower and towed equipment prior to towing.
- Always put the ROPS (Roll Over Protection System) in the raised position before towing and always use a seatbelt. Wear the seatbelt whenever the ROPS is raised.
- Always use extra caution when making tight turns. Make wide turns to avoid jack- knifing.

- Know the conditions such as wet grass/ground, slopes, lose gravel, etc., as these factors will affect the traction and handling characteristics of the mower and towed equipment. For example, wet grass reduces traction and control of the mower and towed equipment.
- Travel slowly when towing and allow for extra distance to stop.
- Never allow children or others in or on towed equipment.
- Always park on level ground when towed equipment is attached, and always apply the parking brake when leaving the mower.
- Maximum weight of towed equipment recommended for this mower is 700 lbs. when operating on flat ground. Note: Maximum weight may be reduced depending on specific conditions as noted above. The operator must judge the conditions and determine if towing is appropriate and what maximum weight would be safe to tow.
- Maximum tongue weight should not exceed 25 lbs.

NOTE: Never use transport speeds when towing or when using a Grass Collection System.

MAINTENANCE SAFETY

In General

- Keep the machine in good working order.
- Maintain machine according to manufacturer's schedule and instructions for maximum safety and best mowing results.
- Park machine on level ground.
- Never allow untrained personnel to service machine.
- Adjust or repair only after the engine has been stopped and the blades have quit rotating.
- Inspect grass catcher components regularly. If worn, damaged or deteriorated, they may expose moving parts or allow objects to be thrown.
- Replace worn, damaged or faulty parts. For best results, always replace with parts recommended by the manufacturer.
- Disconnect battery or remove spark plug wire(s) before making any repairs. Disconnect the negative terminal first and the positive last. Reconnect positive first and negative last.
- Do not dismantle the machine without releasing or restraining forces which may cause parts to move suddenly.
- Provide adequate support for lifted machine or parts if working beneath.
- Keep hands or feet away from moving parts.
- Clean up oil or fuel spillage thoroughly.
- Replace faulty mufflers.
- To reduce fire hazards, keep the engine, muffler, battery compartment and fuel storage area free of grass, leaves, debris buildup or grease.
- Hydraulic fluid can penetrate skin, use paper to check for leaks. Relieve hydraulic pressure before disconnecting hoses. Make sure connections are tight and hoses are in good condition.

HYDRAULIC SYSTEM

A WARNING



Hydraulic fluid escaping under pressure can penetrate skin and cause injury. Fluid accidentally injected into the skin must be surgically removed within a few hours by a doctor familiar with this form of injury or gangrene may result.

- If equipped, make sure all hydraulic fluid hoses and lines are in good condition and all hydraulic connections and fittings are tight before applying pressure to hydraulic system.
- Keep body and hands away from pinhole leaks or nozzles that eject high pressure hydraulic fluid.
- Use cardboard or paper, not your hands, to find hydraulic leaks.
- Safely relieve all pressure in the hydraulic system by placing the motion control levers in neutral and shutting off the engine before performing any work on hydraulic system.

A WARNING

Charging or jump starting the battery may produce explosive gases. Battery gases can explode causing serious injury.

- Keep sparks, flames, or cigarettes away from battery.
- Ventilate when charging or using battery in an enclosed space.
- Make sure venting path of battery is always open once battery is filled with acid.
- Always shield eyes and face from battery!

If the ignition is in the "ON" position there is potential for sparks and engagement of components. Sparks could cause an explosion or moving parts could accidentally engage causing personal injury. Be sure ignition switch is in the "OFF" position before charging the battery.

BLADES

AWARNING

- Mower blades are sharp and can cut. Use extra caution when handling. Remove obstructions with care. Wrap the blade(s) or wear gloves.
- Be aware that rotating one blade on multi blade mowers can cause other blades to rotate.
- Only replace blades. Never straighten or weld them.
- Keep other persons away from blades.

BATTERY



Battery electrolyte contains sulfuric acid which is poisonous and can cause severe burns. Swallowing electrolyte can be fatal. Batteries can produce hydrogen gas which is explosive.

- When working with battery electrolyte, use protective equipment such as, but not limited to, goggles, face shield, rubber gloves and apron.
- Avoid leaning over a battery.
- Do not expose a battery to open flames or sparks.
- Be sure batteries with filler caps are properly filled with fluid.
- Do not allow battery acid to contact eyes or skin.
 Flush any contacted area with water immediately and get medical help.
- Charge batteries in an open, well ventilated area, away from sparks and flames. Unplug charger before connecting or disconnecting from battery.

Jump starting

- 1. Be sure the jumper cables are in good condition. Turn off the ignition and all electrical accessories on both machines.
- 2. Position the machine with a good (charged) battery next to but not touching the machine with the dead battery so jumper cables will reach.
- 3. When making cable connections:
 - make sure the clamps do not touch anywhere except to intended metal parts.
 - Never connect a positive ("+" or red) terminal to a negative ("-" or black) terminal.
 - Make sure the cables won't get caught in any parts after the engines are started.
- Connect one end of the first jumper cable to the positive terminal on one battery. Connect the other end to the positive terminal on the other battery.
- 5. Connect one end of the other cable to the **negative** terminal of the machine with a good (charged) battery. Make the final connection on the engine of the machine to be started, away from the battery.
- 6. Start the vehicle with the good battery, then the machine with the discharged battery.
- 7. Remove the cables in the exact reverse order of installation. When removing each clamp, take care it does not touch any other metal parts while the other end remains attached.

STORAGE SAFETY

- Stop the engine and allow to cool before storing.
- Drain the fuel tank outdoors only.
- Store fuel in an approved container in a cool, dry place.
- Keep the machine and fuel containers in a locked storage place to prevent tampering and to keep children from playing with them.
- When the machine is to be parked, stored or left unattended, lower the cutterdeck unless a positive mechanical lock is used.
- Do not store the machine or fuel container near heating appliances with an open flame such as a water heater or an appliance with a pilot light.
- Keep gasoline storage area free of grass, leaves and excessive grease to reduce fire hazard.
- Clean grass and debris from cutting units, drives, mufflers and engine to help prevent fires.

LABELS





TO CHECK OR ADD FUEL -Do it outdoors. -Stop engine. Allow to cool. -Do not smoke. -Clean up spilled fuel. -Do not overfill. -Fill to one inch below bottom of filler neck. 2000570




20W50

system and to locate leaks.


WARNING

-Remove debris buildup. Debris under belt cover or near muffler can cause fires.

- -Blades continue to rotate for a few seconds after blades are turned off.
- -Blades must be at least 1/8" above bottom of housing. -All blades must be identical. Check blade bolts daily for tightness.
- -Inspect for damage after stricking a foreign object.
- Make repairs before restarting operation.
- -Find and repair cause of any abnormal vibration.

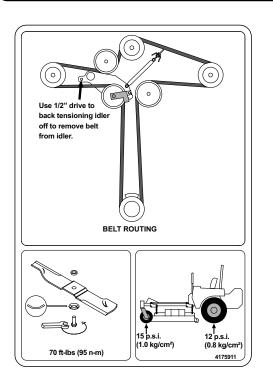




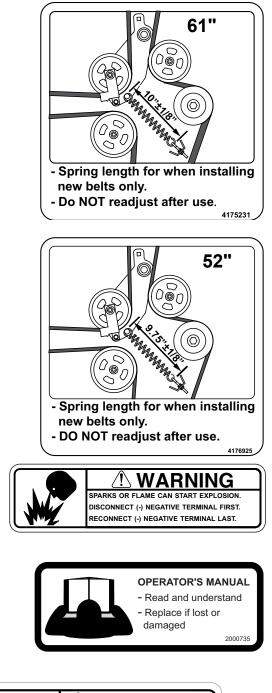




200057

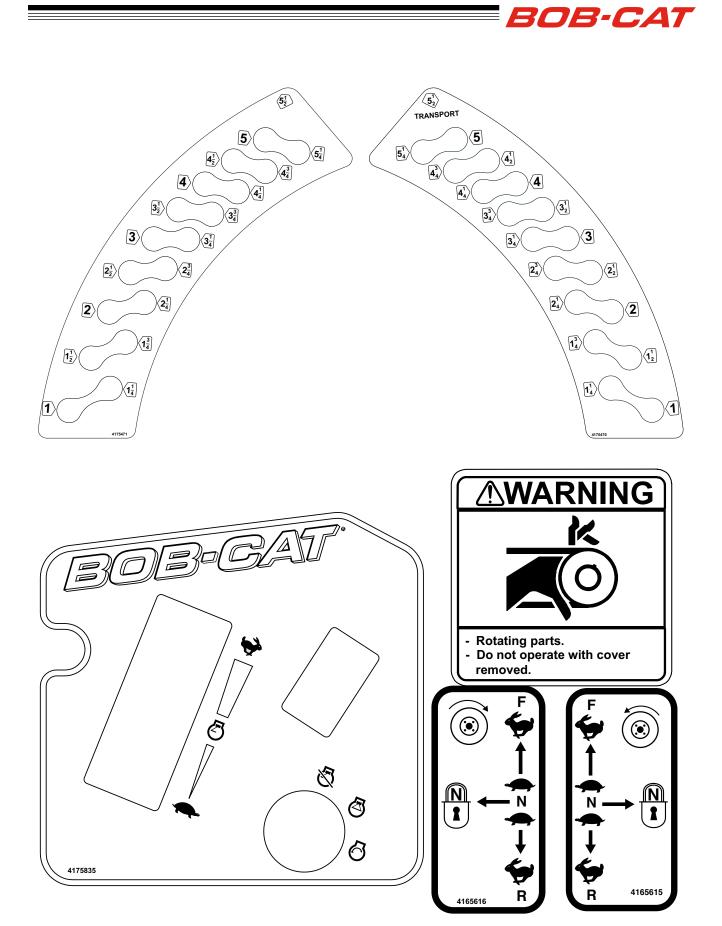

CONTROLS

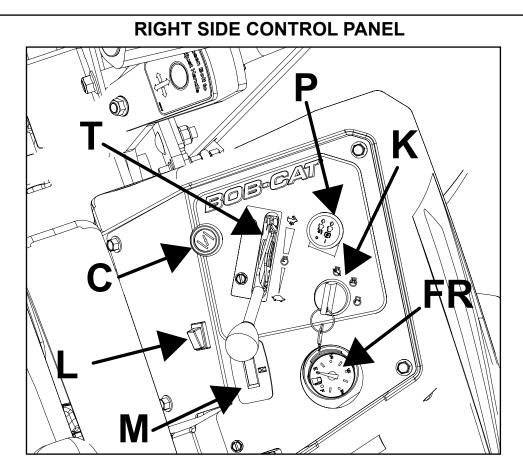

THROTTLE (T) - Move the throttle lever forward to increase engine speed until the maximum governed engine RPM is reached. Move the lever rearward to decrease engine speed until the engine reaches its idle speed.

BOB-CAT

CHOKE (C) - Pull the choke control out to set the choke ON. Push it in to set the choke OFF.

KEYSWITCH (K) - The keyswitch has three positions: OFF, RUN, and START. Insert the key and turn it clockwise to move the switch from OFF to RUN. Turn it further to START and hold to engage the starter. Release the key and the switch will return to RUN from START. Turn the key counterclockwise to OFF to stop the engine.

FUEL GAUGE RH (FR) - Indicates fuel level in rightside tank.

HOUR METER (M) - Records accumulated time the machine is in operation.

POWER TAKE OFF (PTO) SWITCH (P) - The operator must be in the seat when engaging the PTO or the engine will kill. Pulling the PTO switch out engages (turns on) the PTO and starts the blades or other attachment. Pushing the PTO switch in disengages (turns off) the PTO and stops the blades or other attachment.

NOTE: The PTO switch does not control attachments powered by a separate engine.

- Disengage the PTO whenever you stop or leave the operator's position.
- Shut off engine with the key and remove the spark plug wires before making adjustments or unplugging a clogged mower.
- Do not engage the PTO until ready to start mowing.

LIGHT SWITCH (L) - Controls headlight on/off (selected models)



FUEL VALVE (U) - A fuel tank selector valve is provided. The fuel tank selector valve has three positions:

Off: The tank selector is off when the lever points down. The selector should be off whenever the machine is transported or stands unused for any length of time. Shutting off the fuel supply avoids the possibility of flooding should any dirt get under the carburetor float needle. Leaving the tank selector in either tank position can allow severe flooding, which may ruin the engine by diluting the oil.

Right Tank: Fuel flows from the right tank when the selector is turned 1/4 turn toward the right, when facing the valve.


Left Tank: Fuel flows from the left tank when the selector is turned 1/4 turn toward the left, when facing the valve.

FUEL GAUGE LH (FL) - Indicates fuel level in left-side tank.

12V OUTLET (O) - A 12V outlet is provided to accommodate 12V accessories such as cell phone chargers.

SWITCH BLANK (SW) - Shown with the dump switch used with the optional grass collector or towed aerator installed.

Located on left side control panel.

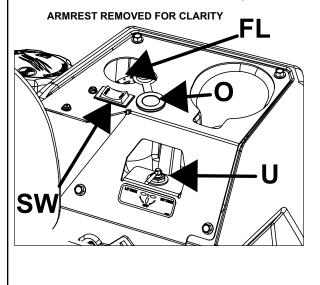

DECK LIFT &

TRANSPORT LATCH LEVER (D & T) - Pull


back on the deck lift lever **D** to raise the deck . When the deck is completely raised, the transport latch **T** engages to hold the deck in the transport position. To lower the deck pull back on the lift lever **D**, then raise the latch **T**. Lower the deck lift lever until it contacts height of cut pin **A**.

HEIGHT OF CUT PIN (A) - Sets height of cut and allows easy return from transport to desired height of cut. Raise the deck to transport using the foot pedal and deck lift lever **D**. Position pin **A** in the hole corresponding to the desired height of cut. Lower the latch lever until it rests on pin **A**.

TRACTION LEVERS (L) - Each of the two traction levers controls the drive wheel located on the same side. They control the forward and reverse movement of the machine, provide steering and also provide dynamic braking.

The operator must be in the seat and the parking brake must be OFF or the engine will kill if the traction drive is engaged. To engage traction drive, move the traction levers toward the center of the machine until they are out of neutral lock position.

Lift and Traction Levers (operator's right side)

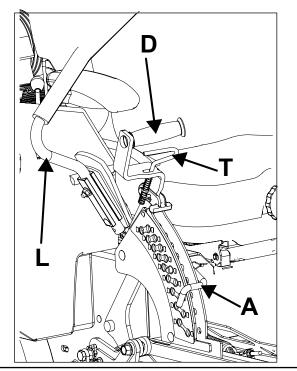

FOOT LIFT PEDAL (F)

BOB-CAT


The foot lift pedal **F**, allows the operator to raise the mower deck to clear an object without removing his/ her hands from the traction controls. The foot pedal may also be used to assist lifting the deck by hand.

Press on foot pedal **F** to raise the deck.

PARKING BRAKE (R) - Pull the parking brake lever up and back to put the parking brake ON. Push it forward and down to put the parking brake OFF.

The parking brake must be ON to start the engine. It must also be ON and the traction levers must be in neutral to keep the engine running if the operator leaves the seat. The parking brake must be OFF to keep the engine running when a traction lever is moved out of neutral lock.


TRACKING ADJUSTORS (W) - Adjusts tracking so machine can drive stright ahead with both traction levers pushed fully forward.

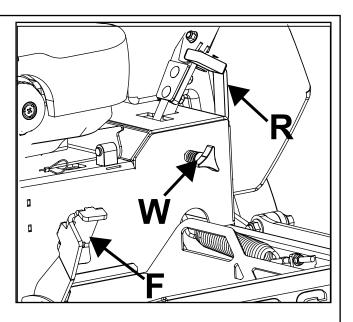

PUSHING THE MACHINE

Hydrostat bypass valves ("dump valves") on each hydrostatic pump allow the machine to be pushed or towed without the engine running. Raise the seat to gain access to these two valves **V**. Turn both valves counterclockwise 1 turn to release the hydrostatic system. Restore the hydrostatic system by turning the valves clockwise only until they re-seat. **DO NOT** overtighten.

Use caution if it is necessary to tow the machine. With the bypass valves open, the dynamic braking and steering provided by the hydrostats is disabled. Towing should be done only if a disabled machine cannot be repaired where it broke down.

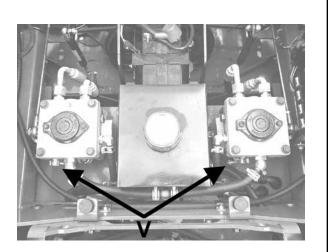

Compartment beneath the seat, viewed from above


PRE-OPERATION CHECK LIST (OWNER'S RESPONSIBILITY)	
 Review and follow all safety rules and safety decal instructions. Check that all safety decals are installed and in good condition. Replace if damaged. Check to make sure all shields and guards are properly installed and in good condition. Be sure that either the discharge shield or complete vacuum attachment is installed. Check that all hardware is properly installed and secured. Check to be sure engine is free of dirt and debris. Pay particular attention to the cooling fins, governor parts and muffler. Clean air intake screen. Check air cleaner; service if necessary. 	 Never allow riders. Inspect area and remove stones, branches or other hard objects that might be thrown, causing injury or damage. Clean area around oil fill dipstick. Remove dipstick and check to be sure oil is in operating range (between marks on dipstick). Add oil if necessary but Do Not Overfill. Install dipstick assembly firmly until cap bottoms out on tube. Dipstick assembly must always be secured into fill tube when engine is running. Check all lubrication points and grease as instructed in manual. Check hydrostatic fluid level. Check to be sure cooling fins on hydrostat are clean. Perform a functional check of the safety interlock system each time you operate the unit.

OPERATION

BOB-CAT

FUELING

- Fill fuel tanks with good quality, clean, unleaded gasoline.
- Use a funnel to avoid spillage.

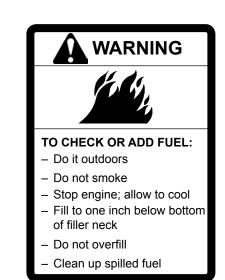

BEFORE STARTING THE ENGINE

- Be familiar with all controls, how each functions and what each operates.
- Check the engine oil level and add if necessary.
- Check the fuel level and add if necessary. Using the fuel selector valve, select which tank will supply fuel.
- Choke: For cold starts, set the throttle lever to the half-open position and pull the choke out to the ON position. For warm starts set the throttle to the half-open position and the choke to the OFF position.

OPERATOR PRESENCE INTERLOCK SYSTEM

To start the engine:

- The PTO switch must be OFF.
- Both traction levers must be in the neutral lock position.
- The parking brake must be **ON**.

To operate the machine:

- 1. The operator must be in the seat or engaging the PTO will kill the engine.
- 2. The parking brake must be **OFF** and the operator must be in the seat, or moving a traction lever from the neutral lock position will kill the engine.

STARTING THE ENGINE

- 1. Turn the key to operate the electric starter to start the engine. Release the key when the engine starts.
- If the engine does not start immediately, do not crank for more than 10 seconds at a time. Allow 60 seconds for the starter motor to cool down between starting attempts to prevent the starter motor from burning out.
- 3. If the choke is ON when the engine starts, gradually back it off until the engine runs with no choke at all.

OPERATING NOTES

BOB-CAT =

- Practice at slow engine and travel speeds with the PTO off until fully familiar with the controls.
- For normal cutting the throttle should be set at the full open position. By using the traction levers to speed up or slow down the machine during use, maximum control and cutting efficiency can be maintained.
- Using the machine at less than full throttle in heavy conditions will cause the engine to labor and result in excessive wear.

DRIVING

- 1. With the PTO disengaged, move the parking brake to OFF.
- 2. Move both traction levers out of neutral lock.
- 3. Push both traction levers forward evenly to drive forward in a straight line. Pull both traction levers back evenly to drive backward in a straight line.
- 4. Steering Move one lever forward and one back.

Turns during forward movement:

- **Right turn** move the right traction lever back toward neutral to slow the right drive wheel.
- Left turn move the left traction lever back toward neutral to slow the left drive wheel.


Turns during reverse movement:

- **Reverse right turn** move the right traction lever forward toward neutral to slow the right drive wheel.
- **Reverse left turn** move the left traction lever forward toward neutral to slow the left drive wheel.

Slow sweeping turns are made with both traction levers on the same side of neutral and slightly apart. True zero radius turns about he center of the machine are made by having one lever in reverse while the other is in forward. By varying the relative positions of the two levers, the rate of turn is varied to suit the mowing situation.

STOPPING

- 1. Turn PTO switch to OFF.
- 2. Release control traction levers or move to neutral.
- 3. Put machine in PARK.
- 4. Turn key to OFF (counterclockwise).

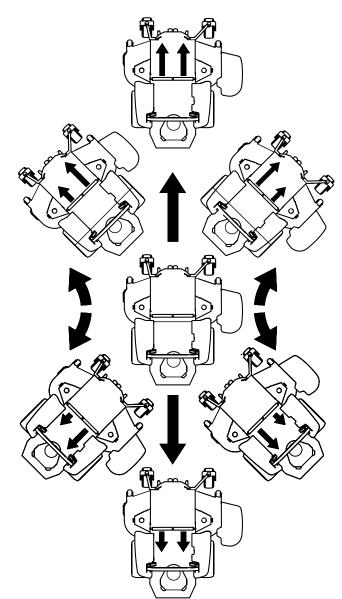




ACAUTION

Use caution when making turns. Slow down before making sharp turns to help maintain control and to prevent torn turf from skidding or spinning tires. To help prevent turf damage, keep both drive tires moving whenever a turn is made.

TIP: The best way to make a sharp "zero" turn is to come to a stop, get the machine moving in reverse with both drive wheels and then powering the machine around with the outside wheel. This technique keeps the drive tires turning and results in less turf damage.

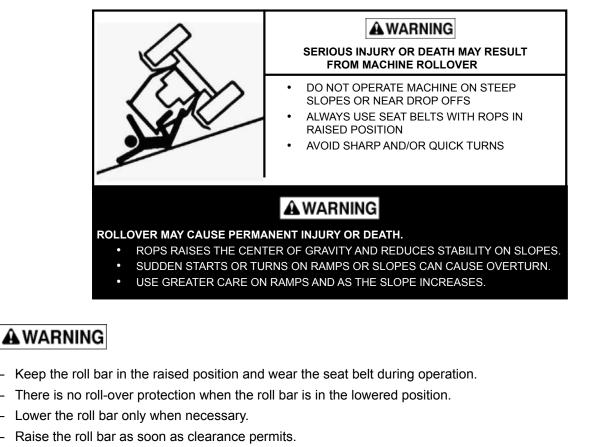

- Check the area before mowing for overhead clearance.
- DO NOT contact overhead objects with the roll bar.

CUTTING

- 1. Place the discharge chute in the down position or correctly fit a grass collector or mulcher plate.
- 2. Sit in the seat.
- 3. Start the engine.

BOB-CAT

- 4. Turn the blades on by pulling up on the PTO switch. Do not start the blades at full throttle. Instead, use the slowest throttle setting that will allow the engine to pick up the blade load to reduce the wear on the belts and electric clutch.
- 5. After the blades are rotating, set the throttle to maximum. Use the traction levers to obtain the required cutting speed, to steer around obstacles and to turn at the end of a cut.

CUTTING TIPS

- When mowing large areas, start by turning to the right so that clippings will be discharged away from shrubs, fences, driveways, etc. After two or three rounds, mow in the opposite direction, left hand turns, until finished.
- If grass is extremely tall, it should be mowed twice, the first cut relatively high, the second cut to the desired height.
- Use the left side of the mower for trimming.
- Choose cutting directions so that clippings are thrown onto areas that already have been cut. This method results in the most even distribution of clippings and more uniform, better appearing cuts.
- Use a different mowing pattern each time a property is cut where possible. This helps prevent rutting and leads to a more uniform cut by keeping the grass from always laying the same way.



Maintenance is an ongoing job. These intervals are maximum times between mainte- nance operations. Perform more often under severe conditions.							
OPERATION	FIRST 5 HOURS DAILY		EVERY 25 HOURS	EVERY 50 HOURS	EVERY 100 HOURS	EVERY 200 HOURS	EVERY 500 HOURS
ENGINE Consult the engine manual for additional information and instructions							
Check/Top Off Oil Levels		х					
Check For Leaks		x					
Clean Air Intake Screen		x					
Clean Air Cleaner Element		x				x	
Clean Cooling Fins					Х		
Change Oil and Filter	х	See engine manufacturer's Manual					
Check/Replace Spark Plugs						х	
	HYDROSTAT						
Check/Top Off Oil Level	x				x		
Change Oil And Filter				Х*			x
MACHINE							
Check Interlock Operation		x					
Check Tire Pressure		x					
Lubricate All Points * First 50 hour				х			

* First 50 hours then every 500 hours.

SPECIFIC TORQUES

BLADE BOLT TORQUE: 70 FT-LBS (95 Nm) WHEEL HUB NUTS: 150 FT-LBS (203 Nm) ENGINE CRANKSHAFT BOLT: 50 FT-LBS (68 Nm) PUMP PULLEY BOLT: 6.7 - 9.6 FT-LBS (9-13 Nm)

NOTES

BOB-CAT

• • • • • • • • • • • • • • • • • • • •	

GENERAL	DATE	HRS										
Check Tire Pressures												
Lubricate All Points												
Check Nuts & Bolts												
ENGINE												
Check Oil Level												
Change Oil												
Clean Air Cleaner Element												
Clean Cooling Fins												
Replace Air Cleaner Element												
Clean & Gap Spark Plugs												
NOTE: After first 5 hours of operation replace engine oil and oil filter. After first 50 hours of operation replace hydraulic oil and filters.												

CHECK DAILY

Operator Presence Interlock System - Start Operation

For the engine to crank, the parking brake must be on, the PTO (blades) off and traction levers in the neutral lock position. Sit in the seat and check, one by one, if the engine will crank with the parking brake off, the blades on, and either traction lever out of neutral lock.

Operator Presence Interlock System - Run Operation

The operator must be in the seat for the engine to run with the parking brake off, the traction levers moved out of the neutral lock position, or the blades on. To check:

- 1. Start the engine and run at 1/2 throttle with the operator on the machine but raised off the seat.
- One by one: move the parking brake to the OFF position, traction levers out of the neutral lock position (check each independently), and turn the blades on. Each check should kill the engine after 1/2 second. (A 1/2 second delay is built into the system to prevent engine cutout when traversing rough terrain.)

Repair machine before using if the Operator Presence Interlock System does not operate correctly in start or run. Contact your authorized BOB-CAT dealer.

Hardware

Tighten any nuts and bolts found loose. Replace any broken or missing cotter pins. Repair any other problems before operating.

Tire pressure


Rear tire pressures to 12 lbs/in² (0.8 kg/cm²). Tires are overinflated for shipping. Front tires are to be inflated to 15 lbs/in² (1.05 kg/cm²). Improper tire inflation can cause rapid tire wear and poor traction. Uneven inflation can cause uneven cutting.

BATTERY-AGM TYPE BATTERY SUPPLIED

A WARNING Battery acid is caustic and fumes are explosive and can cause serious injury or death. Use insulated tools, wear protective glasses or goggles and protective clothing when working with batteries. Read and obey the battery manufacturer's instructions.	 When removing the battery, always remove the ground BLACK, negative (-) cable first and the RED, positive (+) cable last. AGM type battery. Use AGM charger when charging. P/N 4171973
 Be certain the ignition switch is OFF and the key has been removed before servicing the battery. 1. Verify battery polarity before connecting or disconnecting the battery cables. 2. When installing the battery, always assemble the RED, positive (+) battery cable first and the ground, BLACK, negative (-) cable last. 	 5. Clean the cable ends and battery posts with steel wool. Use a solution of baking soda and water to clean the battery. Do not allow the solution to enter into the battery cells. 6. Tighten cables securely to battery terminals and apply a light coat of silicone dielectric grease to terminals and cable ends to prevent corrosion. Keep terminal covers in place.

MAINTENANCE

BOB-CAT

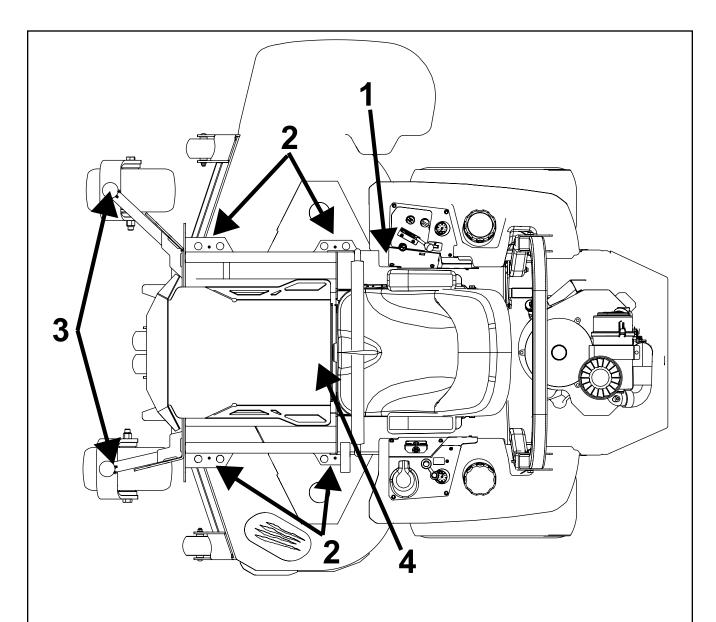

LUBRICATION

Every 50 hours of operation, lubricate the following points (1-3) with grease:

- 1. Deck lift rockshaft (1 point-lift seat to access)
- 2. Deck lift pivots (4 points)
- Caster wheel pivots (2 points) (Lubricate every 500 hours or once a year)
- 4. Deck Idler (1 point-lift footplate to access)

NOTE ON BLADE SPINDLES - The blade spindles on these machines use a superior sealed bearing that does not require relubrication.

ENGINE OIL

Do not perform engine maintenance without the engine off, spark plug wires disconnected and PTO disengaged.


AFTER FIRST FIVE (5) HOURS

While the engine is warm:


- 1. Release the oil drain hose assembly from the engine clip **J**. Route hose assembly through bumper.
- 2. Remove the rubber cap **D** from the tip of the hose assembly and turn the drain valve to allow oil to drain from the engine. Dispose of used oil in accordance with local requirements.
- Clean drain valve and tighten the plastic portion of the drain valve back into the metal portion of the valve. Replace rubber cap over the tip of the valve. Replace hose assembly back into engine clip J.
- 4. Change oil filter.
- 5. Fill the crankcase with fresh oil to the full mark. Do not overfill. See engine manual for oil specifications.

DAILY

- 1. Check oil level with the dipstick.
- If oil is needed, add fresh oil of proper viscosity and grade. See engine manual for oil specifications. Do not overfill.
- 3. Replace dipstick before starting engine.

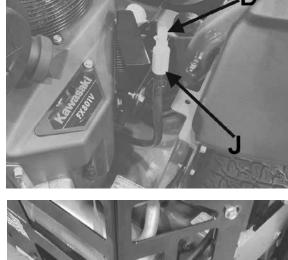

BOB-CAT

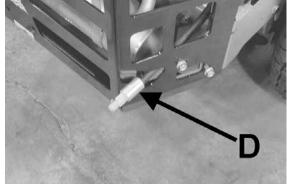

PERIODIC OIL CHANGES

- 1. See engine manual for oil and filter change intervals after the break-in period.
- 2. Follow instructions for first oil change, above.

SPARK PLUGS

Remove each plug and check condition.

- Good operating conditions are indicated if the plug has a light coating of grey or tan deposit.
- A white blistered coating indicates overheating. A black coating indicates an "over rich" fuel mixture. Both
 may be caused by a clogged air cleaner or improper carburetor adjustment.
- Do not sandblast, wire brush or otherwise attempt to repair a plug in poor condition. Best results are
 obtained with a new plug.
- Set plug gap as specified in engine manual.

FUEL FILTER


An in line fuel filter is located in the fuel supply line. Inspect at every oil change to make sure it is clean and unobstructed. Replace if dirty.

ENGINE COOLING

BOB-CAT

Continued operation with a clogged cooling system will cause severe overheating and can result in engine damage.

- **Daily**: Clean air intake screen **S** on air cooled engines.
- **Every 100 hours**: Clean cooling fins beneath blower housing **H** with reference to information in the engine manufacturer's manual.

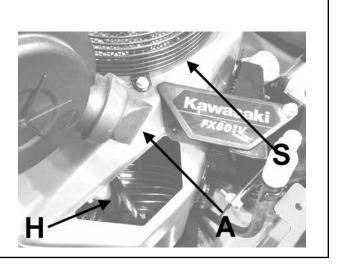


HEAVY DUTY CYCLONIC AIR CLEANER

Clean and replace the air cleaner element as specified in the service chart. Uneven running, lack of power or black exhaust fumes may indicate a dirty air cleaner.

To replace air cleaner elements:

- 1. Unclamp end cover **X** and remove existing cleaner elements.
- 2. Insert new elements **Y** and **Z** and replace cover. Ensure the breathing port **A** is pointing down and towards the front of the tractor.

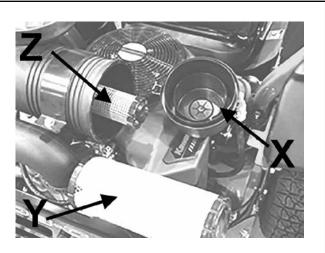




BLADE REMOVAL

Follow these instructions to prevent injury during blade removal:


- Loosen with a box wrench or a socket and long breaker bar. To gain additional leverage, slip a long pipe or thick-walled tube over breaker bar or wrench.
- 2. Insert wood block **A** as shown, to prevent blade from turning when loosening.
- Wear thickly padded gloves. Keep hands clear of blade path. Blades may rotate when bolt releases.

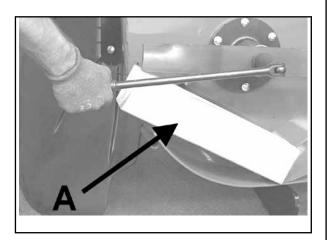

SHARPENING

Blades may be sharpened by filing or grinding.

- Inspect blades before sharpening.
- Replace bent or cracked blades.
- Replace blades when the lift portion has worn thin.
- Maintain cut angle at 30°.
- Do not overheat blades when sharpening.
- Always use BOB-CAT blades. Use of another manufacturer's blades may be dangerous.

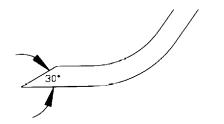

BLADE BALANCE


Blade balance must be maintained at 5/8 oz-in (19.4 g-cm) or less. Failure to keep blades balanced causes excess vibration, wear, and shortened life of most components of the machine.

To balance a blade:

- 1. Sharpen blade first.
- 2. Balance the blade at the center.
- Attach a 1/8 oz (3.9 g) weight at a distance 5" (127 mm) from center on the light end. This should make the light end the heavy end:
 - If it does, the blade is balanced.
 - If does not, file or grind the heavy end until the addition of the weight makes the light end the heavy end.

BLADE INSTALLATION

- 1. Wear thickly padded gloves to prevent cuts from the sharp blade.
- 2. Insert the blade bolt, in order, through the conical washer (cup side toward the blade, as shown), the blade, and the blade spacer.
- 3. Install assembly on the blade spindle.
- 4. Torque the blade bolt to 70 ft-lbs.

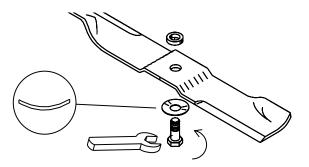

BLADE BOLT TORQUE: 70 FT-LBS (95 Nm)

BELTS

All belts are tensioned by spring loaded idlers. No adjustment is required.

HYDRAULIC SYSTEM NOTES:

Before servicing the hydraulic system, stop the engine, disconnect spark plug wires and disengage the PTO.

- After any hydraulic line is opened, plug or cap it promptly to reduce the risk of contamination.
- Do not use sealant tape on hydraulic pipe fittings.
 Use a liquid sealant that will dissolve into the system.
- Make sure all hydraulic connections are tight and hydraulic hoses and lines are in good condition before applying pressure to system.

A WARNING

The machine's hydraulic system operates under high pressure. When checking for leaks, do not use your hands to attempt to find a leak. Instead, use cardboard or paper. Escaping hydraulic fluid can be under sufficient pressure to penetrate skin and cause serious injury. If hydraulic fluid is injected into the skin, it must be promptly removed by a doctor familiar with this form of injury or gangrene may result.

AFTER FIRST FIVE (5) HOURS AND EVERY 100 HOURS.


Check the fluid level in the hydraulic system. or when a leak has occurred. If the fluid is low, check all components for leaks.

To check, remove reservoir cap \mathbf{M} . The fluid level should be at the INDICATOR. If low, top up (do not overfill). Use one of the oils listed below:


- SAE 15W40 motor oil
- SAE 15W50 motor oil
- SAE 20W50 motor oil

AFTER FIRST FIFTY (50) HOURS AND EVERY 500 HOURS.

- 1. Remove plug **N** to drain hydraulic reservoir. Dispose of used oil in accordance with local requirements.
- 2. Clean and replace the plug.
- 3. Remove the drive wheels.
- (continued next page)

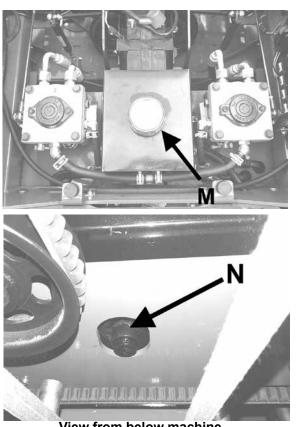

View from below machine

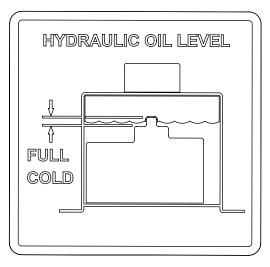

- 4. Remove drain plugs **P** from the bottom of each wheel motor and drain oil.
- 5. Clean and replace the plugs.
- 6. Change hydraulic oil filter **G**.
- Remove fill plugs Q from the top of each wheel motor and fill each wheel motor with 34 oz (1.06 qt; 1.0L) of oil.
- 8. Clean and replace the plugs.
- Fill the hydraulic oil reservior with oil to the bottom of the rerservior filler tube. Do not overfill. (Approximately 9 qts/8.51L).

A WARNING


POTENTIAL FOR SERIOUS INJURY


Certain procedures require the vehicle engine to be operated and the vehicle to be raised off of the ground. To prevent possible injury or the servicing technician and/or bystanders, insure the vehicle is properly secured.

- 10. Purge air from hydraulic system. Drive wheels must be off the ground, and then repeated under normal operating conditions.
- 11. With the wheel pump assembly bypass valve open and the engine running, slowly move teh directional contorl in both forward and reverse directions (10 to 20 times). As air is purged from the unit, the oil level in the reservior may drop.
- With the bypass vlave closed and the engine running, slowly move the dirctional control in both forward and reverse directions (10 to 20 times). Stop the engine, and check the oil level, and add oil as required.
- 13. It may be necessary to repeat steps 11 and 12 until all the air is completely purged from the system. When the hydraulic system moves forward and reverse at a normal speed and re reservior oil remains at a constant level, purging is completed.
- 14. Replace drive wheels.
- 15. Repeat steps 10-13 under normal operating conditions.

PERIODIC OIL CHANGES

Change the hydraulic fluid and hydraulic filter after the first fifty hours and each 500 hours of operation using the same procedure given above.

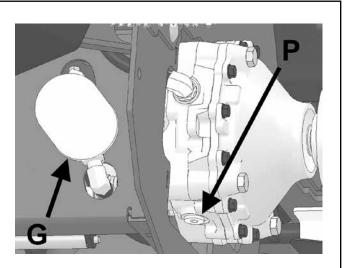

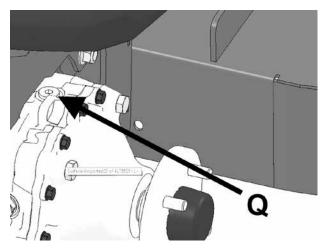

CLEANING MACHINE

BOB-CAT

Clean the machine after use. Compressed air is recommended. Do not use a pressure washer. The machine will run cooler and last longer if kept free of clippings and other debris. A clean machine also reduces the risk of fire due to accumulation of combustible debris and chaff.

Brush or blow clippings and debris off the cutterdeck and engine deck. DO NOT use a pressure washer.

WASHING MACHINE

CAUTION: Improperly washing a machine can cause water to enter bearings and other components. This can greatly reduce component life.

- Do not use a pressure washer. Do not direct water at bearings or seals. High pressure water can blow past seals and enter sealed bearings.
- Allow the machine to cool down before washing.
 Water on a warm machine can be sucked into sealed bearings as they cool.
- Avoid getting electrical connections wet. Water can cause electrical faults and corrosion of electrical components.

DECK LEVELING


- a) Park the machine on a smooth, level surface. Raise the deck to the transport position.
- b) Tires are overinflated for shipping. Set tire pressures to 12 psi for the rears and 15 psi for the front pnuematic tires. Note: Tire pressue is not applicable to flat-free caster tires.
- c) Put equal height blocks A under the rear corners of the deck and under the front roller brackets. The blocks should be 3-1/2" to 4" high to help minimize effects of the deck counter balance springs.

NOTE: The front and rear of the deck are at different heights, but the bottom of the roller brackets matches the bottom of the rear of the deck.

- d) Lower the deck onto the blocks
- e) Loosen nuts I at all four corners of the deck to relieve tension on chains **H**.
- f) Set the height of cut to 1/4" higher than the height of the block being used. Measure the height at a blade cutting edge to confirm the height setting.
- g) Turn the front adjusting screws G to lift the front of the deck off the blocks and snug the front nuts I enough to hold the front of the deck in place. This will put enough load on the counter balance springs to keep them from interfering with the rear adjustment. Note: The springs could be disconnected but that is more work.
- h) Turn the rear adjusting screws G to take the slack out of the chains. Stop just as the deck starts to lift off the rear blocks and lock the rear adjustment with nuts I. The deck lift lever J should be against the height of cut pin K.
- Loosen the front nuts I and lower the front of the deck to the front blocks with front adjusting screws G until the front chains are just taut. Lock the front adjstment with front nuts I.

A BLADE A

BOB-CAT

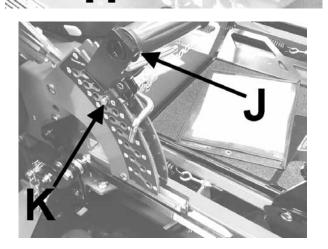

A 1/8" forward pitched deck provides the best horsepower.
A level deck provides the best quality of cut.
A 1/8" rearward pitched deck provides the best striping.
To pitch the deck forward put a 1/8" spacer on top of the rear blocks.
To pitch the deck rearward put a 1/8" spacer on top of the front blocks.
Certain grass types and conditions may vary.

It may not be possble to get everything perfect due to variation in the leveling surface and manufacrturing tolerances of the machine. Less than 1/8" variation will not be noticeable under most condidtions.

HEIGHT OF CUT

BOB-CAT


Blades may be sharpened by filing or grinding.

- Height of cut may vary due to the amount of tread on the tires, tire diameter or inflation pressure.
- For best results, adjust the deck rollers for the height of cut to be used (see below).

The height of cut is set by moving height of cut pin **K** to the hole designated for the height of cut desired.


To change the height of cut:

- 1. Using height of cut handle **J** lift the deck to the highest position.
- 2. Move pin K to the selected hole.
- 3. Lower the deck until the lift lever is stopped by the pin.

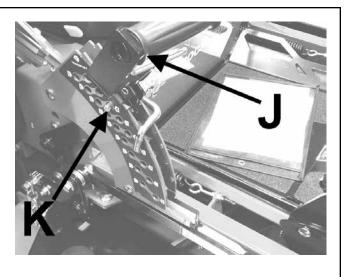

DECK ROLLERS


The deck anti-scalp rollers have three locations to provide imporved deck flotation and prevent scalping at various heights of cut. They are not intended to ride continuously on the ground. Adjust no closer than 3/8" (10mm) to the ground.

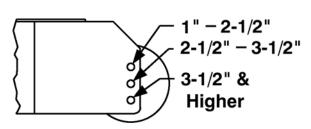

Height of cut ranges for roller adjustment

FOOT LIFT ASSIST

The foot lift may be adjusted to suit the operator. Remove the knob and top bolt. Rotate the pedal to the desired position lining up the hole in the pedal with a square in the arm. Reinstall the bolt and secure with the knob.

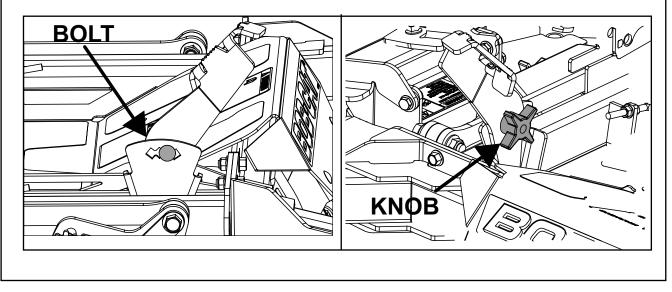




FRONT DECK LIP

Cutterdecks have adjustable front lips to accommodate various conditions.

To adjust per conditions:

- 1. Loosen the front bolts S.
- 2. Adjust height of H.
- 3. Retighten **S** once you have desired height.

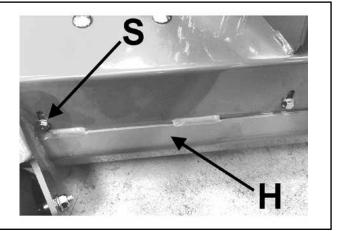


DECK COUNTERBALANCE SPRINGS

The deck counter balance springs make it easier to lift the deck and help it ride up over obstacles. If the springs are over adjusted, the deck may bounce and produce an uneven cut.

To adjust:

- 1. Raise the cutterdeck all the way and latch it in transport position.
- 2. Adjust the spring A with nut B:

The standard adjustment of thread beyond the adjustment nut **B** is 1" for 48" and 52" decks and 1-3/4" for 61" and 72" decks. The nut may be run onto the eyebolt more or less than indicated according to preference.

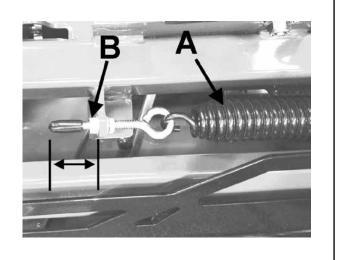

DAMPERS

Dampers are proveded on the traction controls; one for each side to make it easier to operate the machine smoothly. There are three mounting positions for each damper.


Center position: Standard

Outer Position:

Increase the damping and make traction controls stiffer to operate.

Inner Position:

Decrease the damping and make the controls lighter to operate.

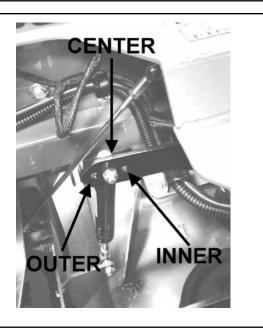

BOB-CAT =

ROLL OVER PROTECTION STRUCTURE (ROPS)

This machine is equipped with a folding Rollover Protection Structures (ROPS).

ROPS in Vertical Position

- Position the ROPS in the vertical position for normal operation. WEAR the seatbelt when the ROPS is in the vertical position. In event of a rollover, the seat belt keeps you in the protective envelope of the ROPS.
- If you aren't wearing the seatbelt and the machine is overturning, hold onto the steering levers. Do not attempt to jump out or leave the seat. If you leave the seat you may be struck by the machine or the ROPS.

ROPS in Folded Position

 A folding ROPS allows the overall height of the machine to be reduced for increased clearance to get into a low ceiling height trailer or under low hanging branches. DO NOT wear the seatbelt when the ROPS is folded. Stop the machine and restore the ROPS to the vertical position as soon as the need for increased clearance is past.

Raising / Lowering ROPS

To raise ROPS:


Remove cotter pin **D** from hitch pin **C**. Pull out hitch pin **C**, rotate upper hoop to the upright position. Reinstall hitch pin **C**. Reinstall cotter Pin **D** through hitch pin **C**.

To Lower ROPS:

Remove cotter pin **D** from hitch pin **C**. Pull out hitch pin **C**, rotate upper hoop to the lowered position. Reinstall hitch pin **C**. Reinstall cotter Pin **D** through hitch pin **C**.

Make sure the hitch pin is through the tube so the ROPS is locked into either the raised or lowered position. If the hitch pin is not through the tube, the ROPS can move and will not provide protection.

Ensure that seat plate is secured using springloaded latch. To flip seat forward, push down on handle **X** behind and on either side of the seat, to release latch, then push the seat forward.

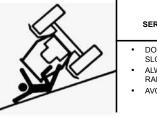

A WARNING

SERIOUS INJURY OR DEATH MAY RESULT FROM MACHINE ROLLOVER

 DO NOT OPERATE MACHINE ON STEEP SLOPES OR NEAR DROP OFFS
 ALWAYS USE SEAT BELTS WITH ROPS IN


RAISED POSITION


AVOID SHARP AND/OR QUICK TURNS

OLLOVER MAY CAUSE PERMANENT INJURY OR DEATH.

• ROPS RAISES THE CENTER OF GRAVITY AND REDUCES STABILITY ON SLOPES.

- SUDDEN STARTS OR TURNS ON RAMPS OR SLOPES CAN CAUSE OVERTURN.
- USE GREATER CARE ON RAMPS AND AS THE SLOPE INCREASES.

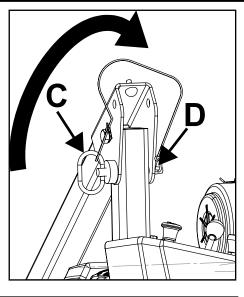

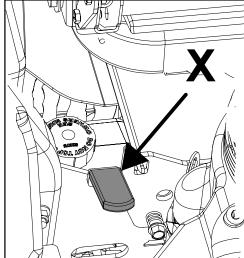

CONTROL LINKAGE NEUTRAL

To adjust the control linkage to neutral:


- 1. Move the traction control levers to the neutral lock position.
- 2. Leave the engine off. Raise the seat for access. Disconnect the cable that limits how far the seat can tilt foward, and tilt the seat forward until it rests on the stops built into the seat.
- Loosen the jam nut L on each end of the control rod. Note the end of the control rod nearest the flats has LH threads. The rod end with an ID groove has matching LH threads.
- Adjust the rod by turning it so the traction lever moves freely into the neutral lock position. Tighten the jam nut on control rods
- 5. Move the traction lever out of the neutral lock position and push it to reverse. Let go. The spring return should move the traction lever to where it can tip out centered in the neutral lock slot. If it does not, turn the control rod to lengthen or shorten the assembly until it does line up with the center of the neutral lock slot. Move the traction lever to reverse and let go to check the adjustment. Readjust if necessary.
- 6. Reconnect the seat cable and lower the seat.

TRACTION LEVERS

Traction Lever Height and Reach

To adjust the height and reach of the traction levers:

- 1. Loosen the top traction lever bolt.
- 2. Adjust the lever up or down and for or aft to a position that is comfortable for you to operate the machine.

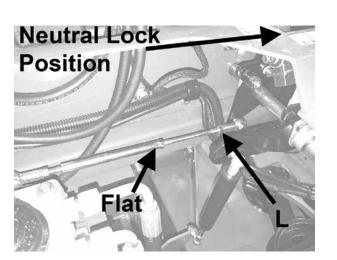



TRACTION LEVERS

BOB-CAT

Lateral Adjustment (LA)

The traction levers are adjustable so they don't rub on the guide slots.

1. Make the traction lever lateral adjustment by putting a 7/16 socket on an extension through the hole in the side of the frame. Turn in the adjusting screw until the traction lever just clears the inside of the guide slot. Repeat for the other side.

Pivot Tension (LA)

The pivot tension is set by a Belleville washer on the pivot bolt.


1. Hand tighten the pivot bolt nut 20 ft/lbs against the Belleville washer until the nut bottoms on the pivot spacer. Do not over tighten or the spacer may be crushed. If the spacer is crushed, pivoting the lever may be difficult and it will be hard to disassemble the traction control.

Tracking Adjustment (TA)

Tracking adjustment is provided so the machine will go straight when both traction levers are pushed all the way forward.

To adjust:


- 1. Turn both tracking adjustment knobs all the way in.
- Gently push the tractor control arm forward. When the traction control stops moving forward (there should be some slot left). Turn the tracking adjuster in until it touches the corresponding control arm so the tracking adjuster limits the stroke of the traction lever rather than the control stops on the hydrostat. Repeat for the other side.
- 3. Find a suitable level, open area. Get on the machine and start the engine. Run it at half throttle for better control.
- 4. Point the machine in a safe direction and drive it with both traction levers pushed completely forward. If the machine drives straight you are done. If it drifts off a straight line:
- 5. Stop the machine, move the traction levers to the neutral position and set the parking brake. Turn in the tracking knob on the outside of the drift 1/6 turn
- 6. Drive the machine again and repeat the adjustment until the machine drives straight.

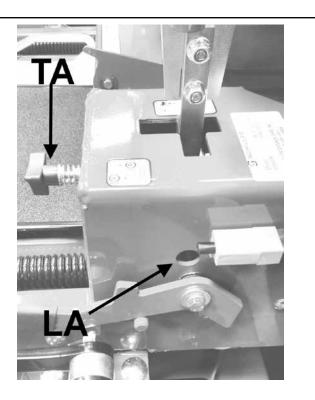

Note: Regardless of tracking adjustment there will be a tendency of the machine to drift to the downhill side of a cross slope.

BELT GUIDES

There are two adjustable belt guides for the cutter deck drive belt. The guides should be set 1/8-1/4" from the cutter deck drive belt height of cut set to 3-1/4".

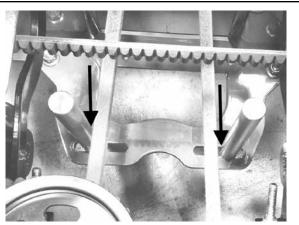

=

BOB-CAT

Adjust distance to 1/8" - 1/4" between deck drive belt and guides.


SPRING TENSIONED IDLERS

There are two spring tensioned idlers. The spring on the transmission belt drive (the upper belt) is not adjustable. The spring on the deck drive belt is adjusted when a new belt is installed. The setting accounts for the seat-in of the belt. The spring should not be readjusted or the belt will be over-tensioned which will lead to premature failure. See belt replacement.

HYDROSTAT NEUTRAL ADJUSTMENT

The hydrostats used on this machine are factory set in neutral and should never require adjustment. If for some reason the neutral position on the hydrostat needs to be reset use the following procedure:


- 1. Raise the machine. Support it on jack stands.
- Raise the seat to gain access to the control rod assembly. Disconnect the control rod assembly. Make sure the bypass valve is closed. Set the parking brake to the "OFF" position.
- Note that the control rotates freely in one direction (forward) but is spring load in the opposite direction. This is a unidirectional return-to-neutral (RTN). Loosen the Neutral Lock hex socket head cap screw A that locks the neutral arm.
- 4. Start the engine. Stay clear of any moving parts including the wheel hub.
- Rotate the entire control assembly, keeping the reverse return side against the neutral arm to the point where the wheel hub stops moving. Tighten the Neutral Lock capscrew, then run the engine up to full speed. Rotate the control lever to forward and back against the reverse stop to check the setting. Readjust if necessary.
- 6. Stop the engine. Reset the control rod assembly as outlined above under Control Linkage Neutral.
- 7. Remove jackstands and lower the machine.

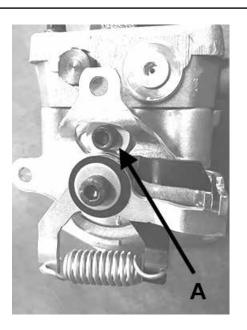

PARKING BRAKE

The parking brake needs to be adjusted so the spring is compressed 5/16" beyond the brake shaft when engaged. One thread of the brake rod should extend beyond the spring nut

- 1. Loosen the jam **M** nuts locking the brake rod to the brake link.
- 2. Apply the brake.
- 3. Adjust the upper nut by tightening or loosening it until the gap between the swage on the rod and the brake shaftl is 5/16". Tighten the other nut on the brake link to lock the adjustment.

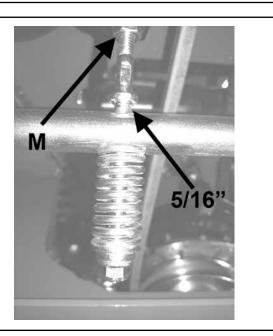


TRACTION DRIVE BELT

- 1. Set the height of cut to 3".
- 2. Remove the LH belt cover. Use a 1/2" breaker bar and extension **Figure 1** to back off the deck tensioning idler and remove the cutter deck belt from the LH spindle pulley. Leave the cutter deck belt on the remaining cutter deck pulleys.
- 3. Raise the rear of the machine on a lift or support it with jack stands.
- 4. Remove the cutterdeck drive belt from the clutch pulley.
- Use a 3/8" ratchet handle and long extension Figure 2 to back off the traction drive tensioning idler and remove the belt from the idler pulley.
- 6. Finish removing the belt.
- 7. Install the belt in reverse order of removal.
- 8. DO NOT change the cutterdeck belt tension. See Cutterdeck Belt.

NOTE: The belt tension is for a new belt. As the belt runs in the tension will relax. This is accounted for in the initial tension. DO NOT re-tension, the belt will be over tensioned and fail prematurely.

NOTE: Cutterdeck belt spring tension changes as height of cut changes. Set the spring tension at a 3" height of cut.

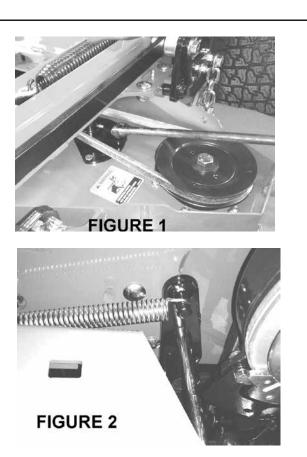

Note: For best performance use Schiller Grounds Care, Inc. replacement belts. Schiller belts are engineered for the specific drive they are used on and will normally last longer.


CUTTERDECK BELT

BOB-CAT

- 1. Set the deck to the middle of the height-of cut range.
- 2. Tilt the footplate all the way forward. Remove the belt covers on the deck.
- 3. Loosen the nuts on the tensioning spring eyebolt. Back the tensioning nut off to the end of the eyebolt.
- 4. Use a 1/2" drive breaker bar and extension to back off the idler to remove the belt from the cutterdeck pulleys.
- 5. Remove the belt guide from the moveable deck idler.
- 6. Remove the belt from the clutch pulley on the engine.
- 7. Install the new belt in reverse order of removal.
- Adjust the tensioning nut on the eyebolt so the spring is stretched to 9-3/4" for 52" and 10" for 61" Tighten the lock nut on the eyebolt to secure the setting.
- Check the belt guide spacing. Readjust for 1/8" - 1/4" gap between the guides and the belt if necessary.

NOTE: The belt tension is for a new belt. As the belt runs in the tension will relax. This is accounted for in the initial tension. DO NOT re-tension, the belt will be over tensioned and fail prematurely.

NOTE: Spring tension changes as height of cut changes. Set the spring tension at a 3" height of cut.

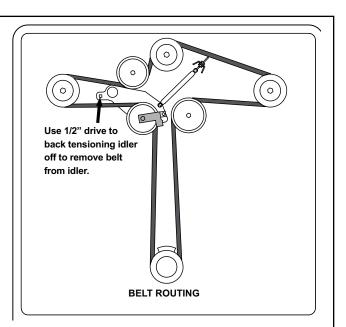

6000 Series Kit Description	52" Deck Kit P/N	61" Deck Kit P/N		
ECO Plate Kit	970577	970567		
Mulching Kit	970578	970588		
Striping Kit	970593	970593		
3.75 Bushel Poly Grass Catcher	970591	970591		
5 Bushel Poly Grass Catcher	970590	970590		
Boss Vac Pro 8 Bushel Dump from Seat Collection System	970638 & 970619	970638 & 970620		
Boss Vac Pro 12 Bushel Dump from Seat Collection System	970636 & 970612	970636 & 970613		
Boss Vac Pro 8 Bushel 3-Bag Collection System	970639 & 970619	970639 & 970620		
Boss Vac Pro 12 Bushel 3-Bag Collection System	970637 & 970615	970637 & 970616		
Hitch Kit	970315	970315		
No Flat Caster Tire	4175256	4175256		

POWER UNITS

DRIVE SYSTEM:

HydroGear Pump and Wheel motor Pump: 12 cc/rev (.73 in³/rev) Motor: 15in³/rev (244.7cc/rev)Max Torque Output: 746N•m (550 ft-lb) Internal wet disc parking brake Oil Capacity 9 qts. (8.51L) approx.

MAXIMUM SPEEDS:

Forward: 12 mph (19.3 km/h) Reverse: 4 mph (6.4 km/h)

OPERATOR PRESENCE Start Operation

The PTO (blades) must be off, traction levers in neutral lock, and parking brake "ON" for engine to crank.

Run Operation

Operator must be in seat to take parking brake off, to move traction levres out of the neutral lock position, or to turn the PTO (blades) on or the engine will kill. The parking brake must be off for the traction levers to move out of the neutral lock position.

The operator may leave the seat with the engine running if the parking brake is on, the PTO (blades) is off, and traction levers are in neutral lock position. A time delay eliminates nusisance engine cutout from operation over rough terrain.

WEIGHT:

1427 lbs (647kg) w/52" deck and full tanks 1477 lbs (670kg) w/61" deck and full tanks 1517 lbs (688kg) w/61" deck and full tanks (MX)

CONTROLS:

Throttle; choke; power takeoff (PTO) clutch switch; traction levers; parking brake lever; lift lever; foot pedal lift assist.

FUEL SYSTEM:

One tank on each side of operator. Total capacity: 15 gallons (56.8 liters) Fuel selector/shutoff valve on left tank panel (1/4 turn) Replaceable fuel filter

SEAT:

High back, foam padded seat with standard armrests. Fore and aft adjusters, hinged for easy tilt up access to transaxles and battery. Internally mounted seat switch.

WHEELS & TIRES:

Drive wheels: 9996001 & 9996002: 24 X 10.5 -12 4-Ply rated Turf Tread Tires

9996006: 24 X 12.00 -12 4-Ply rated Turf Tread Tires

Casters:

13 X 6.5-6 tires smooth tread pneumatic

Tire Pressure: Rear tires 12 p.s.i. (.84 kg/cm²) Front tires 15 p.s.i. (1.05 kg/cm²)

DECK CONSTRUCTION:

Fabricated and welded 10-gauge, double layered steel top with 7 gauge side skirts. Full floating design.

CUTTERDECK DRIVE SYSTEM:

Electric clutch/brake drives belt directly from engine to cutterdeck. No twists in drive belt.

SPINDLES:

Cast iron, bottom mount. Single row top bearing, double row lower bearing. Pulley easily removed for service.

ANTI-SCALP ROLLERS:

52" & 61"- 6 Rollers

CUTTING HEIGHT & PRODUCTION:

Height: Spring assisted lift lever allows easy setting of cut heights from 1" to 5 1/2" in 1/4" increments. "Set and forget" feature allows height of cut to be set and returned to without searching from operator position.

SPECIFIC TORQUES

BLADE BOLT TORQUE: 70 FT-LBS (95 Nm) WHEEL HUB NUTS: 150 FT-LBS (203 Nm) ENGINE CRANKSHAFT BOLT: 50 FT-LBS (68 Nm) PUMP PULLEY BOLT: (6.7-9.6 FT-LBS (9-13 Nm)

	ENGINES									
MODEL NUMBERS 9996001 9996002 9996006										
MANUFACTURER	Kawasaki	Kawasaki	Kawasaki							
MODEL	FX730V	FX801V	FX850V							
DISPLACEMENT	726 cc (44.3 in ³)	852 cc (52.0 in ³)	852 cc (52.0 in ³)							
CYLINDERS	2	2	2							
BORE / STROKE	78 X 76mm (3.07 X 3.0 in")	84.5 X 76 mm (3.33 X 2.99 in")	84.5 X 76 mm (3.33 X 2.99 in")							
COMPRESSION	8.2:1 8.2:1		8.2:1							
OIL CAPACITY w/ FILTER	2.1 liters (2.2 US qts)	2.4 liters (2.5 US qts)	2.4 liters (2.5 US qts)							
MAX POWER @ 3600 rpm*	17.5 KW (23.5 HP)	19.0 KW (25.5 HP)	20.1 KW (27.0 HP)							
MAX TORQUE @ 2400 rpm*	54.1 N•m (39.9 ft-lb)	60.5 N•m (44.4 ft-lb)	60.5 N•m (44.4 ft-lb)							
DRY WEIGHT	46.0 kg (101.4 lbs)	56.4 kg (124 lbs)	56.4 kg (124 lbs)							


* Engines are rated according to SAE J1995 by the engine manufacturer.

	CUTTERDECKS		
MODEL NUMBER	9996001	9996002 & 9996006	
ТҮРЕ	Side Discharge DP	Side Discharge DP	
CUTTING WIDTH	52.5" (133cm)	61" (155 cm)	
WIDTH (CHUTE UP)	54.3" (138cm)	62.9" (159.7 cm)	
WIDTH (CHUTE DOWN)	67.9" (172cm)	76.5" (194.3 cm)	
BLADE	high lift (low lift optional)	high lift (low lift optional)	
NUMBER OF BLADES	3	3	
BLADE LENGTH	18" (46cm)	21" (53 cm)	
BLADE THICKNESS	.205" (5.2mm)	.25" (6.35 mm)	
TIP SPEED	18586 ft/min	18850 ft/min	
	5665 m/min	5745 m/min	
	@3600 Engine RPM	@3600 Engine RPM	

PARTS SECTION

ENGINE DECK ASSY

FIGURE 1

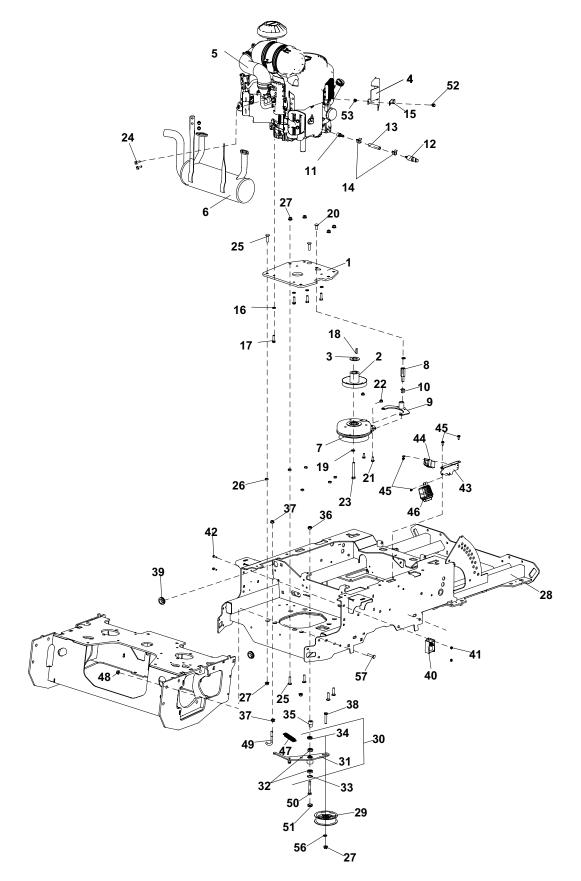

BOB-CAT

46

ENGINE DECK ASSY

BOB-CAT

FIGURE 1

ITEN	I PART NO	. DESCRIPTION	QTY	ITE	M PART NO	DESCRIPTION	QTY
1	4177964.2	PLT-ENGINE	1				
2	4174604	PULLEY-ENGINE	1	25	64018-49	BLT-CRG 3/8-16 X 1-1/2	6
3	64163-52	WSHR 2 X 1.145X 11GA	1	26	64001-6	NUT-HEX JAM 3/8-16	6
4	4165312.7	DEFLECTOR-ENGINE AIR	1	27	64268-03	NUT-FL NLON LCK 3/8-16	6
		USED ON 9996003 & 9996005		28	4177995	S-FRAME W/ LABELS	1
				29	4174597	PULLEY-IDLER,4"DIA X 1"	1
5	4164368	ENGINE-FX730V KAW	1	30	4177890	ASSY-ARM, IDLER SHRT	1
*	4164576	S-AIR FILTER PRIMARY			INCLUDES ITI		
*	4164577	S-AIR FILTER SAFETY					
*	4164537	FILTER-OIL		31	4177852	WLDMT-ARM, IDLER SHRT	1
*	4168368	FILTER-FUEL		32	4128004	BEARING-BALL 10 X 26 X 8	2
				33	64144-40	SNAP RING-26MM	1
	4164369	ENGINE-FX801V KAW		34	4127999	SEAL-16 X 24 X 7	1
*	4152953	S-AIR FILTER PRIMARY		35	4174553	PIN-IDLER	1
*	4152954	S-AIR FILTER SAFETY		36	64237-03	LOCKNUT-NYLON M10-1.5	1
*	2722214	FILTER-OIL		37	64141-4	NUT-WLF 3/8-16	2
*	4168368	FILTER-FUEL		38	64123-67	BLT-HEX 3/8-16X2	1
				39	4175868	GROMMET-RUBBER, 1.00 ID	2
	4175174	ENGINE-FX850V KAW		40	4169459	CONTROL-SOFT START	1
*	4152953	S-AIR FILTER PRIMARY		41	64025-15	NUT-HEX #10-24 KEPS	2
*	4152954	S-AIR FILTER SAFETY		42	64152-46	SCREW-SLT HH 10-24X1/2	2
*	2722214	FILTER-OIL		42	4176630.7	BRKT-RELAYS&DELAY	1
*	4168368	FILTER-FUEL		43	2188154	MODULE-DELAY	1
				44	64197-033	BLT-TDFM 10-24 X 3/8	5
6	4175632	MUFFLER-FX651V-FX730V	1	46	4175966	HARNESS-WIRING,UPPER	1
	4175631	MUFFLER-FX801V-FX850V		40	4169716	SPRING-EXTENSION	1
				48	64268-05	NUT-FL NYLON LOCK 1/2-13	8
7	4165689	CLUTCH-ELECTRIC, 225	1	40	4177835	PIN-SPRING, HOOK	1
8	4169106	PIN-CLUTCH, TALL	1	50	64205-009	BLT-METRIC M10-1.5X65	1
9	4174466.7	WLDMT-CLUTCH STOP	1	51	4128002	CAP-26X7 END	1
10	38304-03	BRG FLGD PLASTIC	1	52			1
11	4164252-001	FTNG-3/8 MNPT TO 3/8 BRB	1	52	64262-001 64229-01	BLT-FLG HD 1/4-20 X 1/2	-
12	4164251	DRAIN VALVE	1	53		NUT-NYLON LOCK 1/4-20	1 1
13	69053-03	HOSE-HYD (17" L)	1	54	64207-01	NUT-HEX M8-1.25	I
14	88042-03	CLAMP, HOSE 5/8	2			TO POSITIVE BATTRY CABLE	
15	48412-01	CLIP-CABLE 3/4 J X 10.32	1	FF*	04000 007		
16	64006-03	LOCKWSHR-3/8 HELICAL	4	55*	64263-007	BLT-FLG HD M8-1.25 X 20	1
17	64123-16	BLT-HEX 3/8-16X1-1/4	4			TO GROUND	
18	64164-12	KEY-1/4X1 SQ	1	56	64163-69	WSHR .391X.88X10 GA	1
19	64006-06	LOCKWSHR-7/16 HELICAL	2	57	64018-6	BLT-CRG 1/2-13X1	8
20	64018-44	BLT-CRG 3/8-16X1 SN	2 1				
20 21	64123-54	BLT-HEX 5/16-18X3/4	2				
21	64268-02	NUT-FL NYLN LCK 5/16-18	2				
22 23	64123-291	BLT-HEX 7/16-20 X 3-1/4	2				
23 24	64263-007	BLT-FLG HD M8-1.25 X 20	4				
24	04203-007	USED ON 9996003 & 9996005	4				
		0250 ON 3330002 & 3330002			*NOT ILLUST	RATED	

*NOT ILLUSTRATED

BUMPER / WRAP

FIGURE 2


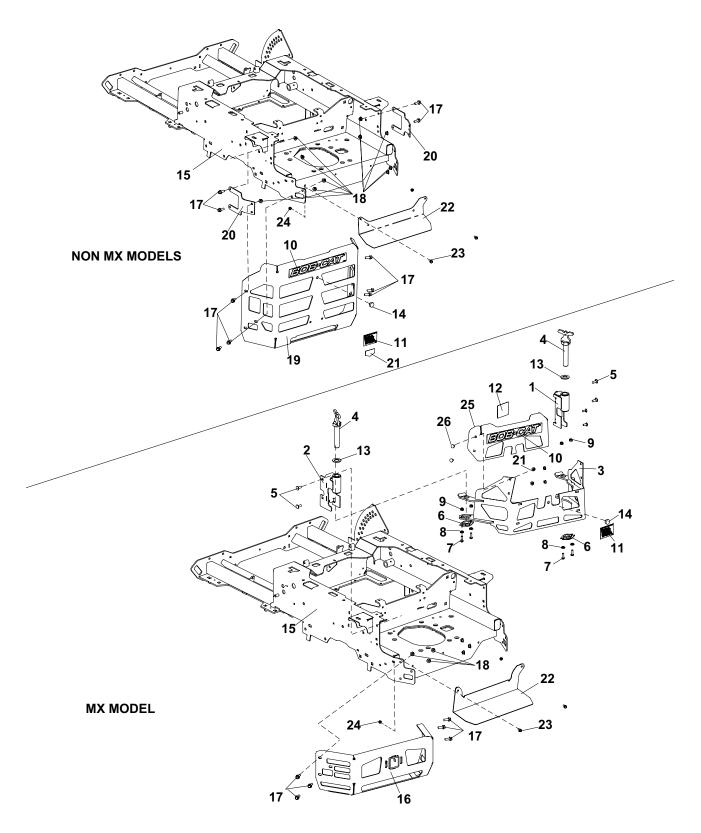


FIGURE 2

ITEN	I PART N	10. D	ESCRIPTION	QTY	ITEM	PART NO.	DESCRIP	ΓΙΟΝ	QTY
ITEM	IS 1-13, 16 L	JSED ON 9	996006 MODELS ONL	Y					
1	4175709.2	WLDMT-H	IINGE BRKT,RH	1					
2	4175708.2	WLDMT-H	IINGE BRKT, LH	1					
3	4177547.7	WLDMT-E	BUMPER ZZT	1					
4	4175674	WLDMT-H	IINGE PIN	2					
5	64018-3	BLT-CRG	3/8-16X1	4					
6	4176051	WLDMT-C	CLAMPING NUT	2					
7	64123-68	BLT-HEX	5/16-18X1	4					
8	4170388	SPACER-	FOOTPLATE LATCH	4					
9	64268-02	NUT-FL N	YLON LOCK 5/16-18	4					
10	4175836	LABEL-BO	OB-CAT,2.0 X 15.5	1					
11	4116761		ADE IN USA	1					
12	4176228		ARNING, WRAP	1					
13	4175893		AT, UHMW	2					
14	4176633		-GROMMET,3/16IN	1					
15	4177995		W/ LABELS	1					
ITEM	IS 16-18 USI	ED ON 999	6006 MODEL						
16			BUMPER,ZZT	1					
			HD 3/8-16 X 1	10					
18	64268-03		YLON LOCK 3/8-16	10					
ITEM	IS 19-21 USI	ED ON 999	6001 & 9996002 MODI	ELS					
19	4176884		R/WRAP, W/LABELS	1					
20			MPER WRAP UPPER	2					
21	4176399	-	FT POINT	1					
22	4177845.2	SHIELD-H	IEAT, MUFFLER	1					
23	64139-08	-	5/16-18X3/4	2					
24	64141-6	NUT-WLF		6					
25	4177955		ENGINE WRAP SHRT	1					
26	64018-9	,	5/16-18X 3/4 G5	4					
		221 0100	0.1010/0/100						

FUEL TANKS/CONTROL PANEL

FIGURE 3

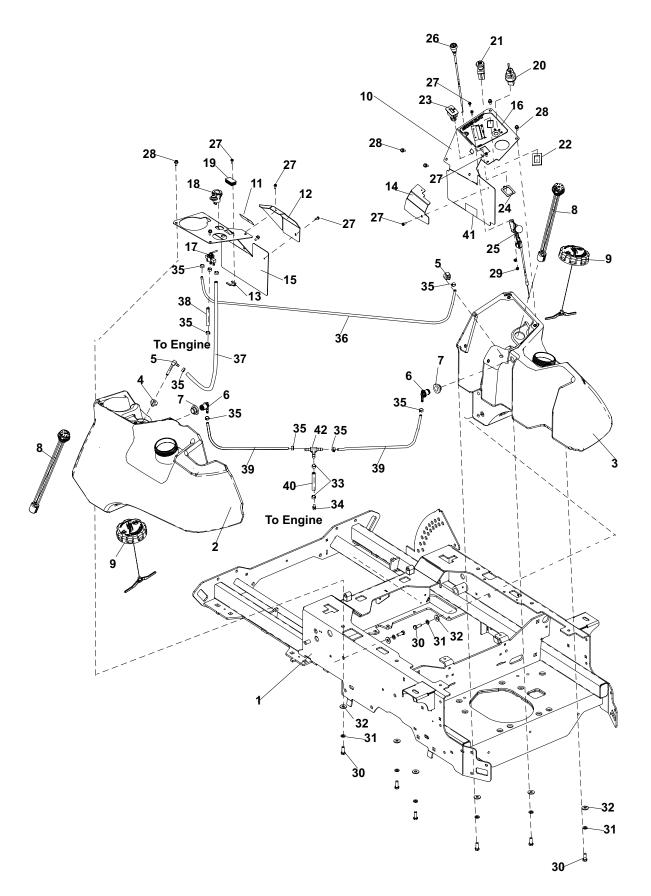

FUEL TANKS/CONTROL PANEL


BOB-CAT

FIGURE 3

ITE	EM PART NO	D. DESCRIPTION	QTY	ITE	M PART NO	D. DESCRIPTION	QTY
1	4177995	S-FRAME W/ LABELS	1	27	64197-033	BLT-TDFM 10-24 X 3/8	5
2	4176882	S-TANK,LH W/ LABELS	1		64262-001	BLT-FLG HD 1/4-20 X 1/2	8
	INCLUDES ITE	EMS 4-8			64025-15	NUT-HEX #10-24 KEPS	2
					64123-50	BLT-HEX 3/8-16X1	8
3	4176883	S-TANK, RH W/ LABELS	1		64006-03	LOCKWSHR-3/8 HELICAL	8
	INCLUDES ITE	EMS 4-8		-	64163-31	WSHR 25/64X1X12	8
					88042-01	CLAMP-HOSE 3/16	2
4	4132325	GROMMET-SEALING	2		4165864	FITTING, 1/4 TO 3/16	1
5	4174476-1	TUBE-FUEL PICK-UP	2		88042N	CLAMP-HOSE	10
6	4165763	VENT-TANK	2			HOSE-1/4 FUEL LINE, CUT 63"	1
7	4174343	GROMMET-ROLL OVER VENT		-	4162977-003		1
8	4174476-2	GAUGE-FUEL,ANALOG	2		4162977-003		1
9	4176561	CAP-FUEL 3.5"	2		4162977-003		2
10	4176881	S- PANEL, RH W/ LABELS	1		4162989-001	HOSE-3/16 FUEL LINE CUT 42"	
	INCLUDES ITE	EMS 16 & 41			4167226	LABEL-RELAY/FUSE I.D.	1
				42	2188161	VALVE-TANK SELECTOR	1
11	4175482	LABEL-FUEL SELECTOR	1				
12	4176302.2	COVER - FUEL LINE, LH	1				
13	4176476.2	RETAINER-PLUG	1			*NOT ILLUSTRATED	
14	4176358.2	COVER - FUEL LINE, RH	1				
15	4176301.2	BRKT-CONTROL PANEL, LH	1				
16	4175835	LABEL-CONTROL PANEL	1				
17	4172344	VALVE-FUEL SELECTOR	1				
18	4142266	CONNECTOR 12V RECEPTAC	LE1				
19	4169919	PLUG-RECT, PLASTIC	1				
20	128010	SWITCH KEY 5 TERM MAG	1				
*	128010-01	S-KEY SWITCH NYLON NUT					
	128010-03	S-COVERED KEY					
21	2721505	SWITCH-PTO	1				
	2188178	SWITCH-RETAINER	1				
	4177930	HOUR METER-MAG SENSE	1				
-			1				
	4177493	RETAINER-HOUR METER					
25	4175353-03	CABLE-THROTTLE 50.5"	1				
	4177944	KNOB-THROTTLE	1				
26	4175352-03	CABLE-CHOKE 54"	1				
	4177945	KNOB-CHOKE	1				
	-						

REAR WHEEL ASSEMBLY

FIGURE 4

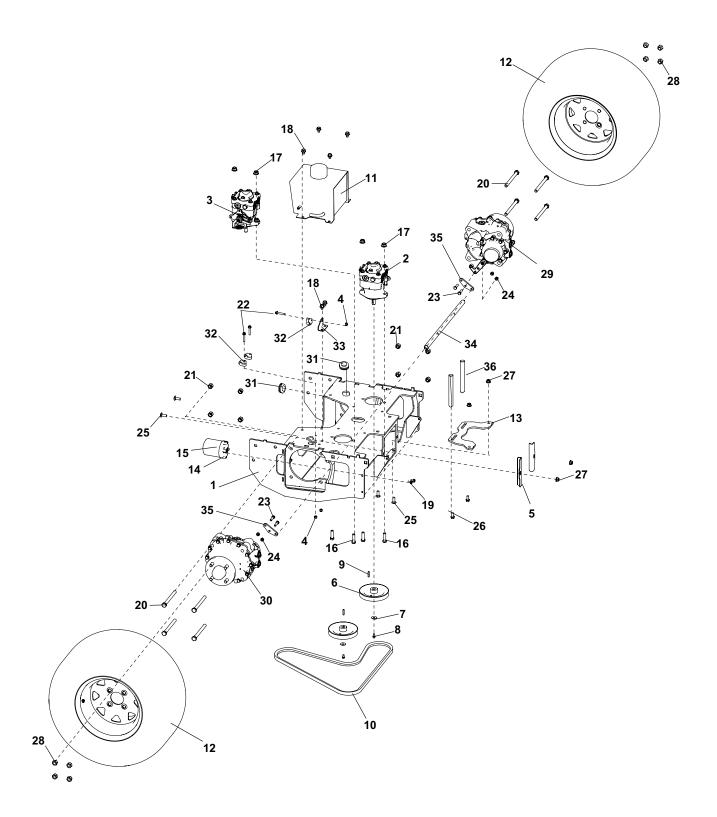

REAR WHEEL ASSEMBLY

BOB-CAT


FIGURE 4

ITEM PART NO	D. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
 2 4175534 3 4175533 4 64229-01 5 4174247.7 6 4174739 7 64209-09 8 64205-013 9 64238-03 10 4174132 11 4176798 12 4176504 4175261-01 4175522-01 	WLDMT-UNDERCARRIAGE PUMP-12CC HYDRO,LH PUMP-12CC HYDRO,RH NUT-NYLON LOCK 1/4-20 BRKT-BELT GUIDE PULLEY-PUMP,12CC B BELT WSHR-CON SPRING BLT-METRIC M6-1X12 KEY-METRIC 5MM X 28MM BELT-5L COGGED, 72.13 S-RESERVOIR-HYDRAULIC WHEEL-ASSY,24X10.5-12 BLF RIM-12X8.5 BLK TIRE-24X10.5-12 OTR	1 1 5 2 2 2 2 2 2 2 1 1 4 2				
4176503-01	WHEEL-ASSY,24X12-12 6-SP RIM-12X8.5 6-SPOKE TIRE-24X12-12 OTR 9996006)	K 2				
134176097.2141380591527203961664123-841764268-041864197-0161964139-022064123-1662164229-052264262-0052364123-472464262-0062764268-032864187-032941755363041755353105-034324176558334176579.7344176507354176516.7364175944	PLT-BELT GUIDE FILTER HEAD FILTER-HYDRAULIC BLT-HEX 7/16-14X1-1/2 NUT-FL NYLON LOCK 7/16-14 BLT-TDFM 3/8-16X1/2 BLT-WLF 1/4-20 X 1/2 BLT-HEX 1/2-13X5-1/2 NUT-NYLON LOCK 1/2-13 BLT-FLG 1/4-20 X 1-1/2 BLT-HEX 5/16-18X1-1/4 NUT-NYLON LOCK 5/16-18 BLT-CRG 3/8-16X1 SN BLT-FLG HD 5/16-18 X 3/4 NUT-FL NYLON LOCK 3/8-16 NUT-WHEEL 1/2-20 MOTOR-15 CI LH MOTOR-15 CI RH GROMMET CLAMP-1/2 TUBE BRKT-TUBE CLAMP BAR-BRAKE PLATE-BRAKE PIN-BELT GUIDE,TALL	1 1 1 4 4 6 2 8 8 3 4 4 4 2 4 8 1 1 2 3 1 1 2 2				


*NOT ILLUSTRATED

CONTROL HANDLE ASSY

FIGURE 5

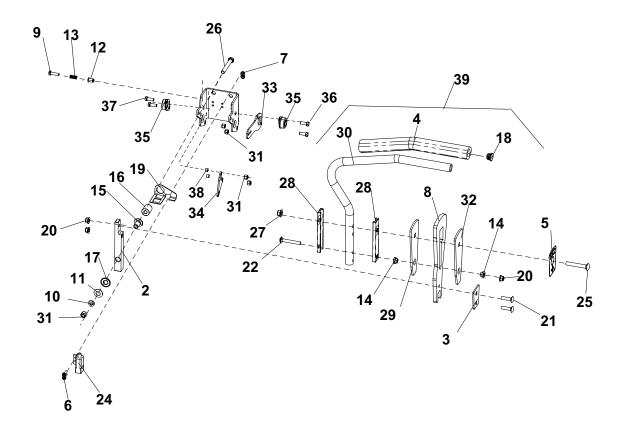

BOB-CAT

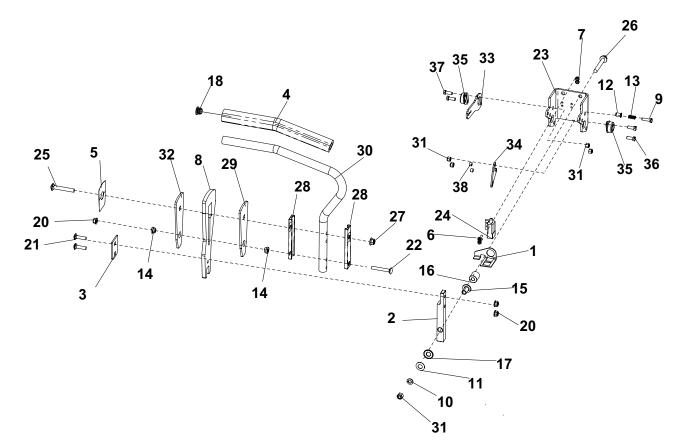

54

CONTROL HANDLE ASSY


BOB-CAT

FIGURE 5

ITE	M PART N	I O . I	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIP	TION	QTY
1	4175188	BRKT-S	WITCH CONTROL, RH	1					
2	4175189		RACTION CONTROL	2					
3	4176308	PLT-CT		2					
4	4176072		ONTROL, ERGO	2					
5	4176717		HANDLE ADJUST	2					
6	64152-49		V-SLT HH 10-24X3/4	4					
7	64025-15		EX #10-24 KEPS	4					
8	4175185		NTROL LEVER	2					
9	64123-343		X 1/4-20X1 NYLON	2					
10	64006-03		SHR-3/8 HELICAL	2					
11	64209-18	-	CON SPRING	2					
12	04-015		1/4-20 .260 GRIP	2					
13	4173113		G-COMP, .36 OD X .29 L	2					
14	4175191		R-HANDLE	4					
15	4168345		R-CTLARM,	2					
16	33030-08			2					
17	4168346			2					
18	4163692			2					
19	4175187		WITCH CONTROL, LH	1					
20	64268-02	-	NYLON LOCK 5/16-18	6 4					
21 22	64018-14 64018-29	-	G 5/16-18X1-1/4 G 5/16-18 X 2 1/4	4					
22	4177796		C-ONTROL	2					
23	INCLUDES I		C-ONTROL	2					
	INCLUDES								
24	108208	SWITCI	H, DBL. POLE NC/NO	2					
25	64018-31	BLT-CR	G 3/8-16 X 2-1/2	2					
26	64262-036	BLT-FL	G HD 3/8-16 X 3	2					
27	64268-03	NUT-FL	NYLON LOCK 3/8-16	2					
28	4175190	PAD-HA	ANDLE CLAMP	4					
29	4175186	PLT-CO	NTROL CLAMP	4					
30	4174269.2	TUBE-C	CONTROL	2					
31	64229-03		(LON LOCK 3/8-16	8					
32	4176875		TROL PLT, W/ LABELS	2					
33	4174892.7		M, DAMPER	2					
34	4175080.7		A CONTROL	2					
35	2188145		IG75ID BRZ SLF ALGN						
36	64123-50		X 3/8-16X1	4					
37	64123-70		X 3/8-16X1-1/2	4					
38	518438		NG STL.39X.50X.35	4					
39	4177067		DLE W/ GRIP	2					
	INCLUDES I	IEMS 4,	5, 18						

CONTROL / BRAKE ASSY

FIGURE 6

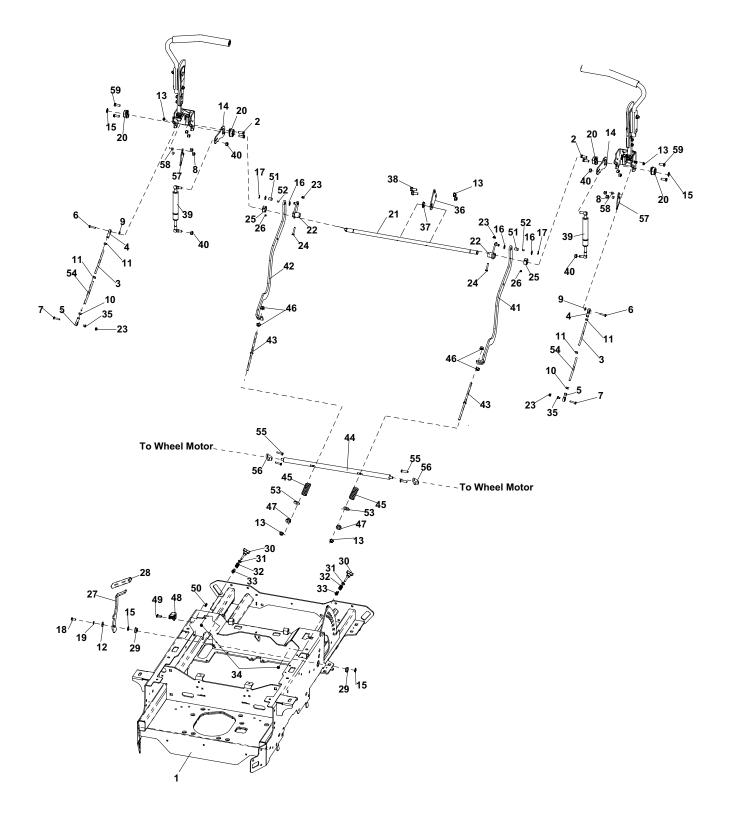

CONTROL / BRAKE ASSY

FIGURE 6

ITE	M PART N	O. DESCRIPTION	QTY
1	4175959	S-FRAME W/ LABELS	1
2	64123-50	BLT-HEX 3/8-16X1	4
3	4174317	ROD-CONTROL	2
4	4143595-02	ROD END-FEMALE 5/16-24 LH	2
5	4143595-01	ROD END-FEMALE	2
6	64123-47	BLT-HEX 5/16-18X1-1/4	2
7	64123-80	BLT-HEX 1/4-20X1-1/4	2
8	64229-03	NUT-NYLON LOCK 3/8-16	8
9	64163-02	WSHR .321X.593X11	4
10	64025-33	NUT-HEX 5/16-24 LH	2
11	64025-03	NUT-HEX 5/16-24	4
12	64163-29	WSHR-21/64 X 1 X 11GA	1
13	64268-02	NUT-FL NYLON LOCK 5/16-18	4
14	4174892.7	PLT-ARM, DAMPER	2
15	64221-03	E-RING 19mm/.750	4
16	64163-61	WSHR .81X.406X16GA	4
17	64221-07	E-RING .375	2
18	64123-54	BLT-HEX 5/16-18X3/4	1
19	64006-02		1
20	2188145	BEARING75ID BRZ SLF ALGN	
21	4174294	BAR-PIVOT, CONTROLS	1
22	4174423.7	WLDMT-PIVOT, BRAKE	2
23	64268-01	NUT-FL NYLON LOCK 1/4-20	4
24	64123-120		2
25	85-SC12	SET COLLAR 3/4	2
26	64044-6	SCREW-SET 5/16-18X1/4	2
27	4174439.2	BRKT-HANDLE, BRAKE	1
28	2188155	GRIP-1/4 X 1 X 4-1/2	1
29	4146187	BEARING-FLANGE POLYMER	2
30	4163446		2
31	64163-55	WSHR .328X.75X14 GA	2
32	41-053	SPRING COMP .681 X 1.125	2
33	4173804	RIVET NUT 5/16-18 X 0.312	2
34	64151-41	NUT-HEX,5/16-18 NYL LCK JAM	
35	4175391	BUSHING-CONTROL	2
36	4174272.7	PLT-SUPPORT, CONTROLS	1
37	4127142	BUSHING-CONTRL ARM	1
38		BLT-FLG HD 5/16-18X3/4	2
39	4174889	DAMPER-CONTROL	2
40	64237-05	LOCKNUT-NYLON M8-1.25	4
41	4175427.7	BRKT-LINK, RH BRAKE	1
42	4175435.7	BKRT-LINK, LH BRAKE	1
43	4174444	ROD-BRAKE	2
43 44	4176946.7	BRKT-BRAKE ARM	2
44 45	4175412	SPRING-COMPRESSION	2
45 46	64141-6	NUT-WLF 5/16-18	4
40 47	4175191	SPACER-HANDLE	4
-+1			4


BOB-CAT

,	ITE	М	PART	NO. DESCRIPTION	QTY
-	48	21	88156	SWITCH-NONO DBLE POLE	1
	49	64	152-49	SCREW-SLT HH 10-24X3/4	2
	50	64	025-15	NUT-HEX 10-24 KEPS	2
	51	41	69194	BUSHING511 X .688 X .264	2
	52	52	1679	BUSHING	2
	53	64	163-102	WSHR-MACH 1/2 X 7/8 X .045	4
	54	41	76615	EXTENTION-ROD	2
	55	64	123-47	BLT-HEX 5/16-18X1-1/4	4
	56	41	76516.7	PLATE-BRAKE	2
	57	41	75080.7	PLT-WM CONTROL	2
	58	51	8438	BUSHING STL.39X.50X.35	4
	59	64	123-70	BLT-HEX 3/8-16X1-1/2	4

*NOT ILLUSTRATED

HEIGHT OF CUT ASSEMBLY

FIGURE 7

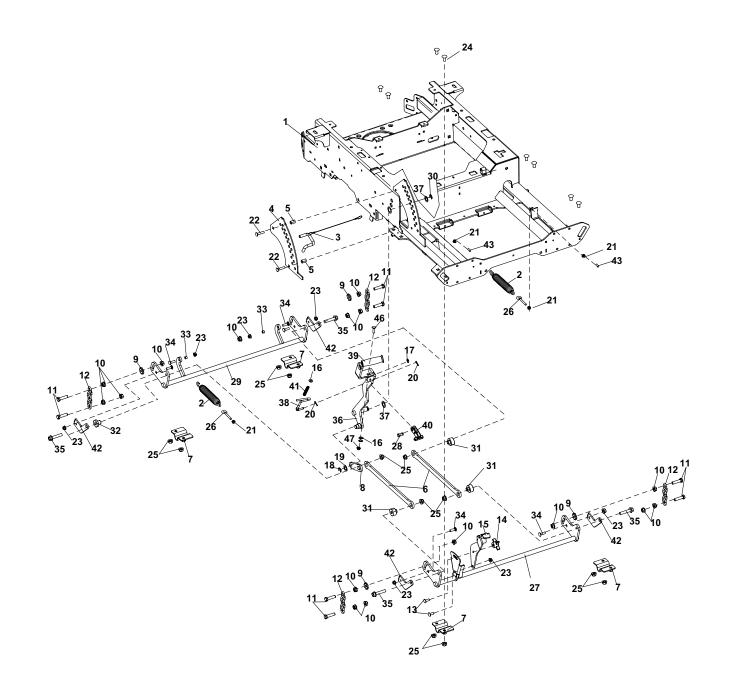

HEIGHT OF CUT ASSEMBLY


BOB-CAT

FIGURE 7

ITE	M PART N	O. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4177995	S-FRAME W/ LABELS	1				
2	2722719	SPRING-DECK LIFT	2				
3	4167018	PIN-DECK LIFT	1				
4	4176873	S-HOC PLT W/ LABELS	1				
5	2183071-03	SPACER	2				
6	4174079.7	PLT-LINK, DECK LIFT	2				
7	4174076.2	BRKT-HANGER, DECK LIFT	4				
8	4174080.7	PLT-LINK, HOC	1				
9	4173953	PLT-GEAR, HOC	4				
10	64141-13	NUT-WLF 1/2-13	16				
11	64123-281	BLT-HEX 1/2-13X2 FULL THD	8				
12	2188127	CHAIN-6.35 (.250) 5 LINKS	4				
13	64018-44	BLT-CRG 3/8-16X1 SN	2				
14	38524	KNOB-4 PRONG 3/8-16	1				
15	4174478.7	WLDT-PEDAL	1				
16	64163-02	WSHR .321X.5931X11GA	2				
17	64144-34	SNAP RING.50	1				
18	64221-03	E-RING 19mm/.750	1				
19	64163-89	WSHR- 1.250DX.76IDX18GA	1				
20	64168-2	COTTER-HAIRPIN .08 X 1.19	2				
21	64141-6	NUT-WLF 5/16-18	4				
22	64018-5	BLT-CRG 3/8-16X1-3/4	2				
23	64268-03	NUT-FL NYLON LOCK 3/8-16	9				
24 25	64018-6	BLT-CRG 1/2-13X1	8 12				
25 26	64268-05 64158-08	NUT-FL NYLON LOCK 1/2-13 EYE BOLT 5/16-18 X 2.5 THD LO					
20 27	4174072.7	WLDMT-DECK LIFT, FRONT	5 Z				
27	33138-13	PIN-CLEVIS GRVD .500 X 1.00	1				
20	4174071.7	WLDMT-DECK LIFT, REAR	1				
30	64221-04	E-RING .875	1				
31	4174012	SPACER-LIFT ARM, LONG	3				
32	4174013	SPACER-LIFT ARM, SHORT	1				
33	518438	BUSHING	2				
34	64018-7	BLT-CRG 3/8-16X1-1/4	6				
35	64262-030	BLT-FLG HD 1/2-13 X 2-1/2	4				
36	4174029.7	WLDMT-HANDLE, HOC	1				
37	64163-65	WSHR890X1.375X18GA	2				
38	4175394	ROD-LIFT STOP	1				
39	C100018	GRIP-HANDLE	1				
40	4175403.7	LATCH-LIFT LEVER	1				
41	2720544	SPRING-COMPRESSION	1				
42	4174206.7	PLT-ADJUSTMENT, HOC	4				
43	4176608	CAP-VINYL,1/4	2				
44*	4175470	LABEL-HOC, OUTER	1				
45*	4175471	LABEL-HOC, INNER	1				
46	64018-9	BLT-CRG 5/16-18X3/4 G5	1				
47	64151-41	NUT-HEX,5/16-18 NYL LCK JAN	11				
		*NOT ILLUSTRATED					

BATTERY & OIL COOLER

FIGURE 8

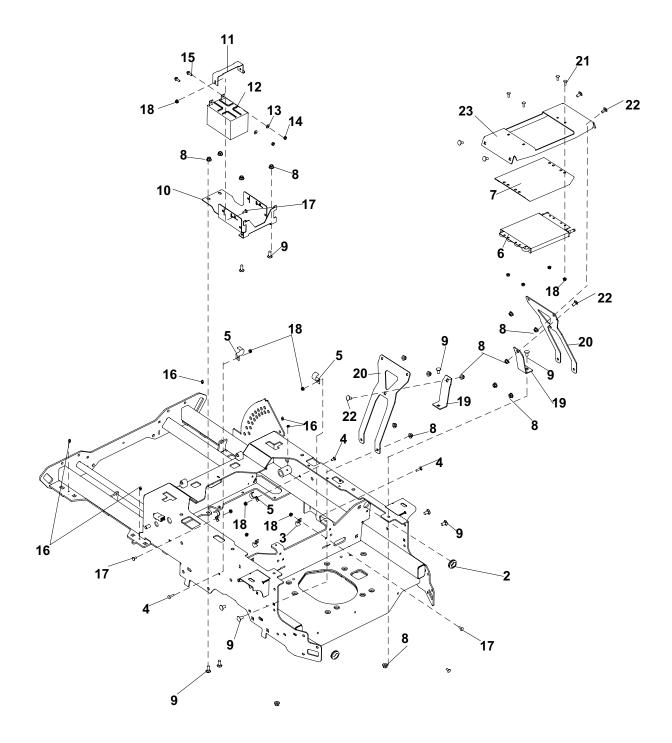


BATTERY & OIL COOLER

BOB-CAT

FIGURE 8

ITEN	I PART N	IO. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4177995	S-FRAME W/ LABELS	1				
2	4175868	GROMMET-RUBBER, 1.0 ID	2				
3	4171606-3	CLAMP-HALF, 5/8 HOSE	2				
4	64018-42	BLT-CRG 1/4-20 X 1	2				
5	4171606-2	CLAMP-HALF, 5/8 HOSE	4				
6	2188173	COOLER-OIL	1				
7	2720891	SCREEN-OIL COOLER	1				
8	64268-03	NUT-FL NYLON LOCK 3/8-16	16				
9	64018-44	BLT-CRG 3/8-16X1 SN	10				
10	4174234.2	BRKT-BATTERY TRAY	1				
11	4174233.2	BRKT-BATTERY STRAP	1				
12	4171099	BATTERY-190CCA	1				
13	64163-03	WSHR .256ID X.62OD X 18 GA.	2				
14	64025-01	NUT-HEX 1/4-20	2				
15	64262-002	BLT-FLG HD 1/4-20 X 3/4	2				
16	85010N	ZERK 1/4-28 STR SELF THREAD) 5				
17	64018-41	BLT-CRG 1/4-20 X 5/8	5				
18	64268-01	NUT-FL NYLON LOCK 1/4-20	11				
19	4176618.7	BRACE-COOLER SUPPORT SHT	2				
20	4176617.7	SUPPORT-COOLER SIDE SHRT	2				
21	64018-2	BLT-CRG 1/4-20 X 3/4	4				
22	64018-23	BLT-CRG 3/8-16X3/4 SHRT	6				
23	4175068.7	SUPPORT-COOLER	1				
		*NOT ILLUSTRATED					

UPPER WIRE HARNESS

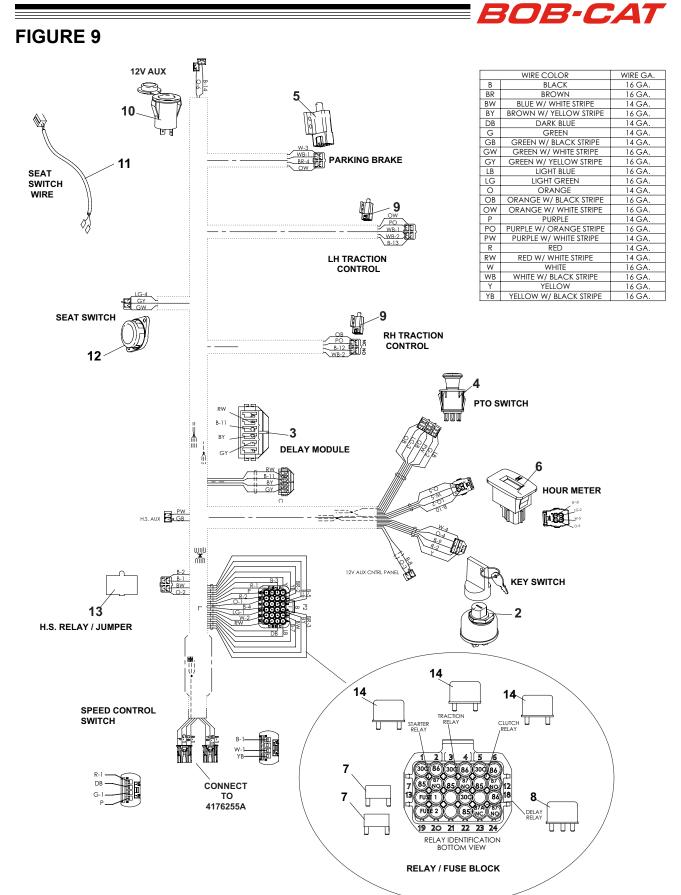

UPPER WIRE HARNESS


BOB-CAT

FIGURE 9

ITE	M PART N	IO. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4175966A	HARNESS-WIRING, UPPR	1				
2	128010	SWITCH, KEY	1				
3	2188154	MODULE-DELAY	1				
4	2721505	SWITCH-PTO	1				
5	2188156	SWITCH-NONO DBL POLE	1				
6	4177930	METER-HOUR MAG SENSOR	1				
7	4173756	FUSE-20 AMP MINI	2				
8	4173755	RELAY-SPDT MICRO	1				
9	108208	SWITCH DBL POLE NC/NO	2				
10	4142266	CONNECTOR 12V RECEPTACLI	E 1				
11	4164496	HARNESS-JUMPER	1				
12	4124009	SWITCH-SEAT NO	1				
13	4176032	HARNESS-JUMPER	1				
14	4177223	RELAY-SPST MICRO	3				
*NC	OT ILLUSTRA	TED					

FIGURE 10

	WIRE COLORS	WIRE GA.
RW	RED W/ WHITE STRIPE	16 GA.
R	RED	16 GA.
В	BLACK	16 GA.
YB	YELLOW W/ BLACK STRIPE	16 GA.
WB	WHITE W/ BLACK STRIPE	16 GA.
DB	DARK BLUE	16 GA.
G	GREEN	16 GA.
BW	BLACK W/ WHITE STRIPE	16 GA.
GRA	GRAY	16 GA.
LB	LIGHT BLUE	16 GA.

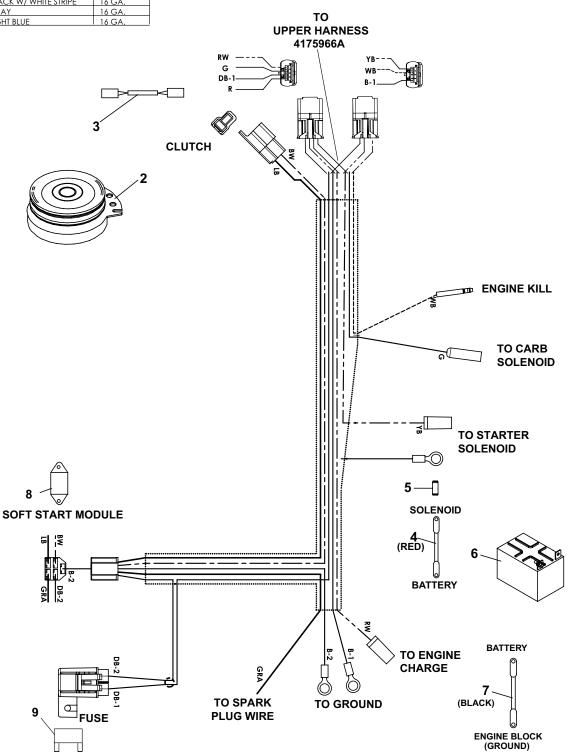

LOWER WIRE HARNESS


BOB-CAT

FIGURE 10

QTY	DESCRIPTION	PART NO.	ITEM	DESCRIPTION QT	PART NO.	ITEM
				NESS-WIRING, LOWER ICH-ELECTRICAL E-CLUTCH LE-CONDUIT BATTERY 62" T-BATTERY TERM POS TERY-190CCA RGER-BATTERY,AGM	889 CLUT 949 WIRE 927-06 CABL 96 BOOT 99 BATT	1 417 2 416 3 272 4 272 5 112 6 417 * 417
				LE-BATTERY BLACK 64 TROL-CLUTCH,SOFT START E-10 AMP	59 CON	7 108 8 416 9 148
					LUSTRATED	* NOT I

AIR COOLED HYDRAULICS

FIGURE 11

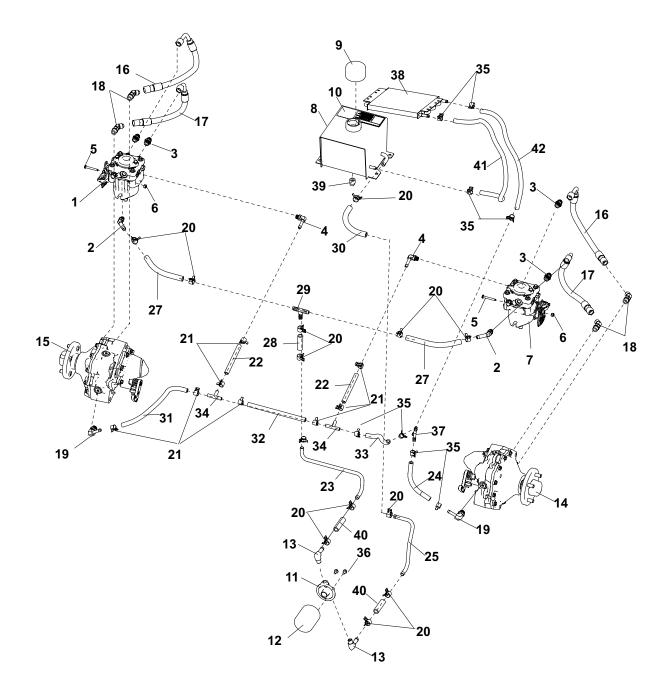


AIR COOLED HYDRAULICS

BOB-CAT

FIGURE 11

ITE	M PART N	O. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 3 24	4175534 2690030-02 25-0503-8-8 158058-04 64123-60 64229-01 4175533 4176798 4167240 4176778 138059 2720396 108086-03 4175535 4175536 4176536-02 4176536-02 4176536-01 108205-02 158058-17 88042-05 88042-06 69053-13 4176487 69053-05 4176488	O. DESCRIPTION PUMP-12CC HYDRO,LH FTG-9/16-18 ORB X 1/2 BARB 45 FITTING STR -8 M ORB/-8 M JIC FITTING 90 -6 MORB X -6 HOSE BLT-HEX 1/4-20X2 NUT-NYLON LOCK 1/4-20 PUMP-12CC HYDRO,RH S-RESERVOIR ASSY INCLUDES ITEMS 9,10 & 39 CAP-RESERVOIR, ANTI-SPLASH LABEL-WARNING FILTER HEAD FILTER-HYDRAULIC FTG-BARB 90-1/2 X 3/8 MNPT MOTOR-15 CI RH MOTOR-15 CI LH HOSE-HYD 1/2 ST X 90 LG 15.75' HOSE-HYD 1/2 ST X 90 MED 14" ELBOW MALE 45 8X8 M-ORB/JIC FITTING 90 -12 MORB X -6 HOSE CLAMP-HOSE 13/16 CLAMP, HOSE HOSE-HYDRO 4.75" TUBE-FILTER OUTLET HOSE-HYDRO 13" TUBE-FILTER INLET	$ \begin{array}{c} 1\\ 2\\ 4\\ 2\\ 2\\ 1\\ 1\\ 1\\ 1\\ 2\\ 1\\ 2\\ 4\\ 2\\ 4\\ 2\\ 4\\ 2\\ 4\\ 2\\ 4\\ 2\\ 4\\ 2\\ 4\\ 2\\ 4\\ 2\\ 4\\ 2\\ 4\\ 2\\ 2\\ 2\\ 4\\ 2\\ 2\\ 2\\ 4\\ 2\\ 2\\ 2\\ 4\\ 2\\ 2\\ 2\\ 4\\ 2\\ 2\\ 2\\ 4\\ 2\\ 2\\ 2\\ 4\\ 2\\ 2\\ 2\\ 2\\ 2\\ 2\\ 2\\ 2\\ 2\\ 2\\ 2\\ 2\\ 2\\$		PART NO.	DESCRIPTION	QTY
25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41							

FIGURE 12

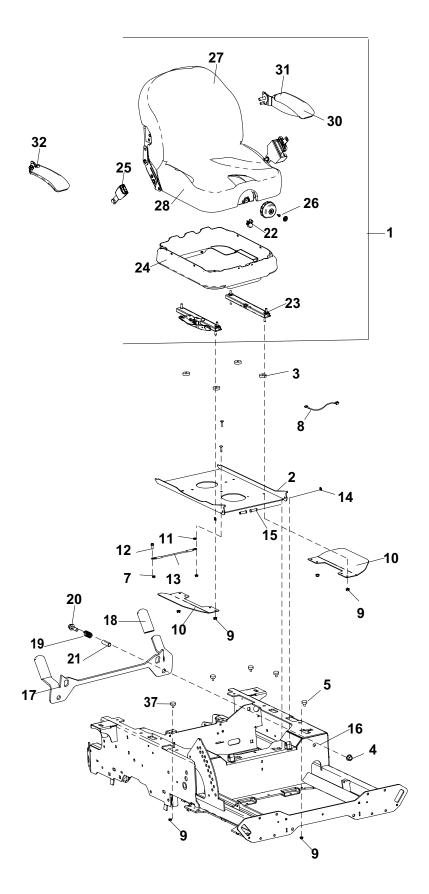

SEAT ASSEMBLY


BOB-CAT

FIGURE 12

ITEN	I PART NO	D. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QT
1	4175334	SEAT-SUSPENSION I3M - ZZT	1				
	INCLUDES ITEMS 24-34						
2	4174033.2	BRKT-PLATE, SEAT	1				
3	2720975-07	SPACER-NYLON 3/8IN	4				
4	64268-03	NUT-FL NYLON LOCK 3/8-16	2				
5	4143354	BUMPER-SEAT MOUNTING	5				
3	64018-42	BLT-CRG 1/4-20 X 1	1				
7	64268-01	NUT-FL NYLON LOCK 1/4-20	2				
3	4143068	JUMPER SEAT SWITCH	1				
)	64141-6	NUT-WLF 5/16-18	6				
0	4176859	S-GUARD W/ LABEL	2				
1	64001-13	NUT-HEX JAM 1/4-20	1				
12	64123-89	BLT-HEX 1/4-20X3/4	1				
13	4171100	TETHER-WIRE, COATED	1				
14	64144-30	SNAP RING .375	2				
5	33138-09	PIN CLEVIS GRVD .38 X 1.31	2				
6	4177995	S-FRAME W/ LABELS	1				
7	4174037.2	BRKT-LATCH,SEAT	1				
8	4135868	COVER-HANDLE, BLACK	2				
9	41-053	SPRING COMP .681 X 1.125	2				
20	64262-018	BLT-FLANGE HD 3/8-16 X 1-3/4	2				
21	516544	SPACER-LATCH,SEAT	2				
22	4124009	SWITCH-SEAT	1				
23	4169768-04	TRACK SET	1				
4	4169768-03	BELLOWS WITH HARDWARE	1				
5	4175334-03	KIT-SEAT BELT	1				
6	4169768-05	KNOB-WGHT ADJUST	1				
	4175334-01	COVER- BACK VINYL	1				
8	4175334-02	COVER-CUSHION	1				
		KIT-ARM RH & LH	1				
	(INCLUDES ITEMS 31 & 32)						
0	4165316-02	PAD-ARM SINGLE	2				
31	4169768-02	ARM KIT-LH	1				
32	4169768-03	ARM KIT-RH	1				
	*	NOT ILLUSTRATED					

FOLDING ROPS

FIGURE 13

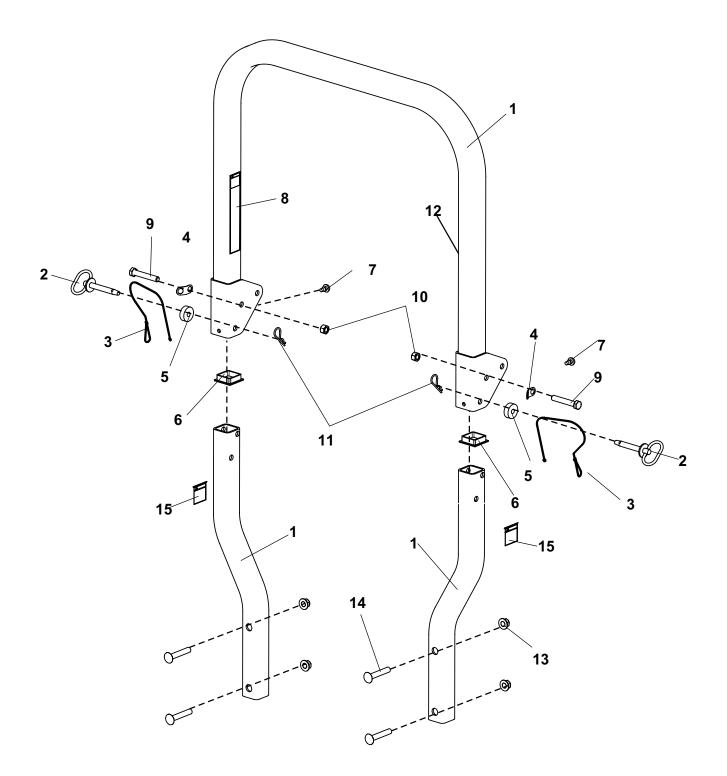

FOLDING ROPS


BOB-CAT

FIGURE 13

ITEM	PART NO.	DESCRIPTION G	QTY	ITEM	PART NO.	DESCRIPTION	QT
1	4176887 INCLUDES ITE	S-ROPS, W/LABELS MS 2-15	1				
2	4162879	PIN-HITCH 1/2	2				
	4162880	LANYARD-NYLON	2				
	4160348	WASHER-FORMED RETAINER	2				
5	4162878	WASHER EPDM 1/2	2				
6	4160344	PLUG 2 X 1/8 WALL SQ TUBE	2				
7	4160343	BUMPER-RUBBER	2				
-	4160347	LABEL-WRNG FLDNG ROPS	1				
9	64123-31	BLT-HEX 1/2-13X3	2				
10	64151-7	NUT-HEX 1/2-13 CTR LOCK	2				
11	64168-1	COTTER-HAIRPIN .120 x 2-3/8	2				
12	4178090	LABEL-ROPS TEST	1				
13	64268-05	NUT-FL NYLON LOCK 1/2-13	4				
14	64018-11	BLT-CRG 1/2-13X3	4				
15	2000570	LABEL-WARNING FUEL	2				
	*N	OT ILLUSTRATED					

FOOTPLATE & CASTER ASSEMBLY

FIGURE 14

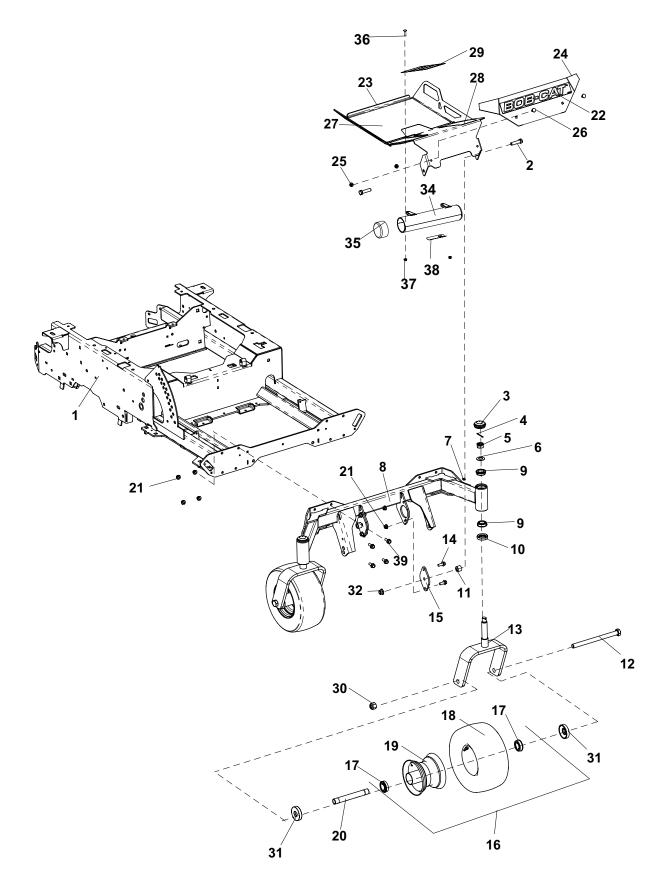

FOOTPLATE & CASTER ASSEMBLY


BOB-CAT

FIGURE 14

ITE	M PART NO	D. DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1 2 3 4 5 6 7 8	4177995 64123-24 4162986 64140-5 64025-20 64209-17 85010N 4174651.2 4174022.2	S-FRAME W/ LABELS BLT-HEX 1/2-13X2 CAP-END COTTER PIN-1/8X1-1/2 NUT-HEX 3/4-16 SLOT U WSHR-CON SPRING ZERK 1/4-28 STR SELF THF WLDMT-CASTER ARM, 52 WLDMT-CASTER ARM, 61	1 2 2 2 2 1 RD 2 1				
9 10 11 12 13 14 15 16	64123-223 4174642.2 64262-011	SEAL CR 12411 SPACER-1.0 X .516 X .75 BLT-HEX 3/4-10X10 WLDMT-YOKE, CASTER BLT-FLG HD 3/8-16 X 1 PLATE-FOOT PLATE MNTNO ASSY-WHEEL 13X6.5-6 BLK	-				
*	4175256 INCLUDES I	OPTIONAL TIRE ASSY-WHEEL NO FLAT CAS TEM 17	STER				
17 18 19 20 21 22 23	2722326-01 4175255-02 2722230-03 64268-03 4175836 4176863	BEARING-205 W/SNAP RING TIRE-13X6.50-6 SMOOTH RIM ASM-W/VALVE STEM SPANNER NUT-FL NYLON LOCK 3/8-16 LABEL-BOB-CAT,2.0 X 15.5 S-FOOTPLT W/O SPD CNTR TEMS 27-29, 33	1 1 2 6 12 1				
24	4176861 INCLUDES I	S-FOOTPLT FRONT W/LABE TEM 22	EL 1				
25 26 27 28 29 30 31 32 33* 34	64268-02 64018-51 4175840 4175841 4175842 64229-07 2722231 64268-05 4175911 4129802	NUT-FL NYLON LOCK 5/16-7 BLT-CRG 5/16-18 X 3/4 SN MAT-FOOTPLATE MAT-FOOTPLATE LABEL-FOOTPLATE WARNIN NUT-NYLON LOCK 3/4-10 SPACER-END NUT-FL NYLON LOCK 1/2-13 LABEL-INFORMATYION, Z3 TUBE-DOCUMENT INCLUDES ITEMS 35 & 38	2 1 2 NG 1 2 4 3 2				
35 36 37 38 39	38061A 64018-42 64268-01 2000735 64262-038	CAPS VINYL BLT-CRG 1/4-20 X 1 NUT-FL NYLON LOCK 1/4-20 LABEL-OPER MAN BLT-FLG HD 3/8-16 X 1	1 3 0 4 1 8				

52" SIDE DISCHARGE

FIGURE 15

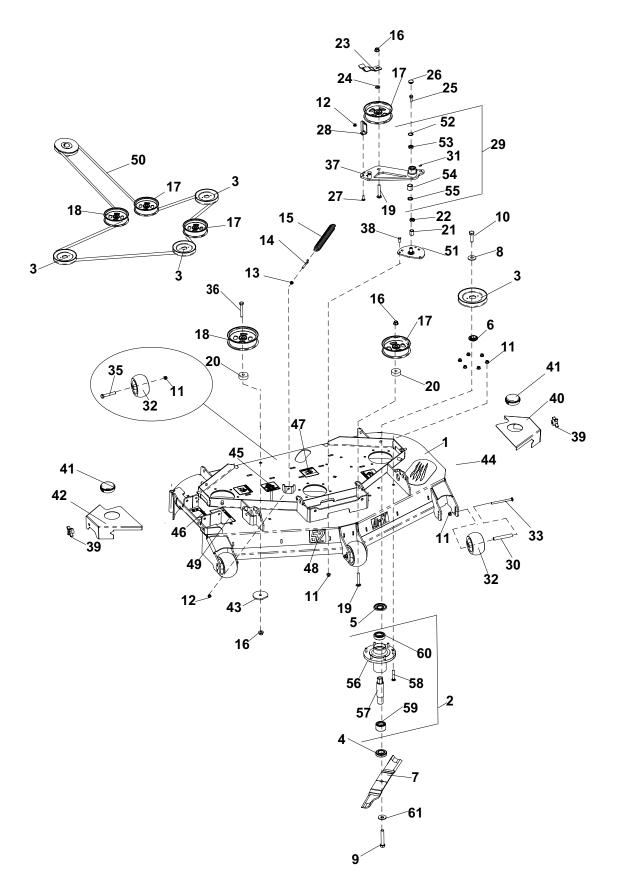


BOB-CAT

ITEN	PART NO	D. DESCRIPTION	QTY	ITEN	I PART N	O. DESCRIPTION	QTY
1	4176914	S-CUTTERDECK,52" LABELS	1	39	38524	KNOB-4 PRONG 3/8-16	2
2	4174965-3	ASSMBLY-SPNDL5.98IN	3	40	4174283.7	COVER-BELT, 52IN, LH	1
	INCLUDES I	TEMS 56-60		41	4175810	COVER-3.0IN DOME PLUG	2
				42	4176529.7	COVER-BELT, 52IN, RH	1
3	4174432	PULLEY-SPINDLE, 52IN	3	43	4176616.7	PLT-IDLER REINFORCMENT	1
4	4174961-1	SPACER-,BLADE 0.63IN	3	44	4168522	MAT-CLAW MARKS	1
5	4175081	SPACER-SPINDLE	3	45	4176925	DECAL-SPRING LENGTH 9.75	1
6	4175082-1	SPACER-PULLEY .397	3	46	4164269	LABEL-WRNNG THRN OBJCTS	1
7	112111-02	BLADE 18.00 OFFST HLFT	3	47	2000577	LABEL WARNING	3
8	64209-16	CONICAL SPRING WASHERS	3	48	4162915	LABEL-DECK SIZE, 52	1
9	64123-187	BLT-HEX 5/8-18X3-3/4	3	49	2000572	LABEL-WARNING BLADES	1
10	64123-137	BLT-HEX 5/8-18X2	3	50	4176908	BELT-CUTTERDECK,52	1
11	64268-03	NUT-FL NYLON LOCK 3/8-16	26	51	4174440.7	WLDMT-IDLER PIN	1
12	64268-02	NUT-FL NYLON LOCK 5/16-18	2	52	64144-40	SNAP RING-26MM INTERNAL	1
13	64141-6	NUT-WLF 5/16-18	1	53	4128004	BEARING-BALL 10 X 26 X 8	1
14	4176436	HOOK-SPRING	1	54	548138	BRG NDL.88 1.12 1.00	1
15	4168493	SPRING-EXTENSION	1	55	521438	GREASE SEAL	1
16	64268-05	NUT-FL NYLON LOCK 1/2-13	4	56	4174958-3	HOUSING-, SPINDLE 5.98	1
17		PULLEY-IDLER,5.50"X1.50"W	2	57	4174959-3	SHAFT,-SPINDLE 6.56IN	1
18		PULLEY-IDLER,6.00"X1.50W	1	58	64123-340	BLT-HEX,3/8-16X1-1/2 GR8	6
19 20	64018-11	BLT-CRG 1/2-13X3	2 2	59	4174963	BRNG-BALL,KOYO	1
20 21		SPACER-PM, 2.0 X .516	2 1	60	4174962	BRNG-BALL,PEER	1
21	4163155			61	64209-03	WSHR-CON SPRING .67 ID	3
22 23	4163014	SPACER BRKT-BELT GUIDE,5.5"X1.5"	1 1				
23 24	4176420.7 64163-36	WSHR 1X33/64X.187	1				
24 25	64270-02	BLT-HEX M10-1.5x30	1				
25 26	4128002	CAP-26 X 7 END	1				
20 27	4120002 64018-15	BLT-CRG 5/16-18X1 SN	1				
28	4176421.7	BRKT-BELT GUIDE,SHRT IDLE	-				
20	4176326	ASSY-DECK IDLER,52&61IN,	1				
29		TEMS 37, 52-55 & 31					
30	2720685	SPACER-ROLLER	4				
31	85010N	ZERK 1/4-28 STR SELF TAP	1		*	NOT ILLUSTRATED	
32	2721512	ROLLER-5X2.75 CENTERED	6				
33	64018-30	BLT-CRG 3/8-16 X 4-1/2	3				
34*	4172885	BLT-ANTI-SCALP ROLLER	2				
35	64123-217	BLT-HEX 3/8-16X4-1/4	1				
36	64123-95	BLT-HEX 1/2-13X3-1/4	1				
37	4176311.7	WLDMT-DECK IDLER,52&61	1				
38	64286-02	STUD-CLINCH 3/8-16X1	3				

61" SIDE DISCHARGE

FIGURE 16

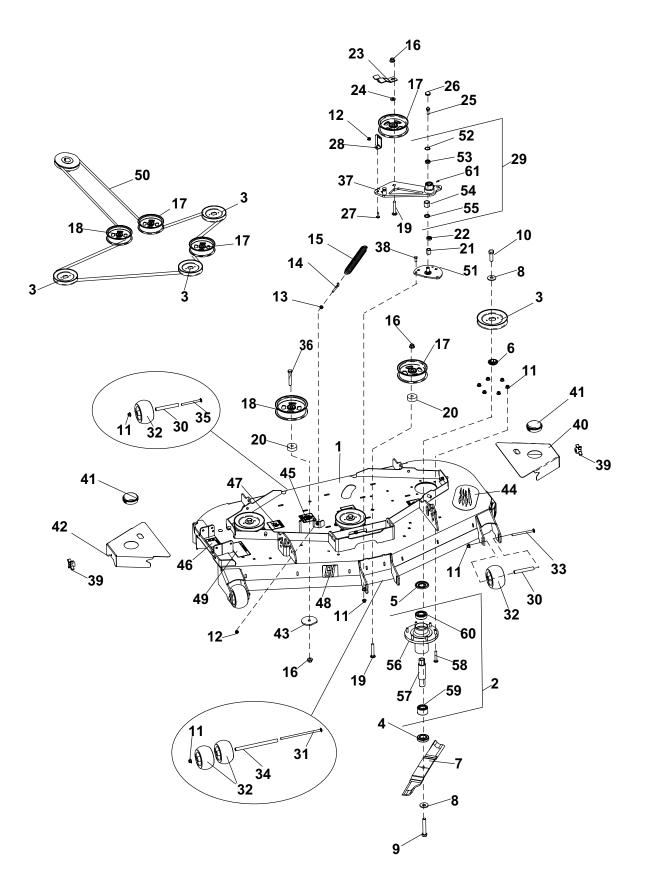



BOB-CAT

ITEN	I PART NO	0.	DESCRIPTION	QTY	ITEN	I PART N	O. DESCRIPTION	QTY
1	4176709	S-CUT	TERDECK,61" LABELS	1	39	38524	KNOB-4 PRONG 3/8-16	2
2	4174965-3	ASSM	BLY-SPNDL5.98IN	3	40	4175731.7		1
	INCLUDES I	TEMS 5	56-60		41	4175810	COVER-3.0IN DOME PLUG	2
					42	4176526.7	COVER-BELT, 61IN, RH	1
3	4173961		Y-SPINDLE, 61	3	43	4176616.7	PLT-IDLER REINFORCMENT	1
4	4174961-1		ER-,BLADE 0.63IN	3	44	4168522	MAT-CLAW MARKS	1
5	4175081		ER-SPINDLE	3	45	4175231	DECAL-SPRING LENGTH	1
6	4175082-1		ER-PULLEY .397	3	46	4164269	LABEL-WRNNG THRN OBJCTS	1
7	112111-03		21.00 OFFST HLFT	3	47	2000577	LABEL WARNING	3
8	64209-16		AL SPRING WASHERS	3	48	4162916	LABEL-DECK SIZE, 61	1
9	64123-187		EX 5/8-18X3-3/4	3	49	2000572	LABEL-WARNING BLADES	1
10	64123-137		EX 5/8-18X2	3	50	4176344	BELT-CUTTERDECK,61	1
11	64268-03	-	L NYLON LOCK 3/8-16	26	51	4174440.7	WLDMT-IDLER PIN	1
12	64268-02	NUT-F	L NYLON LOCK 5/16-18	2	52	64144-40	SNAP RING-26MM INTERNAL	1
13	64141-6		/LF 5/16-18	1	53	4128004	BEARING-BALL 10 X 26 X 8	1
14	4176436	HOOK	-SPRING	1	54	++++54813	38	
15	4168493		G-EXTENSION	1	BRG	NDL.88 1.12	1.00	1
16	64268-05		L NYLON LOCK 1/2-13	3	55	521438	GREASE SEAL	1
17			Y-IDLER,5.50"X1.50"W	2	56	4174958-3	HOUSING-,SPINDLE 5.98	1
18			Y-IDLER,6.00"X1.50W	1	57	4174959-3	SHAFT,-SPINDLE 6.56IN	1
19	64018-11		RG 1/2-13X3	2	58	64123-340	BLT-HEX,3/8-16X1-1/2 GR8	6
20			ER-PM, 2.0 X .516	2	59	4174963	BRNG-BALL,KOYO	1
21	4163155	INNER		1	60	4174962	BRNG-BALL,PEER	1
22	4163014	SPACE		1	61	85010N	ZERK 1/4-28 STR SELF TAP	1
23	4176420.7		BELT GUIDE,5.5"X1.5"	1	62	64209-03	WSHR-CON SPRING .67 ID	3
24	64163-36		1X33/64X.187	1				
25	64270-02		EX M10-1.5x30	1				
26	4128002		6 X 7 END	1				
27	64018-15	-	RG 5/16-18X1 SN	1				
28	4176421.7		BELT GUIDE, SHRT IDLER					
29	4176326		DECK IDLER,52&61IN,	1				
	INCLUDES I	TEMS 3	37, 52-55 & 61					
30	2720685	SPACE	R-ROLLER	4				
31	64018-61	BLT-CF	RG 3/8-16X8 G5	1		*	NOT ILLUSTRATED	
32	2721512	ROLLE	R-5X2.75 CENTERED	6				
33	64018-30	BLT-CF	RG 3/8-16 X 4-1/2	2				
34	4176480	SPACE	R-ROLLER,.63X12X6.795	1				
35	64123-217		EX 3/8-16X4-1/4	2				
36	64123-95	BLT-HE	EX 1/2-13X3-1/4	1				
37	4176311.7		T-DECK IDLER,52&61	1				
38	64286-02	STUD-	CLINCH 3/8-16X1	1				

CHUTE, BAFFLES, & EDGES

FIGURE 17

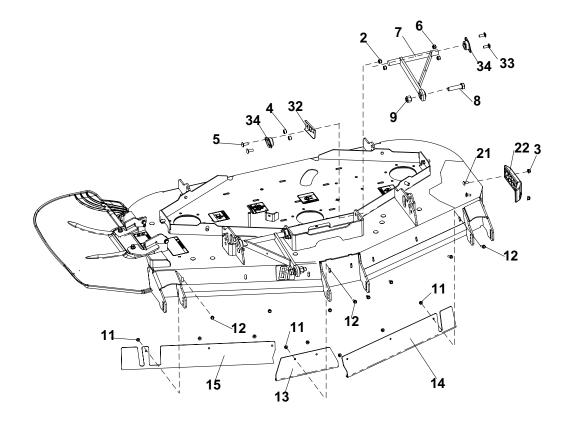

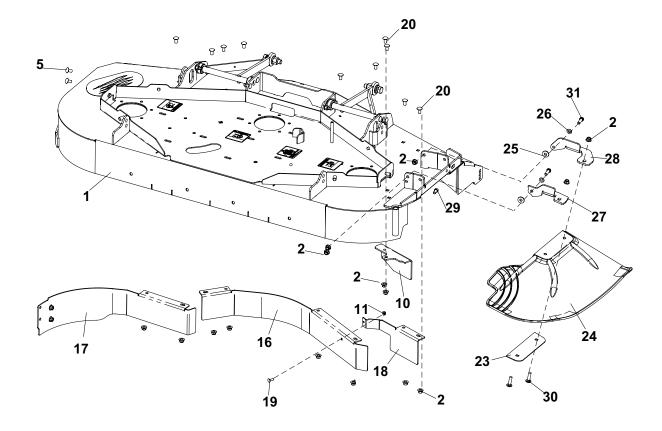


CHUTE, BAFFLES, & EDGES

BOB-CAT

ITE	M PART I	NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTIO	N QTY
1	4176709 4176914		TERDECK 61 W/LBL TERDECK 52 W/LBL					
2 3 4 5 6 7 8 9 10	64018-5 2183071-01 4174098.2 64123-168 64229-06 4175129.2	NUT-FL 2 BEARIN BLT-CF 1 SPACE WLDM ⁻ BLT-HE NUT-N ⁻ BAFFL	- NYLON LOCK 3/8-1 - NYLON LOCK 5/16- NG875ID BRZ RG 3/8-16X1-3/4 FR-15.88X10.32X16 T-PULLARM EX 5/8-11X2-1/2 YLON LOCK 5/8-11 E-DISCHARGE, 61 E-DISCHARGE, 52					
12	4176626.2	BLT-FL EXTEN	- NYLON LOCK 1/4-2 G HD 1/4-20 X 3/4 ISION-DECK,61CEN ISION-DECK,52CEN	8 FER 1				
14			ISION-DECK,61 IN,LH ISION-DECK,52 IN,LH					
15			ISION-DECK,61IN RH ISION-DECK,52IN RH					
16			E-FRONT, CNTR 61 E-FRONT, CNTR 52	1				
17			E-FRONT, LH 61 E-FRONT, LH 52	1				
18			E-FRONT, RH 61 E-FRONT, RH 52	1				
20 21 22 23 24 25 26 27 28 29 30 31 32 33	64018-44	BLT-CF BLT-CF PAD-W PLATE- CHUTE WASHE BRKT-C BRKT-C BLT-HE BLT-CF BLT-FE RETAIN BLT-CF	RG 1/4-20X3/4 RG 3/8-16X3/4 S RG 5/16-18X3/4 G5 EAR, TRIM SIDE -CHUTE E-DISCHARGE ER-FRICTION, UHMW ER-BELLVILLE, .382 CHUTE REAR,DP CHUTE FRONT,DP EX SOC, 3/8-16X3/4 RG 3/8-16 X 1-1/2 EX 3/8-16X1-1/4 NER-BEARING RG 3/8-16 X 1 SN NG87510 BRZ					

FIGURE 18

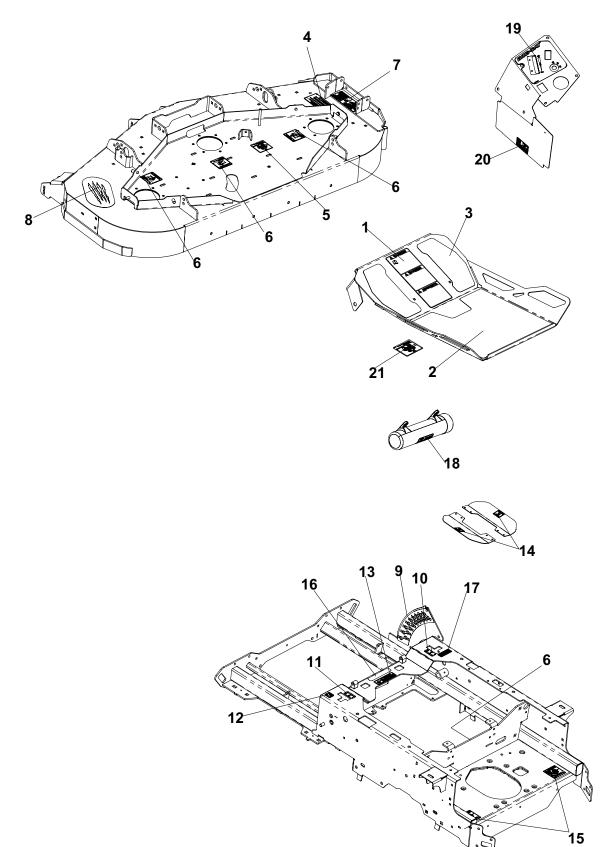


DECALS

BOB-CAT

FIGURE 18

1 4175842 LABEL-FOOTPLATE 1 2* 4175840 MAT-FOOTPLATE 2 4 2000572 LABEL-WARNING BLADES 1 6 2000577 LABEL-WARNING 3 7 41629 LABEL-WARNING 3 7 41629 LABEL-WARNING 3 7 41629 LABEL-WARNING 1 9 417671 LABEL-WARNING 1 10 4165616 LABEL-HAWARNING 1 11 4165616 LABEL-HAWARN HROWN OB 1 13 2000590 LABEL-WARN HROTICN 1 12 4176220 LABEL-WARN, PICT-H POINT 2 15 4176220 LABEL-WARN, PICT-H POINT 2 16 4186317 LABEL-ORTROL PANEL 1 17 4180490 LABEL-ORTROL PANEL 1 16 4176226 LABEL-AWARUAL LOCATION 1 17 4180490 LABEL-CONTROL PANEL 1 10 4176236 LABEL-AWARUAL LOCATION 1 11 4176246	PART NO. DESCRIPTION QTY ITEM PART NO. DESCRIPTION	QTY
2* 4175840 MAT-FOOTPLATE 1 3 4175841 MAT-FOOTPLATE 2 4 2000572 LABEL-WARNING BLADES 1 5 4175231 DECAL-SPRING LENGTH 1 6 2000577 LABEL WARNING 3 7 4164269 LABEL-WARN THROWN OB 1 8 4168522 MAT-CLAW MARKS 1 9 4175471 LABEL-HOC, INNER 1 10 4165616 LABEL - LH TRACTION 1 11 4165615 LABEL - RH TRACTION 1 12 4167209 LABEL, WARN BATTERY 1 13 2000590 LABEL, WARN, PITCH POINT 2 15 4176228 LABEL-WARN, ENGINE WRAP 1 16 4168517 LABEL-MARUAL LOCATION 1 17 4169490 LABEL-PATENT, SCHILLER 1 18 2000735 LABEL-OPERATOR MANUAL 1 19 4175835 LABEL-ONTROL PANEL 1 20 4176226 LABEL-INFORMATION 1	4175842 LABEL-FOOTPLATE WARNING 1	
3 4175841 MAT-FOOTPLATE 2 4 2000572 LABEL-WARNING BLADES 1 5 4175231 DECAL-SPRING LENGTH 1 6 2000577 LABEL WARNING 3 7 4164269 LABEL-WARN THROWN OB 1 8 4168522 MAT-CLAW MARKS 1 9 4175471 LABEL-HOC, INNER 1 10 4165616 LABEL - LH TRACTION 1 11 4165615 LABEL - RH TRACTION 1 12 4167209 LABEL-PARKING BRAKE 1 13 2000590 LABEL-WARN, PITCH POINT 2 15 4176228 LABEL-WARN, ENGINE WRAP 1 14 4176392 LABEL-WARN, ENGINE WRAP 1 16 4168517 LABEL-PATENT, SCHILLER 1 17 4169490 LABEL-OPERATOR MANUAL 1 19 417535 LABEL-OPERATOR MANUAL 1 19 417535 LABEL-OPERATOR MANUAL 1 20 4176226 LABEL-INFORMATION 1 21		
5 4175231 DECAL-SPRING LENGTH 1 6 2000577 LABEL WARNING 3 7 4164269 LABEL-WARN THROWN OB 1 8 4168522 MAT-CLAW MARKS 1 9 4175471 LABEL-HOC, INNER 1 10 4165616 LABEL - LH TRACTION 1 11 4165615 LABEL - RH TRACTION 1 12 4167209 LABEL-PARKING BRAKE 1 13 2000590 LABEL, WARN BATTERY 1 14 4176392 LABEL-WARN, PITCH POINT 2 15 4176228 LABEL-WARN, ENGINE WRAP 1 16 4168517 LABEL-PATENT, SCHILLER 1 18 2000735 LABEL-OPERATOR MANUAL 1 19 4175835 LABEL-OPERATOR MANUAL 1 20 4176226 LABEL-RELAY/FUSE ID 1 21 4175911 LABEL-INFORMATION 1		
6 2000577 LABEL WARNING 3 7 4164269 LABEL-WARN THROWN OB 1 8 4168522 MAT-CLAW MARKS 1 9 4175471 LABEL-HOC, INNER 1 10 4165616 LABEL - LH TRACTION 1 11 4165615 LABEL - RH TRACTION 1 12 4167209 LABEL-PARKING BRAKE 1 13 2000590 LABEL, WARN BATTERY 1 14 4176392 LABEL-WARN, PITCH POINT 2 15 4176228 LABEL-WARN, ENGINE WRAP 1 16 4168517 LABEL-PATENT, SCHILLER 1 17 4169490 LABEL-PATENT, SCHILLER 1 18 2000735 LABEL-OPERATOR MANUAL 1 19 4176226 LABEL-RELAY/FUSE ID 1 20 4176226 LABEL-INFORMATION 1		
7 4164269 LABEL-WARN THROWN OB 1 8 4168522 MAT-CLAW MARKS 1 9 4175471 LABEL-HOC, INNER 1 10 4165616 LABEL - LH TRACTION 1 11 4165615 LABEL - RH TRACTION 1 12 4167209 LABEL-PARKING BRAKE 1 13 2000590 LABEL, WARN BATTERY 1 14 4176392 LABEL-WARN, PITCH POINT 2 15 4176228 LABEL-WARN, ENGINE WRAP 1 16 4168517 LABEL-MANUAL LOCATION 1 17 4169490 LABEL-PATENT, SCHILLER 1 18 2000735 LABEL-OPERATOR MANUAL 1 19 4175835 LABEL-CONTROL PANEL 1 20 4176226 LABEL-RELAY/FUSE ID 1 21 4175911 LABEL-INFORMATION 1		
8 4168522 MAT-CLAW MARKS 1 9 4175471 LABEL-HOC, INNER 1 10 4165616 LABEL - LH TRACTION 1 11 4165615 LABEL - RH TRACTION 1 12 4167209 LABEL-PARKING BRAKE 1 13 2000590 LABEL, WARN BATTERY 1 14 4176392 LABEL-WARN, PITCH POINT 2 15 4176228 LABEL-WARN, ENGINE WRAP 1 16 4168517 LABEL-MANUAL LOCATION 1 17 4169490 LABEL-PATENT, SCHILLER 1 18 2000735 LABEL-OPERATOR MANUAL 1 19 4175835 LABEL-CONTROL PANEL 1 20 4176226 LABEL-RELAY/FUSE ID 1 21 4175911 LABEL-INFORMATION 1		
9 4175471 LABEL-HOC, INNER 1 10 4165616 LABEL - LH TRACTION 1 11 4165615 LABEL - RH TRACTION 1 12 4167209 LABEL-PARKING BRAKE 1 13 2000590 LABEL, WARN BATTERY 1 14 4176392 LABEL-WARN, PITCH POINT 2 15 4176228 LABEL-WARN, ENGINE WRAP 1 16 4168517 LABEL-MANUAL LOCATION 1 17 4169490 LABEL-PATENT, SCHILLER 1 18 2000735 LABEL-OPERATOR MANUAL 1 19 4175835 LABEL-CONTROL PANEL 1 20 4176226 LABEL-RELAY/FUSE ID 1 21 4175911 LABEL-INFORMATION 1		
10 4165616 LABEL - LH TRACTION 1 11 4165615 LABEL - RH TRACTION 1 12 4167209 LABEL-PARKING BRAKE 1 13 2000590 LABEL, WARN BATTERY 1 14 4176392 LABEL-WARN, PITCH POINT 2 15 4176228 LABEL-WARN, ENGINE WRAP 1 16 4168517 LABEL-MANUAL LOCATION 1 17 4169490 LABEL-PATENT, SCHILLER 1 18 2000735 LABEL-OPERATOR MANUAL 1 19 4175835 LABEL-CONTROL PANEL 1 20 4176226 LABEL-RELAY/FUSE ID 1 21 4175911 LABEL-INFORMATION 1		
11 4165615 LABEL - RH TRACTION 1 12 4167209 LABEL-PARKING BRAKE 1 13 2000590 LABEL, WARN BATTERY 1 14 4176392 LABEL-WARN, PITCH POINT 2 15 4176228 LABEL-WARN, ENGINE WRAP 1 16 4168517 LABEL-MANUAL LOCATION 1 17 4169490 LABEL-PATENT, SCHILLER 1 18 2000735 LABEL-OPERATOR MANUAL 1 19 4175835 LABEL-CONTROL PANEL 1 20 4176226 LABEL-RELAY/FUSE ID 1 21 4175911 LABEL-INFORMATION 1		
132000590LABEL, WARN BATTERY1144176392LABEL-WARN, PITCH POINT2154176228LABEL-WARN, ENGINE WRAP1164168517LABEL-MANUAL LOCATION1174169490LABEL-PATENT, SCHILLER1182000735LABEL-OPERATOR MANUAL1194175835LABEL-CONTROL PANEL1204176226LABEL-RELAY/FUSE ID1214175911LABEL-INFORMATION1		
144176392LABEL-WARN, PITCH POINT2154176228LABEL-WARN, ENGINE WRAP1164168517LABEL-MANUAL LOCATION1174169490LABEL-PATENT, SCHILLER1182000735LABEL-OPERATOR MANUAL1194175835LABEL-CONTROL PANEL1204176226LABEL-RELAY/FUSE ID1214175911LABEL-INFORMATION1		
154176228LABEL-WARN, ENGINE WRAP1164168517LABEL-MANUAL LOCATION1174169490LABEL-PATENT, SCHILLER1182000735LABEL-OPERATOR MANUAL1194175835LABEL-CONTROL PANEL1204176226LABEL-RELAY/FUSE ID1214175911LABEL-INFORMATION1		
164168517LABEL-MANUAL LOCATION1174169490LABEL-PATENT, SCHILLER1182000735LABEL-OPERATOR MANUAL1194175835LABEL-CONTROL PANEL1204176226LABEL-RELAY/FUSE ID1214175911LABEL-INFORMATION1		
17 4169490 LABEL-PATENT, SCHILLER 1 18 2000735 LABEL-OPERATOR MANUAL 1 19 4175835 LABEL-CONTROL PANEL 1 20 4176226 LABEL-RELAY/FUSE ID 1 21 4175911 LABEL-INFORMATION 1		
182000735LABEL-OPERATOR MANUAL1194175835LABEL-CONTROL PANEL1204176226LABEL-RELAY/FUSE ID1214175911LABEL-INFORMATION1		
19 4175835 LABEL-CONTROL PANEL 1 20 4176226 LABEL-RELAY/FUSE ID 1 21 4175911 LABEL-INFORMATION 1		
21 4175911 LABEL-INFORMATION 1		
*NOT ILLUSTRATED	4175911 LABEL-INFORMATION 1	
	NOT ILLUSTRATED	

FIGURE 19

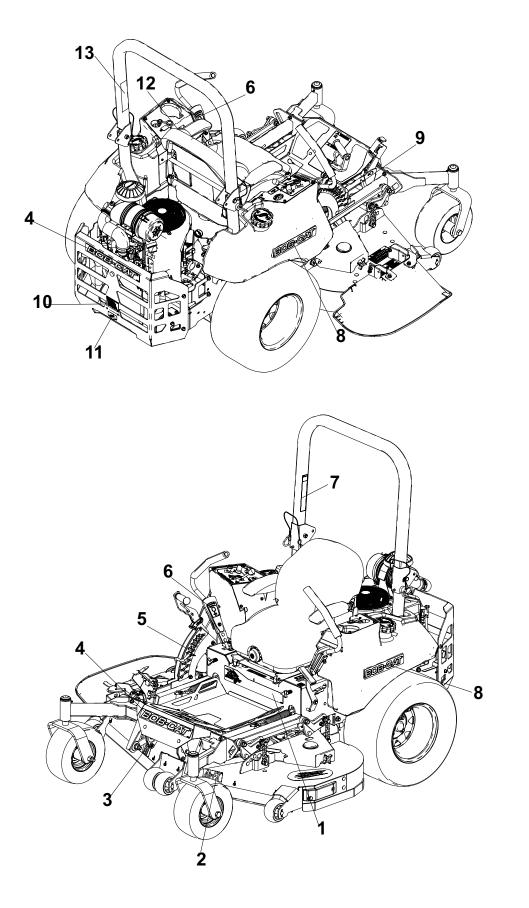

DECALS

BOB-CAT

ITEN	I PART N	NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPT	ΓΙΟΝ	QTY
1	4175838		-PROCAT 6000	1					
	4176430	LABEL	-PROCAT 6000MX						
2	4175433		-AIRFX	1					
3	4162915 4162916		-DECK SIZE, 52" -DECK SIZE, 61"	1					
	4102910	LADEL	-DEGR SIZE, 01						
4	4175836		-BOB-CAT,2.0X15.5	2					
5	4175471		-HOC, INNER	1					
6	4176717		-HANDLE ADJUST	2					
7	4160347		-WARNING FOLDING ROI	-					
8 9	4174476-3		-FUEL TANK -HOC, OUTER	2					
9 10	4175470		-MADE IN USA	1					
10	4176399		-LIFT POINT	1					
12	4175482		-FUEL, SELECTOR	1					
13	4178090		-ROPS TEST	1					
	*NOT ILLU	STRATE	D						

SCHILLER GROUNDS CARE, INC. ONE BOB-CAT LANE P.O. BOX 469 JOHNSON CREEK, WI 53038 920-699-2000 www.schillergc.com



©Schiller Grounds Care, Inc. 2010