
4164610 REV B

These instructions explain the procedure for installing the Poly Grasscatcher models #970316 and 970319 on 36",42", 48", 52" and 61" decks. NOTE: There is an adapter bracket included to be used on 42" and 61" decks **ONLY**.

DO NOT USE ADAPTER BRACKET ON 36", 48" or 52" DECKS.

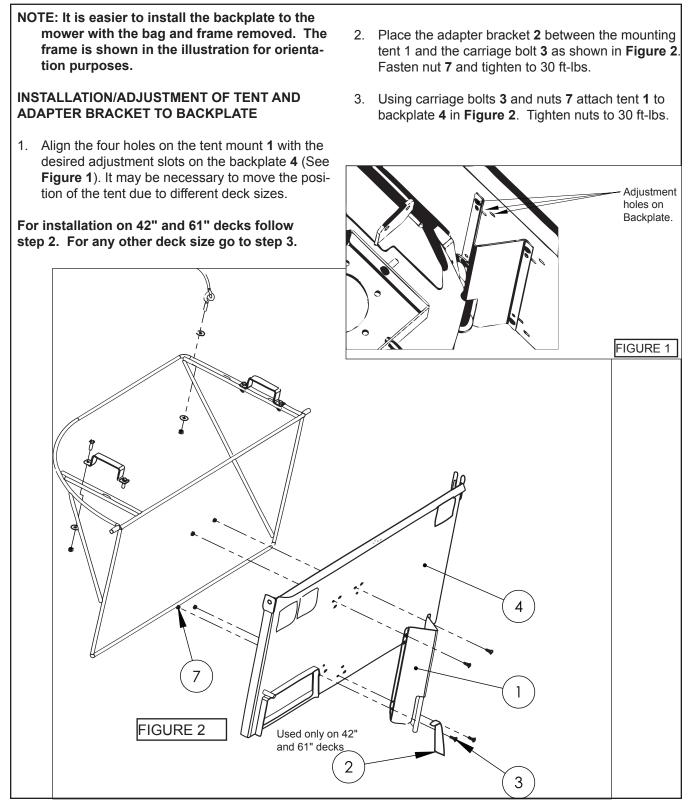


I.S.-POLY GRASSCATCHERS (970316 & 970319)

4164610 REV B

INSTALLATION OF SIDE CATCHER TO DECK (FIGURE 3).

- 1. Remove the factory discharge chute and retain hardware for use when side catcher is not in place.
- 2. If necessary for fit, use washer **6** to space the mount from the deck. Align the post on the backplate with the deck mount tube and insert the post so that it sits flush onto the deck. Some older mowers do not have a tube and will need to be installed in the field.
- 3. Rotate the backplate so that the small post inserts in the hole on the deck bracket.
- 4. Insert the hairpin **5** into the hole on the small post to secure backplate in place.

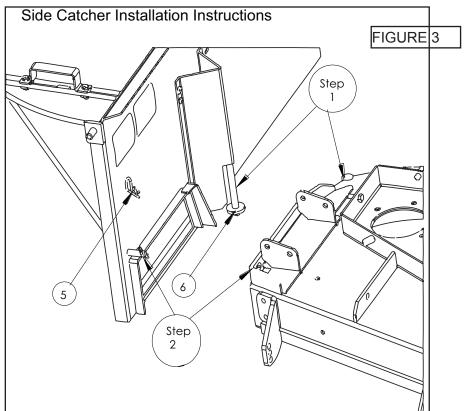

		14	
ITEM NO.	PART NUMBER	DESCRIPTION	QTY
1	4164281.7	TENT,GC	2
2	32530.4	BRKT-REAR SEAL 42" & 61"	1
3	64018-2	BOLT-CRG 1/4-20X.75	4
4	4164317	BACKPLATE-SIDE CATCHER	1
5	64168-1	HAIR PIN091 X 1.875	1
6	64163-01	WASHER-SUPER Z DBL PULLEY	1
7	64268-01	NUT-1/4-20	4
8	4165879	BAG-5 BUSHEL	1
	4135876	BAG-3.75 BUSHEL	1