

INTRODUCTION: This instruction sheet covers the installation of the seat spring kit 970393.

1. Tip seat plate forward and out of way.
2. Locate and drill (4) 9/32" holes as shown in **Figure 1**.
3. Attach spring brackets **1**, using 1/4" bolts **5**, and 1/4" nuts **6**, as shown in **Figure 1**. It may be necessary to remove rear guard in order to tighten nut **6**.
4. Assemble springs **2** to spring brackets **1** using 3/8" bolts **3**, and 3/8" nuts **4** as shown in **Figure 1**.
5. Reinstall rear guard if removed.
6. Replace seat plate to operating position.

SERVICE PARTS LIST				
ITEM	PART NO.	DESCRIPTION	QTY	
1	4164330.7	BRKT-SPRING MOUNTING	2	
2	4164569	SPRING-SEAT	2	
3	64262-011	BLT-FLG HD 3/8-16 X 1	2	
4	64229-03	NUT-NYLON LOCK 3/8-16	2	
5	64262-003	BLT-FLG HD 1/4-20 X 1	4	
6	64229-01	NUT-NYLON LOCK 1/4-20	4	

