

PARTS BULLETIN

Date: September 1, 2011

Bulletin No: JC-010-11

Subject: New Oil Drain Kit (970423)

In response to requests from the field, we have created a new oil drain kit to convert all older model BOB-CAT walk-behind, midsize, FastCat, ProCat and Predator-Pro mowers to the newer style "quick-change" engine oil hose kit. This new kit fits Kohler, Generac, Briggs & Stratton as well as the large sump adapter that is required to fit Kawasaki engines.

See attached for complete kit installation and maintenance instructions.

Part Information: Order kit number 970423 through your normal parts distribution channel.

Warranty: Not applicable

If you have any questions, please contact our Customer Service Department at 920-699-2000.

This bulletin is relevant to the departments checked below. Please circulate as appropriate.

SERVICE	WARRANTY	SALES	PARTS
X	X		X

Enc: Oil Drain Kit Instructional Sheet

Make Your Move™

4166815 REV A

INTRODUCTION: These supplemental instructions explain how to install the oil drain kit (970423) onto a ProCat or Predator Pro ZT, FastCat, or Midsize walk behind unit. This kit will fit Kawasaki, Kohler, Generac, and Briggs and Stratton Engines.

WARNING: Do not perform engine maintenance without the engine off, spark plug wires disconnected and PTO disengaged.

INSTALLATION:

- 1. Drain oil out of engine as stated in the operator's manual.
- 2. Kawasaki Engines Only:

If adapter DOES NOT EXIST in the Kawasaki engine block, you need the adapter (1) and O-ring (6 not shown).

Place the O-ring (6 not shown) onto the adapter (1) and insert the adapter into the engine block replacing the current drain plug. (Refer to Figure 1).

If you do not have a Kawasaki engine you will not need Items 1 & 6.

3. Referring to Figure 1, put pipe sealant onto the threads of the fitting (2) and insert into either the adapter on engine (1) for Kawasaki engines or directly into the engine block for other engines.


4. Slide the hose clamps (3) onto hose (4). Secure one end of the hose (4) to the fitting (2) using one of the clamps (3).

5. Install oil drain valve **(5)**, into other hose end and secure with other hose clamp **(3)**.

6. Being careful to route the hose away from heat, sharp edges, and rotating and moving parts, mount the clip (7) to the engine or rear bumper of the unit using existing hardware. (See Figure 2 for an example). This clip will be used to hold the new drain hose assembly you have just installed.

7. Change the oil filter and fill the crankcase with fresh oil to the full mark. DO NOT overfill. See your engine manual for oil specifications.

SEE PAGE 2 FOR OIL MAINTENANCE

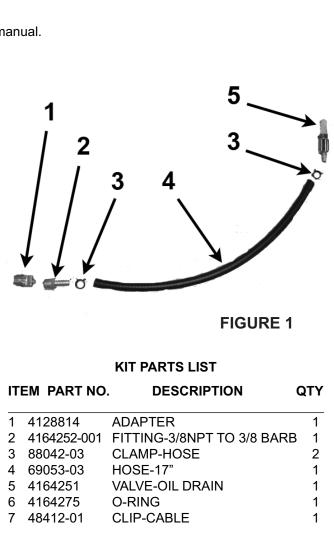

4166815 REV A

MAINTENANCE

ENGINE OIL

Do not perform engine maintenance without the engine off, spark plug wires disconnected and PTO disengaged.

AFTER FIRST FIVE (5) HOURS

While the engine is warm:

- 1. Release the oil drain hose assembly from the engine clip **7**. Lay hose assembly over the frame edge.
- 2. Remove the rubber cap **D** from the tip of the hose assembly and turn the drain valve to allow oil to drain from the engine. Dispose of used oil in accordance with local requirements.
- 3. Clean drain valve and tighten the plastic portion of the drain valve back into the metal portion of the valve. Replace rubber cap over the tip of the valve. Replace hose assembly back into engine clip.
- 4. Change oil filter.
- 5. Fill the crankcase with fresh oil to the full mark. Do not overfill. See engine manual for oil specifications.

DAILY

- 1. Check oil level with the dipstick.
- If oil is needed, add fresh oil of proper viscosity and grade. See engine manual for oil specifications. Do not overfill.
- 3. Replace dipstick before starting engine.

PERIODIC OIL CHANGES

- 1. See engine manual for oil and filter change intervals after the break-in period.
- 2. Follow instructions for first oil change above.

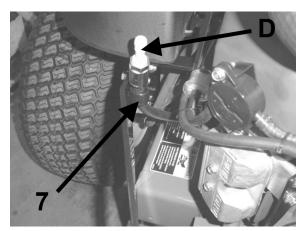


FIGURE 2

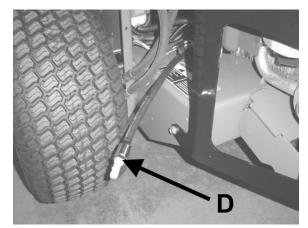


FIGURE 3