



# ***BUNTON***<sup>®</sup>

## **SETUP, PARTS & MAINTENANCE MANUAL GEAR DRIVE MIDSIZE**

---

### **Power Unit Models:**

**633010      36" Fixed Deck 15HP Gear Drive Assembled**

**634010      48" Fixed Deck 15HP Gear Drive Assembled**

**(Operation & Safety Manual: 2721834)**



*WARNING: If incorrectly used this machine can cause severe injury. Those who use and maintain this machine should be trained in its proper use, warned of its dangers and should read the entire manual before attempting to set up, operate, adjust or service the machine.*

**BUNTON**

**TEXTRON**

GOLF, TURF & SPECIALTY PRODUCTS

**4112622 REV C**

**CALIFORNIA**  
**Proposition 65 Warning**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



**WARNING**

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

**Californie Proposition 65**  
**Avertissement**

Les échappements des moteurs diesel et certains de leurs composés sont reconnus par l'Etat de Californie pour être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.



**AVERTISSEMENT**

L'émission du moteur de ce matériel contient des produits chimiques que l'Etat de Californie considère être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

**California Advertencia**  
**de la Proposicion 65**

El estado de California hace saber que los gases de escape de los motores diesel y algunos de sus componentes producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.



**ADVERTENCIA**

El estado de California hace saber que los gases de escape de este producto contienen productos químicos que producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.



**Gear  
Drive  
Midsize**

## IMPORTANT MESSAGE

Thank you for purchasing this Bunton product. You have purchased a world class mowing product, one of the best designed and built anywhere.

This machine comes with an Operation and Safety Manual and a separate Setup, Parts and Maintenance Manual. The useful life and good service you receive from this machine depends to a large extent on how well you read and understand these manuals. Treat your machine properly, lubricate and adjust it as instructed, and it will give you many years of reliable service.

Your safe use of this Bunton product is one of our prime design objectives. Many safety features are built in, but we also rely on your good sense and care to achieve accident-free operation. For best protection, study the manuals thoroughly. Learn the proper operation of all controls. Observe all safety precautions. Follow all instructions and warnings completely. Do not remove or defeat any safety features. Make sure those who operate this machine are as well informed and careful in its use as you are.

See a Bunton dealer for any service or parts needed. Bunton service ensures that you continue to receive the best results possible from Bunton's products. You can trust Bunton replacement parts because they are manufactured with the same high precision and quality as the original parts.

Bunton designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this machine only as directed in the manuals, keep it in good repair and follow safety warnings and instructions. You'll always be glad you did.

**Textron Golf, Turf & Specialty Products  
One Bob Cat Lane  
Johnson Creek, WI 53038-0469**

TABLE OF CONTENTS	FIGURES	PAGE
SAFETY		2
ASSEMBLY/SET-UP INSTRUCTIONS		3-9
LUBRICATION		10-12
MAINTENANCE		13
SERVICE CHART		14
SERVICE RECORD		15
ADJUSTMENTS		16-18
BELT REPLACEMENT		19, 20
PARTS SECTION		21
UPPER ENGINE DECK ASSY	FIGURE 1	22, 23
LOWER ENGINE DECK ASSY/CLUTCH	FIGURE 2	24, 25
DRIVE WHEELS & BRAKES	FIGURE 3	26, 27
TRANSMISSION DRIVE	FIGURE 4	28, 29
UPPER HANDLE/ROLLER LATCH	FIGURE 5	30, 31
OPERATOR PRESENT	FIGURE 6	32, 33
DECALS	FIGURE 7	34, 35
DANA TRANSMISSION	FIGURE 8	36, 37
ELECTRICAL DIAGRAM	FIGURE 9	38, 39
CUTTERDECK MOUNTING	FIGURE 10	40, 41
36" CUTTERDECK	FIGURE 11	42, 43
MOUNTING-36" FIXED DECK	FIGURE 12	44, 45
48" CUTTERDECK	FIGURE 13	46, 47
MOUNTING-48" FIXED DECK	FIGURE 14	48, 49
BLOWOUT BAFFLES	FIGURE 15	50, 51
CASTER ASSY-FIXED DECKS	FIGURE 16	52, 53
SPINDLE ASSEMBLY	FIGURE 17	54, 55
WIRING SCHEMATIC-RECOIL START	FIGURE 18	56, 57



## NOTICE !!!

Unauthorized modifications may present **extreme** safety hazards to operators and bystanders and could also result in product damage.

Textron Golf, Turf & Specialty Products strongly warns against, rejects and disclaims any modifications, add-on accessories or product alterations that are not designed, developed, tested and approved by Textron Golf, Turf & Specialty Products Engineering Department. Any Textron Golf, Turf & Specialty Products product that is altered, modified or changed in any manner not specifically authorized after original manufacture—including the addition of “after-market” accessories or component parts not specifically approved by Textron Golf, Turf & Specialty Products—will result in the Textron Golf, Turf & Specialty Products Warranty being voided.

Any and all liability for personal injury and/or property damage caused by any unauthorized modifications, add-on accessories or products not approved by Textron Golf, Turf & Specialty Products will be considered the responsibility of the individual(s) or company designing and/or making such changes. Textron Golf, Turf & Specialty Products will vigorously pursue full indemnification and costs from any party responsible for such unauthorized post-manufacture modifications and/or accessories should personal injury and/or property damage result.



This symbol means:  
**ATTENTION!**  
**BECOME ALERT!**

Your safety and the safety of others is involved.

## Signal word definitions:

The signal words below are used to identify levels of hazard seriousness. These words appear in this manual and on the safety labels attached to Textron Golf, Turf & Specialty Products machines. For your safety and the safety of others, read and follow the information given with these signal words and/or the symbol shown above.

### **DANGER**

**DANGER** indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

### **WARNING**

**WARNING** indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

### **CAUTION**

**CAUTION** indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices or property damage.

### **CAUTION**

**CAUTION** used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage



**MODEL NUMBER:** This number appears on sales literature, technical manuals and price lists.


**SERIAL NUMBER:** This number appears only on your mower. It contains the model number followed consecutively by the serial number. Use this number when ordering parts or seeking warranty information.





**GENERAL NOTE: FRONT, REAR, RIGHT HAND AND LEFT HAND REFERENCES BELOW ARE WITH RESPECT TO AN OPERATOR AT THE CONTROLS.**

1. UNCRATE - Discard the sides and top of the crate. Remove the loose parts from the crate. Discard the rest of the packing material.

2. Remove strap **A** from the fuel tank and discard.
3. Set the gear select handle **B** aside for later use.

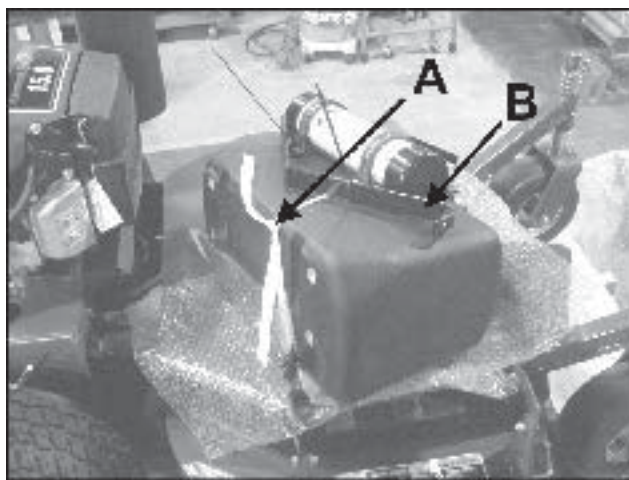

4. Unbolt shipping brackets from crate and discard. It will be necessary to loosen caster wheel bolts **C** to remove the shipping brackets from the caster wheels. Retighten bolts **C**.

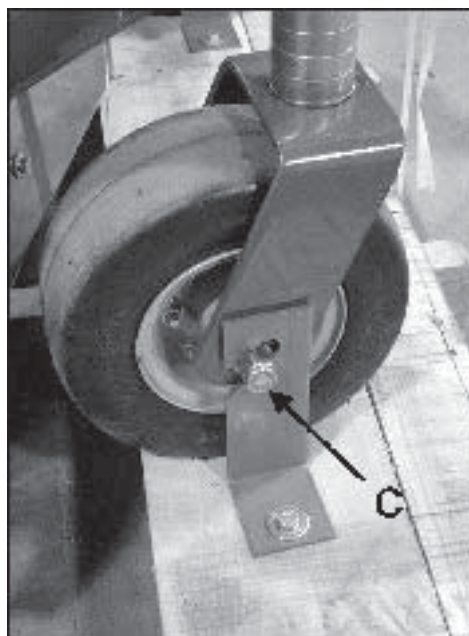
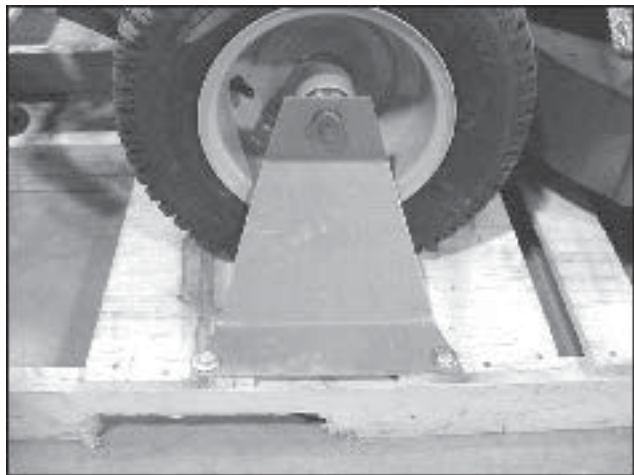


## ASSEMBLY/SET-UP INSTRUCTIONS

Gear  
Drive  
Midsize




5. Bolt upper handles to the lower handle with (4) 3/8-16X1 bolts and (4) 3/8-16 whizlock nuts at location **J** on both sides.
6. Loosen (1) 3/8-16X1 bolt **I** from each side, rotate brace **W** up and fasten to upper handle with (1) u-bolt, (1) washer and (2) 1/4-20 nylock nuts on both sides at location **X**. Retighten the 3/8-16X1 bolt **I** on both sides.

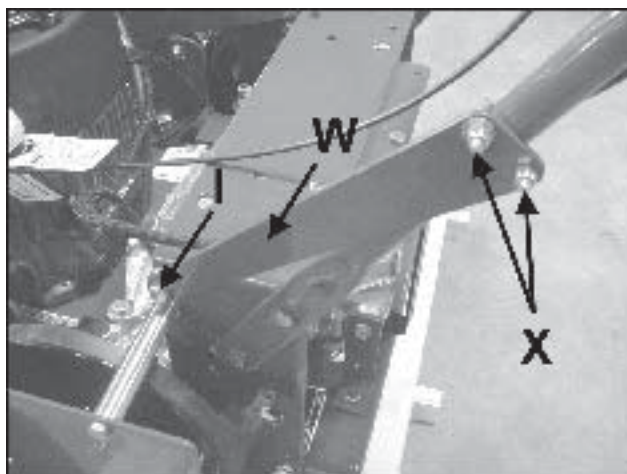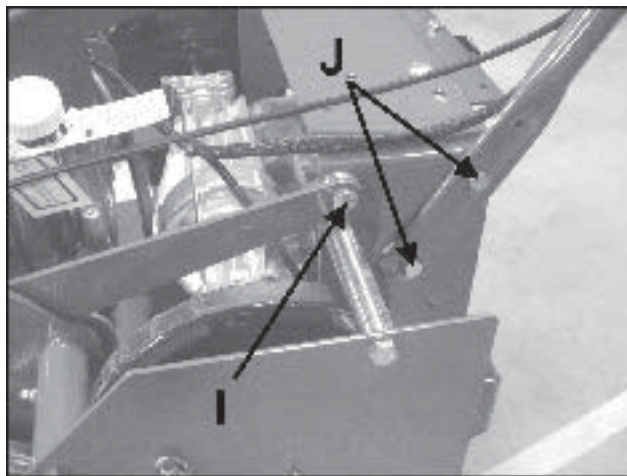






7. Attach gear select plate **B** under support plate **C** using (2) M8-1.25X20 bolts and (2) M8-1.25 whizlock nuts as shown.

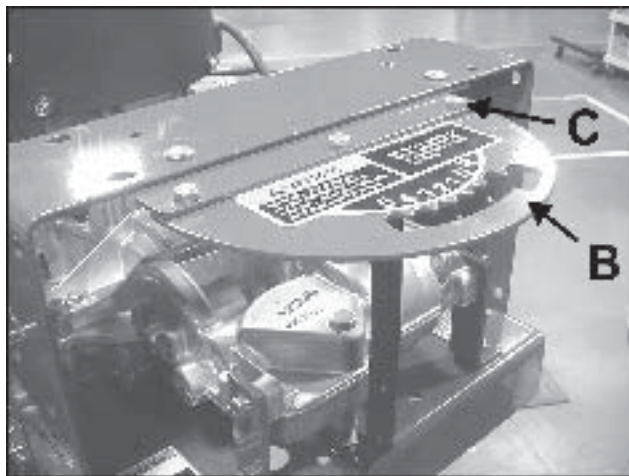

8. Attach gear shift lever **D** to the lower shift arm **E** with (2) M8-1.25X20 bolts and (2) M8-1.25 whizlock nuts as shown. Shift the lever to the neutral position and verify that the lever is centered side to side in the neutral notch. If not, loosen the M8-1.25X20 bolts and reposition gear shift lever **D**. Retighten bolts.

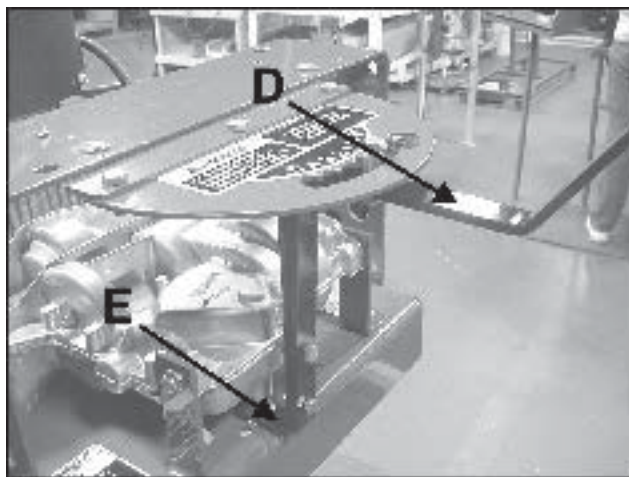


## ASSEMBLY/SET-UP INSTRUCTIONS

Gear  
Drive  
Midsize




9. When the upper handles are in place, run throttle cable and wiring harness along the left side, between the fuel tank and upper handle brace **W**.

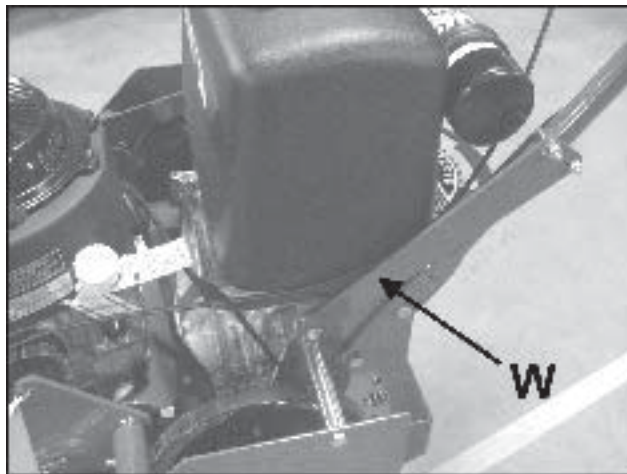

10. Bolt fuel tank to lower handle with (4) 3/8-16X3/4" bolts, lockwashers and flatwashers at locations **L**.



**NOTE:** Tighten all fuel tank bolts firmly but do not overtighten or damage to the fuel tank threads may result.

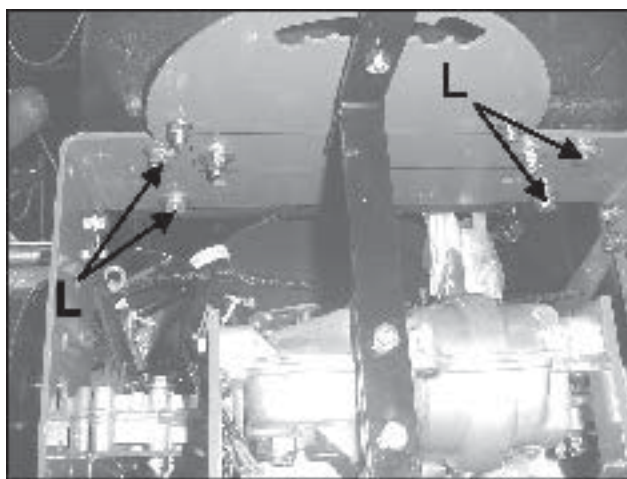






11. Remove the plug **M** from the end of the fuel line and connect fuel line to the fuel tank valve **N** and secure with the supplied hose clamp as shown.

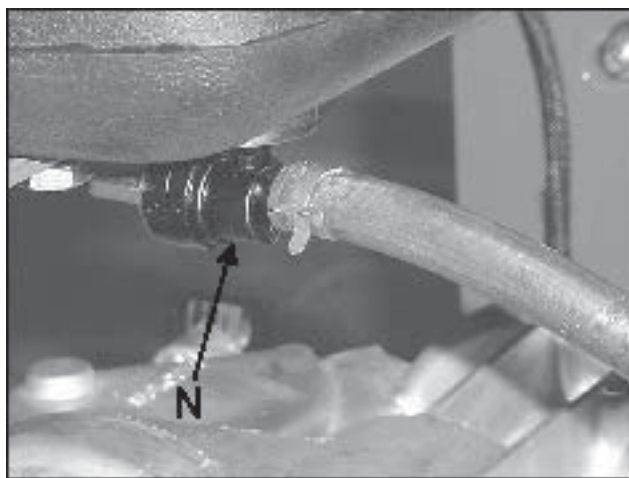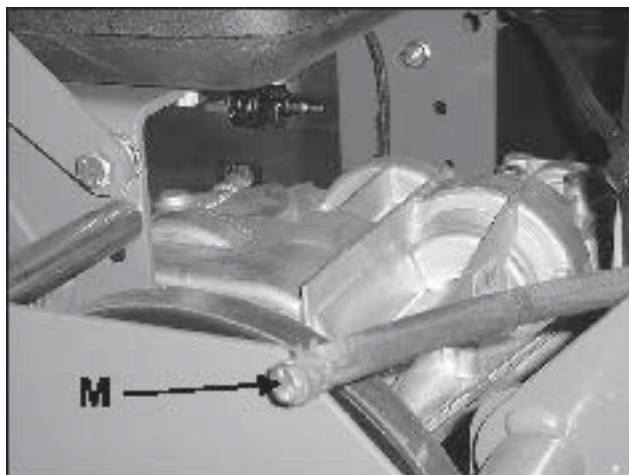

12. Cut tie wrap **O** from traction lever.

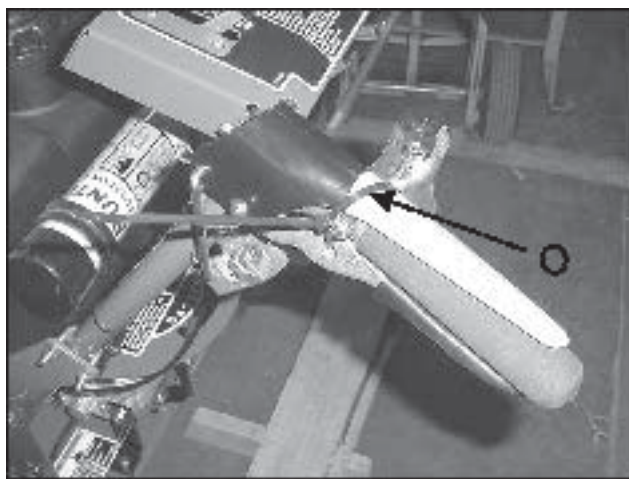

# ASSEMBLY/SET-UP INSTRUCTIONS

Gear  
Drive  
Midsize






13. Attach traction control rods **P** by inserting the swivel through the upper hole in the bellcranks **Q** with the threaded side of the swivel on the inside and the hairpin on the outside of the bellcrank as shown (See inset).

**NOTE:** Attaching the swivel to the bellcrank from the inside as shown is important to maintain the correct leverage and tension for the parking brake.

14. Insert the other end of the traction control rods through the traction control lever **R** on the handlebar. Secure with (1) washer and (2) hairpins with the washer on the inside of the traction control lever between the hairpin and the traction control lever. Repeat for other side.
15. To adjust traction control rods, remove the traction control rod swivel and the brake rod from the bellcrank **Q** and adjust swivel up or down the control rod so that once reinstalled there is a 1/4" (6.35mm) gap between the bottom of the rod and the bottom of the traction lock.
16. To adjust the brakes, remove the brake rod from the bottom of bellcrank **Q** and set the traction lever in the neutral position. Adjust the brake rod by turning it in or out of the swivel in the brake arm until it just goes into the hole on the bellcrank. Secure with hairpin.

**NOTE:** The machine should not move with the traction levers in the parking brake position. If machine moves in the parking brake position, readjust brake rod length. Verify that machine can be moved easily when the traction levers are placed in the neutral position.

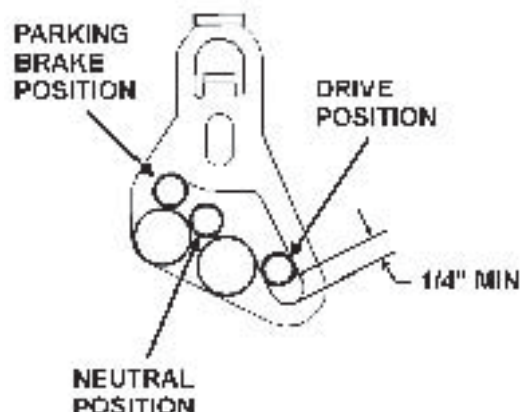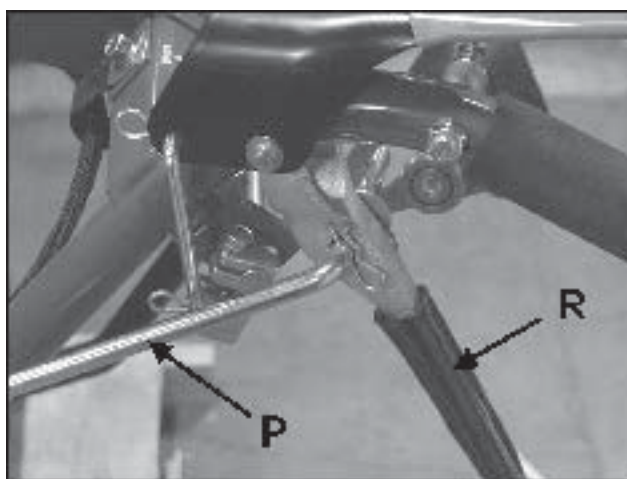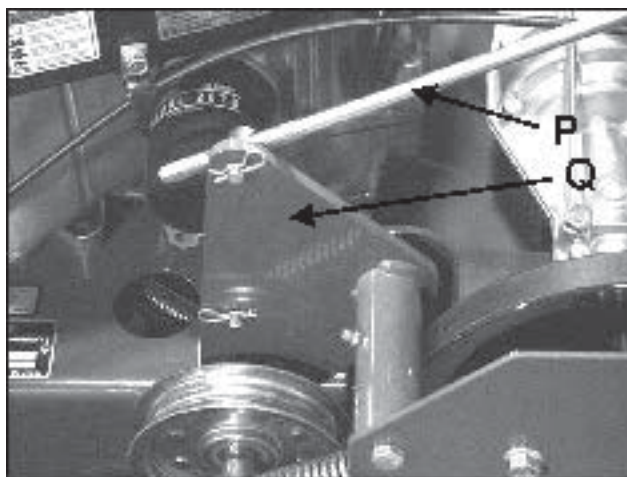



18. Attach cutterdeck per the instructions on the following pages then return to Step 15 of this section.

19. Fill engine with oil. (See engine manual for specifications.)

20. Fill fuel tank with clean, fresh unleaded fuel.

**⚠ WARNING** GASOLINE IS HIGHLY FLAMMABLE!

- Fill fuel tank with good quality, clean, regular unleaded gasoline.
- Do not use hi-test fuel.
- Do not smoke.
- Do not spill fuel.
- Fill outdoors.
- Do not overfill. Fill to 1" below bottom of filler neck to allow room for expansion.
- USE A FUNNEL TO FILL GAS TANK

21. Adjust tire pressure in drive wheels and casters to 14 psi (1 kg/cm<sup>2</sup>).

22. Before attempting to start the mower, read and understand all sections of the Operation & Safety manual.

**NOTICE:** Special setup instructions.

- Before engaging the cutterdeck, run the engine for five minutes at full RPM. This is recommended for new engine installation to permit complete engine lubrication prior to load.
- Do not engage the cutterdeck at full throttle. Set the throttle half way between the highest and lowest engine speed, engage the PTO switch and increase the engine speed to full before cutting.

• **⚠ WARNING**

Do not use this machine without an approved grasscatcher, grass discharge chute or mulching plate(s) correctly fitted.



## ENGINE

### DAILY

Remove the dipstick **S** and check that the oil level reaches the full mark. If necessary, top off with fresh oil. To obtain the correct oil level, the machine must be level. See engine manufacturer's manual for proper oil viscosity and grade.



**DO NOT OVER FILL!**

### AFTER THE FIRST 5 WORKING HOURS

While the engine is warm, remove the drain plug **P** and drain the crankcase. Replace oil filter. Clean and replace the plug. Fill the crankcase through the filler hole with fresh oil to the full mark. See engine manufacturers manuals for oil and filter change intervals.


Engine operator's manuals are shipped with each machine. Shop manuals for the engines are available from your local engine dealer/distributor.

- For Kawasaki FH500V, order: 99920-2129-03.
- For Kawasaki FH451V, order: 99920-2129-03.

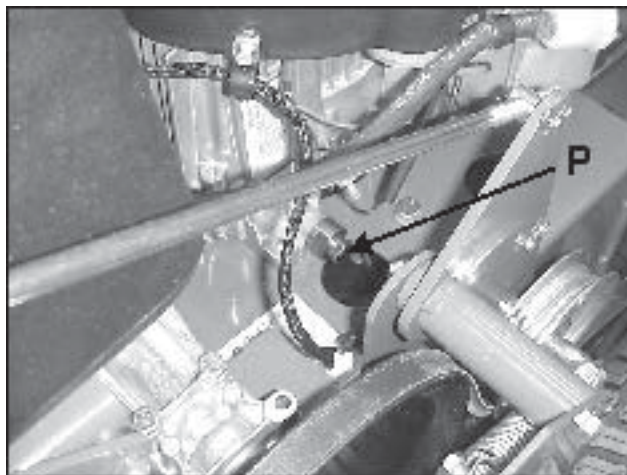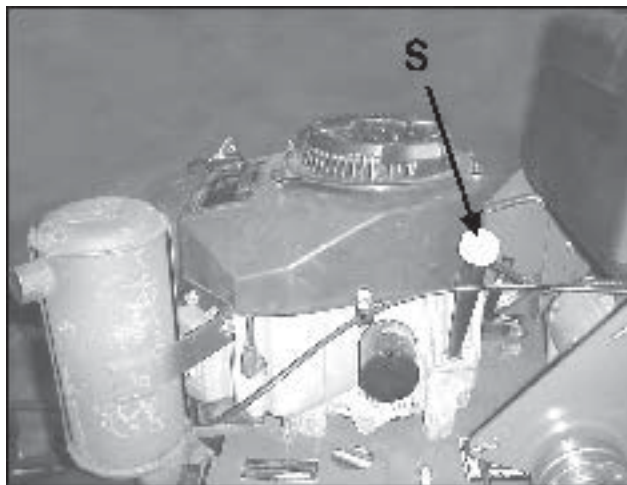

## GEARBOX

Transmission is sealed for life from the factory and should require no maintenance. See the parts breakdown in this manual for service parts and how to contact the Dana Transmission Service Department.

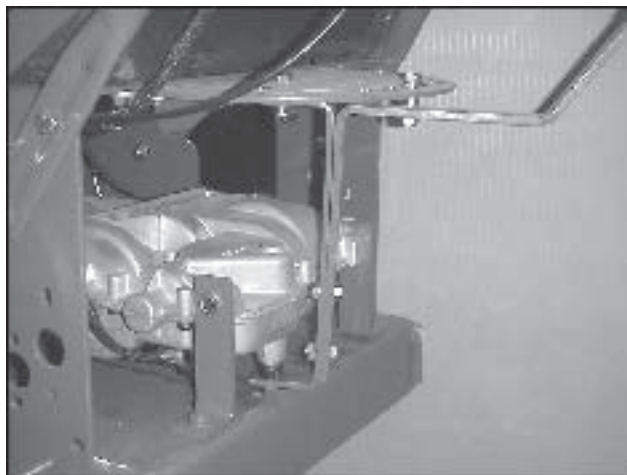





The maintenance schedule detailed is for average operating conditions. Under extreme conditions (dusty, dirty or more than 8 hrs continuous use) maintain more frequently.

**Engine (daily)**

Check the engine for oil leaks.

**Cooling Fins and Air Intake screen (daily)**

Ensure that the cooling fins and air intake screen **I** are cleaned daily. Continued operation with a clogged cooling system will cause severe overheating and result in engine damage.



**Air Cleaner (every 25 hours)**

Service more frequently if operating in very dusty or dry conditions. Extensive damage will result from operating with a dirty air cleaner.

1. Remove the air cleaner cover by releasing latches **L**.
2. Remove the foam precleaner by sliding it off the paper cartridge. Wash in kerosene or detergent and water. Dry thoroughly. Saturate in engine oil. Squeeze to remove excess oil.
3. Reinstall all parts.

**NOTES:**

- Every 50 hours remove the paper element by loosening wing nut **W**. If dirty, replace.
- DO NOT use petroleum solvents to clean the paper element. They may cause it to deteriorate.
- DO NOT use pressurized air to clean or dry element.
- See the Setup, Parts & Maintenance manual for service part numbers.

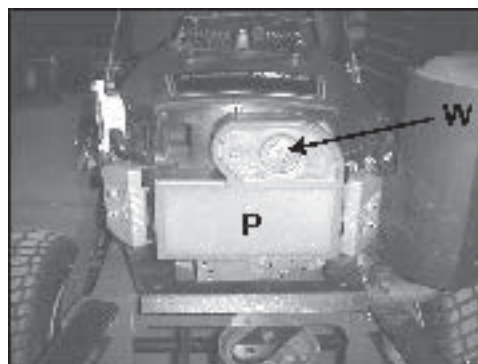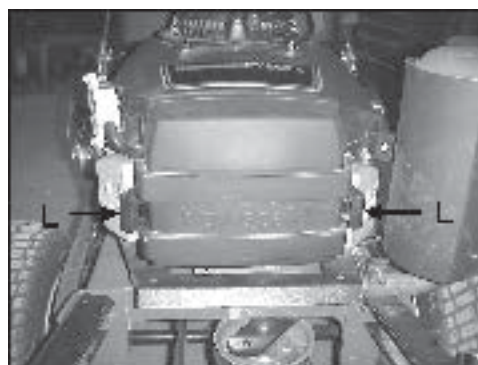


**In-Line Fuel Filter**

When required, the fuel filter **B** may be replaced. See the Setup, Parts & Maintenance manual for service part numbers.

**Tires**

Tire pressures should be maintained at 14 psi.

**NOTE:** Adjusting tire pressure slightly can improve tracking. Increase pressure on the side the machine tracks toward and decrease it on the other side.

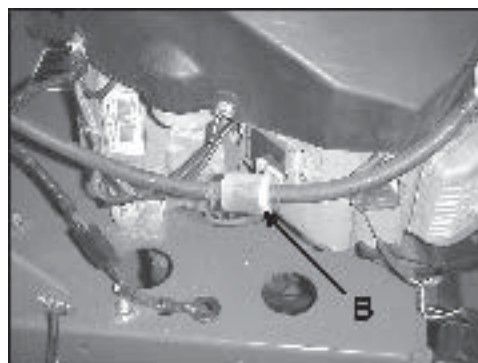




## MACHINE LUBRICATION

Every 50 Working Hours - Lubricate the following points with grease:

- 1) Caster wheel pivots (2 points)
- 2) Caster wheel bearings on wheel hub (2 points)
- 3) Drive Wheel Bellcranks (2 points)
- 4) Brake Levers (2 points)
- 5) Idler pivot bearings:
  - a) Engine to cutterdeck belt tensioner
  - b) Cutterdeck belt tensioner
  - c) Transmission drive belt tensioner

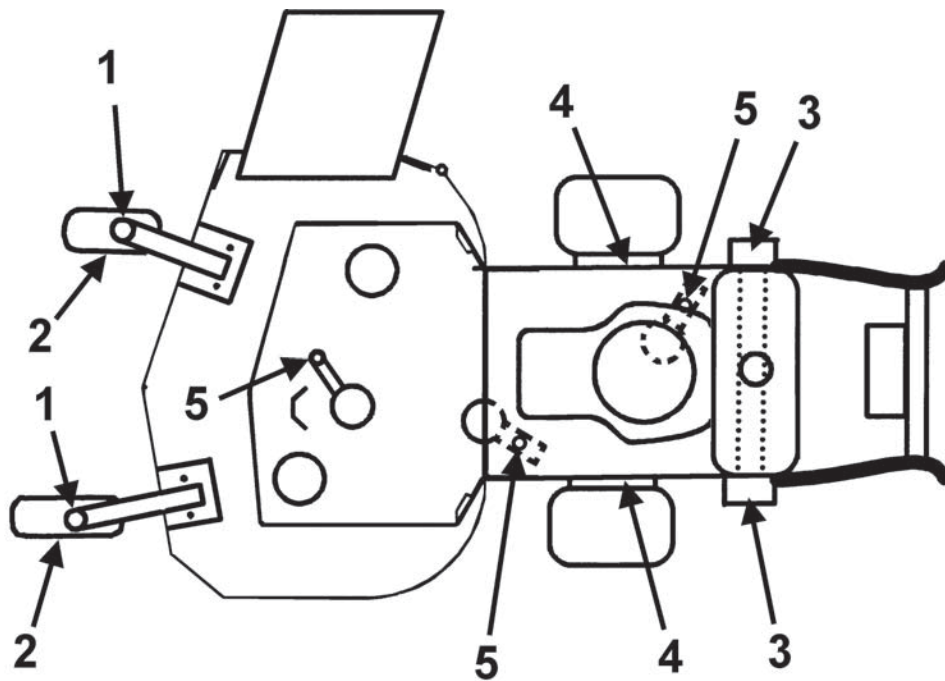





### Blade Sharpening

Blades may be sharpened by filing or grinding, but with either method the balance of the blades must be maintained at 5/8 oz/in or less. Failure to maintain balance causes excess vibration, wear and shortened life of not only the blades, but most all components of the machine. To balance a blade after sharpening: attach 1/8 oz of weight 5" from center on the light end. This should make the light end the heavy end. If it does not: File or grind the heavy end until the addition of weight makes the light end the heavy end.


#### NOTE:

- Do not overheat or weaken the blades.
- Do not straighten bent blades. Replace with new Bunton blades.  
If lift portion of blade is worn thin replace with a new Bunton blade.
- ALWAYS replace with Bunton blades—do not use another manufacturer's blades as this could be dangerous.
- Replace cracked or bent blades.

### BLADE REMOVAL


1. Use a box wrench or socket with a long breaker bar to remove spindle bolt under cutterdeck.
2. Slip tube over breaker bar or wrench if necessary to gain leverage.
3. Keep hands clear as blades may rotate when bolt releases.
4. When changing blades, wear thickly padded gloves.
5. Block blades from turning by using a piece of wood.
6. Follow these instructions to prevent injury when bolt releases.

**NOTE:** To prevent blade from turning, place block of wood at **A**, with grain perpendicular to blade.

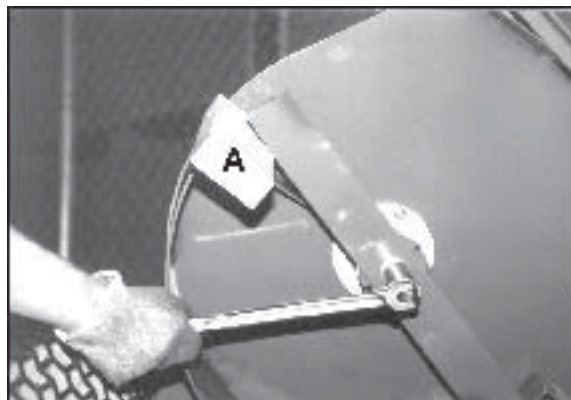

### BLADE RE-INSTALLATION

1. Place the desired number of spacers (no more than 2) on the spindle bolt below the cutterdeck between the blade and spindle shaft.
2. Insert the cutter spindle bolt (from bottom) complete with washer, blade and spacers.
3. Place remaining spacer(s) on the spindle bolt above the cutterdeck between the conical washer and nut (as shown). Replace nut and tighten to 70 ft-lbs.

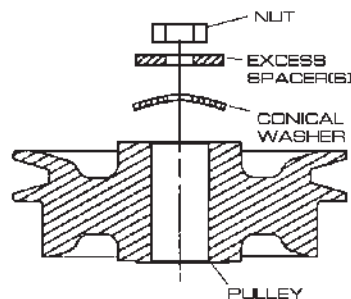

**Cutterdeck Pulley Assembly**

### SPARK PLUG

- Remove plug and check condition.
- Good operating conditions are indicated if the plug has a light grey or tan deposit. A white blistered coating may indicate overheating. A black coating usually means an "over rich" fuel mixture caused by a clogged air cleaner or improper carburetor adjustment. Do not sandblast, wire brush or otherwise try to clean a dirty plug. Best results are obtained with a new plug.
- See engine manufacturers manual for proper spark plug gap.

# SERVICE CHART

**Gear  
Drive  
Midsize**



**NOTE: CHANGE ENGINE OIL AND FILTER AFTER FIRST 5 HOURS OF OPERATION.**

SERVICE OPERATION	FIRST 5 HOURS	DAILY	EVERY 25 HOURS	EVERY 50 HOURS	EVERY 100 HOURS	EVERY 500 HOURS
<b>ENGINE</b>						
Check Oil Level		X				
Check for Oil & Air Leaks		X				
Clean Air Intake		X				
Clean Air Cleaner		X				
Change Oil & Filter*	X	SEE ENGINE MANUFACTURER'S MANUAL *				
Clean Fuel Sediment Bowl				X		
Replace/Adjust Spark Plug	SEE ENGINE MANUFACTURER'S MANUAL					
<b>GEARBOX</b>						
Check Oil Level	MAINTENANCE FREE					
<b>MACHINE</b>						
Check Tire Pressures		X				
Check Belt Tensions	CHECK AFTER FIRST 1/2 HR AND AFTER FIRST 4 HRS			X		
Lubricate All Points				X		

**Consult the manufacturer's manual for your engine for further information and instructions.**

## NOTES

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

GENERAL	DATE		HRS		DATE		HRS		DATE		HRS	
	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS
Check tire pressures												
Lubricate all points												
Check nuts & bolts												
ENGINE												
Check oil level												
Change oil												
Clean air cleaner element												
Clean cooling fins												
Replace air cleaner element												
Clean & gap spark plugs												
NOTE: After first 5 hours of operation replace engine oil and filters.												




Make all adjustments with the engine shut off, spark plug wire disconnected and mower drive disengaged.

## OPERATOR PRESENT CONTROLS

The operator present (OP) controls should be adjusted to control the operation of the plunger of switch located under the right side of the control panel. Depressing OP levers **F** should depress the plunger; releasing the levers should extend it.

### TO ADJUST:

1. Loosen clamp bolts on both ends **G** so clamps can rotate on shaft.
2. Rotate actuator lever to depress switch plunger. Keep OP levers against handles and tighten bolts **G**.
3. When released, the OP levers should rise and the actuator lever should rotate away from the switch, allowing the switch plunger to extend completely.

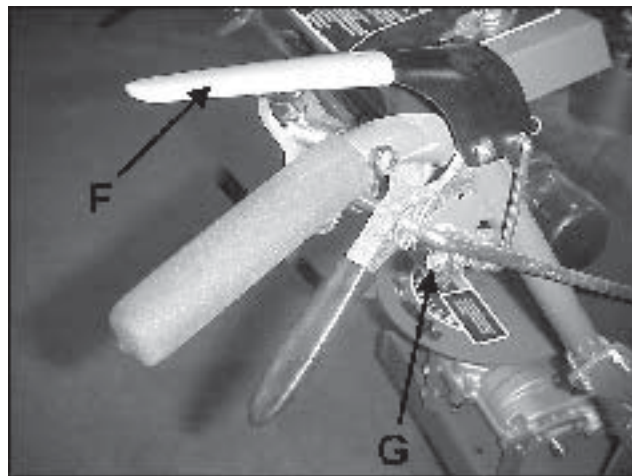


## TRACTION RODS AND WHEEL BELT TENSION -

There should be a 1/4" minimum gap between the traction control rod and the bottom of the neutral latch slot when the drive is engaged. If there is no gap the rod will hold the wheel belt idler up and the belt may slip. Too much gap makes it difficult to get adequate braking and free-wheeling neutral when traction lever locks are in the neutral position. The gap may be increased from 1/4" as long as the machine will free wheel in neutral. Increasing the gap reduces the reach to the traction lever.

### TO ADJUST:


1. Disconnect the brake rod.
2. Remove hairpin cotter from the traction control rod next to the traction control lever.
3. Lift out the rod and turn in or out of the turn-buckle in the required direction.
4. Refit the rod to the lever and replace the hairpin.
5. Check the gap. If it is still not 1/4", repeat the procedure until an approximate 1/4" gap is obtained.

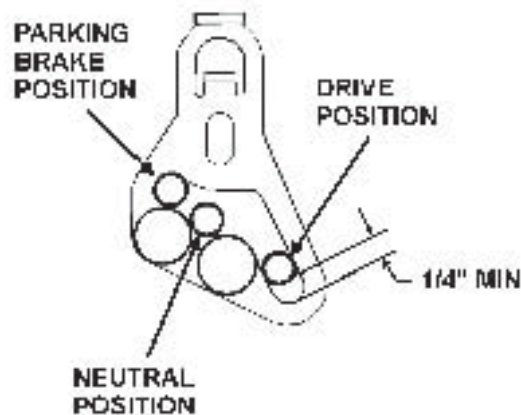



## HANDLE BAR HEIGHT ADJUSTMENT


To adjust handle bar height: Remove bolts **G** and loosen bolts **E** on each side of handlebars. Raise or lower as required. Reposition upper handle and reinsert bolts **G** into appropriate hole in lower handle and tighten. Readjust traction control rods, brakes and parking brakes.

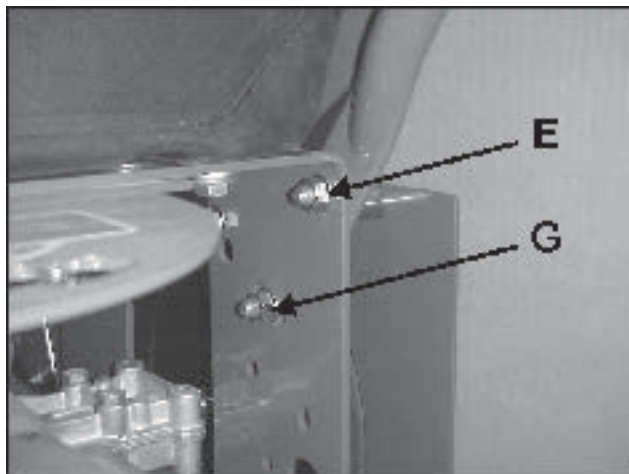

**TRACTION BRAKES/PARKING BRAKES** - With the traction rods properly adjusted, apply both parking brakes and try to push the machine forward. If one or both wheels rotate, adjust the corresponding brake(s).


### TO ADJUST:

1. Remove the hairpin cotter from the brake rod **W** on idler bellcrank **B**.
2. Slide the brake rod out of the bellcrank and turn the rod in or out of brake end swivel **S** as needed.
3. Reassemble the brake rod to the bellcrank.
4. Check the adjustment. **DO NOT OVER ADJUST**. If necessary, repeat the procedure until the correct adjustment is achieved.
5. If adequate adjustment can not be achieved with the brake rod, the links between the brake arm and brake band may be moved to a different hole **L** in the brake arm.

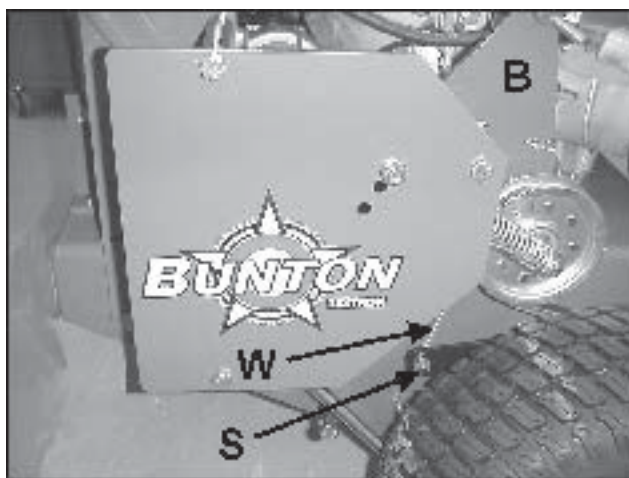

When the brakes are properly adjusted the machine can be freely maneuvered with the traction levers in the neutral position. If not, the brakes have been over-adjusted and have to be backed off.

**NOTE:** Clean inner groove of wheel drive pulley daily for better drive and neutral. Accumulation of grass, mud or other debris in pulley groove can affect declutching. Set mud scraper at each wheel drive pulley to angle down to catch debris.

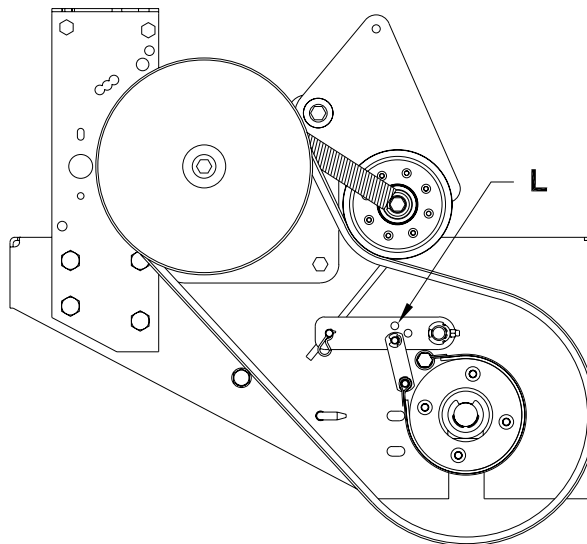



## DRIVE BELT TENSION ADJUSTMENT

Drive belt tension can be adjusted to one of three settings to account for various mowing conditions.

1. Adjust by moving the spring anchor bolt to position 1, 2 or 3.
- Position 1 will provide the least amount of hand effort and wheel traction.
  - Position 3 will provide the highest amount of hand effort and wheel traction.



## TIRE PRESSURE ADJUSTMENT

Tire pressures should be maintained at 14 psi (1.0 kg/cm<sup>2</sup>).

**NOTE:** Adjusting tire pressure slightly can improve tracking. Increase pressure on the side the machine tracks toward and decrease it on the other side.









### PTO BELT

1. Rotate idler arm using a 3/8" ratchet or breaker bar and remove belt.

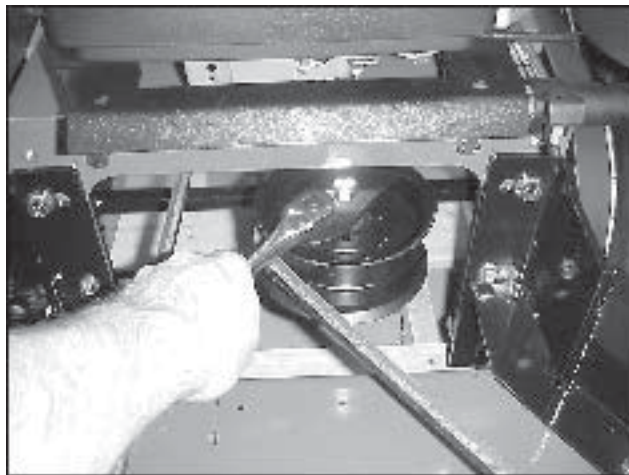


### CUTTERDECK BELT

1. Remove PTO belt.
2. Rotate idler arm using a 3/8" ratchet or breaker bar and remove belt.
3. Replace in the reverse order.

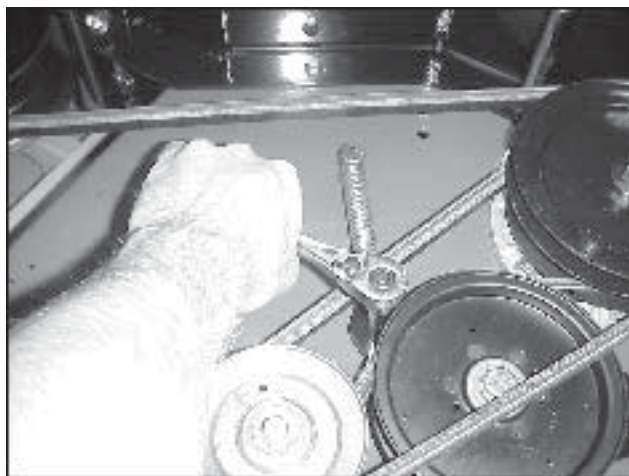

### GEARBOX DRIVE BELT

1. Remove PTO belt from engine clutch.
2. Unbolt clutch stop pin.
3. Rotate idler arm using a 3/8" ratchet or breaker bar.
4. Remove gearbox drive belt.
5. Replace by following steps in reverse order.

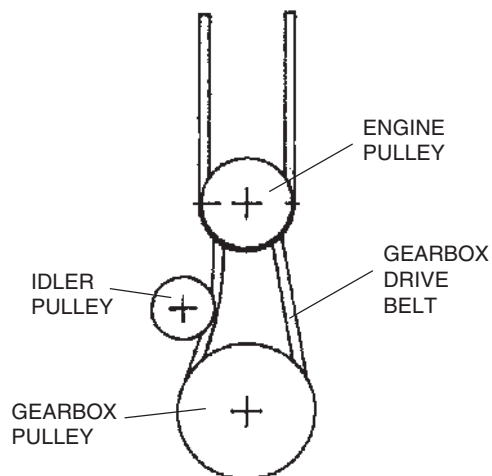


**View under engine deck**

# BELT REPLACEMENT

---



**WHEEL DRIVE BELT** - Remove brake rod **C** and traction control rod **D** from bellcrank. Remove bottom bolt and spacer from fender **A** and loosen the other bolt that holds bellcrank. Rotate bellcrank and idler up and out of the way. The wheel drive belt will be slack enough to be removed from its pulleys and passed over the drive wheel. Replace in the reverse order, readjust traction control rod and brake rod. (Also see Traction Rods and Wheel Belt Tension in ADJUSTMENTS section.)

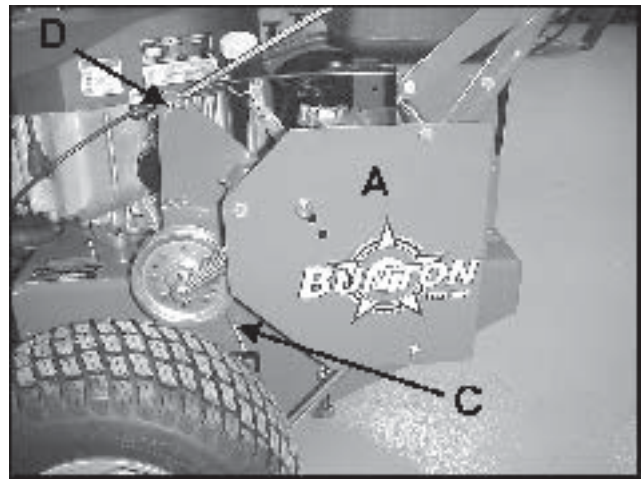



**Gear  
Drive  
Midsize**

**PARTS SECTION**


---

# **PARTS SECTION**

# UPPER ENGINE DECK ASSY



FIGURE 1

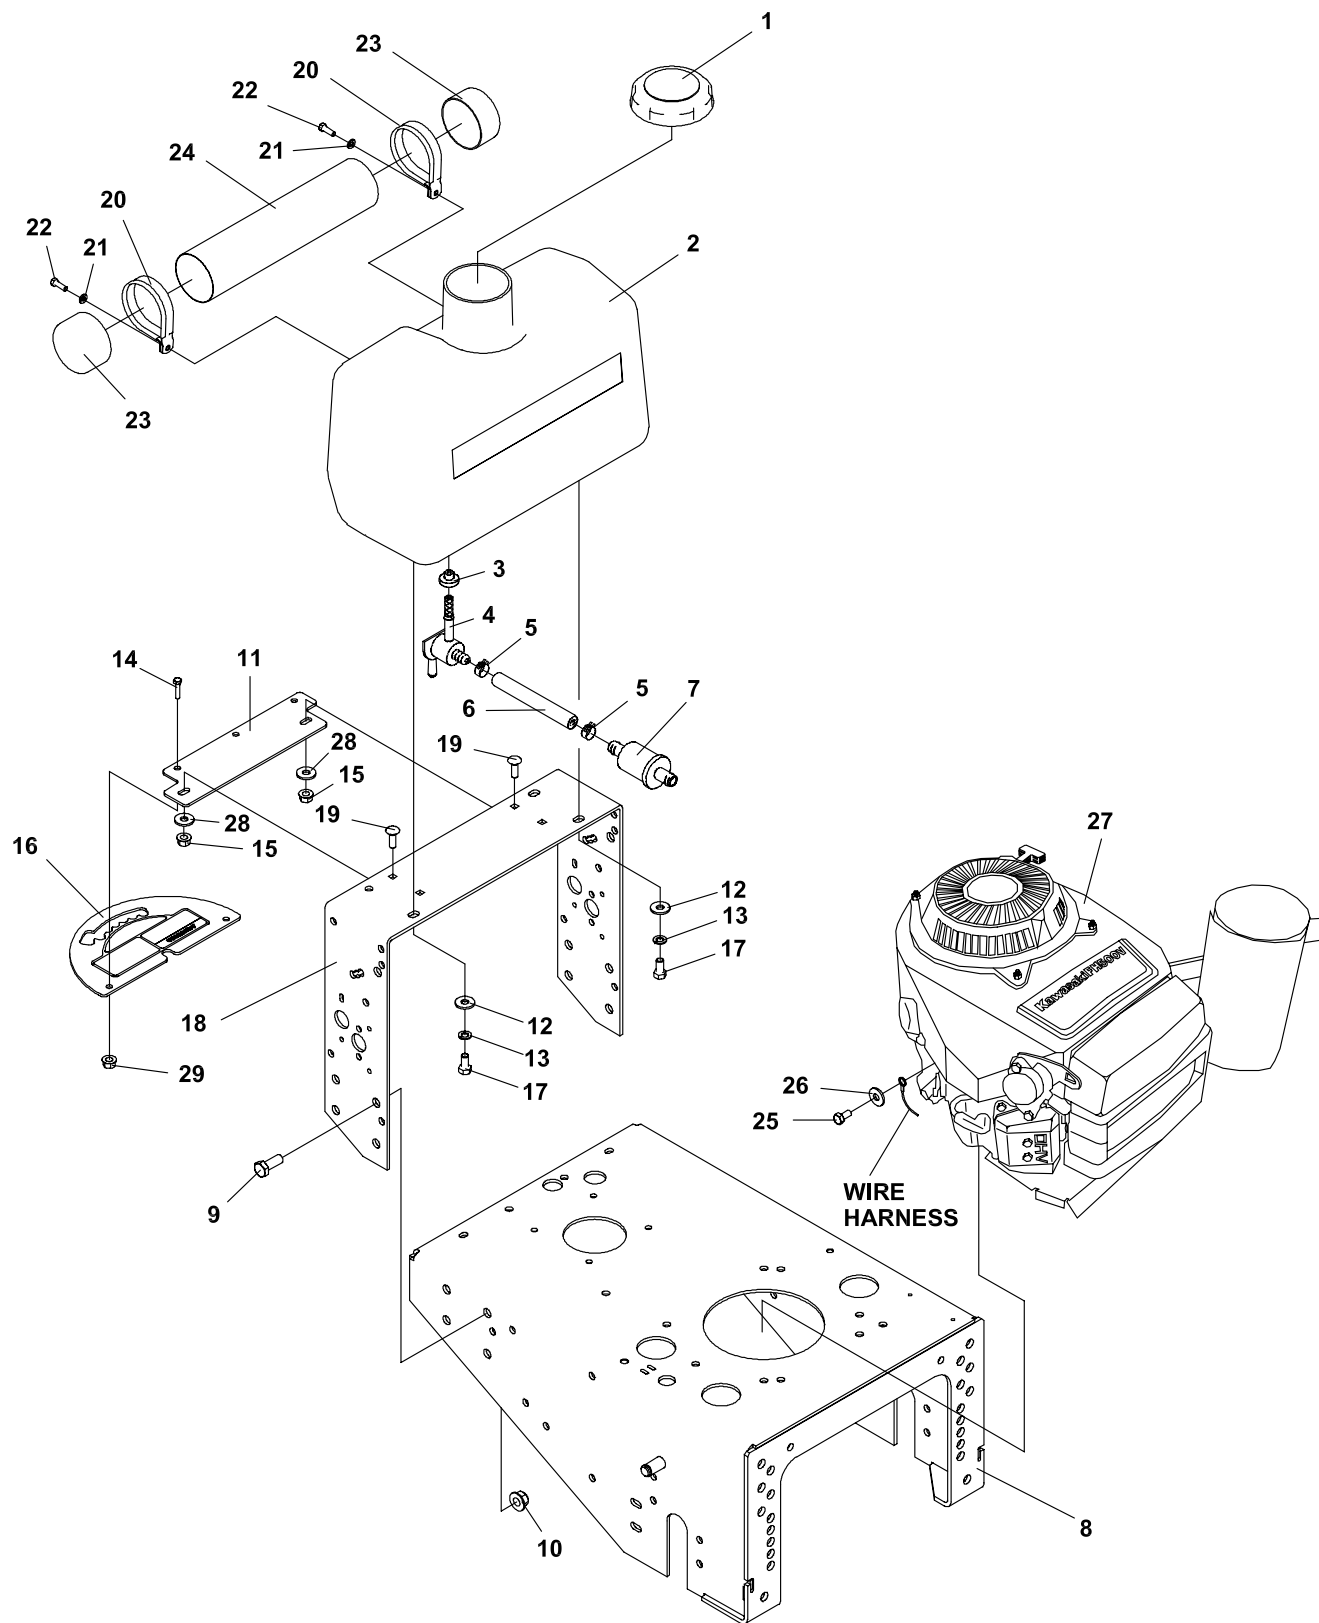



# Gear Drive Midsize

4112622-01

## UPPER ENGINE DECK ASSY

FIGURE 1

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1-1	2721520	CAP-FUEL GASOLINE 3.5	1				
1-2	2721540	TANK-FUEL MID BUNTON (INCLUDES ITEMS 3 & 4)	1				
1-3	48310	S BUSHING,FUEL TANK	1				
1-4	38540	S FUEL SHUT-OFF VALV	1				
1-5	88042N	HOSE CLAMP	2				
1-6	48016-8A	HOSE,.25IDX.50ODX16.5"L	1				
1-7	38666	FILTER, FUEL	1				
1-8	4110080	S-ENGINE DECK W/LABELS	1				
1-9	A1105061	BOLT-M12-1.75 X 30	8				
1-10	64237-06	LOCKNUT-NYLON M12-1.75	8				
1-11	4118204	SUPPORT-GEAR SELECT	1				
1-12	64163-31	WASHER	4				
1-13	64006-03	LOCKWSHR-HELICAL 3/8	4				
1-14	64205-001	BLT-MET M8-1.25X20	2				
1-15	64229-02	LOCKNUT-NYLON 5/16-18	2				
1-16	4118785	S GEAR SELECT PLT W/LAB	1				
1-17	64123-15	BLT-HEX 3/8-16X3/4	4				
1-18	2721394.5	HANDLE-LOWER	1				
1-19	64018-15	BLT-CRG 5/16-18X1	2				
1-20	38542	CLAMP-DOCU TUBE	2				
1-21	64006-01	LOCKWSHR-HELICAL 1/4	2				
1-22	64123-89	BLT-HEX 1/4-20 X 3/4	2				
1-23	38061A	COVER	2				
1-24	2306144	S DOCU TUBE W/LAB	1				
1-25	64205-018	BLT MET M8-1.25 X 15	1				
1-26	64002-04	LCKWSHR-TOOTH EXT 5/16	1				
1-27 *	2721377	ENG-15HP KAW W/CHARG (SERVICE MANUAL 15 HP KAW #99920-2129-03)	1				
1-28	64163-29	21/64X1X11GA.WASHER	2				
1-29	64246-02	NUT-WLF M8-1.25	2				


\* AVAILABLE THROUGH KAWASAKI DEALER.

# LOWER ENGINE DECK ASSY/CLUTCH

Gear  
Drive  
Midsize



FIGURE 2

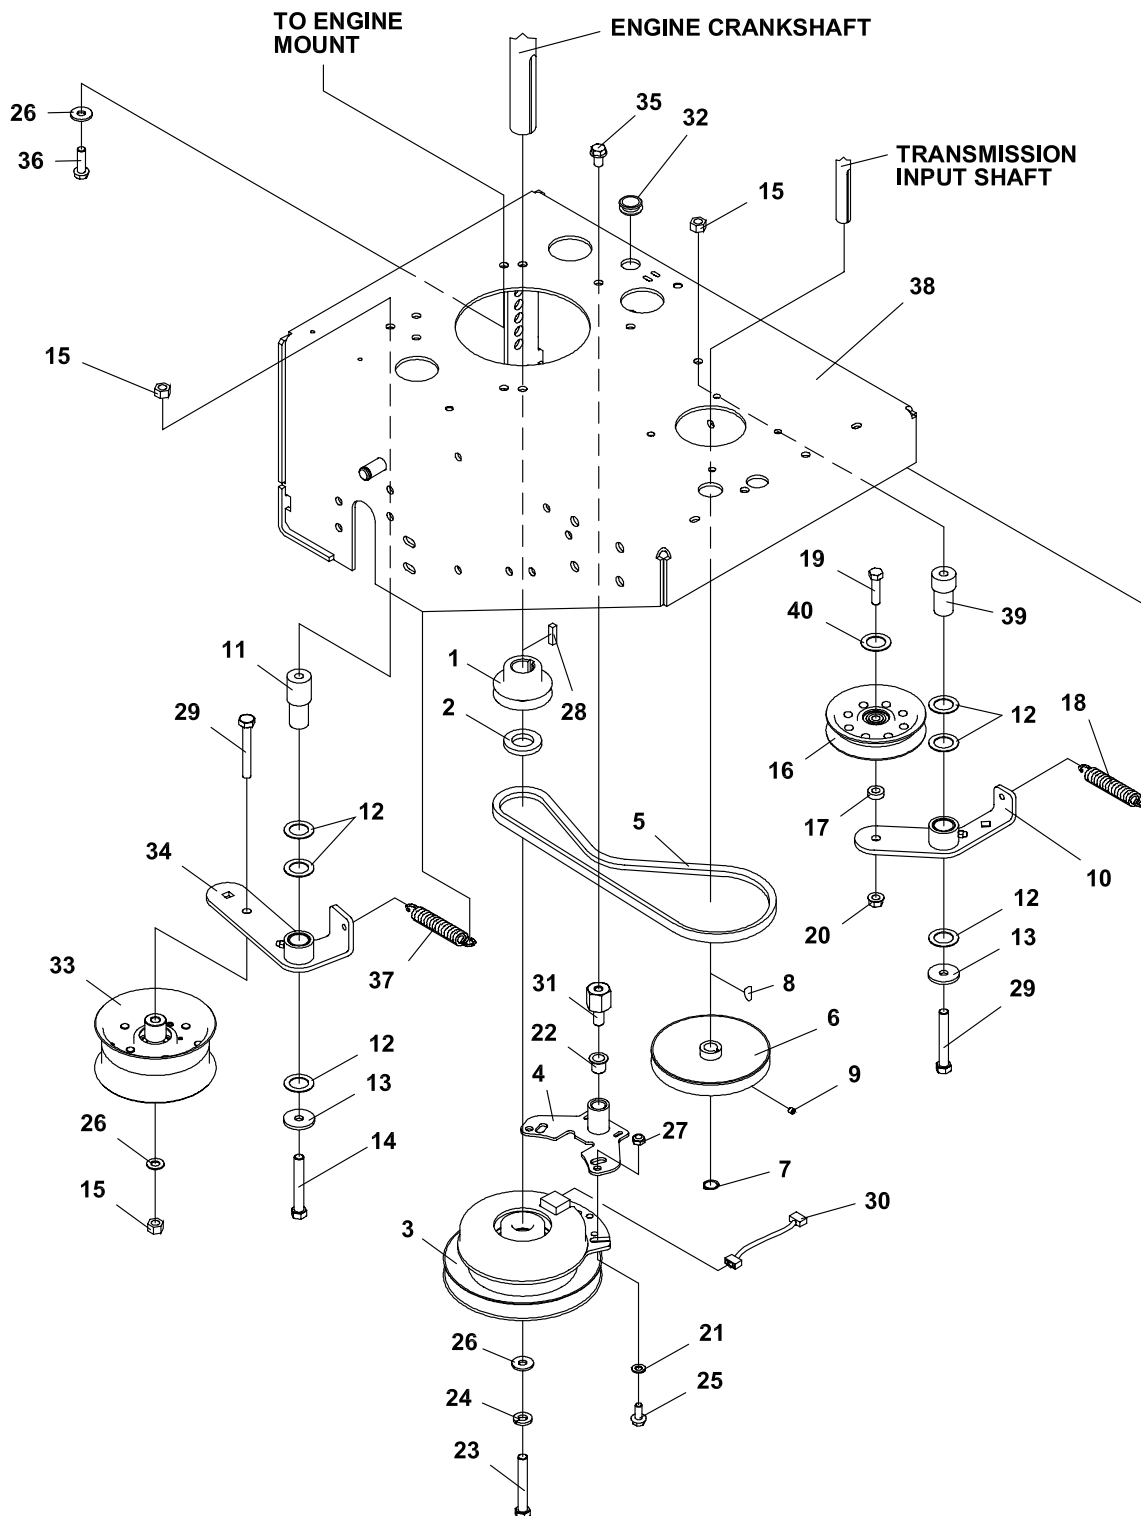





**Gear  
Drive  
Midsize**

## LOWER ENGINE DECK ASSY/CLUTCH


2721835-02

**FIGURE 2**

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
2-1	38460	PULLEY-ENGINE	1				
2-2	64163-07	1-1/32X1-3/4X1/4 WASH	1				
2-3	2721110	CLUTCH-ELECTRIC	1				
2-4	2721331.7	WLDMT-CLUTCH STOP MID	1				
2-5	2721796	BELT-HA 37.75	1				
2-6	2721795	PULLEY-A SECTION 5.50	1				
2-7	64144-01	SNAP RING 5/8	1				
2-8	64164-19	KEY WOODRUFF.19X.75 #9	1				
2-9	64044-1	SCREW-SET 1/4-20X1/4	2				
2-10	2721403.7	WLDMT-IDLER ARM	1				
2-11	2721652	PIN-PIVOT	1				
2-12	64163-65	WASHER 0.890 X 1.375	6				
2-13	64163-82	WSHR-FLAT .406X1.44X9GA	2				
2-14	64205-012	BLT-MET M10-1.50 X 90	1				
2-15	64237-03	LOCKNUT-NYLON M10-1.5	3				
2-16	2308000	PULLEY-IDLER 4.00 EOD	1				
2-17	33148-01	SPACER	1				
2-18	38219	SPRING-TENSION	1				
2-19	64123-70	BLT-HEX 3/8-16X1-1/2	1				
2-20	64141-4	NUT-WLF 3/8-16	1				
2-21	64251-003	WASHER-M8	2				
2-22	38304-03	BRG-FLANGED PLASTIC	1				
2-23	64123-155	BLT-HEX 7/16-20 X 3	1				
2-24	64006-06	LOCKWASHER-HELICAL 7/1	1				
2-25	64205-001	BLT-MET M8-1.25 X 20	2				
2-26	64163-31	WASHER .25/64 X 1 X 12 GA	6				
2-27	64237-05	LOCKNUT-NYLON M8-1.25	2				
2-28	64164-12	1/4X1/4X1 SQ END KEY	1				
2-29	64205-17	BLT-MET M10-1.50 X 75	2				
2-30	2720949	ASSY-CLUTCH WIRE	1				
2-31	2721398	PIN-CLUTCH	1				
2-32	148034-08	GROMMET 1.125OD 0.625ID	1				
2-33	2721541	PULLEY-IDLER 5 IN	1				
2-34	2721401.7	WLDMT-IDLER ARM	1				
2-35	64264-01	BLT-WLF M10-1.5 X 16	1				
2-36	64197-005	BLT-TDFM 3/8-16X1-1/4	4				
2-37	2188131	SPRING-EXTENSION	1				
2-38	4110080	S-ENGINE DECK W/LABELS	1				
2-39	2721653	PIN-PIVOT	1				
2-40	64163-61	WASHER- .81X .406 X 16GA	1				

# DRIVE WHEELS & BRAKES

FIGURE 3

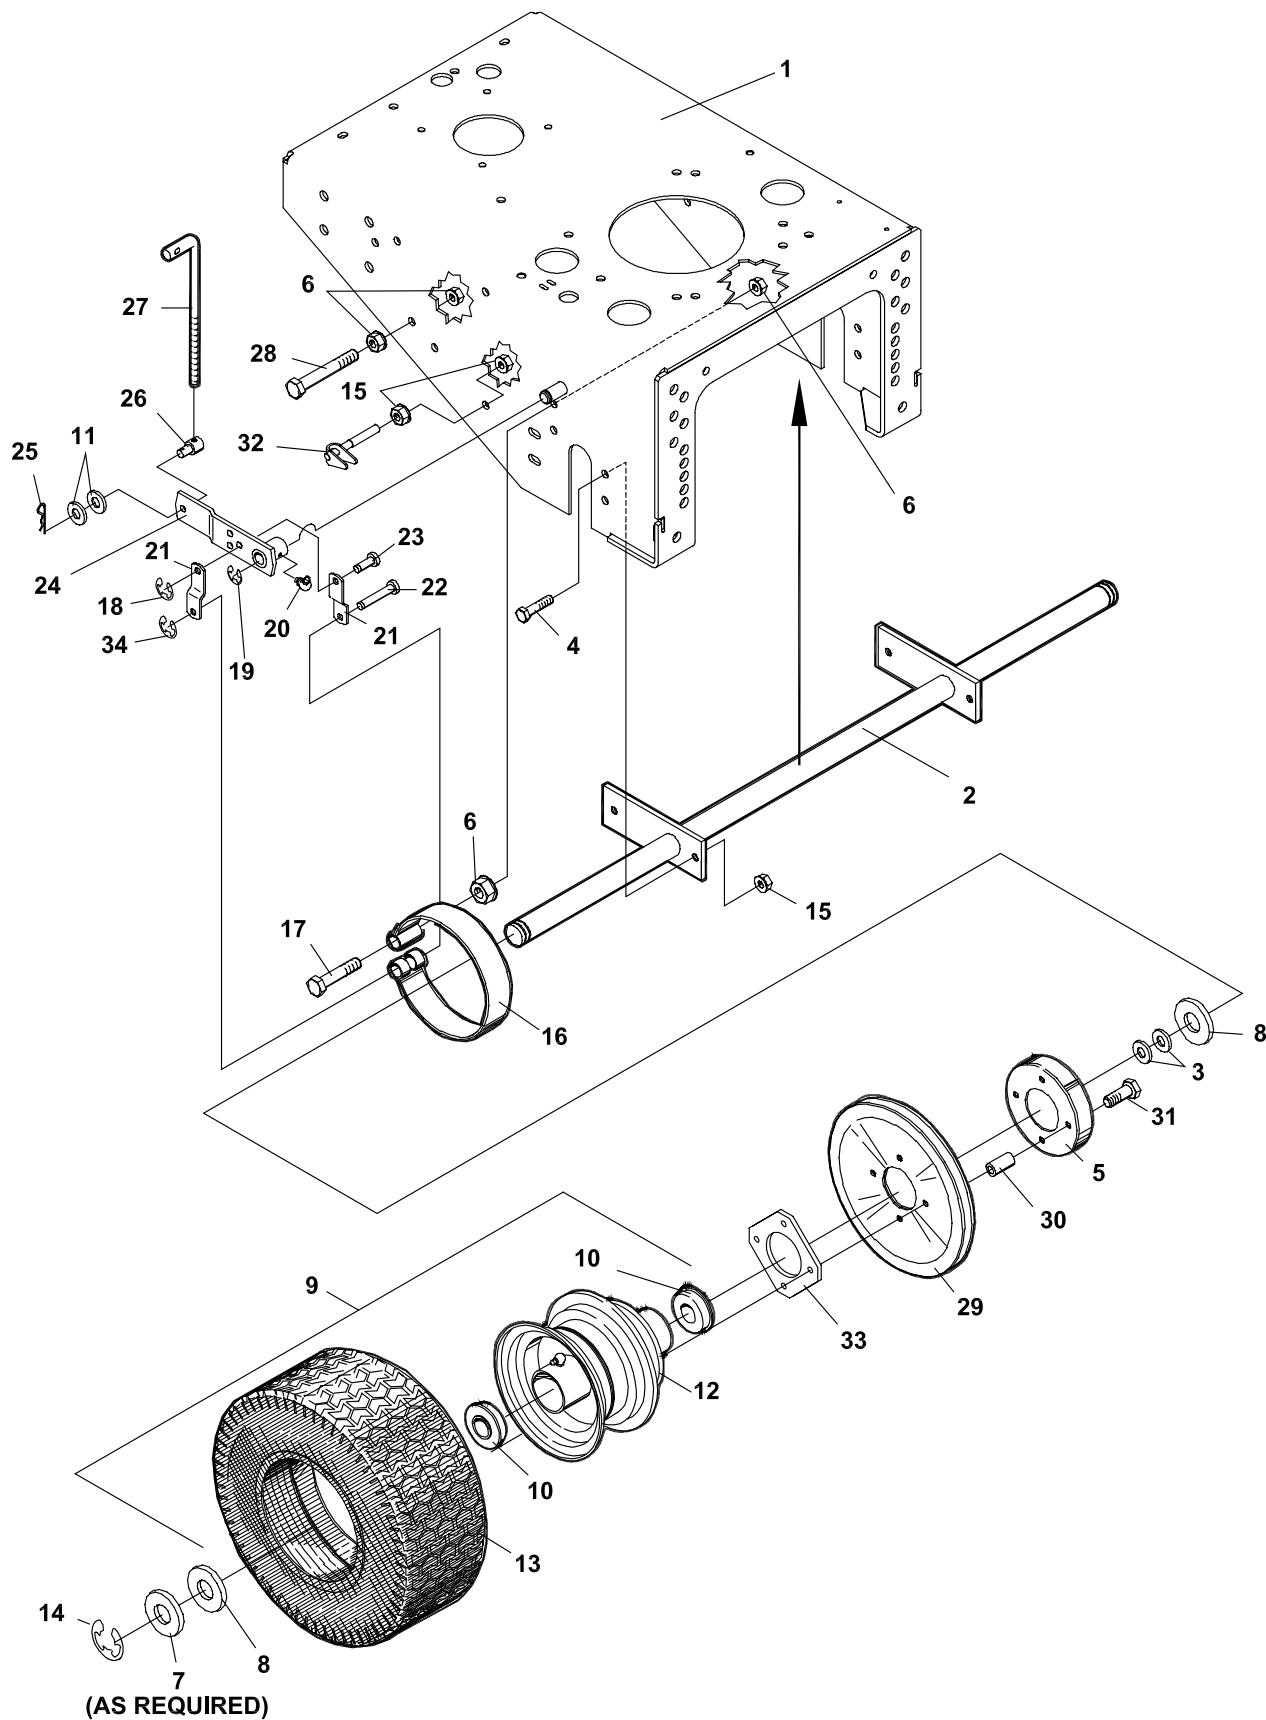



# Gear Drive Midsize

2721835-03

## DRIVE WHEELS & BRAKES


FIGURE 3

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
3-1	4110080	S-ENGINE DECK W/LABELS	1				
3-2	2722491.7	WLDMT-AXLE GD	1				
3-3	64163-07	WASHER	4				
3-4	64197-005	BLT-TDFM 3/8-16X1-1/4	4				
3-5	2722642	BRAKE-DRUM	2				
3-6	64246-03	NUT-WHIZ M10-1.50	8				
3-7	64163-64	WASHER	2				
3-8	64163-25	WASHER	4				
3-9	2721432	WHL ASSY-4PLY 16 X 6.5-8	2				
		(INCLUDES ITEMS 10-13, QTYS LISTED)					
3-10	2721432-3	S BALL BRG 1.00	2				
3-11	64163-02	WASHER-11GA	4				
3-12	2721432-2	S RIM ASSY	1				
3-13	2721432-1	S TIRE 16 X 6.5 - 8 4 PLY	1				
3-14	64221-1	E CLIP	2				
3-15	64141-4	NUT-WLF 3/8-16	4				
3-16	38534	BAND-BRAKE	2				
3-17	64205-034	BLT-MET M10-1.50 X 45	2				
3-18	64144-31	SNAP RING	2				
3-19	64144-36	SNAP RING	2				
3-20	108102	LUB. FITTING 65 DEG	2				
3-21	4117094	LINK-BRAKE	4				
3-22	33138-07	PIN-CLVS GRVD .38 X 1.25	2				
3-23	33138-01	PIN, CLEVIS .47	2				
3-24	2721405.7	WLDMT BRAKE ARM	2				
3-25	64168-2	HAIRPIN COTTER	2				
3-26	33004A	SWIVEL	2				
3-27	33135-03	ROD-BRAKE	2				
3-28	64205-012	BLT-MET M10-1.50X90	2				
3-29	2721794	PULLEY-B SECTION 11.00	2				
3-30	103044	SPACER, F.R. BEARING	8				
3-31	64197-011	BLT-TDFM 5/16-18X1 1/2	8				
3-32	33278	SCRAPER-SINGLE EDGE	2				
3-33	32599.7	M/B SPACER, 9 PULLEY	2				
3-34	64144-30	SNAP RING.375	2				

# TRANSMISSION DRIVE



FIGURE 4

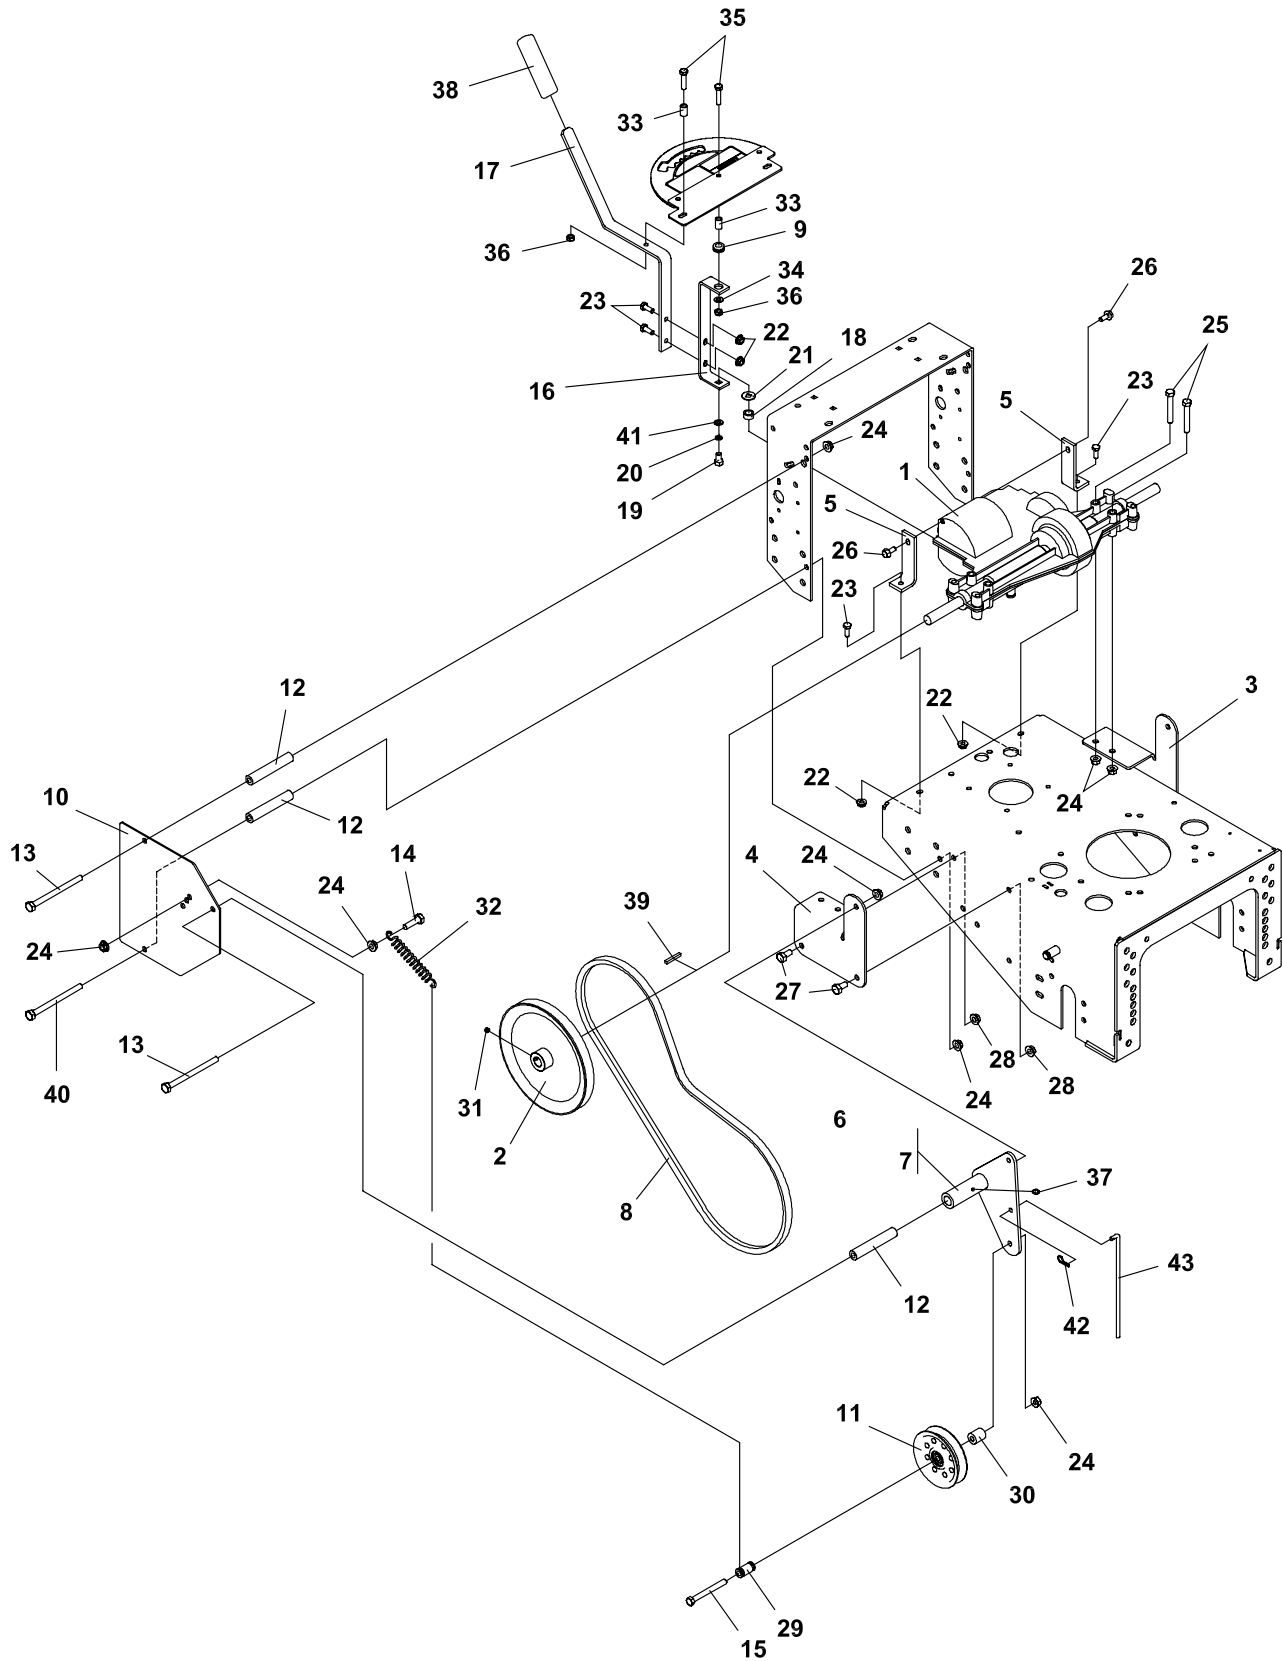



# Gear Drive Midsize

2721835-04

## TRANSMISSION DRIVE

FIGURE 4


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
4-1	2721797	TRANSAXLE-DANA (SEE FIGURE 8 FOR PARTS BREAKDOWN)	1				
4-2	2721793	PULLEY-B SECTION 9.00	2				
4-3	2721385.5	BRKT-DANA LH	1				
4-4	2721386.5	BRKT-DANA RH	1				
4-5	2721387.5	BRKT-DANA REAR	2				
4-6	2721370.5	WLDMT-BELLCRANK RH	1				
4-7	* 2721371.5	WLDMT-BELLCRANK LH	1				
4-8	2721798	BELT-HB 63.50	2				
4-9	118047-02	BUSHING FLIP-LOK, 1/2	1				
4-10	2721368.5	COVER-BELT BUNTON	2				
4-11	2308000	PULLEY-IDLER 4.00 EOD	2				
4-12	2721684	SPACER-10.31X18.54 X 108	6				
4-13	64123-93	BLT-HEX 3/8-16 X 5	4				
4-14	64123-70	BLT-HEX 3/8-16 X 1-1/2	2				
4-15	64123-138	BLT-HEX 3/8-16 X 3-3/4	2				
4-16	2721439.7	LEVER-LOWER	1				
4-17	2721438.7	LEVER-SHIFT	1				
4-18	2721954	SPACER- 12.9 X 19.0 X 8 LG	1				
4-19	64123-220	BOLT HEX 1/4-28 X 5/8	1				
4-20	64006-01	LOCKWSHR-HELICAL 1/4	1				
4-21	128108	WASHER-DANA	1				
4-22	64246-02	NUT-WLF M8-1.25	6				
4-23	64205-001	BLT-MET M8-1.25 X 20	6				
4-24	64141-4	NUT-WLF 3/8-16	16				
4-25	64123-82	BLT-HEX 3/8-16X2-1/2	4				
4-26	64197-001	BLT-TDFM 5/16-18X3/4	2				
4-27	64205-007	BLT MET M10-1.50 X 20	4				
4-28	64246-03	NUT-WHIZ M10-1.50	4				
4-29	2303056	SPACER, SPRING	2				
4-30	33030-08	BSH-IDLER 7/8 X 3/8 X 1.00	2				
4-31	64044-6	SCREW-SET 5/16-18 X 1/4	2				
4-32	2308133	SPRING-EXTENSION	2				
4-33	2721955	SPACER-8.74 X 12.7 X 20 LG	2				
4-34	64251-003	WHSR-M8	1				
4-35	64205-015	BLT-MET M8-1.25 X 35	2				
4-36	64237-05	LOCKNUT-NYLON M8-1.25	2				
4-37	85010N	ZERK-1/4-28 SELF THREAD	2				
4-38	2188155	GRIP, 1/4X1X4-1/2	1				
4-39	64164-01	KEY-3/16 X 1-1/2 SQUARE	1				
4-40	64123-130	BLT-HEX 3/8-16X5-1/2	2				
4-41	64163-86	WASHER-.265 X .625 X .125	1				
4-42	64168-2	COTTER-HAIRPIN	2				
4-43	33135-03	ROD-10.25	2				

\* NOT ILLUSTRATED

# UPPER HANDLE/ROLLER LATCH



FIGURE 5

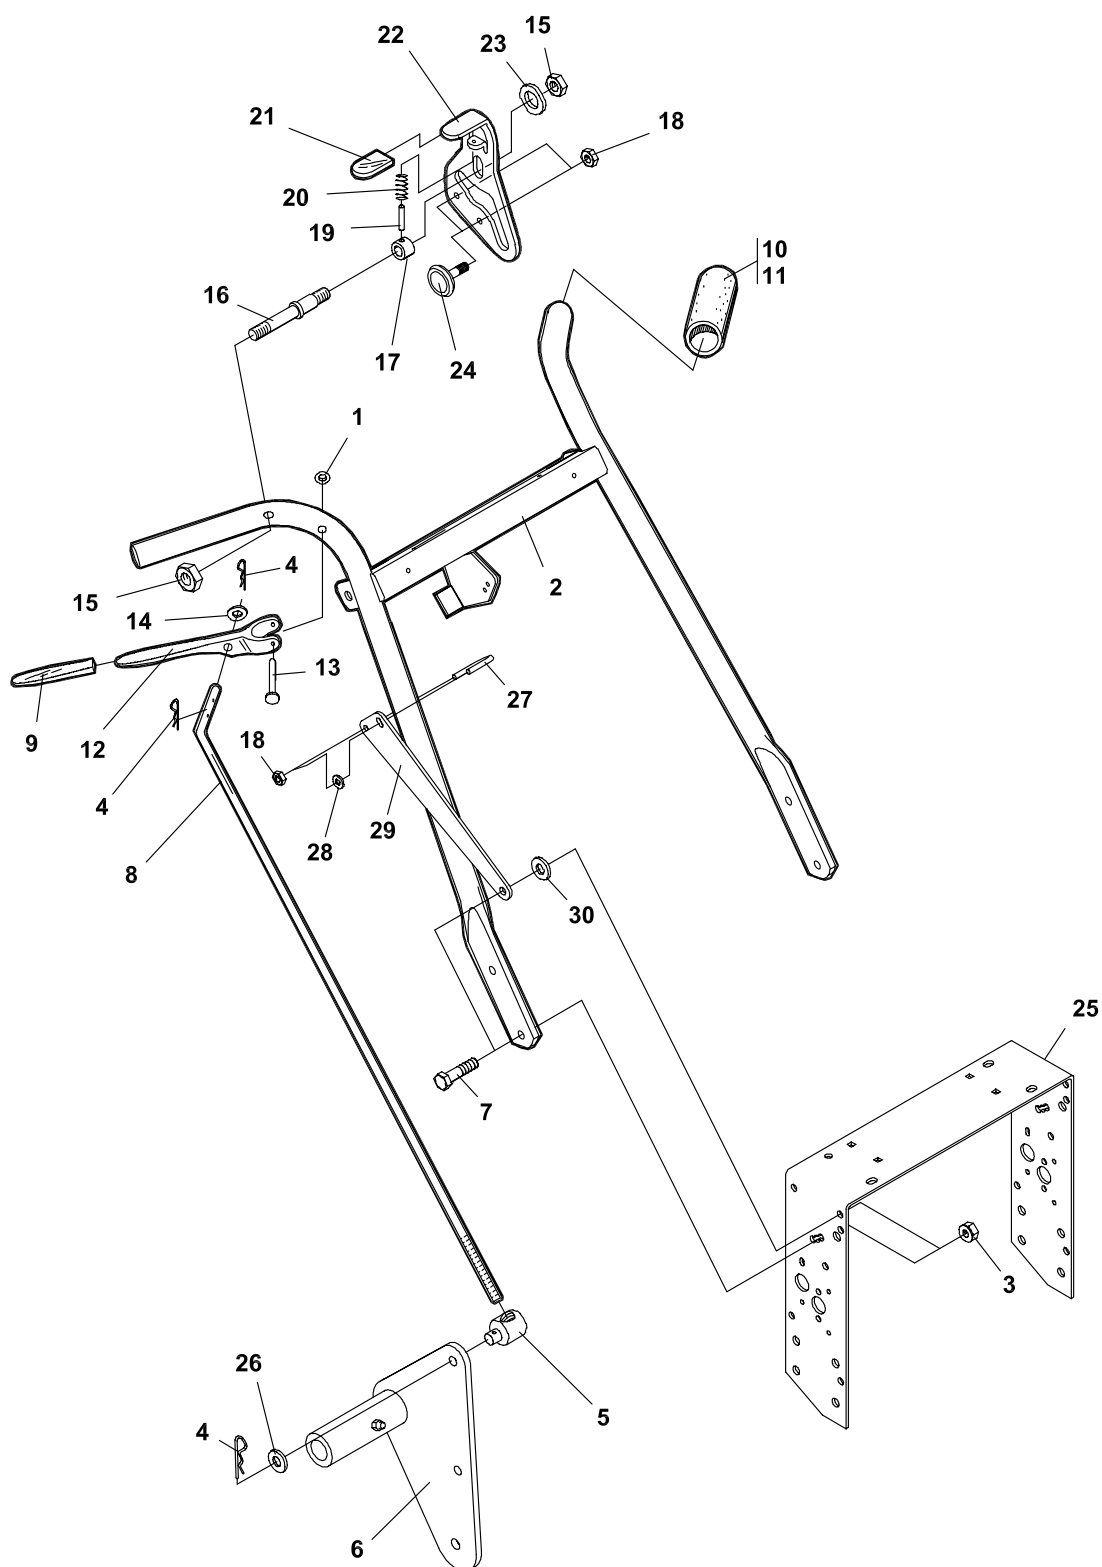





# Gear Drive Midsize

2721835-05

## UPPER HANDLE/ROLLER LATCH


FIGURE 5

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
5-1	64175-01	PUSHNUT-3/16 ROD	2				
5-2	2721427.5	WLDMT-UPPER HANDLE	1				
5-3	64141-4	NUT-WLF 3/8-16	6				
5-4	64168-2	HAIRPIN COTTER	6				
5-5	33103	SWIVEL	2				
5-6	2721370.5	WLDMT-BELLCRANK RH	1				
	* 2721371.5	WLDMT-BELLCRANK LH	1				
5-7	64123-50	BLT-HEX 3/8-16 X 1	6				
5-8	2721830	ROD-TRACTION CNTRL GD	2				
5-9	38009N	GRIP, TRACTION CNTRL	2				
5-10	PL5029	GRIP-HANDLE	2				
5-11	* 2308121	ADHESIVE-3 GRAM TUBE (USE WITH PL5029 GRIP)	1				
5-12	31032	LEVER, TRACTION CNTRL	2				
5-13	64188-44	PIN-CLEVIS 3/16 X 2.25	2				
5-14	64163-31	WASHER	2				
5-15	64229-02	LOCKNUT-NYL 5/16-18	4				
5-16	2303076	STUD-DOUBLE ENDED	2				
5-17	33243	SPACER	2				
5-18	64229-01	LOCKNUT NYL 1/4-20	4				
5-19	64061-37	PIN-ROLL	2				
5-20	38189	SPRING COMPRESSION	2				
5-21	2722426	GRIP-TRACTION LOCK	2				
5-22	2722722	LATCH-ROLLER RH GD	1				
	* 2722721	LATCH-ROLLER LH GD	1				
5-23	62464-5A	WASHER THRUST 5/16	2				
5-24	2308002	BRG-RADIAL W/THD STD	4				
5-25	2721394.5	LOWER-HANDLE	1				
5-26	64251-003	WASHER-M8	2				
5-27	64225-03	U-BOLT	2				
5-28	64229-01	LOCKNUT-NYLON 1/4-20	4				
5-29	2722062.5	BRACE-HANDLE	2				
5-30	64163-83	WASHER-.406 X 1.00 X .25	1				
5-31	64163-03	WSHR-.256ID X .62OD	2				

\* NOT ILLUSTRATED

TRACTION LOCK ASSY'S ARE ALSO AVAILABLE  
P/N 4112282 RH & P/N 4112301 LH  
(INCLUDES ITEMS 15-24)

FIGURE 6

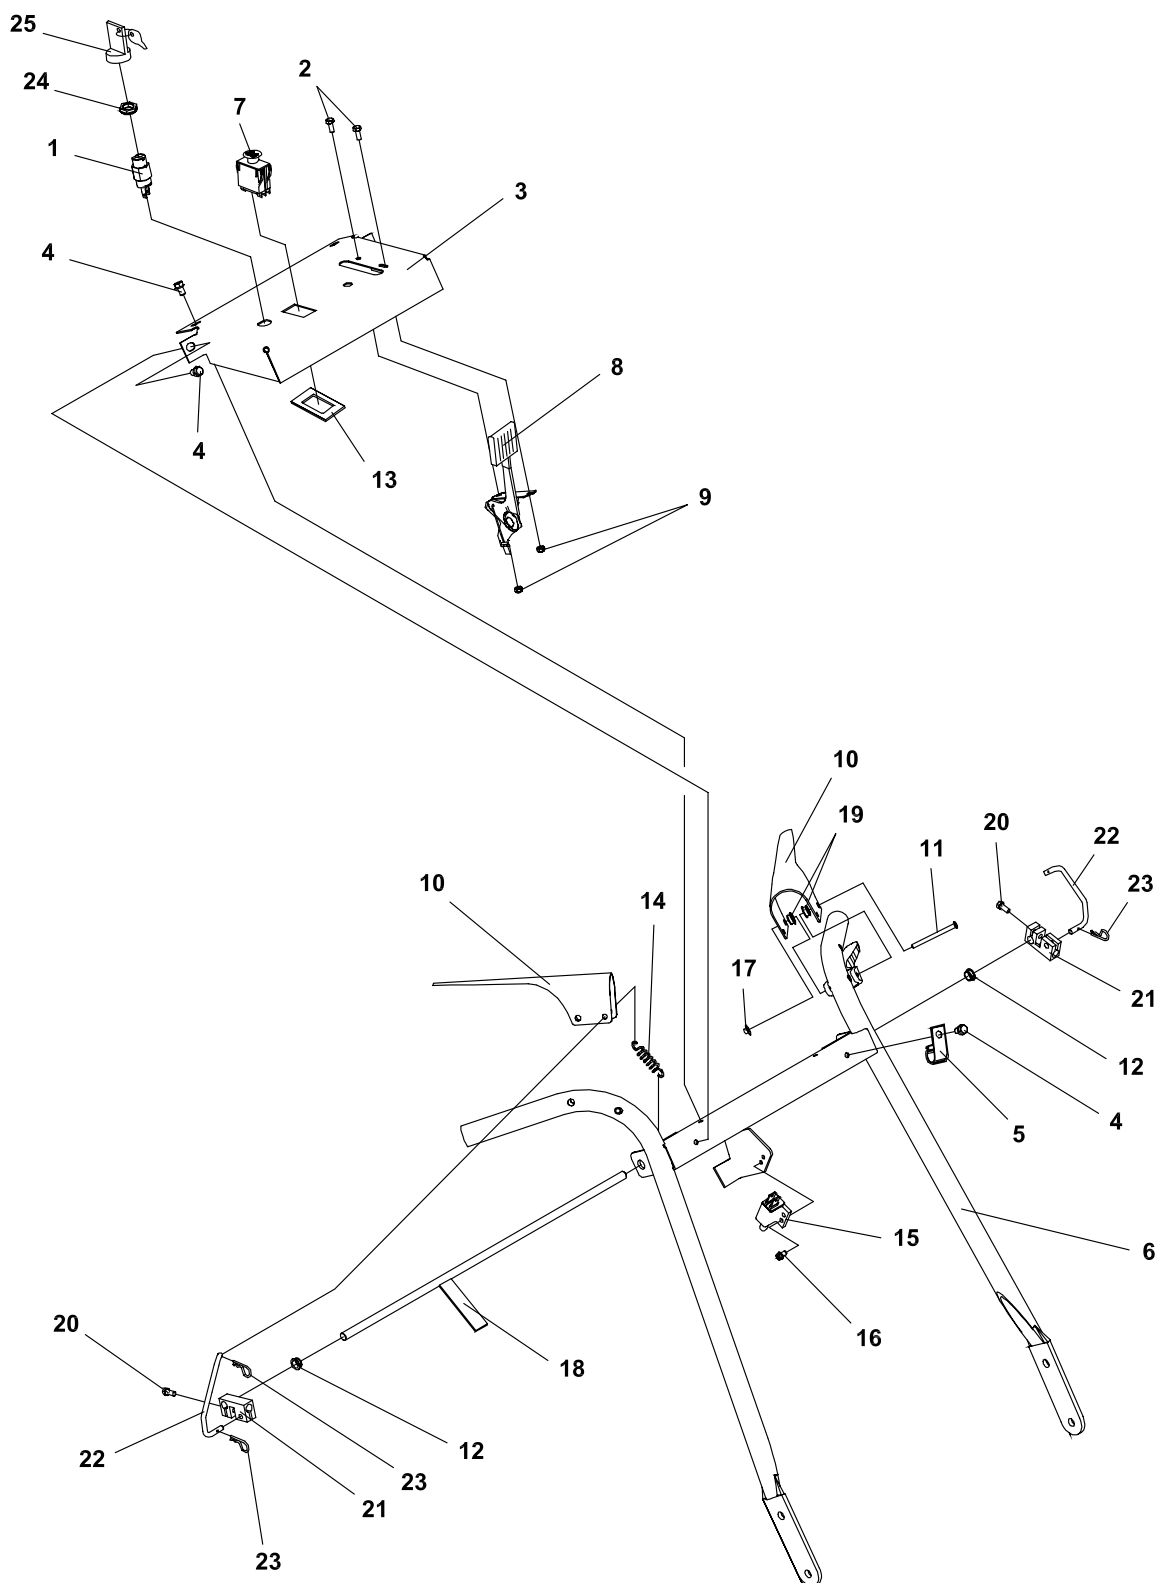



# Gear Drive Midsize

2721835-06


## OPERATOR PRESENT

FIGURE 6

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
6-1	38148	SWITCH-ENGINE STOP	1				
6-2	64152-10	10-24 X 3/4 MACH SCREW	2				
6-3	2722704	S-CONTROL PNL W/LAB	1				
6-4	64248-01	BLT-THD FRM M8 X 15	4				
6-5	48412	CLIP-CABLE	1				
6-6	2721427.5	WLDMT-UPPER HANDLE	1				
6-7	2721505	SWITCH-PTO	1				
6-8	38357-04	THROTTLE & CABLE	1				
6-9	64025-15	NUT-HEX #10-24 KEPS	2				
6-10	2302152.7	HANDLE-OP PRESENT	2				
6-11	64188-44	PIN-CLEVIS 3/16 X 2.25	2				
6-12	38371-01	BRG-NYLINER 3/8	2				
6-13	2188178	SWITCH-RETAINER	1				
6-14	2721904	SPRING-EXTENSION	1				
6-15	38383	SWITCH-NORM CLOSED	1				
6-16	64197-015	BLT-THD FRM 10-32 X 1/2	2				
6-17	64175-01	PUSHNUT-3/16 ROD	2				
6-18	2721426	WLDMT-OP PRES	1				
6-19	38371-03	BRG-NYLINER 3/16	4				
6-20	64197-002	BLT-TR 1/4-20 X 3/4	2				
6-21	2303023	CONNECTOR OP	2				
6-22	2721825	ROD-HANDLE LH LINK	2				
6-23	64168-2	HAIRPIN COTTER	4				
6-24	128010-01	S-KEY SWITCH NUT 5/8-32	1				
6-25	128010-03	S-COVERED KEY	1				

# DECALS

FIGURE 7

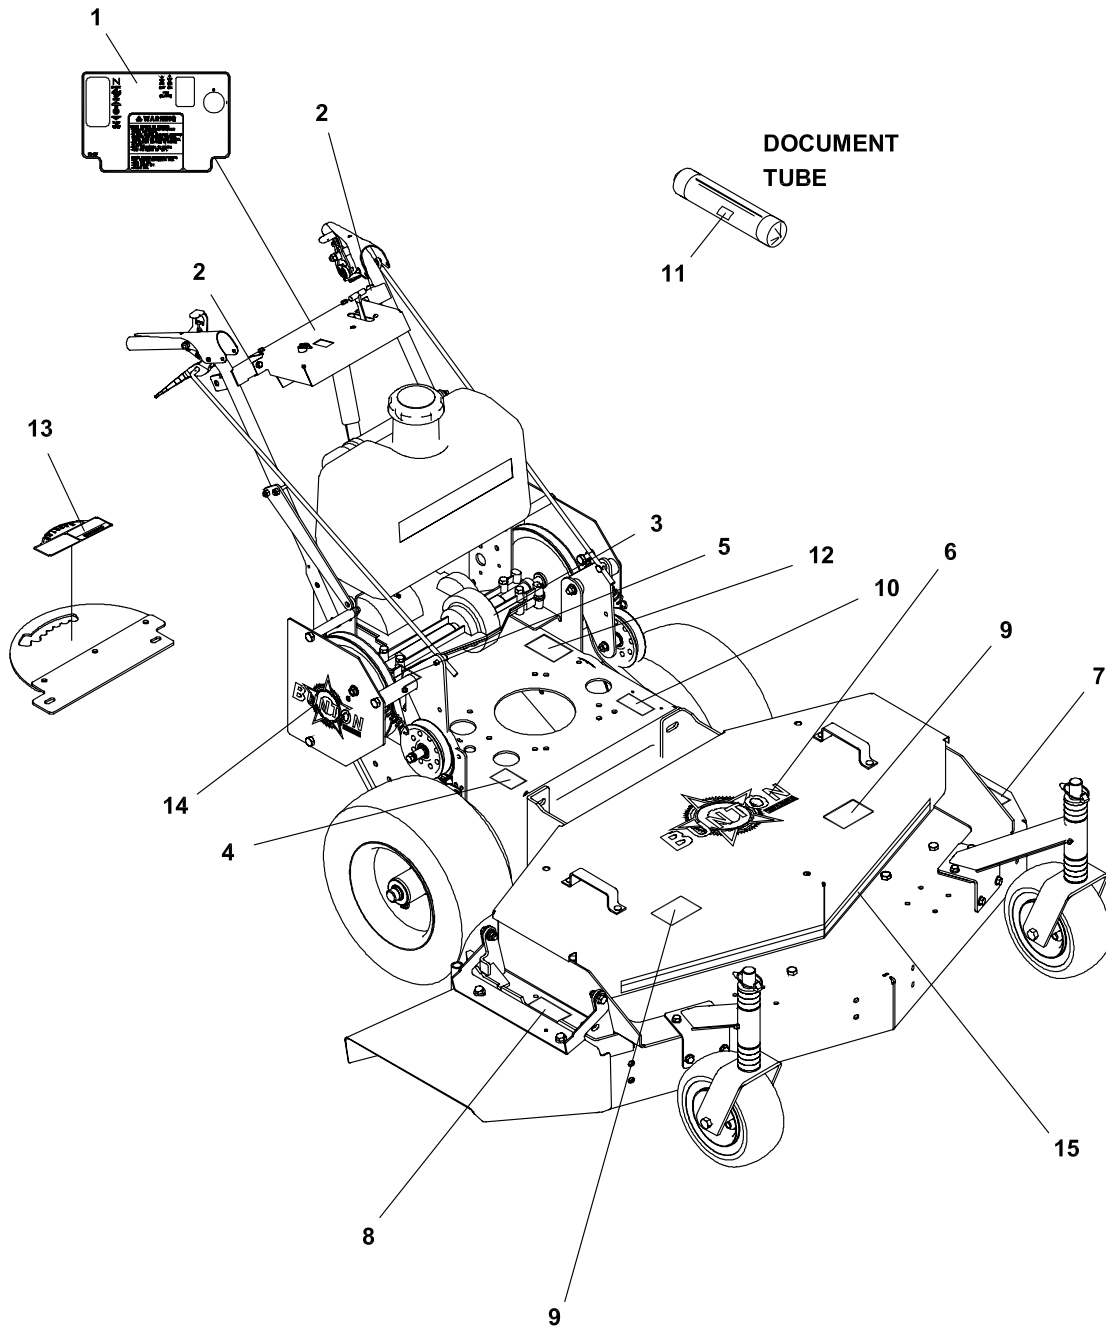



# Gear Drive Midsize


4112622-07

## DECALS

FIGURE 7

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
7-1	2721683	LABEL-CNTRL PNL GD	1				
7-2	2000569	LABEL-PARK/NEUTRAL	2				
7-3	2000570	LABEL-WARN FUEL PICT	1				
7-4	340830	DECAL-CAUTION SPANISH	1				
7-5	2000571	LABEL-IMPORTANT	1				
7-6	2721885	LABEL-BUNTON (LARGE)	1				
7-7	2000572	LABEL-WARNING BLADES	1				
7-8	2000677	LABEL-DANGER/WARNING	1				
7-9	2000678	LABEL-ROT PRTS/B-WSHR	1				
7-10	2000704	LABEL-MIDSIZE PATENT	1				
7-11	2000673	DECAL - OP MAN/TIRES	1				
7-12	2000575	LABEL-WARNING	1				
7-13	2721821	LABEL-GEAR SELECT	1				
7-14	2721886	LABEL-BUNTON (SMALL)	2				
7-15	2721883-01	LABEL-BUNTON STRIPE	1				
		(36" FIXED DECK LENGTH OF 24")					
		(48" FIXED DECK LENGTH OF 33")					

FIGURE 8

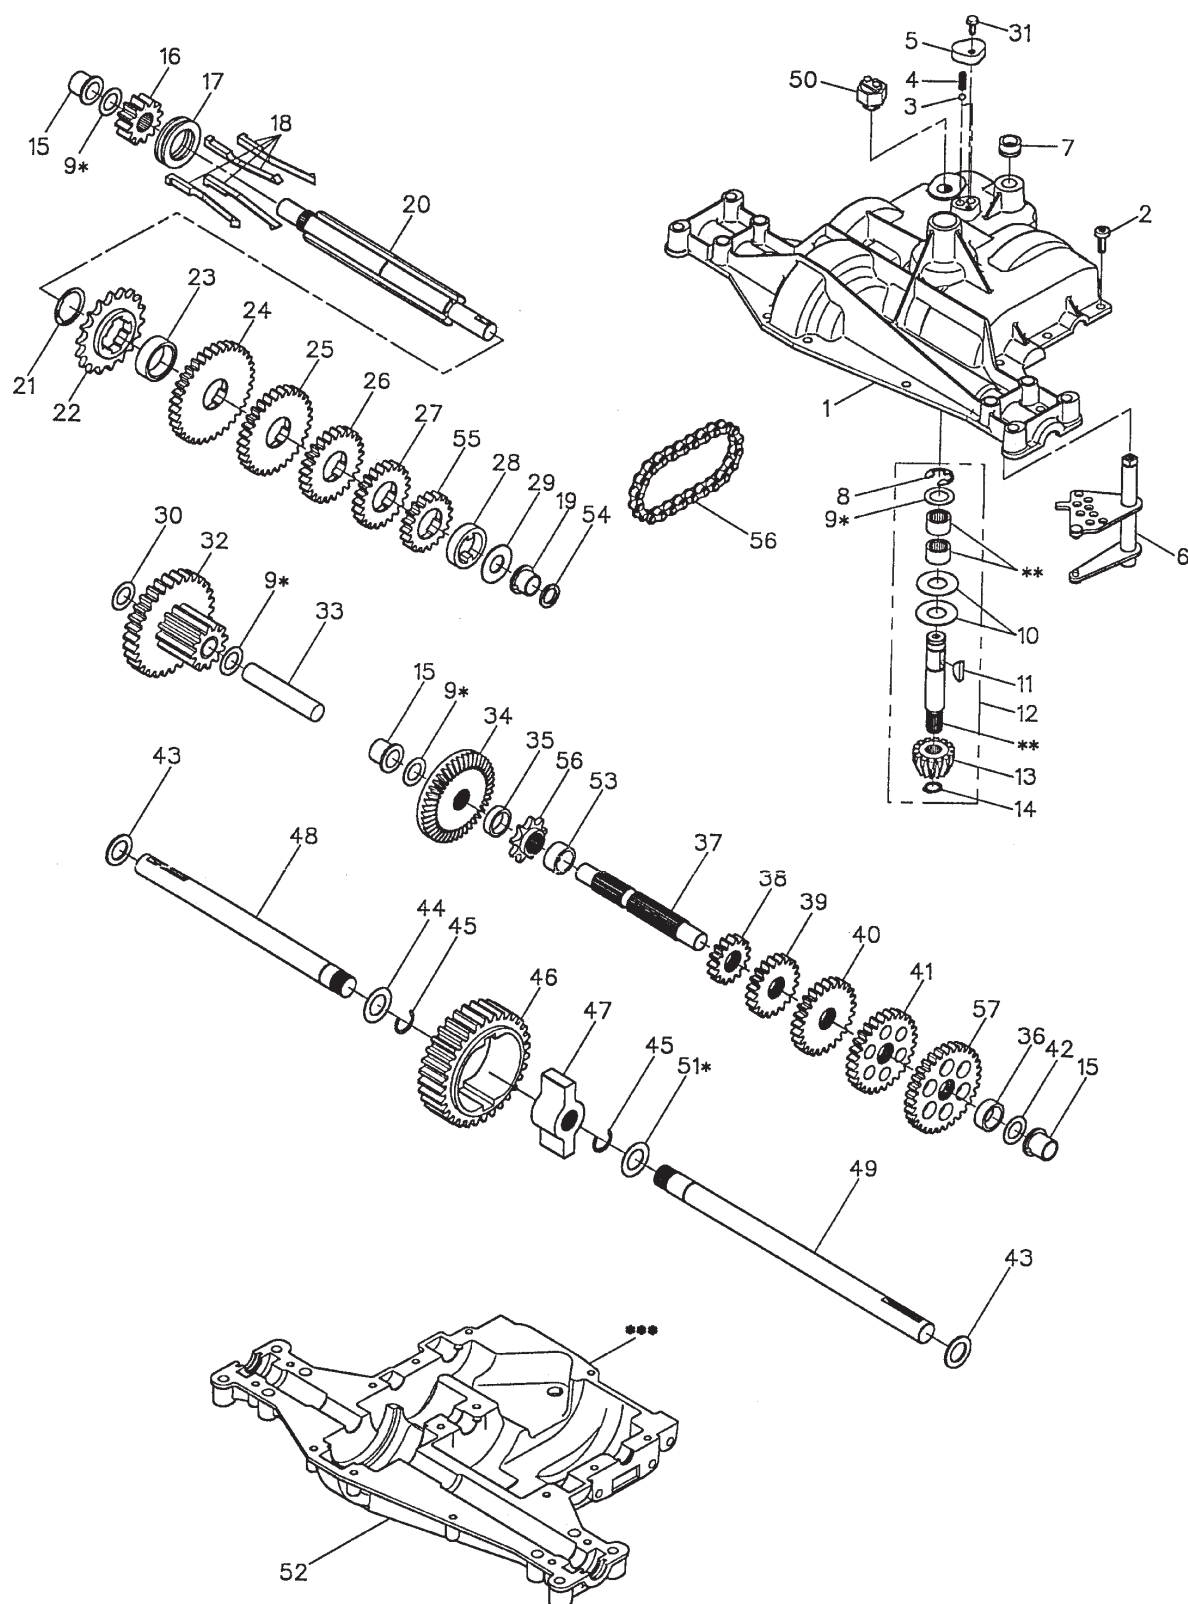



# Gear Drive Midsize

## DANA TRANSMISSION


FIGURE 8

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
2721797 DANA TRANSMISSION MODEL 4360-126 (COMPLETE UNIT AVAILABLE THRU TEXTRON)				8-47	5572	CROSS-AXLE	1
(INDIVIDUAL COMPONENTS AVAILABLE THROUGH DANA 1-800-848-9086)				8-48	5614	AXLE-LH	1
8-1	5305-E	HOUSING UPPER	1	8-49	5615	AXLE-RH	1
8-2	1919	SCRW-TAPPNG 1/4-20X.734	16	8-50	5267	SWITCH-NEUTRAL	1
8-3	5112	BALL-DETENT	2	8-51	*4691	ASSY-KIT-SHIM .750 SHAFT	1
8-4	3626	SPRING-DETENT	2	8-52	6088	ASSY-KIT-HOUSINGS	1
8-5	5584	COVER-DETENT	1	8-53	5016	SPACER-.781 X 1.00 X .494	1
8-6	4604	ASSY-KIT-SHIFTER	1	8-54	5508	SEAL-OIL	1
8-7	7010	V-RING	1	8-55	5202	GEAR-SPUR 19T	1
8-8	1106	RING-RETAINING	1	8-56	3645	SPROCKET-9T	1
8-9	*4689	ASSY-KIT-SHIM .625 SHAFT	4	8-57	3683	GEAR-SPUR 31T	1
8-10	3876	WASHER-.632X1.38X.046	2	8-58	4300	GREASE	1
8-11	1746	KEY-WOODRUFF NO. 9	1	<p><b>*USE IN VARIOUS COMBINATIONS TO MAINTAIN PROPER CLEARANCE.</b></p> <p><b>**ORDER KEY NUMBER 12.</b></p> <p><b>***SILICONE SEALANT TO BE APPLIED BETWEEN UPPER AND LOWER HOUSINGS. (USE LOCTITE ULTRA GRAY SILICONE 5699 OR EQUIVALENT.)</b></p> <p><b>SEE YOUR DANA DEALER FOR REPLACEMENT PARTS.</b></p>			
8-12	6996	ASSY-KIT-INPUT SHAFT	1				
8-13	6556	PINION-BEVEL-14T	1				
8-14	3624	RING-RETAINING	1				
8-15	5510	BEARING-FLANGE	3				
8-16	5627	GEAR-SPUR-12T	1				
8-17	5303	COLLAR-CLUTCH	1				
8-18	6251	ASSY-KIT-CLUTCH KEYS	1				
8-19	5511	BEARING-FLANGE	1				
8-20	5404	SHAFT-INTERMEDIATE	1				
8-21	3627	RING-RETAINING	1				
8-22	3830	SPROCKET-18T	1				
8-23	3841	SPACER-1.131 X 1.45 X .494	1				
8-24	5407	GEAR-SPUR 35T	1				
8-25	3867	GEAR-SPUR 30T	1				
8-26	3783	GEAR-SPUR 25T	1				
8-27	3869	GEAR-SPUR 22T	1				
8-28	5027	SPACER-1.133 X 1.50 X .375	1				
8-29	3628	WSHR-.640 X 1.37 X .061	1				
8-30	1425	WSHR-.632 X 1.00 X .046	1				
8-31	3405	SCREW-TAP 10-24 X .482	1				
8-32	6153	ASSY-GEAR COMB 12T-30T	1				
8-33	3967	SHAFT-IDLER	1				
8-34	6556	GEAR-BEVEL 42T	1				
8-35	3630	SPACER-.781 X 1.00 X .281	2				
8-36	3714	SPACER-.781 X 1.00 X .375	1				
8-37	5015	SHAFT-DRIVE	1				
8-38	5406	GEAR-SPUR 15T	1				
8-39	3866	GEAR-SPUR 20T	1				
8-40	3719	GEAR-SPUR 25T	1				
8-41	3868	GEAR-SPUR 28T	1				
8-42	1145	WSHR-PLN .632 X 1.0 X .060	1				
8-43	5130	WASHER-NEOPRENE	2				
8-44	3735	WSHR-.758 X 1.25 X .050	1				
8-45	5031	RING-RETAINING	2				
8-46	3839	GEAR-SPUR 32T	1				

# ELECTRICAL DIAGRAM



FIGURE 9

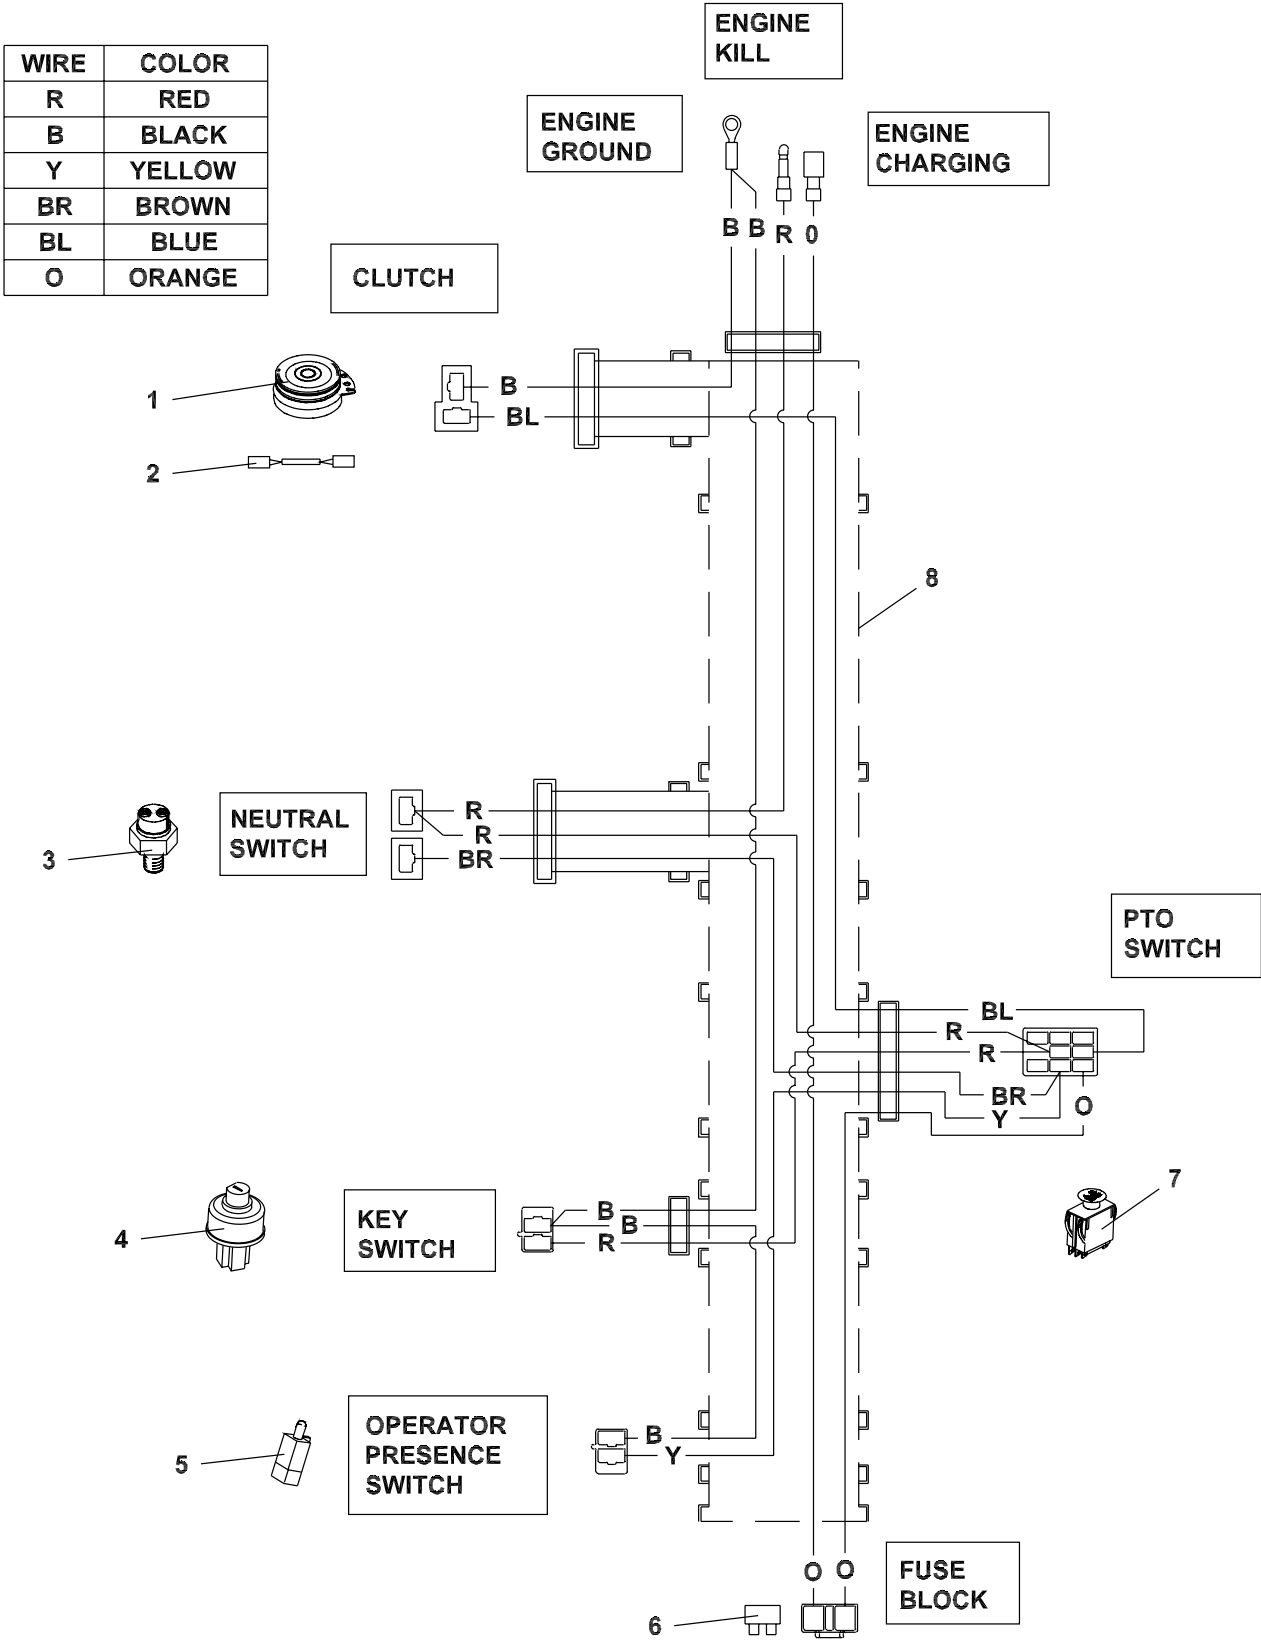



# Gear Drive Midsize

2721835-09

## ELECTRICAL DIAGRAM

FIGURE 9


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
9-1	2721110	CLUTCH-ELECTRIC (INCLUDES ITEM 2)	1				
9-2	2720949	ASSY-CLUTCH WIRE	1				
9-3	*	SWITCH-NEUTRAL	1				
9-4	38148	SWITCH-ENGINE STOP	1				
9-5	38383	SWITCH-N.C.	1				
9-6	148082-10	FUSE 10 AMP	1				
9-7	2721505	SWITCH-PTO	1				
9-8	4118008	HARNESS-GD (INCLUDES ITEM 6)	1				

\* SEE DANA TRANSMISSION DEALER

# CUTTERDECK MOUNTING



FIGURE 10

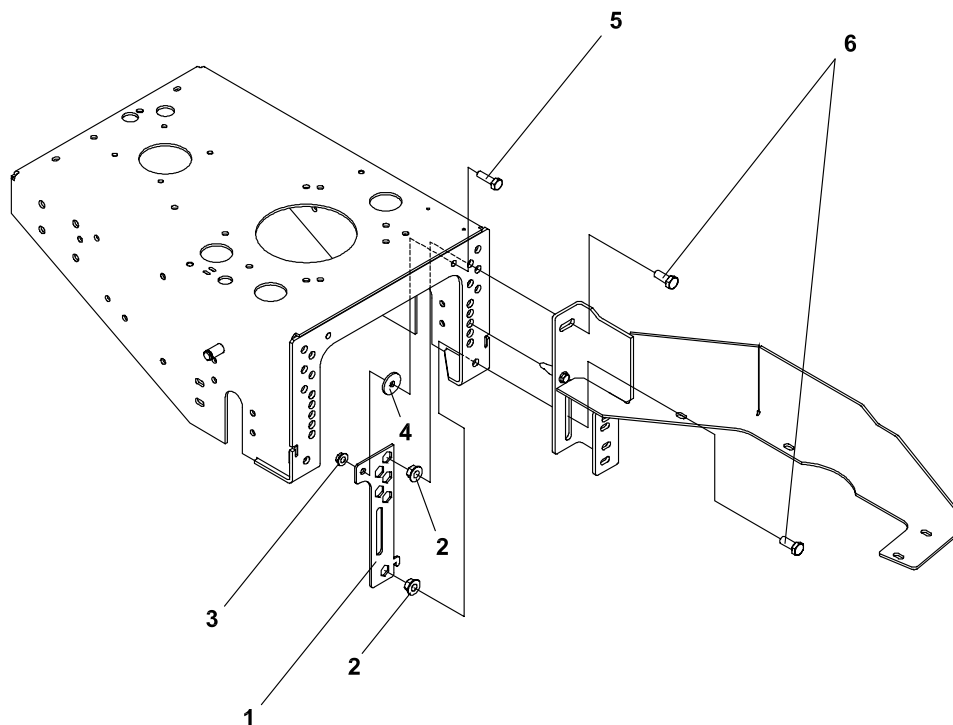



**Gear  
Drive  
Midsize**

4112421-10


## CUTTERDECK MOUNTING

**FIGURE 10**

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
10-1	2721991.7	PLATE-NUT	2				
10-2	64246-04	NUT-WHIZ M12-1.75	12				
10-3	64246-03	NUT-WHIZ M10-1.50	2				
10-4	64163-82	WASHER-.406 X 1.44 X 9GA	2				
10-5	A1104057	BOLT-M10-1.50 X 25	2				
10-6	64263-018	BLT-FLG HD M12-1.75 X 30	4				

# 36" CUTTERDECK

FIGURE 11

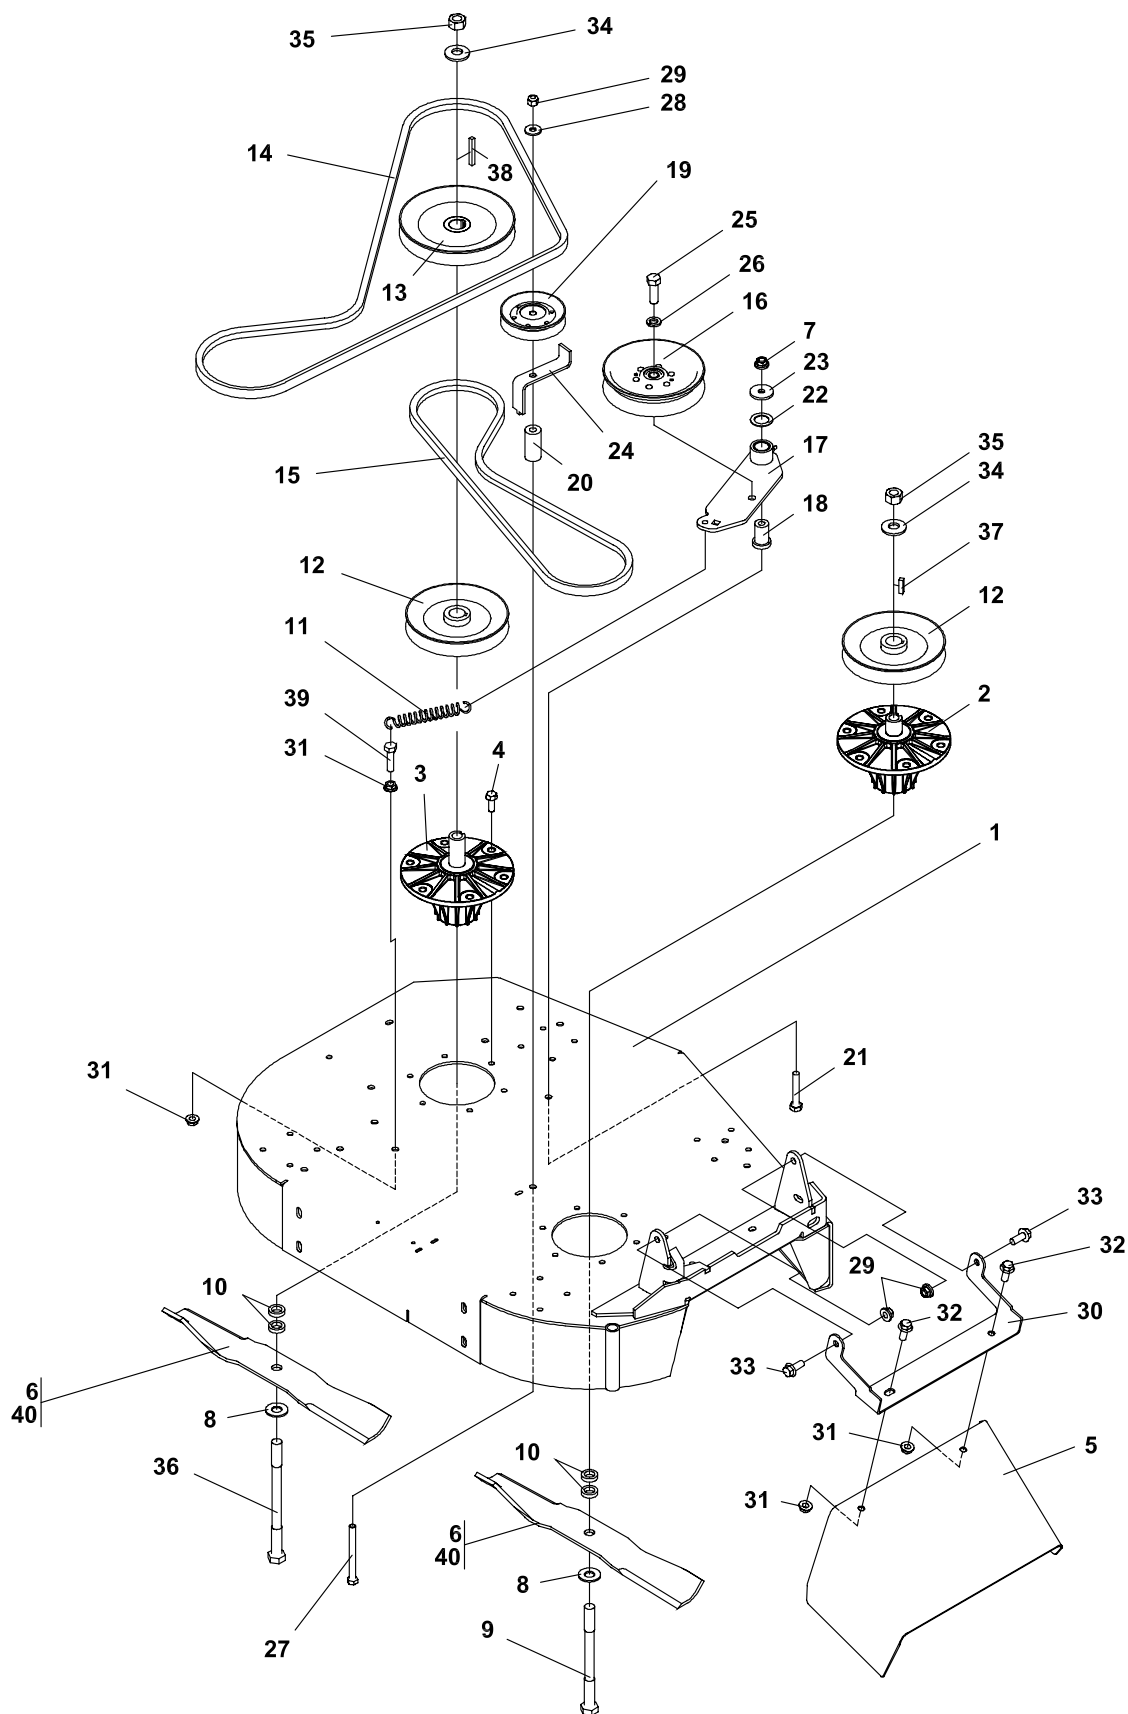





# Gear Drive Midsize

2721836-01

## 36" CUTTERDECK

FIGURE 11


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
11-1	4110903	S-36 SD DECK W/ LABS	1				
11-2	2721323	S-ASSY SPINDLE 6 SHORT (SEE FIGURE 17 FOR COMPONENTS)	1				
11-3	2721097	S-ASSY SPINDLE LONG (SEE FIGURE 17 FOR COMPONENTS)	1				
11-4	64197-003	BLT-TDFM 3/8-16X1.00	12				
11-5	2722021.5	CHUTE	1				
11-6	112111-02	BLADE 18.00 OFFST HLFT	2				
11-7	64265-05	NUT-FL NYLOCK M10-1.5	1				
11-8	64163-16	41/64X1-3/8X12GA WASHR	2				
11-9	33049-05	BOLT-BLADE RH	1				
11-10	64163-12	.635/.640X1.0X.25 WASH	4				
11-11	38219	SPRING-EXTENSION	1				
11-12	2308140	PULLEY	2				
11-13	2721479	PULLEY-6.75	1				
11-14	2721478	BELT-HB 85.25	1				
11-15	2721477	BELT-HB 56.75	1				
11-16	128169	PULLEY, IDLER 5.50	1				
11-17	2186138.7	WLDMT-DECK IDLER	1				
11-18	2720718	PIN-PIVOT	1				
11-19	48393	PULLEY-V IDLER	1				
11-20	2721485	SPACER-IDLER	1				
11-21	64205-009	BLT-MET M10-1.5 X 65	1				
11-22	64163-65	WSHR .890X1.375 X 18GA	1				
11-23	64163-53	WASHER .391X1.50 X 9GA	1				
11-24	2722637.7	PLATE-BELT GUIDE	1				
11-25	64123-05	BLT-HEX 1/2-20 X 1-1/2	1				
11-26	64006-05	LOCKWSHR-HELICAL 1/2	1				
11-27	64123-139	BLT-HEX 3/8-16X4	1				
11-28	64163-31	WASH.25/64X1X12 GA	1				
11-29	64229-03	LOCKNUT-NYLON 3/8-16	3				
11-30	2722020.5	BRKT-CHUTE SUPPORT	1				
11-31	64246-03	NUT-WHIZ M10-1.50	4				
11-32	64263-011	BLT-FLG HD M10-1.5 X 20	2				
11-33	64123-50	BOLT-HEX 3/8-16X1	2				
11-34	64209-03	SPRING WASHER .67 ID	2				
11-35	64025-16	NUT-HEX 5/8-18	2				
11-36	33049-02	BOLT-BLADE LH	1				
11-37	64164-12	1/4 X 1/4 X 1 SQ END KEY	1				
11-38	64164-13	1/4 X 1/4 X 2 SQ KEY	1				
11-39	64205-011	BLT-MET M10-1.50X40	1				
11-40	2722543-01	BLADE-16.25 ELIMINATOR (OPTIONAL)	3				

# MOUNTING-36" FIXED DECK

Gear  
Drive  
Midsize



FIGURE 12

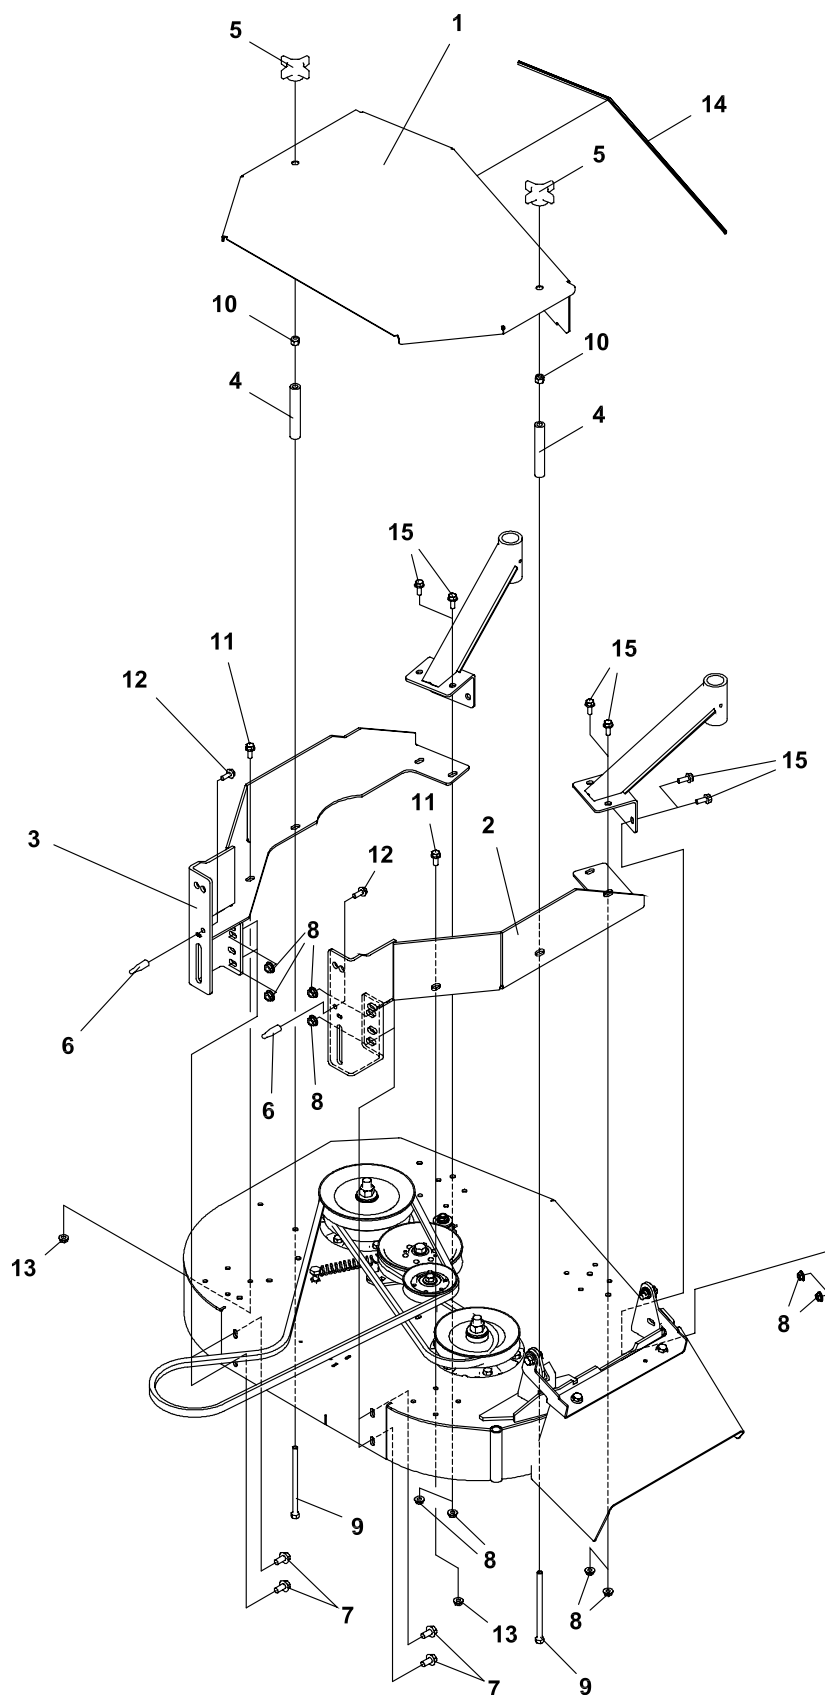



**Gear  
Drive  
Midsize**

2721836-03


## MOUNTING-36" FIXED DECK

**FIGURE 12**

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
12-1	2721481.5	COVER-BELT FIXED DECK	1				
12-2	2721470.7	WLDMT-FIXED BRKT RH	1				
12-3	2721469.7	WLDMT-FIXED BRKT LH	1				
12-4	2721486	SPACER-BELT COVER	2				
12-5	38524	KNOB-4 PRONG 3/8-16	2				
12-6	2722059	PIN-GUIDE	2				
12-7	64263-011	BLT-FLG HD M10-1.5 X 20	4				
12-8	64246-03	NUT-WHIZ M10-1.50	4				
12-9	64123-94	BLT-HEX 3/8-16X2	2				
12-10	64229-03	LOCKNUT-NYLON 3/8-16	2				
12-11	64263-007	BLT-FLG HD M8-1.25 X 20	2				
12-12	64264-02	BOLT-M8-1.25 X 20 WHIZ	2				
12-13	64246-02	NUT-WLF M8-1.25	2				
12-14	108074-04	TRIMLOC 23.5"	1				
12-15	64263-012	BLT-FLG HD M10-1.5 X 25	8				
12-16	64246-03	NUT-WHIZ M10-1.50	8				

# 48" CUTTERDECK

FIGURE 13

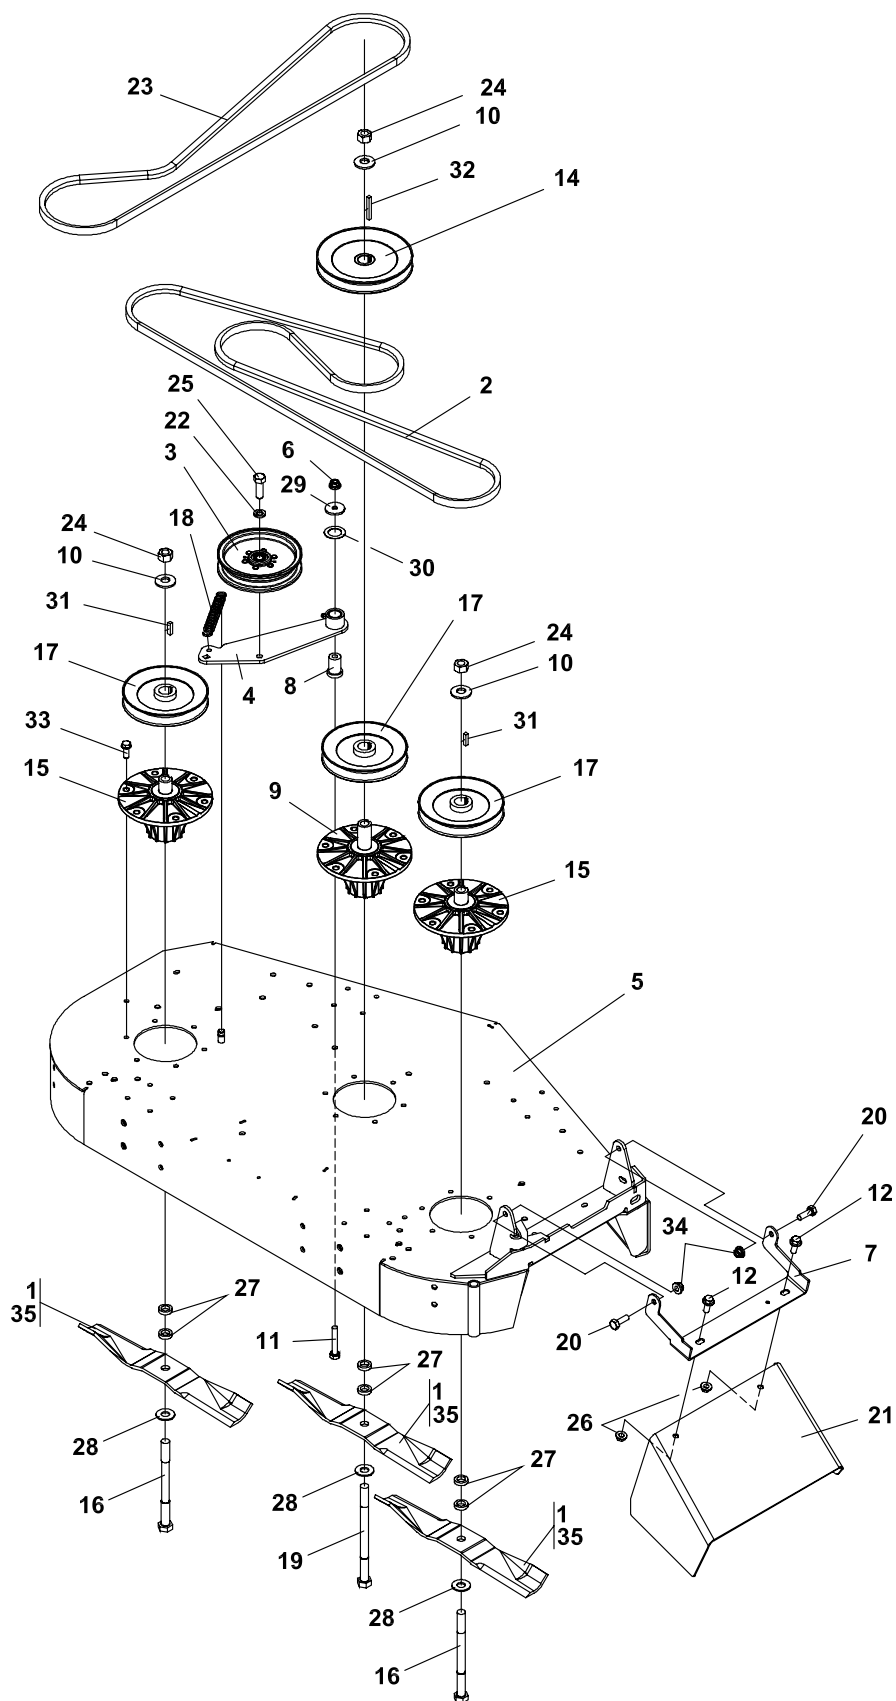



# Gear Drive Midsize

2721836-04

## 48" CUTTERDECK

FIGURE 13


ITEM	PART NO.	DESCRIPTION	QTY
13-1	112111-01	BLADE 16.25 OFFST HLFT	3
13-2	128110	BELT-CUTTERDECK	1
13-3	128169	PULLEY, IDLER 5.50	1
13-4	4110580.7	WLDMT-IDLER	1
13-5	4110904	S-48 SD DECK W/LABS	1
13-6	64265-05	NUT-FL NYLOCK M10-1.5	1
13-7	2722020.5	BRKT-CHUTE SUPPORT	1
13-8	2720718	PIN-PIVOT	1
13-9	2721097	S-ASSY SPINDLE LONG (SEE FIGURE 17 FOR COMPONENTS)	1
13-10	64209-03	SPRING WASHER .67 ID	3
13-11	64205-009	BLT-MET M10-1.5 X 65	1
13-12	64263-011	BLT-FLG HD M10-1.5 X 20	2
13-13	2721312.7	PLATE-WHEEL LOCK	1
13-14	2722161	PULLEY-6.75	1
13-15	2721323	S-ASSY SPINDLE SHORT (SEE FIGURE 17 FOR COMPONENTS)	2
13-16	33049-05	BOLT-BLADE	2
13-17	2308140	PULLEY-ENGINE	2
13-18	2188131	SPRING-EXTENSION	1
13-19	33049-02	BOLT-BLADE	1
13-20	64123-50	BOLT-HEX 3/8-16X1	2
13-21	2722021.5	CHUTE	1
13-22	64006-05	LOCKWSHR-HELICAL 1/2	1
13-23	2722160	BELT-HB 73.00	1
13-24	64025-16	NUT-HEX 5/8-18	3
13-25	64123-05	BLT-HEX 1/2-20 X 1-1/2	1
13-26	64246-03	NUT-WHIZ M10-1.50	2
13-27	64163-12	.635/.640X1.0X.25 WASH	6
13-28	64163-16	41/64X1-3/8X12GA WASHR	3
13-29	64163-53	WASHER .391X1.50X9GA	1
13-30	64163-65	WSHR .890X1.375X18GA	1
13-31	64164-12	1/4 X 1/4 X 1 SQ END KEY	2
13-32	64164-13	1/4 X 1/4 X 2 SQ KEY	1
13-33	64197-003	BLT-TDFM 3/8-16X1.00	18
13-34	64229-03	LOCKNUT-NYLON 3/8-16	2
13-35	2722543-01	BLADE-16.25 ELIMINATOR (OPTIONAL)	3

# MOUNTING-48" FIXED DECK

Gear  
Drive  
Midsize



FIGURE 14

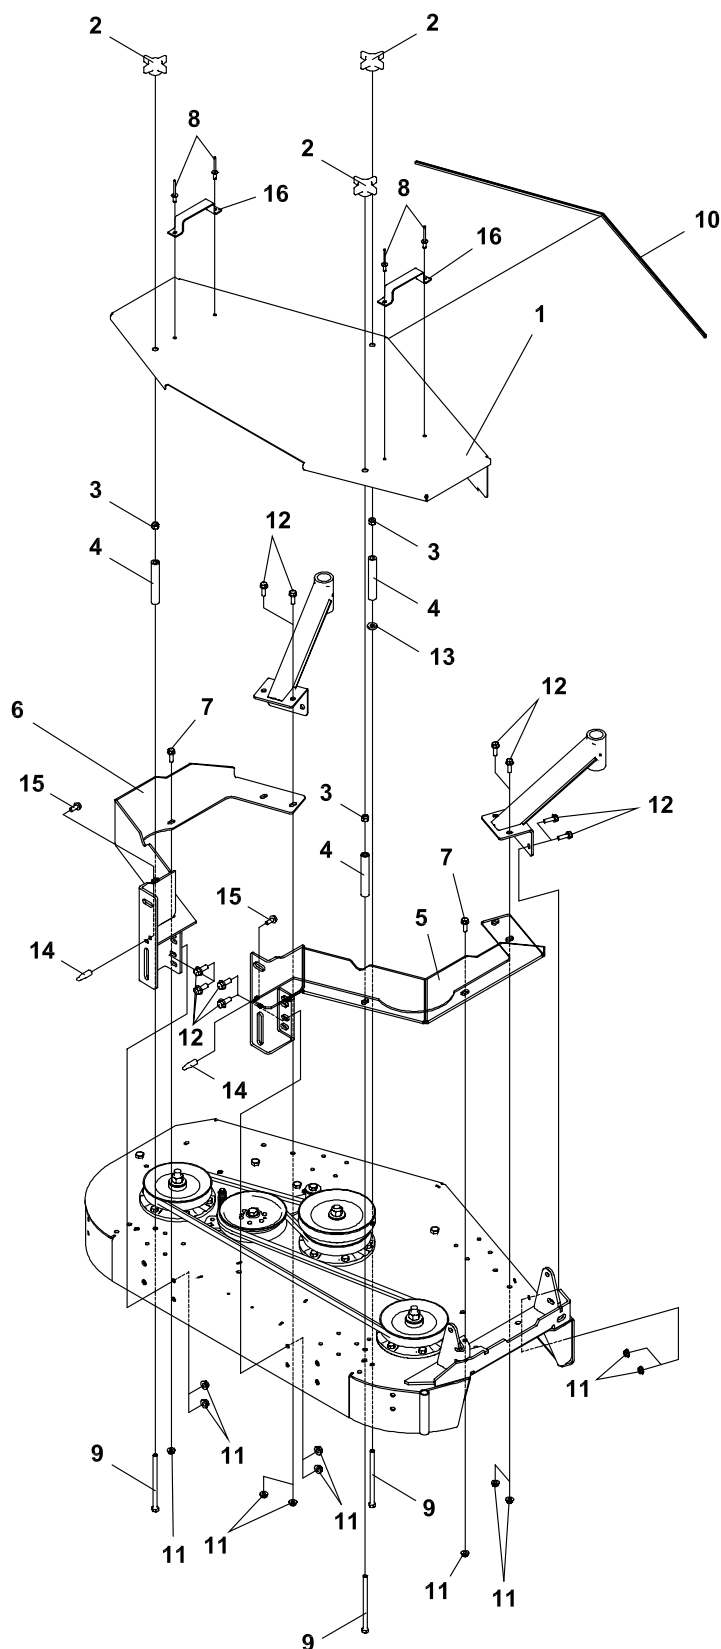





**Gear  
Drive  
Midsize**

2721836-06

**MOUNTING-48" FIXED DECK**


**FIGURE 14**

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
14-1	2721867.5	COVER-48IN FIXED BELT	1				
14-2	38524	KNOB-4 PRONG 3/8-16	3				
14-3	64229-03	LOCKNUT-NYLON 3/8-16	3				
14-4	2721486	SPACER-BELT COVER	3				
14-5	2721866.7	WLDMT-STIFFENER 48INRH	1				
14-6	2721865.7	WLDMT-STIFFENER 48INLH	1				
14-7	64263-011	BLT-FLG HD M10-1.5 X 20	2				
14-8	64215-07	RIVET-POP IFI #84	4				
14-9	64123-94	BLT-HEX 3/8-16X2	3				
14-10	108074-13	TRIMLOC-38.5"	1				
14-11	64246-03	NUT-WHIZ M10-1.50	14				
14-12	64263-012	BLT-FLG HD M10-1.5 X 25	12				
14-13	64163-46	WSHR.383/.393X.88X7GA	1				
14-14	2722059	PIN-GUIDE	2				
14-15	64264-02	BOLT-M8-1.25 X 20 WHIZ	2				
14-16	32418-02.7	HANDLE W/HOLES	2				

# BLOWOUT BAFFLES



FIGURE 15

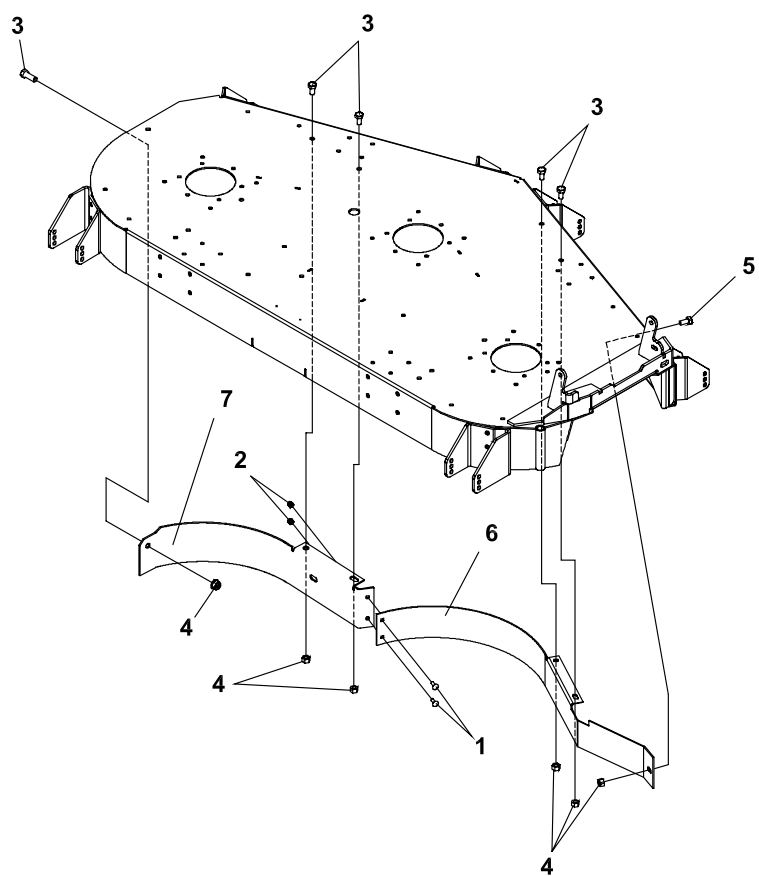



**Gear  
Drive  
Midsize**

4112622-11


## BLOWOUT BAFFLES

**FIGURE 15**

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
15-1	64018-2	BLT-CRG 1/4-20 X 3/4	2				
15-2	64229-01	LOCKNUT-NYLON 1/4-20	2				
15-3	64263-011	BLT-FLG HD M10-1.5 X 20	4				
15-4	64246-03	NUT-WHIZ M10-1.50	5				
15-5	64263-012	BLT-FLG HD M10-1.5 X 25	1				
15-6	2722683.7	BAFFLE-FRONT RH 48	1				
15-7	4114063.7	BAFFLE-48 FRONT LH	1				

# CASTER ASSY-FIXED DECKS

FIGURE 16

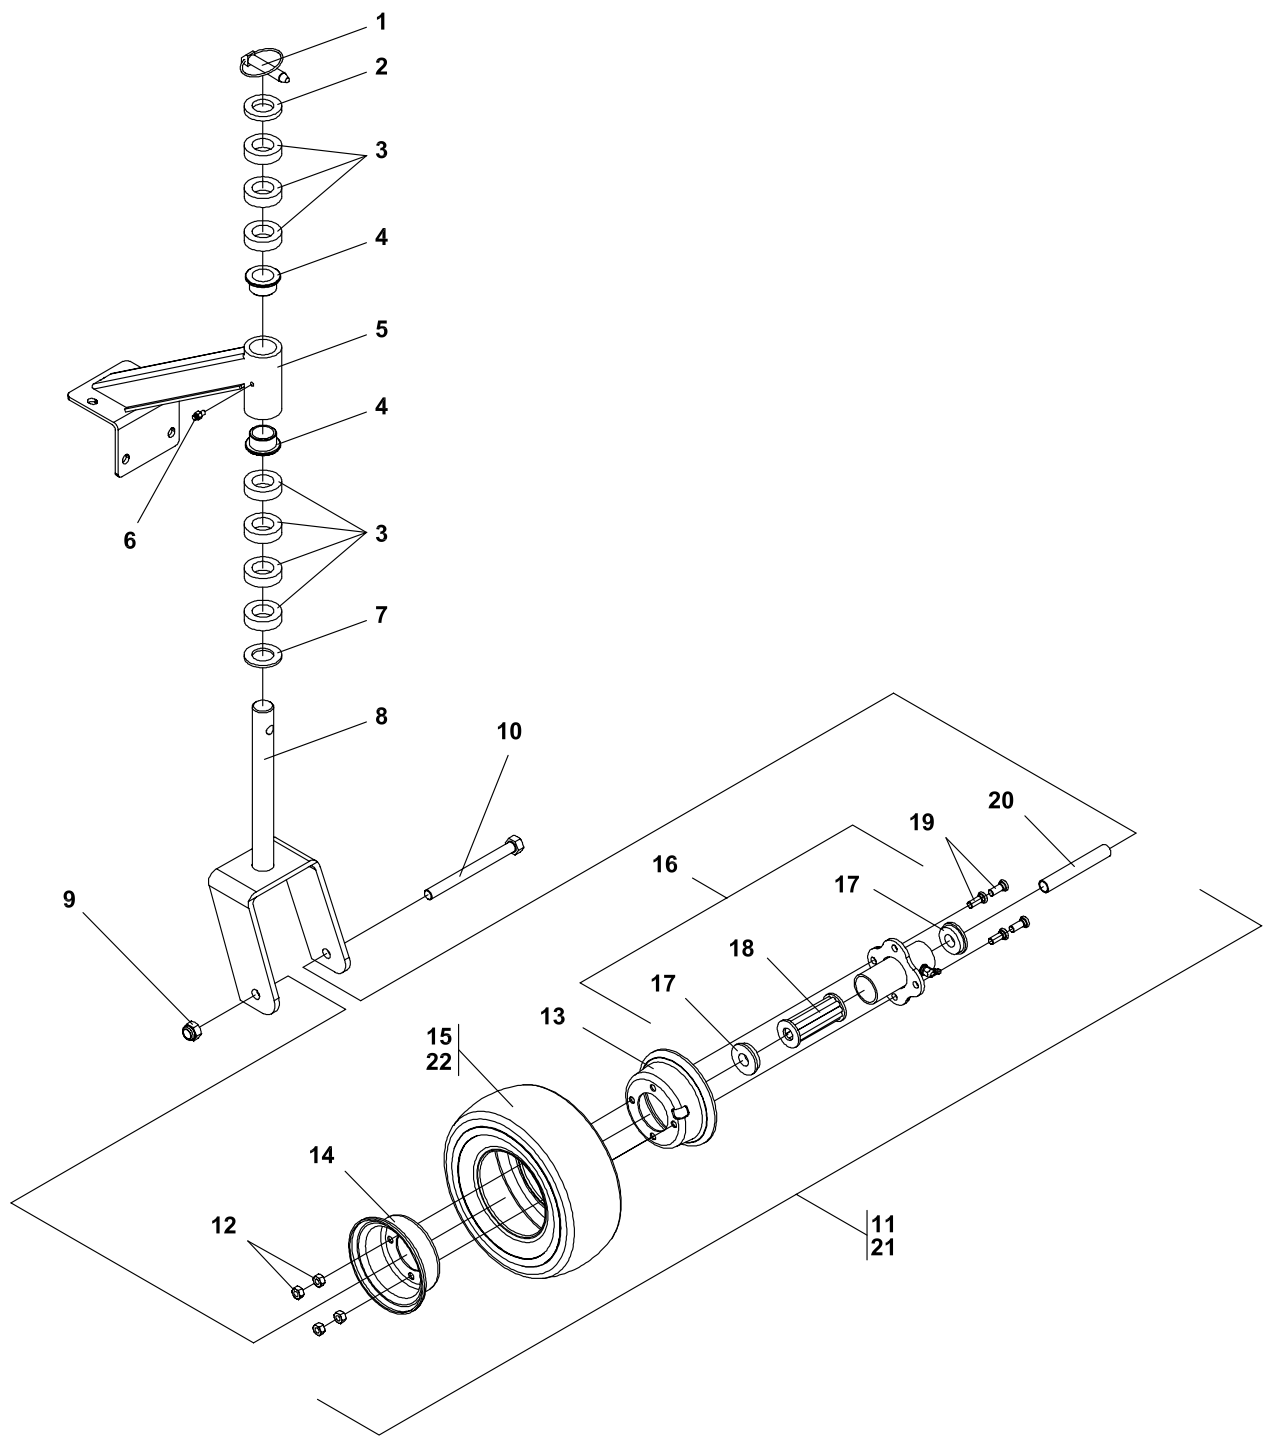



# Gear Drive Midsize

2721836-13

## CASTER ASSY-FIXED DECKS


FIGURE 16

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
	2722145	ASSY-9" CASTER BUNTON	2				
	(INCLUDES ITEMS 1-3, 7-11 & 20 QTYs LISTED)						
	(NOTE 2 ASSYs REQUIRED PER MACHINE)						
16-1	64173-04	QUICK PIN	1				
16-2	64163-07	1-1/32X1-3/4X1/4 WASH	1				
16-3	64163-22	1-1/32X1-3/4X1/2 WASHR	7				
16-4	48053-07	BEARING, FLANGED	2				
16-5	2721984	S CASTER SUPPORT	1				
16-6	85010N	ZERK GREASE FITTING	1				
16-7	64163-84	WSHR-1.015 X 1.75 X .125	1				
16-8	2721484.5	WLDMT-CASTER YOKE	1				
16-9	64229-05	LOCKNUT-NYLON 1/2-13	1				
16-10	64123-166	BLT-HEX 1/2-13X5-1/2	1				
16-11	2720646	WHEEL ASSY 9X3.5-4.00	1				
	(INCLUDES ITEMS 12 - 16, QTYs LISTED)						
16-12	64151-24	5/16-24 CL HEX NUT	4				
16-13	2720645	S WHL HALF, VALVE SD	1				
16-14	2720644	S WHEEL HALF	1				
16-15	38504	S TIRE&TUBE 9X3.5 - 4	1				
	38505	S TUBE 9 X 3.50 - 4	1				
16-16	38508	S S.HUB ASSY	1				
	(INCLUDES ITEMS 17-19, QTYs LISTED)						
16-17	38274	S BEARING RETAINER	2				
16-18	38273	S ROLLER BEARING	1				
16-19	64123-01	BLT-HEX 5/16-24X3/4	4				
16-20	43180	BUSHING, SPANNER	1				
	OPTIONAL FLAT PROOF WHEEL AND TIRE						
16-21	4114430	ASSY-WHEEL 9x3.5-4.00	1				
16-22	4114430-01	S-TIRE 9 CAREFREE	1				
	(INCLUDES ITEMS 12-14, 16 & 21 QTYs LISTED)						

# SPINDLE ASSEMBLY



FIGURE 17

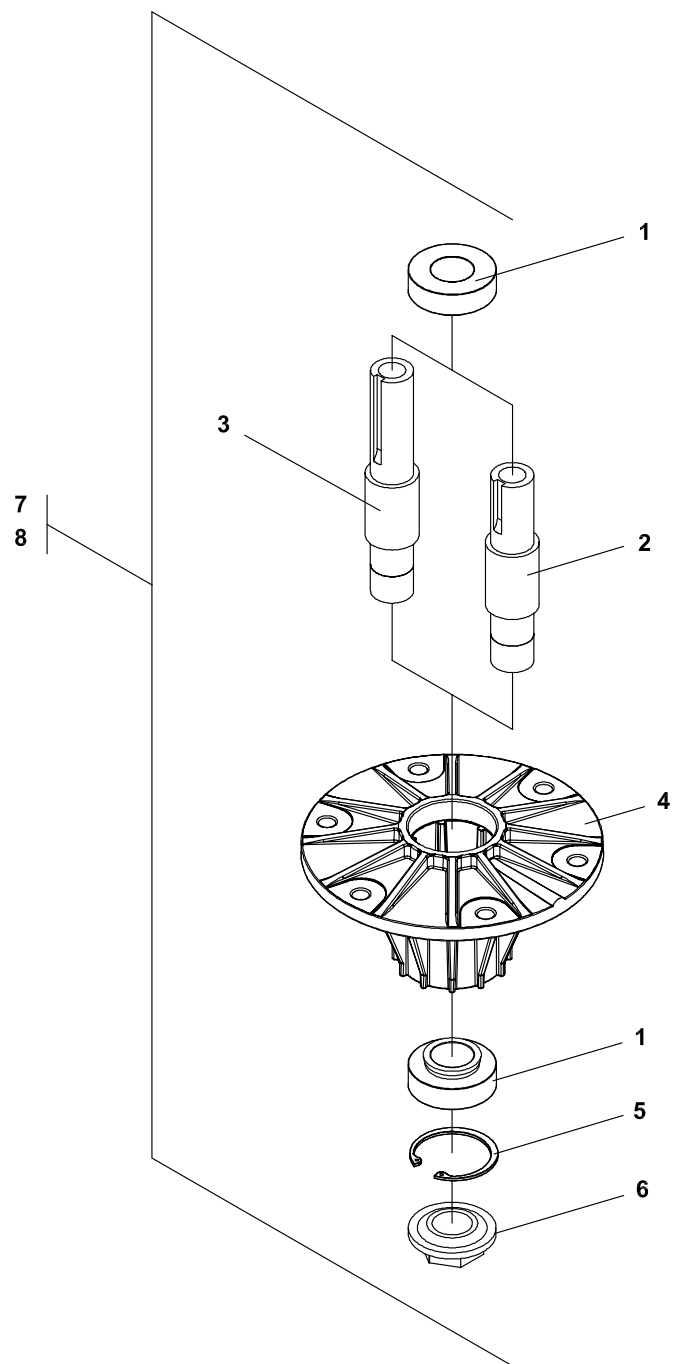



# Gear Drive Midsize

2721694-14

## SPINDLE ASSEMBLY

FIGURE 17

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
17-1	38348-01	BEARING-SPINDLE SEALED	2				
17-2	33179-02	SPINDLE-SHORT (USED IN ITEM 8)	1				
17-3	33179-01	SPINDLE-LONG (USED IN ITEM 7)	1				
17-4	2721096	HOUSING-SPINDLE 6 HOLE	1				
17-5	64144-38	SNAP-RING	1				
17-6	38315	NUT-SPINDLE	1				
17-7	2721097	ASSY-SPINDLE LONG (INCLUDES ITEMS 1, 3, 4-6)	1				
17-8	2721323	ASSY-SPINDLE SHORT (INCLUDES ITEMS 1, 2, 4-6)	1				


# WIRING SCHEMATIC-RECOIL START



FIGURE 18

REF. 4115548

2721850-13

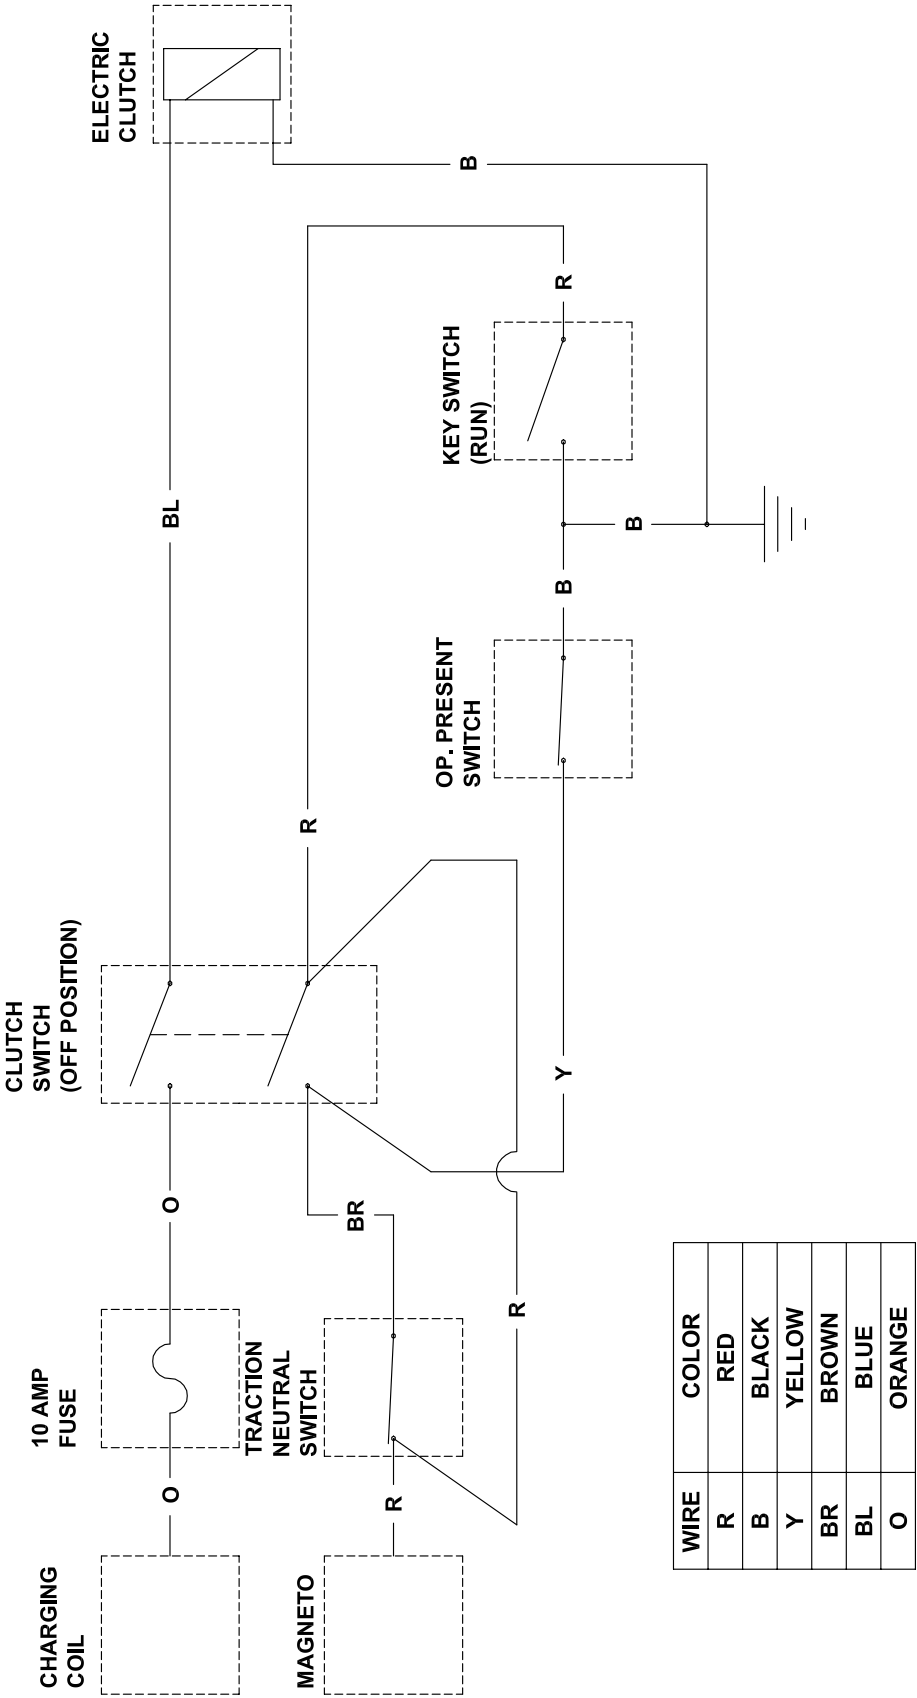





## World Class Quality, Performance And Support

Equipment from Textron Golf, Turf & Specialty Products is built to exacting standards ensured by ISO 9001 registration at all our manufacturing locations.

A worldwide dealer network and factory-trained technicians backed by Textron Parts Xpress provide reliable, high-quality product support.



---

**BOB-CAT BUNTON CUSHMAN JACOBSEN RANSOMES RYAN**

1451 Marvin Griffin Rd, Augusta, GA 30906  
[www.textron.com](http://www.textron.com)