



933301

36 HYDRO MID-15HP KAW KAI

933302

36 HYDRO MID-17HP ES KAW KAI

934301

48 HYDRO MID-17HP KAW KAI

934302

48 HYDRO MID-17HP ES KAW KAI

935301

54 HYDRO MID-17HP KAW KAI

935302

54 HYDRO MID-17HP ES KAW KAI

PARTS MANUAL

MAN 4158348
Rev. B 08-2007

OPERATOR'S MANUAL 4158461



CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

⚠ WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Californie Proposition 65 Avertissement

Les échappements des moteurs diesel et certains de leurs composants sont reconnus par l'Etat de Californie pour être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

California Advertencia

⚠ AVERTISSEMENT

L'émission du moteur de ce matériel contient des produits chimiques que l'Etat de Californie considère être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

de la Proposicion 65

El estado de California hace saber que los gases de escape de los motores diesel y algunos de sus componentes producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

⚠ ADVERTENCIA

El estado de California hace saber que los gases de escape de este producto contienen productos químicos que producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

CALIFORNIA

Proposition 65 Warning

Battery posts, terminals, wiring insulation, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

WASH HANDS AFTER HANDLING.

IMPORTANT MESSAGE

Thank you for purchasing this Schiller Grounds Care, Inc. product. You have purchased a world class mowing product, one of the best designed and built anywhere.

This machine comes with an Operation and Safety Manual and a separate Setup, Parts and Maintenance Manual. The useful life and good service you receive from this machine depends to a large extent on how well you read and understand these manuals. Treat your machine properly, lubricate and adjust it as instructed, and it will give you many years of reliable service.

Your safe use of this Schiller Grounds Care, Inc. product is one of our prime design objectives. Many safety features are built in, but we also rely on your good sense and care to achieve accident-free operation. For best protection, study the manuals thoroughly. Learn the proper operation of all controls. Observe all safety precautions. Follow all instructions and warnings completely. Do not remove or defeat any safety features. Make sure those who operate this machine are as well informed and careful in its use as you are.

See a Schiller Grounds Care, Inc. dealer for any service or parts needed. Schiller Grounds Care, Inc. service ensures that you continue to receive the best results possible from Schiller Grounds Care, Inc. products. You can trust Schiller Grounds Care, Inc. replacement parts because they are manufactured with the same high precision and quality as the original parts.

Schiller Grounds Care, Inc. designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this machine only as directed in the manuals, keep it in good repair and follow safety warnings and instructions. You'll always be glad you did.

Schiller Grounds Care, Inc.
One Bob Cat Lane
Johnson Creek, WI 53038-0469

TABLE OF CONTENTS	FIGURES	PAGE
SAFETY		2
ASSEMBLY/SET-UP INSTRUCTIONS		3-13
LUBRICATION		14, 15
MAINTENANCE		16-19
SERVICE CHART		20
SERVICE RECORD		21
ADJUSTMENTS		22-25
BELT REPLACEMENT		26
PARTS SECTION		27
UPPER ENGINE DECK ASSY	FIGURE 1	28, 29
LOWER ENGINE DECK ASSY/CLUTCH	FIGURE 2	30, 31
DRIVE WHEELS	FIGURE 3	32, 33
PARKING BRAKE	FIGURE 4	34, 35
RECOIL START UPPER HANDLE	FIGURE 5	36, 37
ELECTRIC START UPPER HANDLE	FIGURE 6	38, 39
TRACTION CONTROLS	FIGURE 7	40, 41
ELECTRIC START BATTERY	FIGURE 8	42, 43
HYDRAULICS	FIGURE 9	44, 45
POWER UNIT DECALS	FIGURE 10	46, 47
WIRE DIAGRAM-RECOIL START	FIGURE 11	48, 49
WIRE DIAGRAM-ELECTRIC START	FIGURE 12	50, 51
WIRING SCHEMATIC-RECOIL START	FIGURE 13	52
WIRING SCHEMATIC-ELECTRIC START	FIGURE 14	53
CUTTERDECK MOUNTING	FIGURE 15	54, 55
HYDROGEAR PUMP	FIGURE 16	56, 57
MOUNTING-36" FIXED DECK	FIGURE 17	58, 59
MOUNTING-48" FIXED DECK	FIGURE 18	60, 61
MOUNTING-54" FIXED DECK	FIGURE 19	62, 63
BAFFLES	FIGURE 20	64, 65
CASTER ASSY-FIXED DECKS	FIGURE 21	66, 67
SPINDLE ASSEMBLY	FIGURE 22	68, 69
CUTTERDECK DECALS	FIGURE 23	70, 71
WEIGHTS	FIGURE 24	72, 73

NOTICE !!!

Unauthorized modifications may present **extreme** safety hazards to operators and bystanders and could also result in product damage.

Schiller Grounds Care, Inc. strongly warns against, rejects and disclaims any modifications, add-on accessories or product alterations that are not designed, developed, tested and approved by CGC, Inc.'s Engineering Department. Any Schiller Grounds Care, Inc. product that is altered, modified or changed in any manner not specifically authorized after original manufacture—including the addition of “after-market” accessories or component parts not specifically approved by CGC, Inc.—will result in the Schiller Grounds Care, Inc. Warranty being voided.

Any and all liability for personal injury and/or property damage caused by any unauthorized modifications, add-on accessories or products not approved by Schiller Grounds Care, Inc. will be considered the responsibility of the individual(s) or company designing and/or making such changes. Schiller Grounds Care, Inc. will vigorously pursue full indemnification and costs from any party responsible for such unauthorized post-manufacture modifications and/or accessories should personal injury and/or property damage result.



This symbol means:
ATTENTION!
BECOME ALERT!

Your safety and the safety of others is involved.

Signal word definitions:

The signal words below are used to identify levels of hazard seriousness. These words appear in this manual and on the safety labels attached to Schiller Grounds Care, Inc. machines. For your safety and the safety of others, read and follow the information given with these signal words and/or the symbol shown above.

⚠ DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

⚠ WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

⚠ CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices or property damage.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage.

Schiller Grounds Care, Inc.

One Bobcat Lane
Johnson Creek, WI 53038 U.S.A.
Phone: 920-699-2000
Fax: 920-699-3683

MODEL NUMBER

SERIAL NUMBER


MODEL NUMBER: This number appears on sales literature, technical manuals and price lists.

SERIAL NUMBER: This number appears only on your mower. It contains the model number followed consecutively by the serial number. Use this number when ordering parts or seeking warranty information.


NOTE: FRONT, REAR, RIGHT HAND AND LEFT HAND REFERENCES BELOW ARE WITH RESPECT TO AN OPERATOR AT THE CONTROLS.

1. UNCRATE - Place crate on a level surface and remove the sides and top.


2. Remove shipping brackets **A**, at all (4) locations.

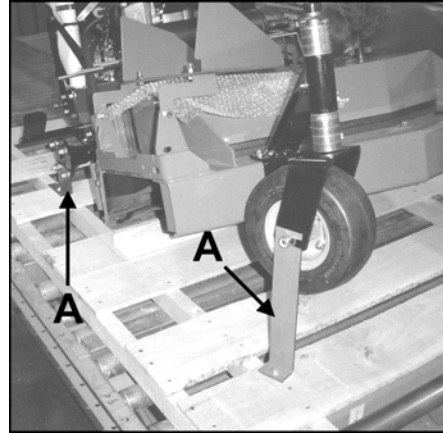


3. Remove wire ties **B** securing tires, upper handle and rods. Set aside for later use.

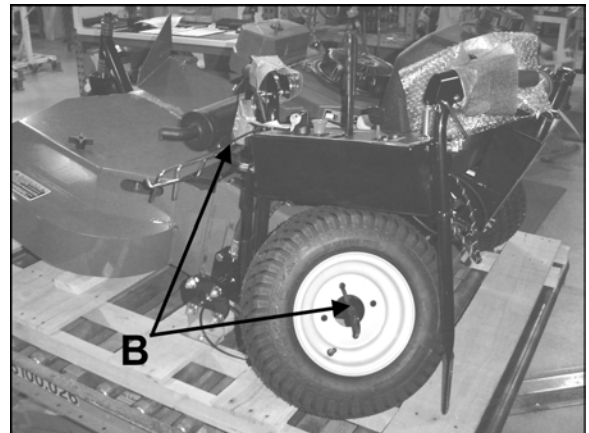


4. Raise the rear of the machine at location **C** and support with jackstands.

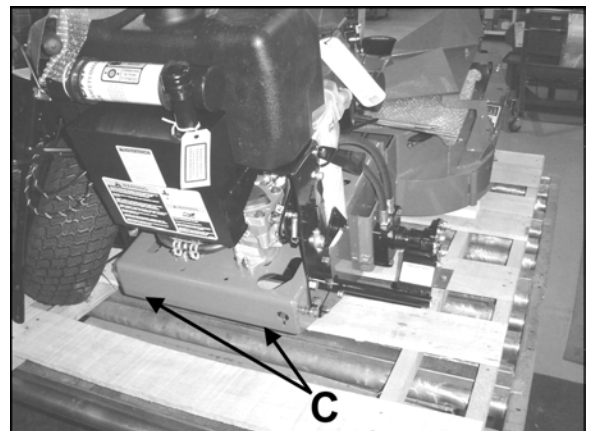


5. Bolt upper handle **B** to lower handle **D** with (2) 3/8-16 X 1" bolts and nuts at location **E** using fasteners supplied in parts bag and (2) 3/8-16 X 1-1/2" bolts and nuts at location **F**.

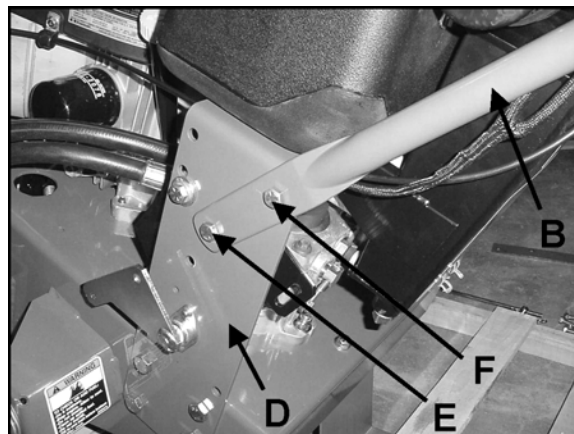


6. Remove spring from bolt **A**. Repeat for other side.

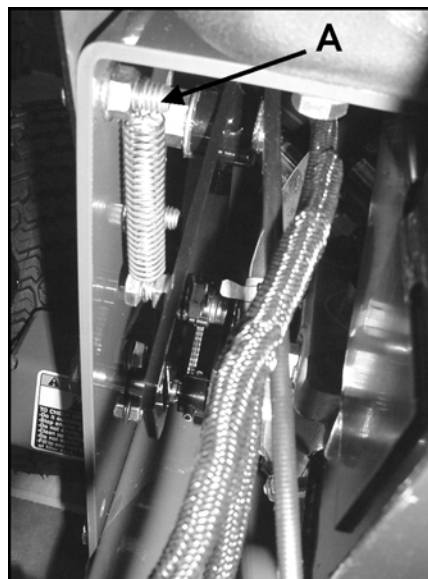


7. Reinstall spring **F**, removed in Step 3, to bolt on both sides. Install 3/8-16 nylon locknut to end of bolt on both sides as shown.

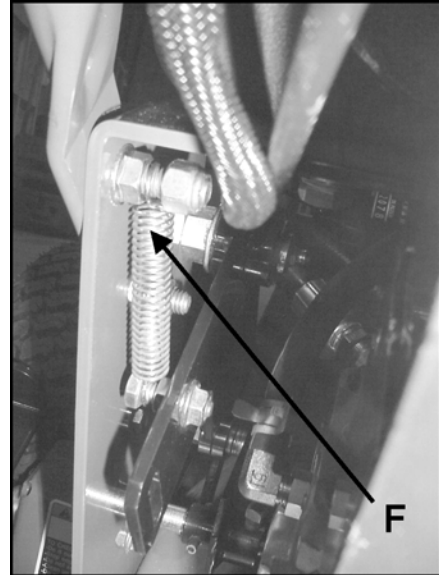


8. Open the bypass valves **X** on each pump by rotating handle counter-clockwise two turns.

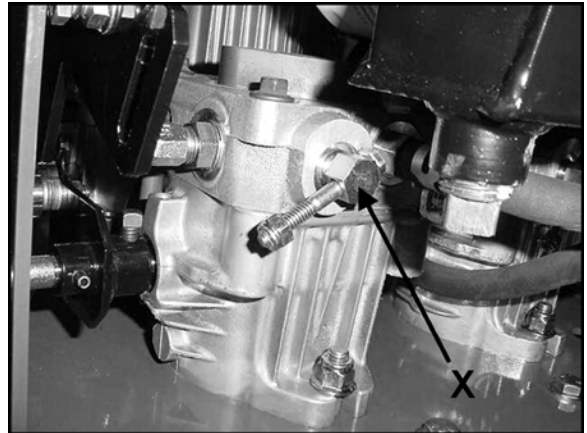

9. Cut and remove tie wrap **G** from the traction control lever **H**.

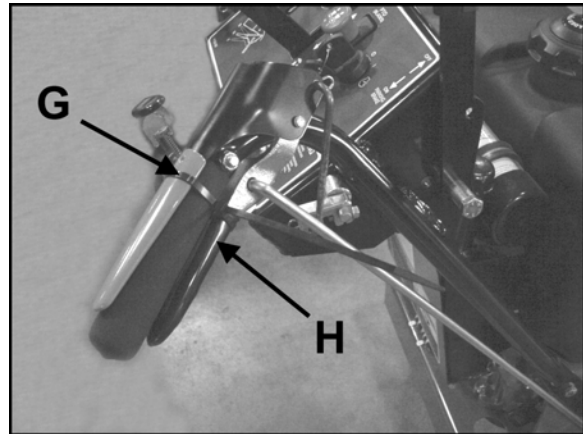


10. Locate the two longest rods removed in Step 2. Install the two traction control rods through the traction control lever **H**, flatwasher and traction lock **J** and secure with hairpins. Repeat on other side of upper handle.

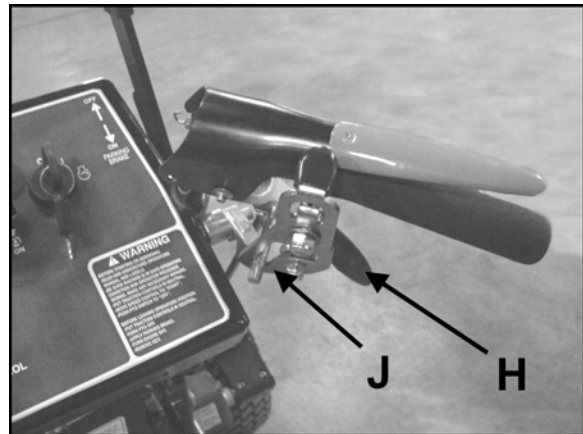


11. With the traction locks **J** in the neutral position, apply tension to the traction control rod to remove any slack and align swivel on traction control rod with the hole in pump arm **K**. Repeat for other side.


NOTE: The pump arm has some rotational play. Adjust the swivel on the traction control rod to the center of this play and secure to the pump arm with a flatwasher and hairpin as shown.

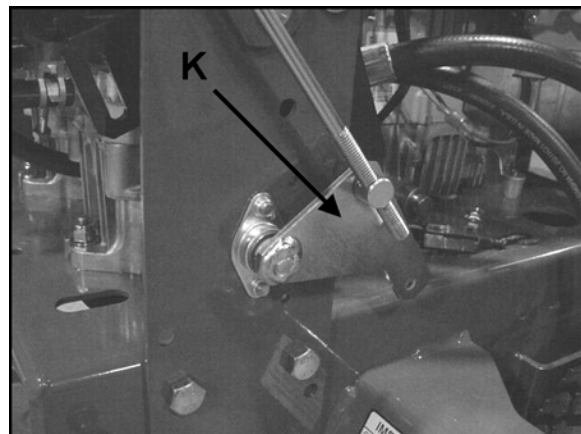


12. Attach spring to pump arm and then to bolt **L**. Repeat for other side.

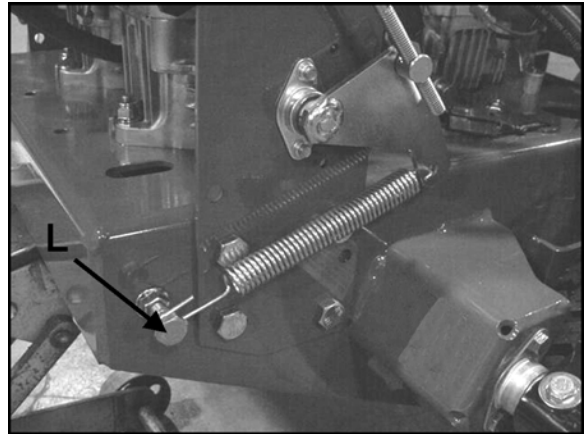



13. Connect speed control rod **M** to the speed control lever **N** and secure with hairpin. Repeat for other side.

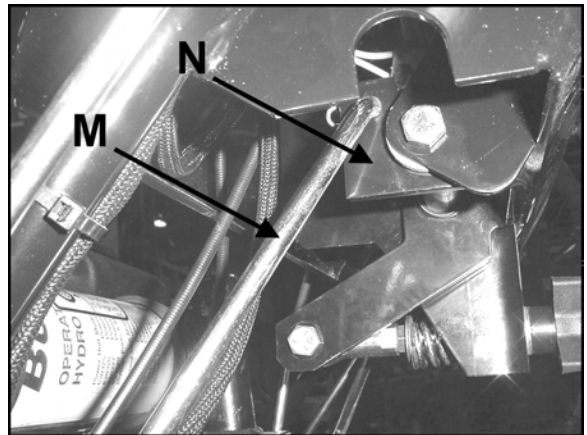


14. Set the speed control levers to neutral and adjust the swivel on the lower end of the speed control rod **M** so they engage the very top of the slot on the neutral plates **P** and secure with flatwasher and hairpin as shown. Repeat for other side.

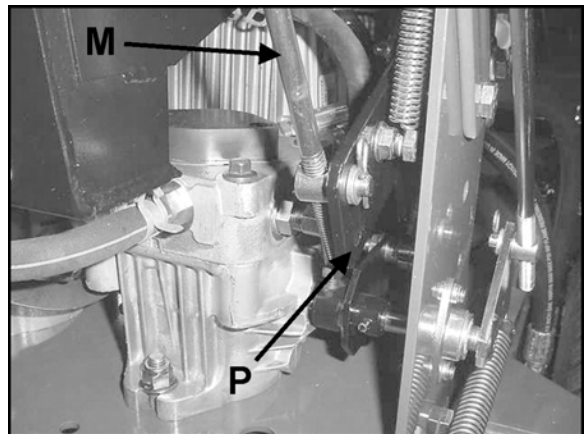


15. Insert threaded end of brake rod **Q** through the slot on the engine deck and attach the other end to the brake control arm **R** and secure in place with hairpin as shown.

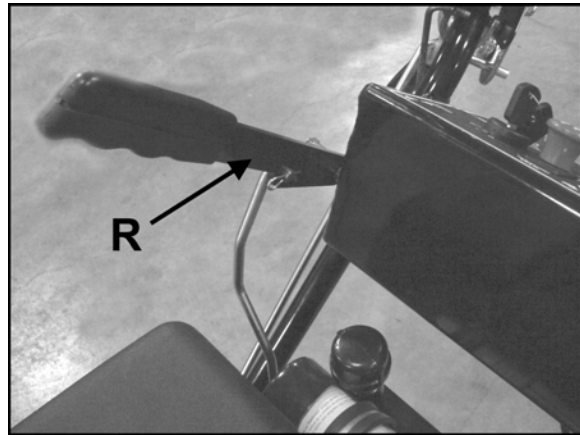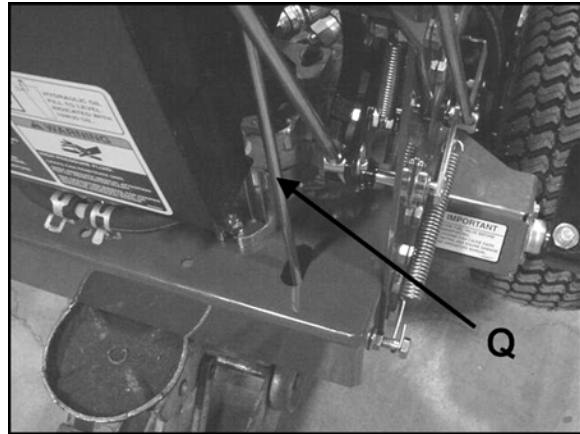

16. Connect swivel on threaded end of brake rod **Q** to the brake arm **T** and secure in place with flatwasher and hairpin as shown. Adjust swivel to provide adequate braking when the brake control arm **R** is engaged. See adjustment section of this manual.

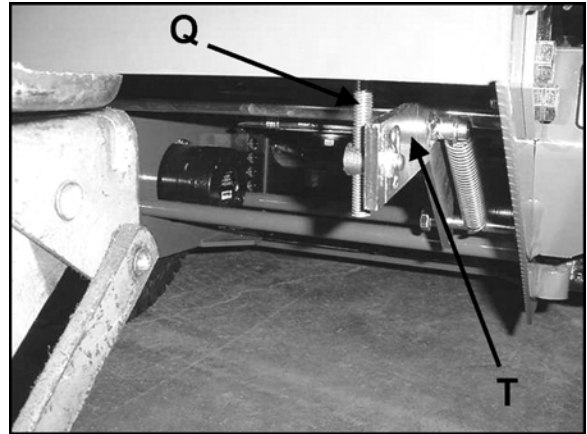


17. Close bypass valve **X** by rotating clockwise until firmly seated.

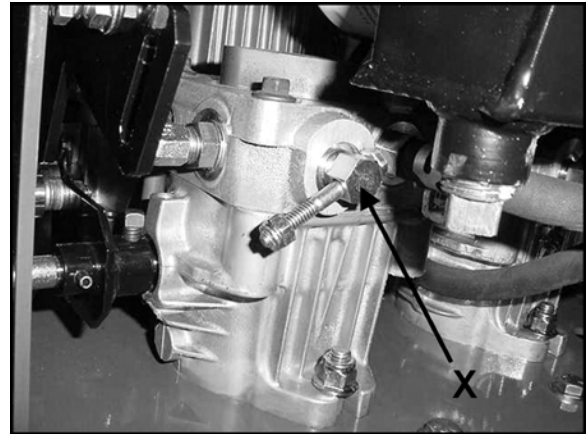

18. On Electric Start Models Only

Remove the battery cover and the battery from the machine. Fill the battery to the bottom of the vent wells with electrolyte and trickle charge for several hours. Replace the battery in the machine and make the connections, red to positive first, then black (ground) to negative. Install battery cover and secure with previously removed nuts.

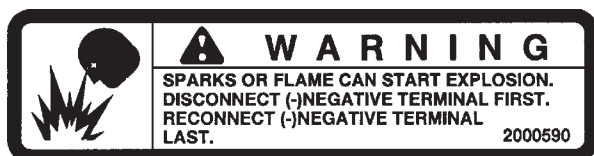

19. Attach cutterdeck per the instructions on the following pages then return to Step 22 of this section.

20. Fill engine with oil. (See engine manual for specifications.)

21. Fill fuel tank with clean, fresh unleaded fuel.



GASOLINE IS HIGHLY FLAMMABLE!

- Fill fuel tank with good quality, clean, regular unleaded gasoline.
- Do not use hi-test fuel.
- Do not smoke.
- Do not spill fuel.
- Fill outdoors.
- Do not overfill. Fill to 1" below bottom of filler neck to allow room for expansion.
- USE A FUNNEL TO FILL GAS TANK

22. Check oil level in hydraulic oil reservoir and adjust as necessary.

23. Adjust tire pressure in drive wheels and casters to 14 psi (1 kg/cm²).

24. Before attempting to start the mower, read and understand all sections of the Operation & Safety manual.

NOTICE: Special setup instructions.

- Before engaging the cutterdeck, run the engine for five minutes at full RPM. This is recommended for new engine installation to permit complete engine lubrication prior to load.
- Do not engage the cutterdeck at full throttle. Set the throttle half way between the highest and lowest engine speed, engage the PTO switch and increase the engine speed to full before cutting.



Do not use this machine without an approved grasscatcher, grass discharge chute or mulching plate(s) correctly fitted.


CUTTERDECK ATTACHMENT: Two types of cutterdeck mounting systems are available, fixed and floating. Fixed mounting rigidly attaches the cutterdeck to the power unit. Floating mounting allows the cutterdeck to move independent of the power unit providing a more uniform cut. Follow the appropriate instructions below for the type of cutterdeck being attached to the power unit.

FIXED CUTTERDECK ATTACHMENT

1. Remove the cutterdeck from the crate.
2. Unbolt the caster wheels and the shipping brackets from the crate.
3. Remove the shipping bracket from the caster wheel by loosening the caster bolt and sliding the shipping bracket off and retighten caster bolt.
4. Remove quick pin and remove the appropriate number of spacers for the desired height of cut. See height of cut chart below.

NOTE: Height of cut chart is also located on bottom of belt cover or in the Operation & Safety Manual.



5. Repeat for other caster wheel assembly.

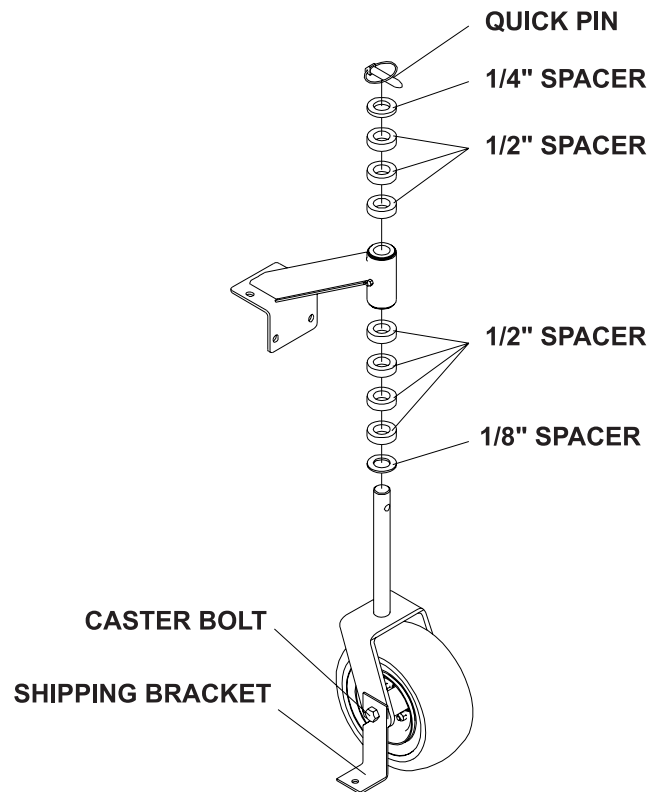

CUTTING HEIGHT		A (1/8") B (1/4") C (1/2")			DECK PIN POSITION		NUMBER OF SPACERS BETWEEN SPINDLE AND BLADE (1/4" THICK)
IN	MM	A	B	C			
1.375	35	1	1	0	5		2
1.625	41	1	1	0	5		1
1.875	48	1	1	0	5		0
2.125	54	1	0	2	4		2
2.375	60	1	0	2	4		1
2.625	67	1	0	2	4		0
2.875	73	1	1	3	3		2
3.125	79	1	1	3	3		1
3.375	86	1	1	3	3		0
3.625	92	1	0	5	2		2
3.875	98	1	0	5	2		1
4.125	105	1	0	5	2		0
4.375	111	1	1	6	1		2
4.625	118	1	1	6	1		1


6. Remove belt cover and set aside.
7. Block the rear of the cutterdeck with the appropriate height block for the desired height of cut **B**. See Support Block Chart below.

CUTTING HEIGHT	HOLE POSITION ON ENGINE DECK*	BLOCK HEIGHT AT REAR OF DECK (B)
1.375" - 1.625"	5	1.25"
1.875" - 2.375"	4	2.00"
2.625" - 3.125"	3	2.75"
3.375" - 3.875"	2	3.50"
4.125" - 4.625"	1	4.25"
* Position 1 is the highest hole on the engine deck.		

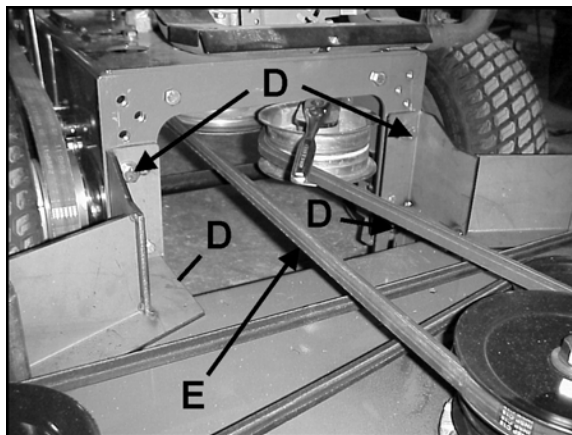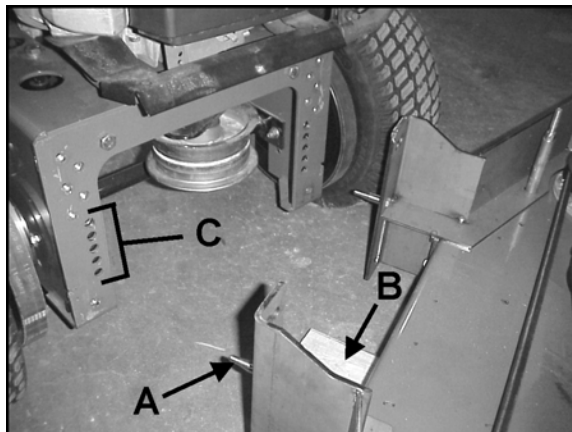

8. Position the power unit behind the cutterdeck.
9. Move the power unit towards the cutterdeck until the guide pins **A** engage the appropriate hole **C** on the power unit for the desired height of cut. Fasten with (4) M12-1.75 X 30 bolts **D**.
10. Loop the PTO belt **E** around the electric clutch pulley. Using a 3/8" ratchet wrench or 3/8" breaker bar rotate the PTO belt idler while looping the PTO belt around the cutterdeck pulley.

11. Reinstall belt cover and fasten in place with knobs **F**.
12. Remove support block from the rear of cutterdeck.
13. Remove support from the rear of the power unit.

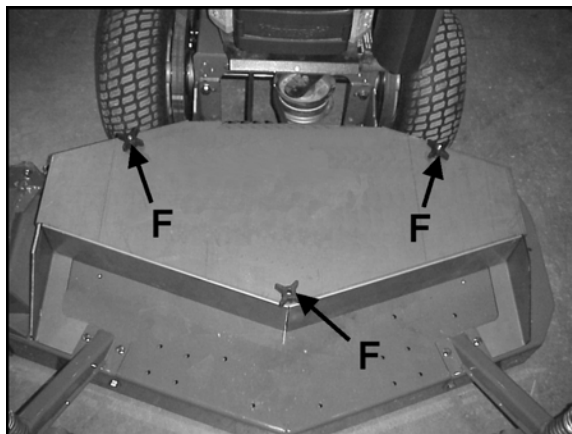

THROTTLE CABLE INSTALLATION/ADJUSTMENT

NOTE: Ensure that the throttle lever on the equipment has been linked to the engine with the throttle cable. See graphic on Page 17.


1. Leave the cable clamp bolts **A** loose.
2. Align the hole **B** in the speed control lever **C** with the hole **D** in the base plate **E** by moving the lever **C**. Insert 6mm dia. pin (or 6mm bolt) through two holes.
3. Pull up the outer housing **F** of the throttle cable until the inner wire **G** has almost no slack, and tighten the cable clamp bolt **A**. Remove the 6mm dia. pin.

NOTE: Make sure that the carburetor choke valve **M** is closed completely when the throttle lever on the equipment is moved to CHOKE position. If not, perform CHOKE ADJUSTMENT.

CHOKE ADJUSTMENT ASSOCIATED CHOKE TYPE

1. Stop the engine.
2. Align the hole **B** in the speed control lever **C** with the hole **D** in the base plate **E** by moving the lever **C**. Insert 6mm dia. pin (or 6mm bolt) through two holes.
3. Turn the choke setting screw **I** so that the clearance between the screw end and the tongue of the lever **J** is zero. Remove the 6mm dia. pin or bolt.

NOTE: Make sure that the choke valve can move to full open side and full close side by turning the lever.

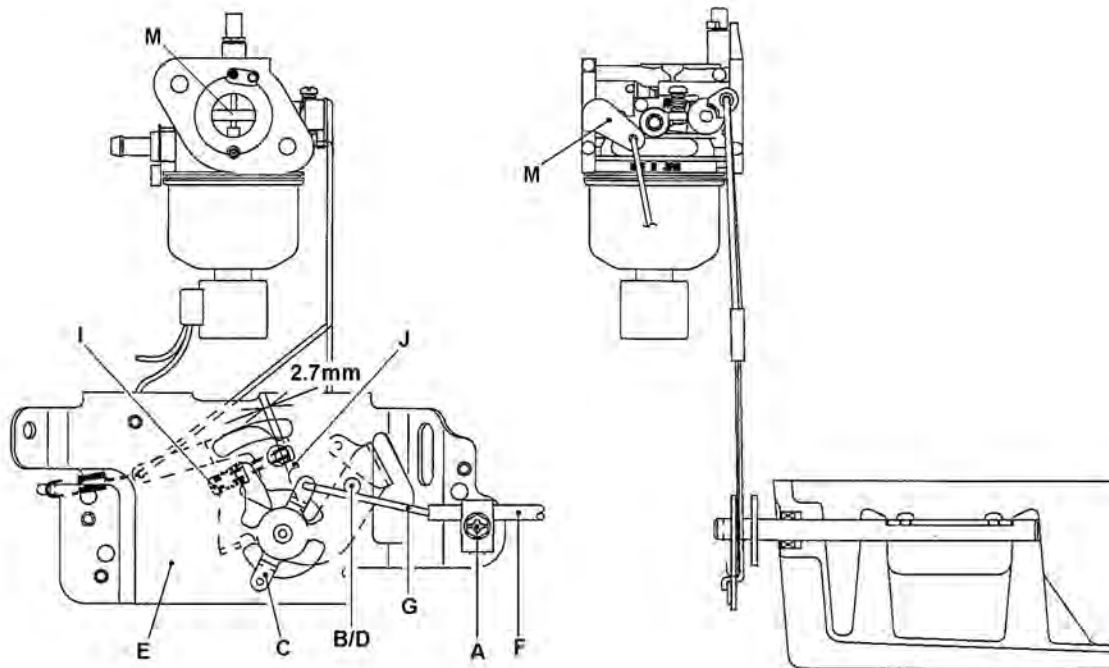


MACHINE LUBRICATION

Every 50 Working Hours - Lubricate the following points with grease:

- 1) Caster wheel pivots (2 points)
- 2) Neutral eccentric pin (2 points)
- 3) Idler pivot bearings:
 - a) Engine to cutterdeck belt tensioner
 - b) Cutterdeck belt tensioner
 - c) Hydro drive belt tensioner

NOTE: The spindles used on these machines use a superior sealed bearing which does not require relubrication.

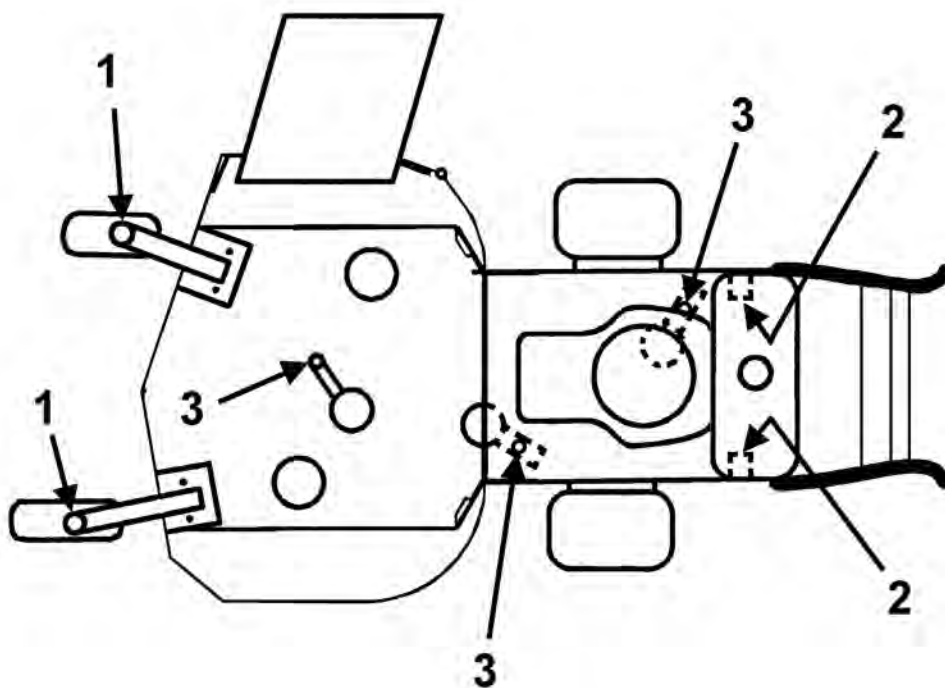

ENGINE

DAILY



Remove the dipstick **S** and check that the oil level reaches the full mark. If necessary, top off with fresh oil. To obtain the correct oil level, the machine must be level. See engine manufacturer's manual for proper oil viscosity and grade. **DO NOT OVER FILL!**

AFTER THE FIRST 5 WORKING HOURS

While the engine is warm, remove the drain plug **P** and drain the crankcase. Replace oil filter. Clean and replace the plug. Fill the crankcase through the filler hole with fresh oil to the full mark. See engine manufacturers manuals for oil and filter change intervals.

Engine operator's manuals are shipped with each machine. Shop manuals for the engines are available from your local engine dealer/distributor.

- For Kawasaki FH641V, order: 99924-2045-03.
- For Kawasaki FH500V, order: 99924-2045-03.
- For Kawasaki FH451V, order: 99924-2045-03.

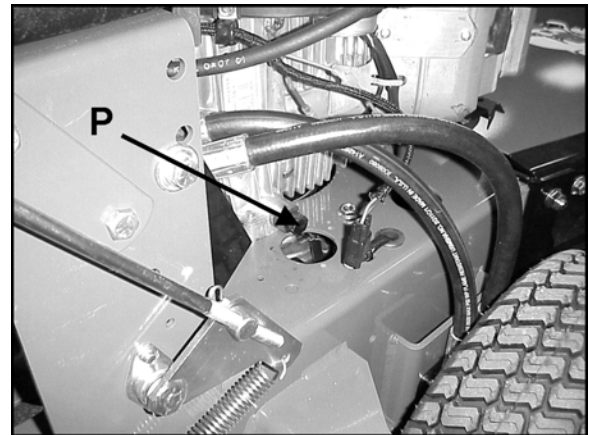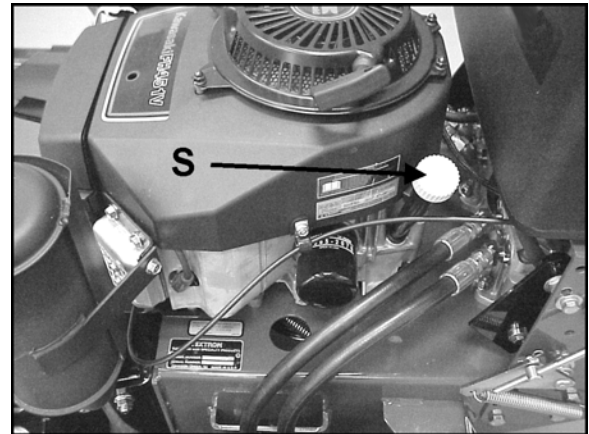

ENGINE - KAWASAKI KAI

The maintenance schedule detailed is for average operating conditions. Under extreme conditions (dusty, dirty or more than 8 hrs continuous use) maintain more frequently.

Oil (daily)

Remove the dipstick **N** and check that the oil level reaches the full mark. If necessary, top off with fresh oil. To obtain the correct oil level, the machine must be level. See engine manufacturer's manual for proper oil viscosity and grade. **DO NOT OVER FILL!**

AFTER THE FIRST 5 WORKING HOURS

While the engine is warm, remove the drain plug **T** and drain the crankcase. Replace oil filter **U**. Clean and replace the plug. Fill the crankcase through the filler hole with fresh oil to the full mark. See engine manufacturers manuals for oil and filter change intervals.

Cooling Fins and Air Intake screen (daily)

Ensure that the cooling fins and air intake screen **W** are cleaned daily. Continued operation with a clogged cooling system will cause severe overheating and result in engine damage.

Air Cleaner




Dual element air cleaners have a paper air cleaner element **Z** with an oiled, foam precleaner element **V** on the dirty side of the paper element. Both should be inspected regularly and maintained.

Clean and re-oil precleaner element every 25 hours (more often under dusty conditions).

1. Disassemble air cleaner cover **F**.
2. Remove precleaner **V** by sliding it off the paper cartridge **Z**.
3. Wash precleaner in kerosene or liquid detergent and water.
4. Wrap precleaner in cloth and squeeze to remove cleaner.
5. Saturate precleaner in engine oil. Squeeze to remove excess oil.
6. Re-install precleaner over paper cartridge. Reassemble air cleaner components and screw assembly **X** down tight.


Every 100 hours (more often under very dusty or dirty conditions), check the paper cartridge.

- Clean by tapping gently.
- Do not wash the cartridge or use compressed air
- Replace when cartridge is dirty, bent or damaged.

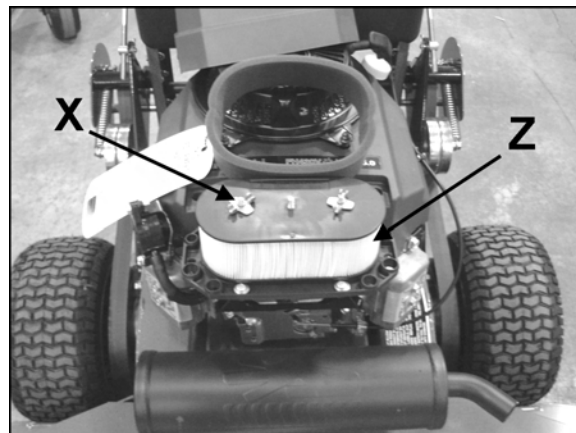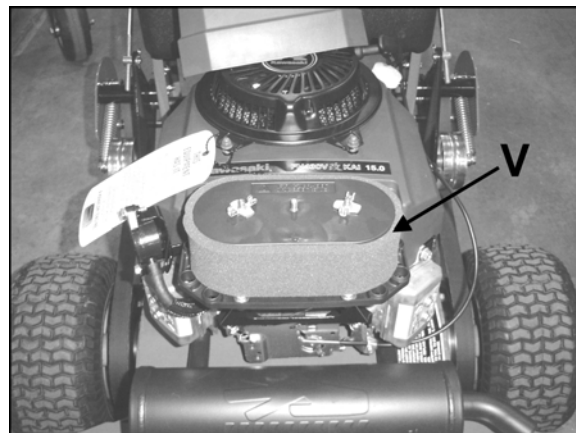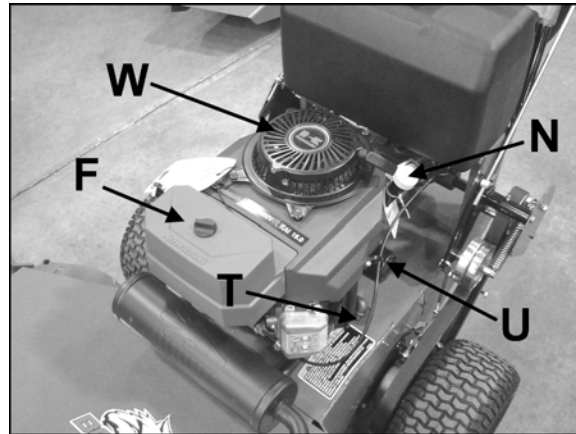

In-Line Fuel Filter

When required, the fuel filter **B** may be replaced.
See the Setup, Parts & Maintenance manual for service part numbers.

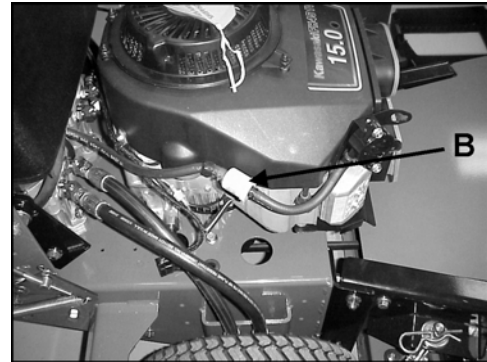

Blade Sharpening

Blades may be sharpened by filing or grinding, but with either method the balance of the blades must be maintained at 5/8 oz/in or less. Failure to maintain balance causes excess vibration, wear and shortened life of not only the blades, but most all components of the machine. To balance a blade after sharpening: attach 1/8 oz of weight 5" from center on the light end. This should make the light end the heavy end. If it does not: File or grind the heavy end until the addition of weight makes the light end the heavy end.

NOTE:

- Do not overheat or weaken the blades.
- Do not straighten bent blades. Replace with new Schiller Grounds Care, Inc. blades.
If lift portion of blade is worn thin replace with a new Schiller Grounds Care, Inc. blade.
- ALWAYS replace with Schiller Grounds Care, Inc. blades—do not use another manufacturer's blades as this could be dangerous.
- Replace cracked or bent blades.



BLADE REMOVAL

1. Use a box wrench or socket with a long breaker bar to remove spindle bolt under cutterdeck.
2. Slip tube over breaker bar or wrench if necessary to gain leverage.
3. Keep hands clear as blades may rotate when bolt releases.
4. When changing blades, wear thickly padded gloves.
5. Block blades from turning by using a piece of wood.
6. Follow these instructions to prevent injury when bolt releases.

NOTE: To prevent blade from turning, place block of wood at **A**, with grain perpendicular to blade.

BLADE RE-INSTALLATION

1. Place the desired number of spacers (no more than 2) on the spindle bolt below the cutterdeck between the blade and spindle shaft.
2. Insert the cutter spindle bolt (from bottom) complete with washer, blade and spacers.
3. Place remaining spacer(s) on the spindle bolt above the cutterdeck between the conical washer and nut (as shown). Replace nut and tighten to 70 ft-lbs.

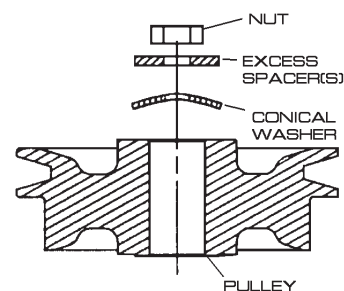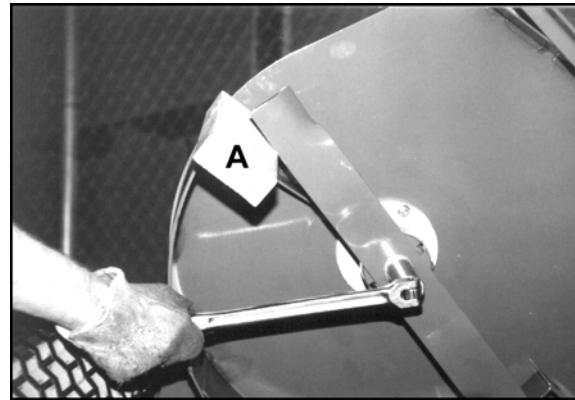

Cutterdeck Pulley Assembly

SPARK PLUG


- Remove plug and check condition.
- Good operating conditions are indicated if the plug has a light grey or tan deposit. A white blistered coating may indicate overheating. A black coating usually means an “over rich” fuel mixture caused by a clogged air cleaner or improper carburetor adjustment. Do not sandblast, wire brush or otherwise try to clean a dirty plug. Best results are obtained with a new plug.
- See engine manufacturers manual for proper spark plug gap.

HYDRAULIC RESERVOIR CHECK, DRAIN AND FILL

Check level every 100 hours or when a leak has occurred. To check level: Remove reservoir cap. Add 10W30 oil until the oil level reaches the bottom of the filler tube. Do not overfill.

EVERY 500 HOURS:

Change hydraulic oil and filter. Remove plug **D** to drain reservoir. Remove and replace filter. Filter is located on front of tank at **G**. Reinstall plug and fill with 10W30 oil to the bottom of the filler tube **F**.

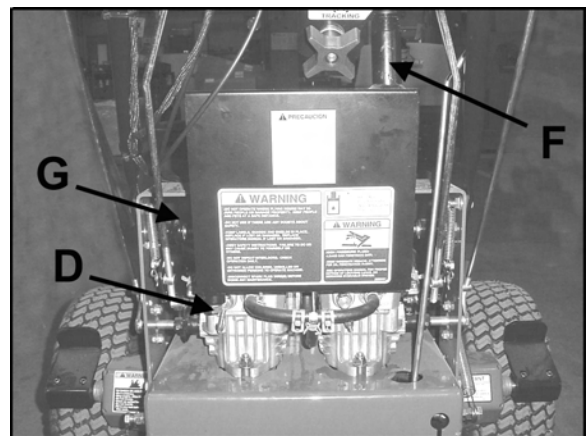

SERVICE CHART

**Hydro
Midsized**

NOTE: CHANGE ENGINE OIL AND FILTER AFTER FIRST 5 HOURS OF OPERATION.

SERVICE OPERATION	FIRST 5 HOURS	DAILY	EVERY 25 HOURS	EVERY 50 HOURS	EVERY 100 HOURS	EVERY 500 HOURS
ENGINE						
Check Oil Level		X				
Check For Oil & Air Leaks		X				
Clean Air Intake		X				
Clean Air Cleaner		X				
Change Oil & Filter*	X	SEE ENGINE MANUFACTURER'S MANUAL*				
Clean Fuel Sediment Bowl				X		
Replace/Adjust Spark Plug	SEE ENGINE MANUFACTURER'S MANUAL					
HYDRAULIC OIL RESEVOIR						
Check Oil Level					X	
MACHINE						
Check Tire Pressures		X				
Check Belt Tensions	CHECK AFTER FIRST 1/2 HR AND AFTER FIRST 4 HRS			X		
Lubricate All Points				X		

Consult the manufacturer's manual for your engine for further information and instructions.

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.


NOTE: After first 5 hours of operation replace engine oil and filters.

NOTE: Make all adjustments with the engine shut off, spark plug wire disconnected and mower drive disengaged.

TRACTION DRIVE HYDROSTAT ADJUSTMENTS: The following adjustments must be done in order.

STEP 1 - Set Neutral

Neutral is set at the factory. If it should require adjustment, raise the wheels off the ground by setting the machine on jackstands or blocks. Disconnect the traction control rod **A** and speed control rod **R** at each pump end. Disconnect pump arm spring **U** from bolt on engine deck. Loosen bolt **S** securing the neutral plate eccentric shaft just enough to turn the shaft. Start the engine and run at low speed. Turn eccentric shaft **T** to raise or lower the point at which the follower bearing is held in the center of the "V" until the wheels stop turning. Tighten the eccentric shaft bolt. Increase the throttle setting and check the adjustment. Readjust if necessary. Shut the engine off before proceeding to steps 2 and 3.

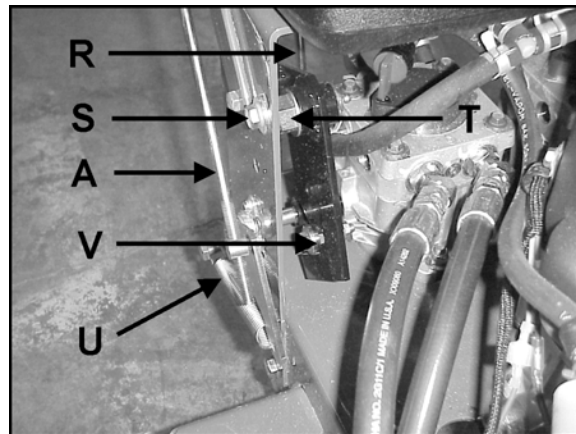

STEP 2 - Adjust Speed Control Rods

First adjust neutral, as outlined in Step 1. Set speed control levers to neutral. Adjust swivels on lower ends of speed control rods **R** so they just go into the slots on the neutral plates.


NOTE: If the speed control levers do not have adequate tracking adjustment, the swivel on one of the rods needs to be turned 1 turn.



STEP 3 - Adjust Traction Levers


Set neutral and adjust speed control rods as outlined in Steps 1 and 2. Set traction locks in the neutral position. Grasp traction rod **A** and pull down on it to take out any slack. The pump control arm has some back and forth play. Adjust the swivel to the center of the control arm play. Connect the swivel to the control arm. Reattach pump arm spring **U** to bolt on engine deck.

NOTE: More reverse speed may be gained by adjusting the swivel to the rear of the control arm play. A minimum of 1/16" play is required so the traction controls can be put in neutral without the machine backing up.

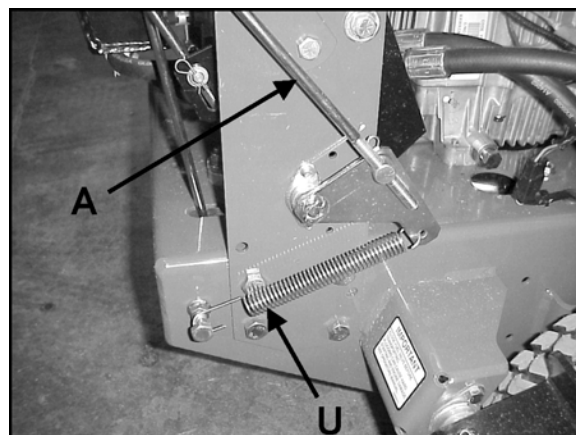

Speed Control Lever Friction

The speed control lever is held where set by friction pads. If the setting will not hold, tighten nuts **E** to increase friction on the speed control lever.

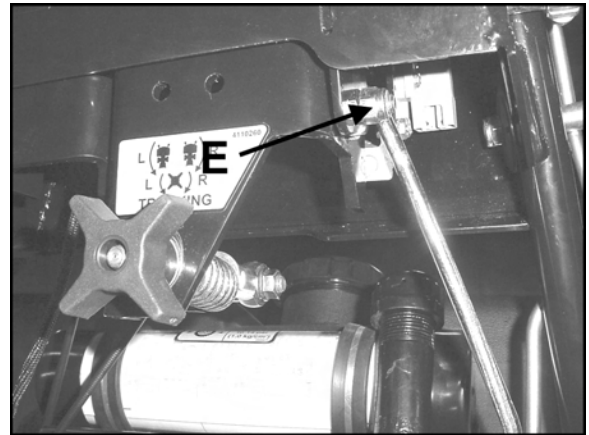



PARKING BRAKE - Apply parking brakes and open the bypass valves on the hydraulic pumps. Try to push the machine forward. If wheels rotate, adjust brakes as follows.

TO ADJUST:

1. Remove the hairpin cotter **A** from the brake rod at the brake lever as shown.
2. Slide the brake rod out of the brake lever and turn the rod in or out of the brake swivel **B** as needed.

NOTE: The brake should initially be adjusted so that the brake rod extends through swivel **B** 1" as shown. If more brake pressure is required adjust as necessary.

3. Reassemble brake rod to the brake lever using hairpin **A**.
4. Apply parking brakes and try to push the machine forward. If wheels rotate, readjust brakes.
5. Close bypass valves on the hydraulic pumps.

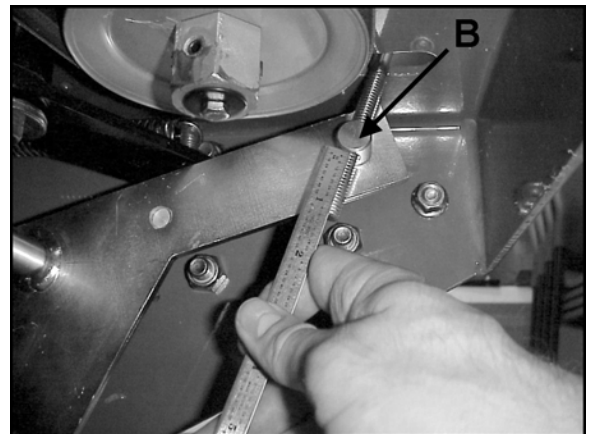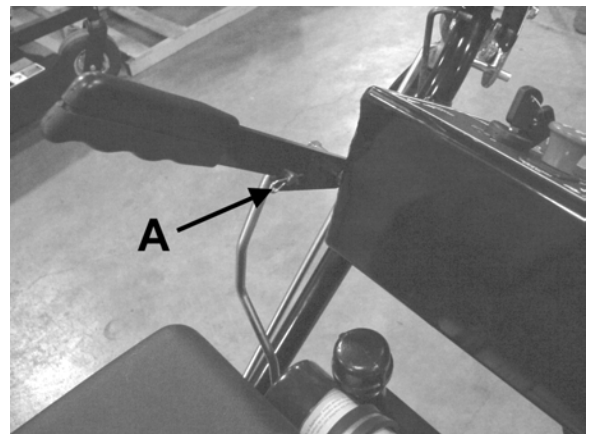


OPERATOR PRESENT CONTROLS

The operator present (OP) controls should be adjusted to control the operation of the plunger of the operator present switch (located under the right side of the control panel). Depressing OP levers **F** should depress the plunger; releasing the levers should extend it.


TO ADJUST:

1. Loosen clamp bolts **G** on both ends, so clamps can rotate on shaft.
2. Rotate actuator lever to depress switch plunger. Keep OP levers against handles and tighten bolts **G**.
3. When released, the OP levers should rise and the actuator lever should rotate away from the switch, allowing the switch plunger to extend completely.

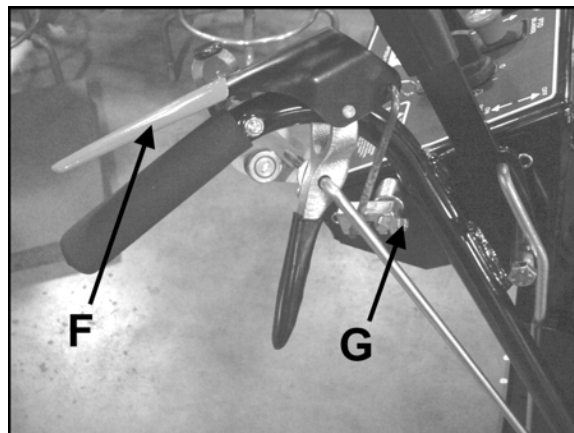

HANDLE BAR HEIGHT ADJUSTMENT

To adjust handle bar height: Remove bolts **G** and loosen bolts **E** on each side of handlebars. Raise or lower as required. Reposition upper handle and reinsert bolts **G** into appropriate hole in lower handle and tighten. Readjust traction control rods, parking brakes and speed control rods.

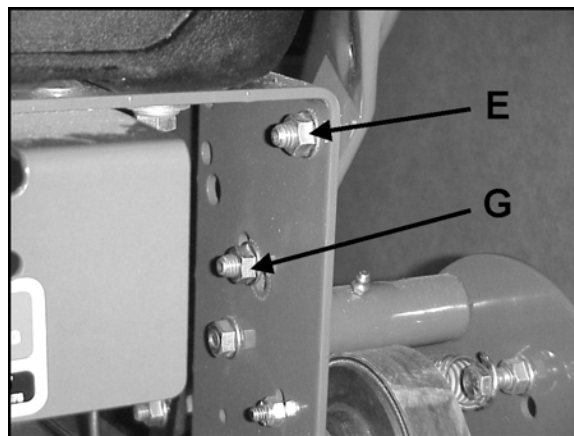

TRACK WIDTH ADJUSTMENT


The track width originally set from the factory can be increased an additional 3-1/4" overall by performing the following steps.

1. Loosen wheel lug nuts on both drive tires.
2. Raise rear of unit so that drive tires are off the ground. Support the unit with jack stands.
3. Remove wheel lug nuts and wheels. Reattach wheels with the tires rotated so the wheel offset is the opposite of when they were previously installed. Reinstall and tighten lug nuts until they are snug.
4. Lower machine off of the jack stands and torque wheel lug nuts to 85 ft-lbs.



TIRE PRESSURE ADJUSTMENT

Tire pressures should be maintained at 14 psi (1.0 kg/cm²).

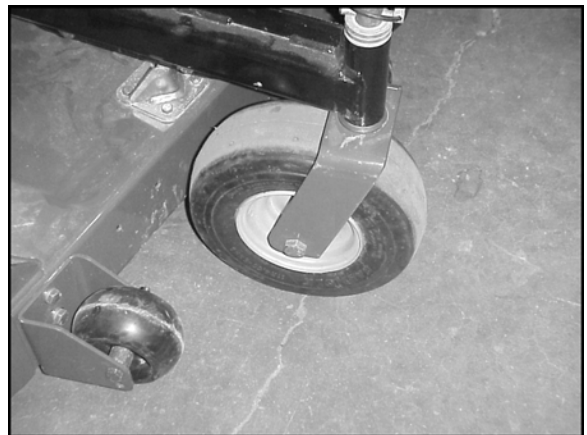

PTO BELT

1. Rotate idler arm using a 3/8" ratchet or breaker bar and remove belt.




CUTTERDECK BELT

1. Remove PTO belt.
2. Rotate idler arm using a 3/8" ratchet or breaker bar and remove belt.
3. Replace in the reverse order.



PUMP-DRIVE BELT

1. Remove PTO belt from the engine clutch.
2. Disconnect the clutch wire harness.
3. Unbolt clutch bracket from clutch and rotate the clutch to allow enough clearance to remove the clutch bracket.
4. Rotate idler arm using a 3/8" ratchet or breaker bar inserted into the square hole in the idler arm.
5. Remove pump drive belt.
6. Replace by following steps in reverse order.

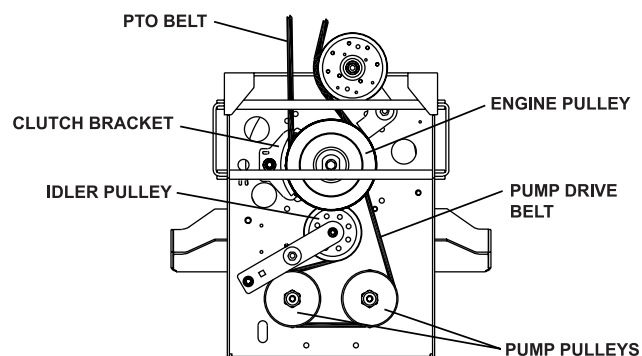

View under engine deck

PARTS SECTION

Hydro Midsize

28


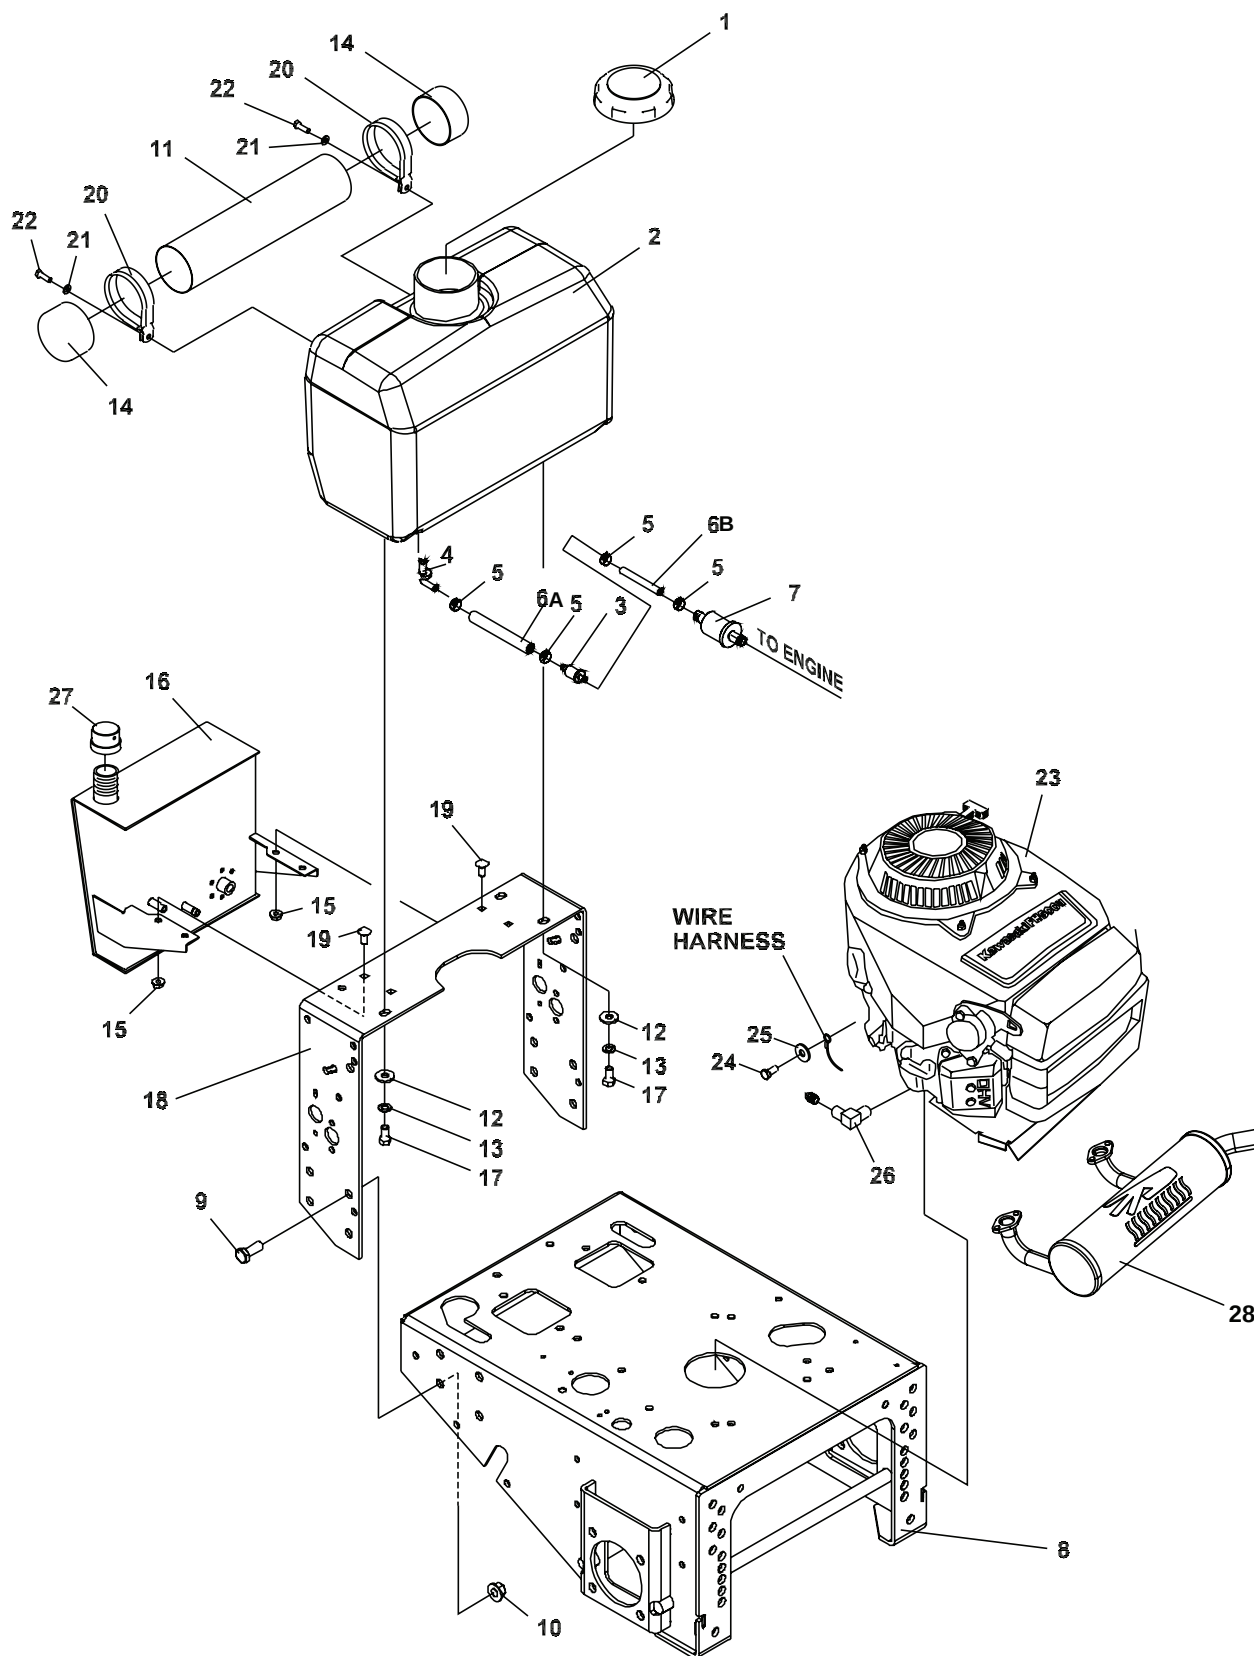


FIGURE 1

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1-1	4130320	CAP-FUEL GASOLINE 3.5	1				
1-2	4163068-1	TANK-FUEL (INCLUDES ITEMS 3 & 4)	1				
1-3	4163016	GROMMET-FUEL TANK	1				
1-4	4163012	S FUEL SHUT-OFF VALV	1				
1-5	88042N	HOSE CLAMP	4				
1-6	4162977-007	HOSE,FUEL LINE 8"	1				
		6A- CUT TO 6" LONG					
		6B- CUT TO 5" LONG					
1-7	38666	FILTER, FUEL	1				
1-8	4131068.2	DECK-ENGINE HYDRO	1				
1-9	64123-39	BOLT-HEX 1/2-13X1-1/4	8				
1-10	64229-05	LOCKNUT, 1/2-13 NYLON	8				
1-11	2306144	S DOCU TUBE W/LAB	1				
1-12	64163-31	WASHER	4				
1-13	64006-03	LOCKWSHR-HELICAL 3/8	4				
1-14	38061A	COVER	2				
1-15	64229-02	LOCKNUT-NYLON 5/16-18	4				
1-16	2306127	S-HYD RESEVOIR W/LABS	1				
1-17	64123-15	BLT-HEX 3/8-16X3/4	4				
1-18	2722269.7	HANDLE-LOWER HYD	1				
1-19	64018-9	BLT-CRG 5/16-18 X 3/4	4				
1-20	38542	CLAMP-DOCU TUBE	2				
1-21	64006-01	LOCKWSHR-HELICAL 1/4	2				
1-22	64123-89	BLT-HEX 1/4-20 X 3/4	2				
1-23	4156980	ENG-15HP KAW KAI W/CHG	1				
	4156981	ENG-17HP KAW KAI W/CHG	1				
	4156982	ENG-17HP KAW KAI ES	1				
	2722214	FILTER-OIL					
	4153902	FILTER-AIR					
	4153903	FILTER-PRE					
* (SERVICE MANUAL 15 HP #99924-2056-01)							
* (SERVICE MANUAL 17 HP #99924-2045-08)							
1-24	64205-018	BLT MET M8-1.25X15	1				
1-25	64002-04	LOCKWASHER, EXT. 5/16	1				
1-26	48255-01	STREET ELBOW 90DEG 3/8	1				
1-27	69216.7	CAP-RESERVOIR	1				
1-28	4158114	MUFFLER-15HP KAW	1				
		(USED ON 15HP MODELS ONLY)					
	4158116	MUFFLER-17HP KAW					
		(USED ON 17HP MODELS)					

* AVAILABLE THROUGH KAWASAKI DEALER

FIGURE 2

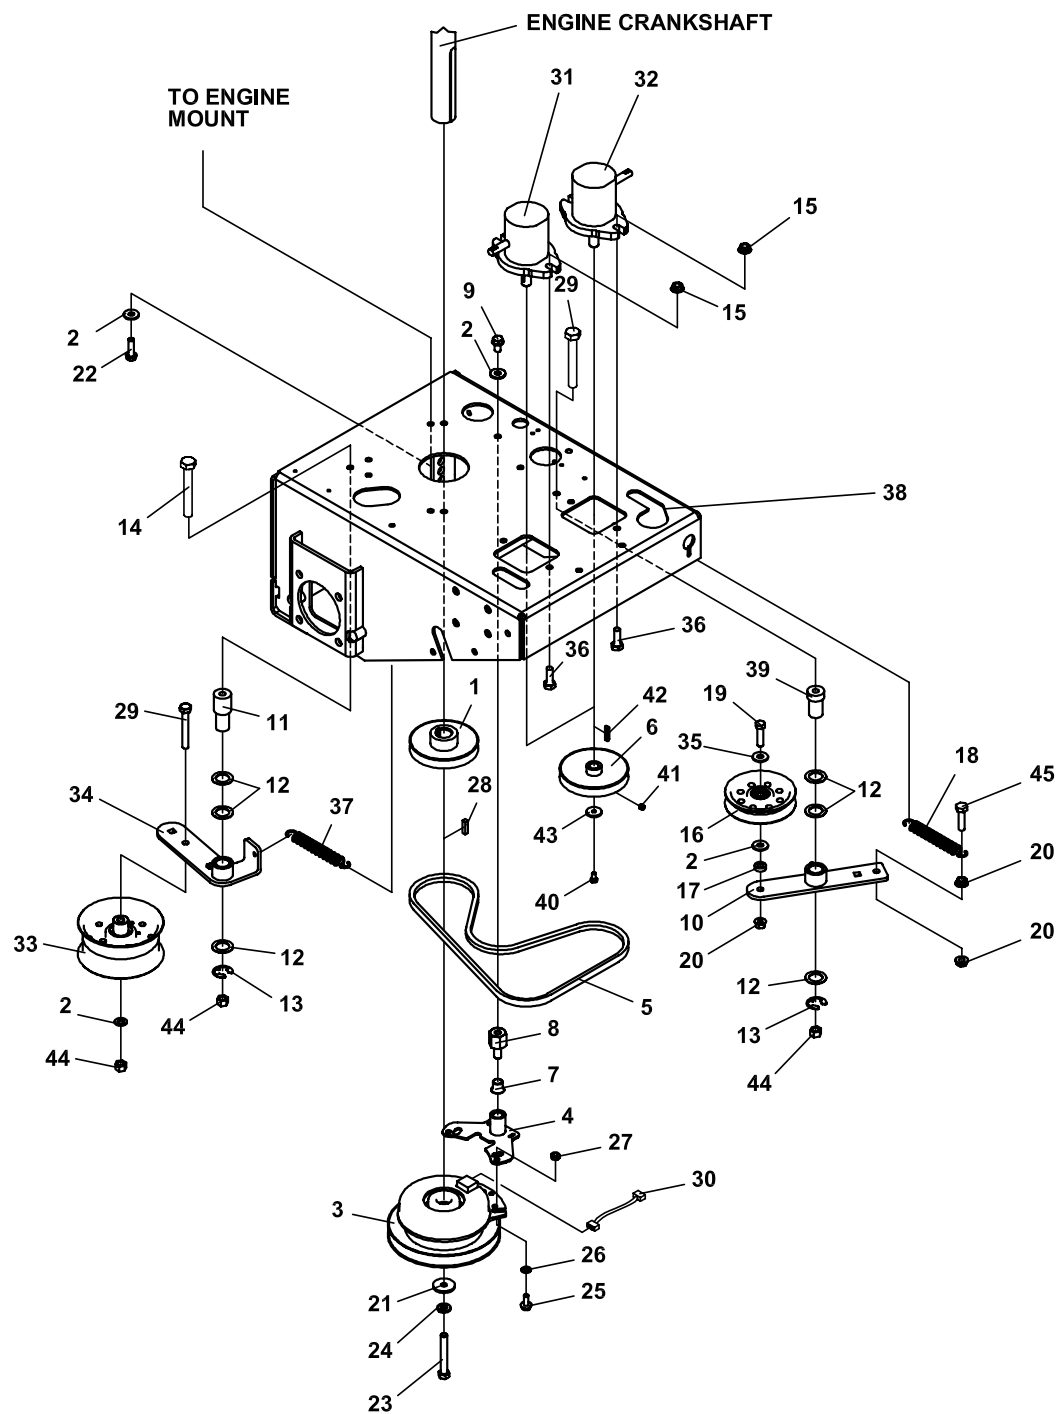

Hydro Midsize

LOWER ENGINE DECK ASSY/CLUTCH

FIGURE 2

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
2-1	2721647	PULLEY-4.50E.O.D.	1				
2-2	64163-31	WASHER, 25/64 X 1 X 12	9				
2-3	2721110	CLUTCH-ELECTRIC (INCLUDES ITEM 30)	1				
2-4	2721331.7	WLDMT-CLUTCH STOP MID	1				
2-5	2721642	BELT-HA 49.0	1				
2-6	2722244	PULLEY- A SECTION 4.50	2				
2-7	38304-03	BRG-FLANGED PLASTIC	1				
2-8	4121540	PIN-CLUTCH	1				
2-9	64123-15	BOLT-3/8-16X3/4 HEX	1				
2-10	2721641.7	WLDMT-IDLER ARM	1				
2-11	4116712	PIN-PIVOT	1				
2-12	64163-65	WASHER 0.890 X 1.375	6				
2-13	64221-04	E-RING.875	2				
2-14	64123-138	BLT-HEX 3/8-16X3-3/4	1				
2-15	64268-03	NUT-FL NYL LOCK 3/8-16	4				
2-16	2308000	PULLEY-IDLER 4.00 EOD	1				
2-17	33148-01	SPACER	1				
2-18	38219	SPRING-TENSION	1				
2-19	64123-87	BLT-HEX 3/8-16 X 1-3/4	1				
2-20	64141-4	NUT-WLF 3/8-16	3				
2-21	64163-51	WSHR.453 X 1.38 X 7GA	1				
2-22	64197-005	BLT-TDFM 3/8-16X1-1/4	4				
2-23	64123-155	BLT-HEX 7/16-20 X 3	1				
2-24	64006-06	LOCKWSHR-HELICAL 7/1	1				
2-25	64123-54	BOLT, 5/16-18X3/4 HEX	2				
2-26	64163-55	WASHER .328X.75X14 GA	4				
2-27	64229-02	LOCKNUT-NYLON 5/16-18	2				
2-28	64164-12	1/4X1/4X1 SQ END KEY	1				
2-29	64123-75	BOLT, 3/8-16X3 HEX	2				
2-30	2720949	ASSY-CLUTCH WIRE	1				
2-31	4163316	PUMP-HYDRO LH	1				
2-32	4163317	PUMP-HYDRO RH	1				
2-33	2721541	PULLEY-IDLER 5 IN	1				
2-34	2721401.7	WLDMT-IDLER ARM	1				
2-35	64163-61	WSHR .81X.406X16GA	1				
2-36	64123-16	BLT-HEX 3/8-16X1-1/4	4				
2-37	2188131	SPRING-EXTENSION	1				
2-38	4131068.2	DECK-ENGINE HYDRO	1				
2-39	4116691	PIN-PIVOT	1				
2-40	64205-013	BLT-MET M6-1 X 12	2				
2-41	64044-6	SCREW-SET 5/16-18X1/4	4				
2-42	64238-03	KEY-MET 5MM SQ X 28	2				
2-43	64209-09	WASHER-CONICAL SPRING	2				
2-44	64229-03	LOCKNUT-NYLON 3/8-16	3				
2-45	64123-70	BOLT-HEX 3/8-16X1-1/2	1				

FIGURE 3

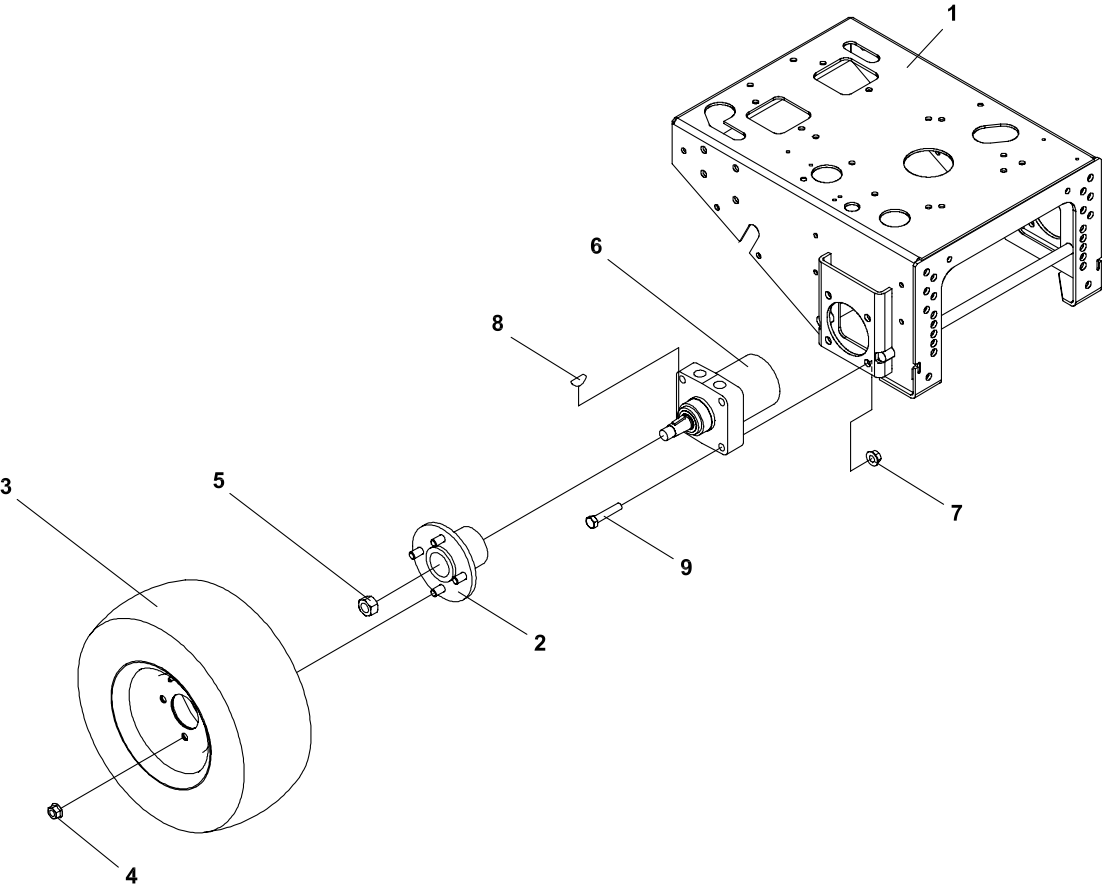


FIGURE 3

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
3-1	4131068.2	DECK-ENGINE HYDRO	1				
3-2	2721620.7	WLDMT-HUB	2				
3-3	2721956	ASSY-WHEEL 16 X 7.50 X 8	2				
	2721956-01	TIRE-16X7.50 X 8 MLTI TRC	1				
	2721956-02	WHEEL W/ DUAL VALVES	1				
3-4	64267-01	NUT-HEX FLANGED 1/2-20	8				
3-5	64025-06	NUT-HEX 3/4-16 2A	2				
3-6	2308051	MOTOR-WHEEL ROSS MF	2				
3-7	64141-13	NUT WLF 1/2-13	8				
3-8	64164-28	#808 WOODRUFF KEY	2				
3-9	64123-72	BLT-HEX 1/2-13X2-1/2	8				

FIGURE 4

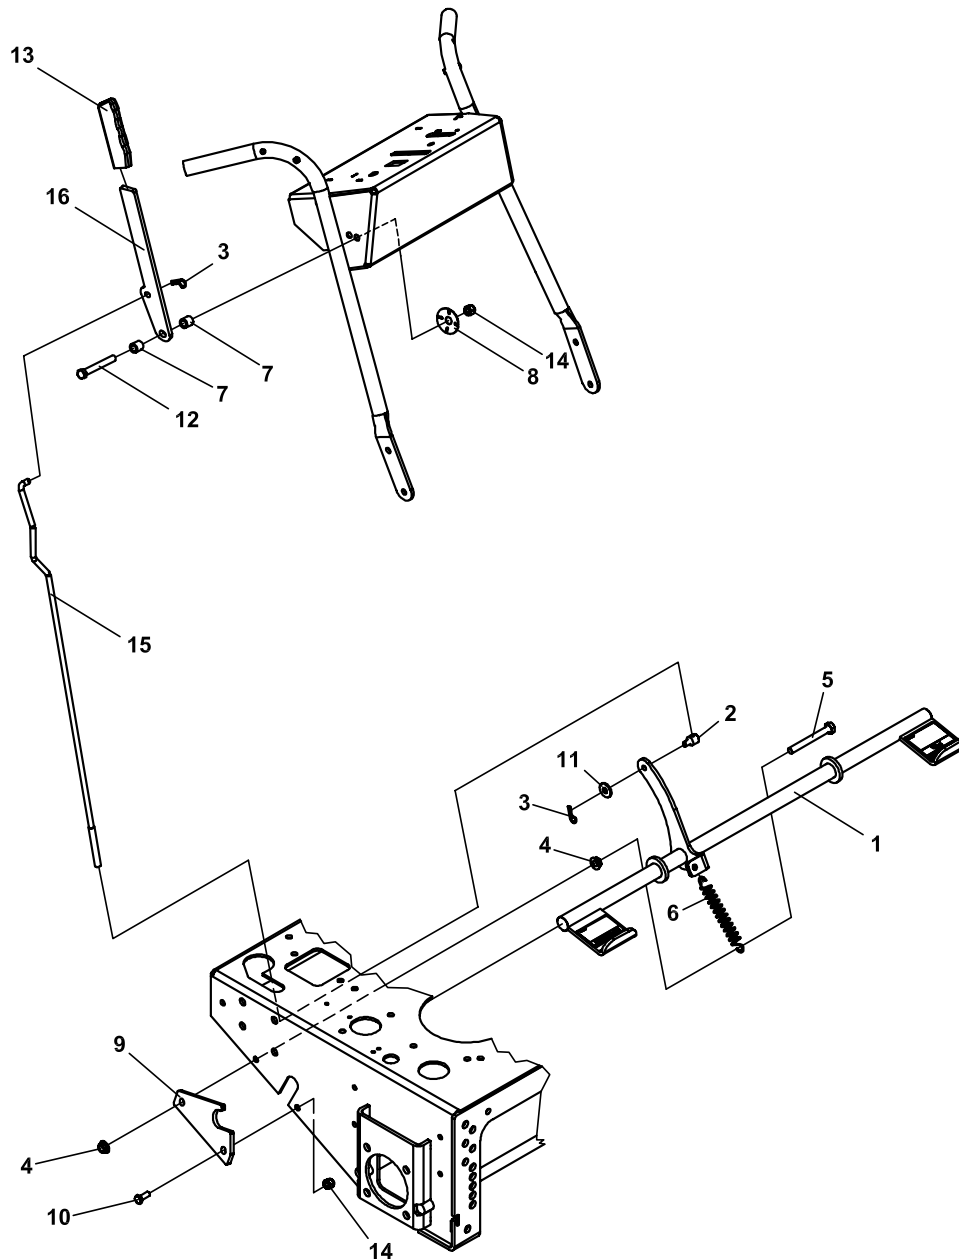


FIGURE 4

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
4-1	4131746	BRAKE SHAFT W/LABS	1				
4-2	33103	SWIVEL	1				
4-3	64168-2	COTTER-HAIRPIN.08X1.19	2				
4-4	64001-6	NUT-HEX JAM,3/8-16	2				
4-5	64123-138	BLT-HEX 3/8-16X3-3/4	1				
4-6	2188131	SPRING-EXTENSION	1				
4-7	2183071-01	SPACER-15.88X10.32X16	2				
4-8	64171-2	WAVE WASHER	1				
4-9	4131072.7	PLATE-BRK SHFT RETNR	2				
4-10	64123-50	BOLT-HEX 3/8-16X1	3				
4-11	64163-02	WSHR-.325 X .596 X 11GA	1				
4-12	64123-82	BOLT-HEX 3/8-16X2-1/2	1				
4-13	38404-01	GRIP-CONTROL LEVER	1				
4-14	64229-03	LOCKNUT-NYLON 3/8-16	5				
4-15	4132134	ROD-PARK BRAKE	1				
4-16	2721632.7	LEVER-BRAKE	1				

RECOIL START UPPER HANDLE

Hydro
Midsized

FIGURE 5

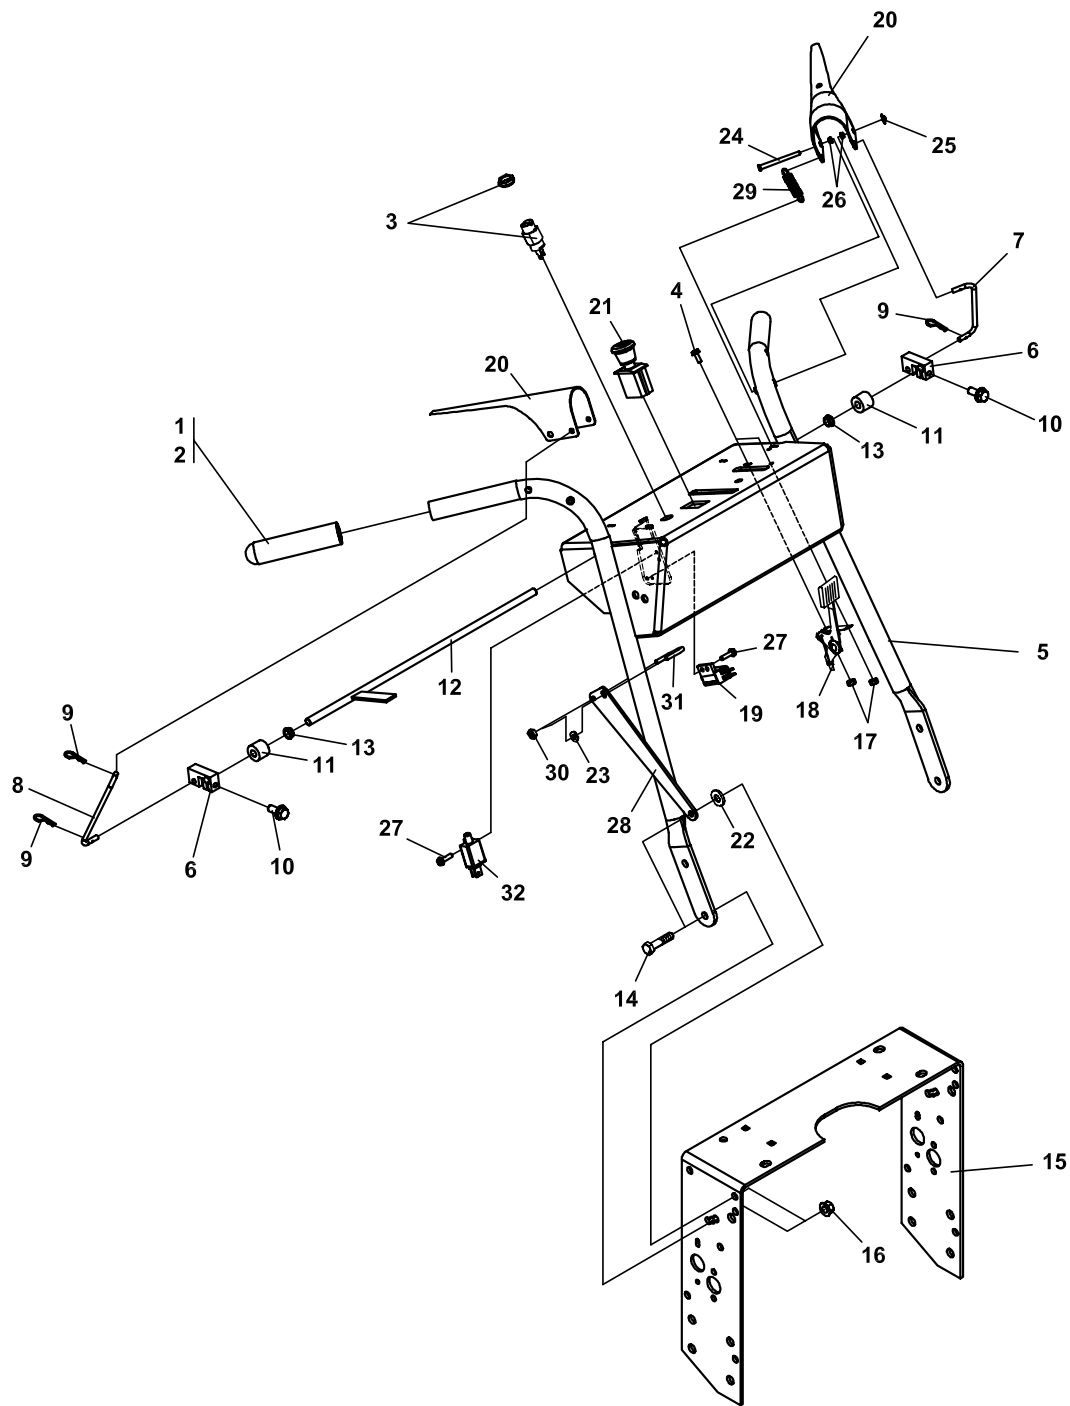


FIGURE 5

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
5-1	PL5029	GRIP-HANDLE	2				
5-2	* 2308121	ADHESIVE-3 GRAM TUBE (USE WITH PL5029 GRIP)	1				
5-3	38148	SWITCH-ENGINE STOP	1				
5-4	64152-46	SCR-SLT HH 10-24X1/2	2				
5-5	4122150	S UPR HNDL W/LABS, HYD	1				
5-6	2303023	CONNECTOR-OP	2				
5-7	4122104	ROD-HANDLE LINK, LH	1				
5-8	4122107	ROD-HANDLE LINK, RH	1				
5-9	64168-2	COTTER-HAIRPIN.08X1.19	4				
5-10	64197-002	BLT-TDFM 1/4-20X3/4	2				
5-11	33030-09	IDLER-BUSHING	2				
5-12	4122056	WLDMT-OP PRESENCE	1				
5-13	38371-01	BRG-NYLINER 3/8	2				
5-14	64123-50	BOLT-HEX 3/8-16X1	4				
5-15	2722269.2	HANDLE-LOWER	1				
5-16	64141-4	NUT-WLF 3/8-16	4				
5-17	64025-15	NUT-HEX #10-24 KEPS	2				
5-18	38357-09	CONTROL-THROTTLE	1				
5-19	38383	SWITCH-N.C.	2				
5-20	2302152.7	HNDL-OP PRESENT	2				
5-21	2721505	SWITCH-PTO	1				
5-22	64163-83	WASHER-.406 X 1.00 X.25	2				
5-23	64163-03	WSHR-.256IDX.62ODX18GA	2				
5-24	64188-44	PIN-CLEVIS 3/16 X 2.25	2				
5-25	64175-01	PUSHNUT-3/16 ROD	2				
5-26	38371-03	BRG-NYLINER 3/16	4				
5-27	64197-015	BLT-TDFM 10-32X1/2	4				
5-28	2722062.7	BRACE-HANDLE	2				
5-29	2308065	SPRING-TENSION	2				
5-30	64229-01	LOCKNUT-NYLON 1/4-20	4				
5-31	64225-03	U-BOLT	2				
5-32	108208	SWITCH DBL POLE NC/NO	1				

* NOT ILLUSTRATED

FIGURE 6

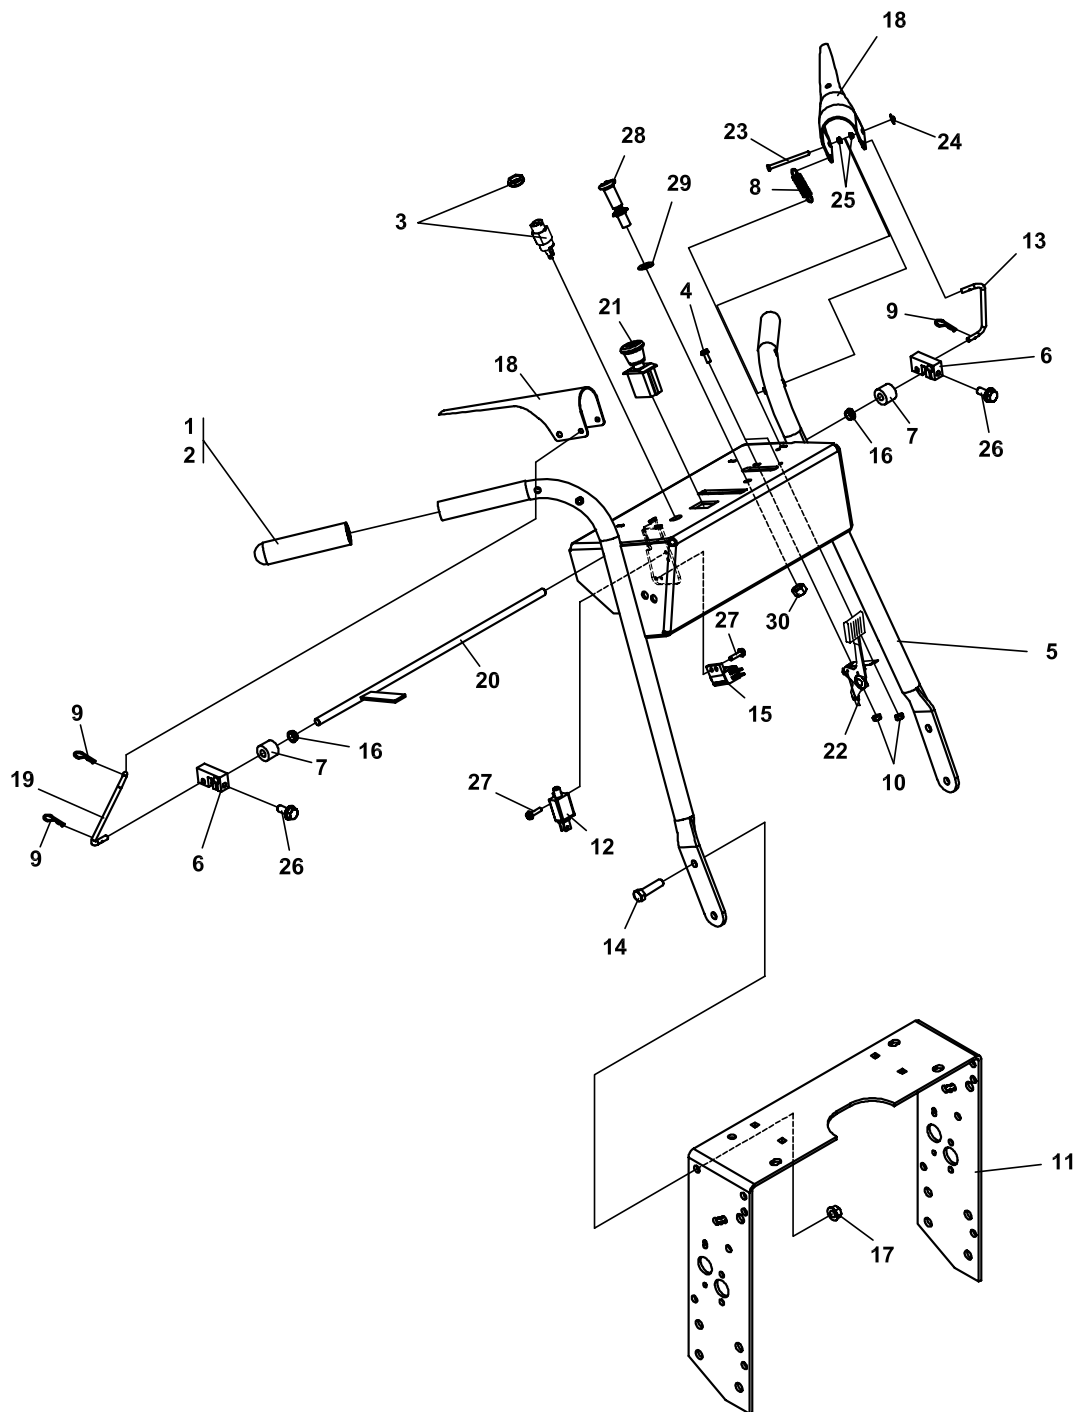


FIGURE 6

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
6-1	PL5029	GRIP-HANDLE	2				
6-2	* 2308121	ADHESIVE-3 GRAM TUBE (USE WITH PL5029 GRIP)	1				
6-3	128010	SWITCH	1				
6-4	64152-46	SCR-SLT HH 10-24X1/2	2				
6-5	4122148	S UPRHNDL W/LABS W/CHK1 (USED ON 930324A ONLY)	1				
	4122150	S UPR HNDL W/LABS, HYD (USED ON 930328A ONLY)	1				
6-6	2303023	CONNECTOR-OP	2				
6-7	33030-09	IDLER-BUSHING	2				
6-8	2308065	SPRING-TENSION	1				
6-9	64168-2	COTTER-HAIRPIN.08X1.19	4				
6-10	64025-15	NUT-HEX #10-24 KEPS	2				
6-11	2722269.2	HANDLE-LOWER	1				
6-12	2308094	SWITCH-NCNC DBL POLE	1				
6-13	4122104	ROD-HANDLE LINK, LH	1				
6-14	64123-50	BOLT, 3/8-16X1 HEX	4				
6-15	108208	SWITCH DBL POLE	1				
6-16	38371-01	BRG-NYLINER 3/8	2				
6-17	64141-4	NUT-WLF 3/8-16	4				
6-18	2302152.7	HANDLE-OP	2				
6-19	4122107	ROD-HANDLE LINK, RH	1				
6-20	4122056	WLDMT-OP PRESENCE	1				
6-21	2721505	SWITCH-PTO	1				
6-22	118020-16	CABLE-THROTTLE 48.00	1				
6-23	64188-44	PIN-CLEVIS 3/16 X 2.25	2				
6-24	64175-01	PUSHNUT-3/16 ROD	2				
6-25	38371-03	BRG-NYLINER 3/16	4				
6-26	64197-002	BLT-TDFM 1/4-20X3/4	2				
6-27	64197-015	BLT-TDFM 10-32X1/2	4				
	(ITEMS 28-30 USED ON 930324A ONLY)						
6-28	108009-03	CONTROL-CHOKE 51	1				
6-29	64163-31	WASHER, 25/64X1X12	1				
6-30	64025-04	NUT-3/8-24 HEX	1				

* NOT ILLUSTRATED

FIGURE 7

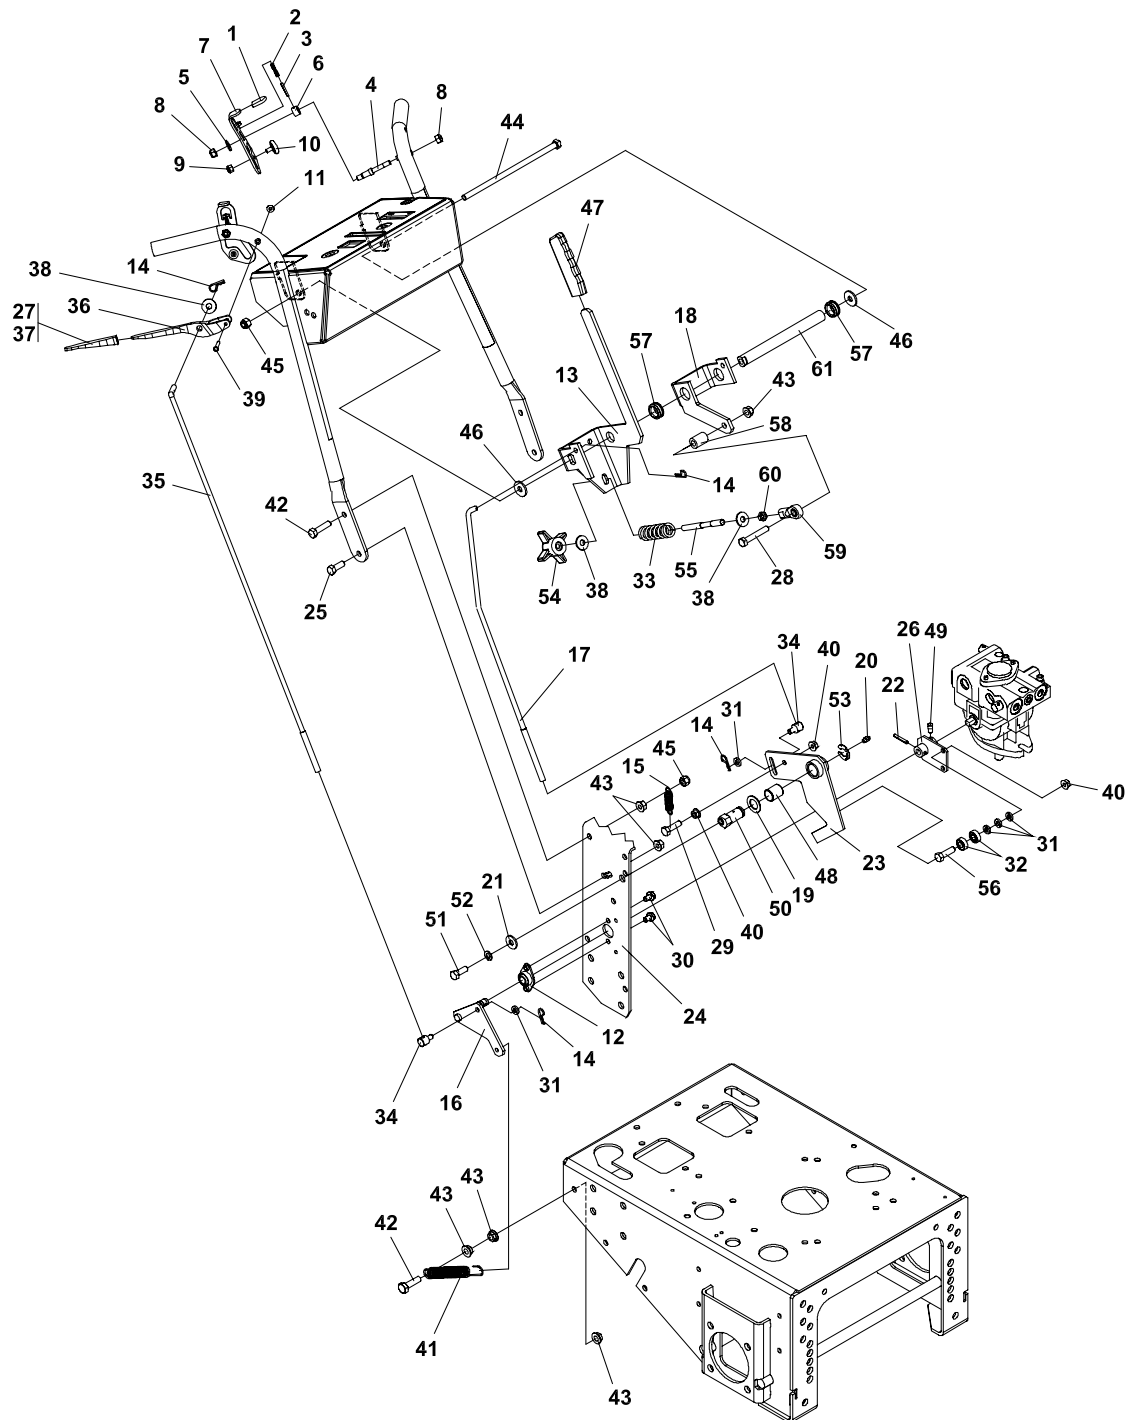


FIGURE 7

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
7-1	2722426	GRIP-TRACTION LOCK	2	7-41	4117212	SPRING EXTENSION	2
7-2	38189	SPRING-COMPRESSION	2	7-42	64123-70	BOLT-HEX 3/8-16X1-1/2	4
7-3	64061-37	ROLL PIN-1/8 X 1.00 SS	2	7-43	64141-4	NUT-WLF 3/8-16	11
7-4	2303076	STUD-DOUBLE ENDED	2	7-44	64123-202	BLT-HEX 3/8-16 X 9	1
7-5	62464-5A	WASHER, THRUST 5/16X3/4	2	7-45	64229-03	NUT-NYLOCK 3/8-16	3
7-6	33243	SPACER	2	7-46	2308066	FRICTION WASHER	2
7-7	2722242	LATCH-ROLLER LH HYDRO	1	7-47	38404-01	GRIP, CONTROL LEVER	1
*	2722243	LATCH-ROLLER RH HYDRO	1	7-48	2308076-02	BEARING-PLASTIC	2
7-8	64229-02	5/16-18 NYLON LOCKNUT	4	7-49	64192-04	SET SCREW 5/16-18X5/8	2
7-9	64229-01	LOCKNUT NYL 1/4-20	2	7-50	2303058	ECCENTRIC SHAFT W/ZRK	2
7-10	2308002	BRG-RADIAL W/THD STUD	2	7-51	64123-02	BLT HEX 3/8-24 X 1	2
7-11	64175-01	PUSH NUT	2	7-52	64006-03	WASHER, 3/8 HELICL LCK	2
7-12	2308080	BEARING SELF ALIGNED	2	7-53	64144-16	RING, CLIP-.75X.062	2
7-13	2721843.7	ARM-RH SPEED CONTROL	1	7-54	38524	KNOB-4 PRONG 3/8-16	1
7-14	64168-2	HAIRPIN COTTER	7	7-55	2721854	STUD-3/8-16X 3/8-24 4.5LG	1
7-15	2308065	SPRING EXTENSION	2	7-56	64123-69	BOLT-5/16-18X1-1/2 HEX	2
7-16	2721660.7	WLDMT-PUMP ARM RH	1	7-57	118047-09	BUSHING-FLIP LOK.75ID	2
*	2721622.7	WLDMT-PUMP ARM LH	1	7-58	33030-08	BUSHING-IDLER 7/8X3/8X1	1
7-17	2722305	ROD-SPEED CONTROL	2	7-59	138011	BALL JOINT	1
7-18	2721842.7	ARM-LH SPEED CONTROL	1	7-60	64001-2	NUT 3/8-16	1
7-19	64163-06	WSHR.768/.756X1.25X14GA	2	7-61	2721844	BUSHING-SPEED CONTROL	1
7-20	85010N	ZERK, 1/4-28 STR	2	TRACTION LOCK ASSY'S ARE ALSO AVAILABLE			
7-21	64163-61	WSHR .81X.406X16GA	2	4113565 S-TRCTN LOCK ASSY RH 1			
7-22	64061-28	ROLL PIN 3/16 X 1 1/4	2	(INCLUDES ITEMS 1-4, 6, 7, 9-12)			
7-23	2721617.7	WLDMT-SPEED CONTROL	2	4113564 S-TRCTN LOCK ASSY LH 1			
7-24	2722269.2	HANDLE-LOWER	1	(INCLUDES ITEMS 1-4, 6, 7, 9-12)			
7-25	64123-50	BOLT, 3/8-16X1 HEX	2	* NOT ILLUSTRATED			
7-26	2306081.7	WLDMT PUMP ARM	2				
7-27 *	2308121	ADHESIVE	1				
		(USE WITH 38009N GRIP)					
7-28	64123-100	BOLT-3/8-16X2-1/4 HEX	1				
7-29	64123-68	BLT-HEX 5/16-18 X 1	2				
7-30	64139-13	BLT-WLF 5/16-18X1/2	4				
7-31	64163-02	WSHR 21/64X19/32X11 GA	11				
7-32	38372	BEARING BALL	4				
7-33	2720312	SPRING-COMP IDLER PLT	1				
7-34	33103	SWIVEL	4				
7-35	4122108	ROD-TRCTN CNTRL, HYDRO	2				
7-36	31032	LEVER TRACTION CNTRL	2				
7-37	38009N	GRIP TRACTION CNTRL	2				
7-38	64163-31	WASH 25/64X1X12 GA	4				
7-39	64188-44	PIN-CLEVIS 3/16 X 2.25	2				
7-40	64141-6	NUT-WLF 5/16-18	6				

Hydro Midsize



FIGURE 8

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
8-1	64229-02	LOCKNUT-NYLON 5/16-18	2				
8-2	64163-29	WASHER	2				
8-3	128035	COVER-BATTERY	1				
8-4	4131068.2	DECK-ENGINE HYDRO	1				
8-5	64123-54	BOLT, 5/16-18X3/4 HEX	2				
8-6	112386	BOOT-BATTERY TERM POS	1				
8-7	108055	BATTERY	1				
8-8	108061-16	CABLE-BTTRY 31.5 BLACK	1				
8-9	64025-02	NUT-HEX 5/16-18	2				
8-10	4113741	S-TRAY, BATTERY	1				
8-11	2722227-03	CABLE-BTTRY W/CONDUIT	1				
8-12	2722202.7	SUPPORT-BATT TRAY	2				
8-13	64197-016	BLT-TDFM 3/8-16X1/2	8				
8-14	123026	ROD,BATTERY HLD DWN	1				
8-15	38665	SOLENOID	1				
8-16	64152-23	1/4-20X3/8 LG SP SCREW	2				
8-17	108061-15	CABLE-BATTERY 6.5 RED	1				
8-18	64141-2	NUT-WLF 1/4-20	1				
8-19	2308095	COVER, TERMINAL	3				

FIGURE 9

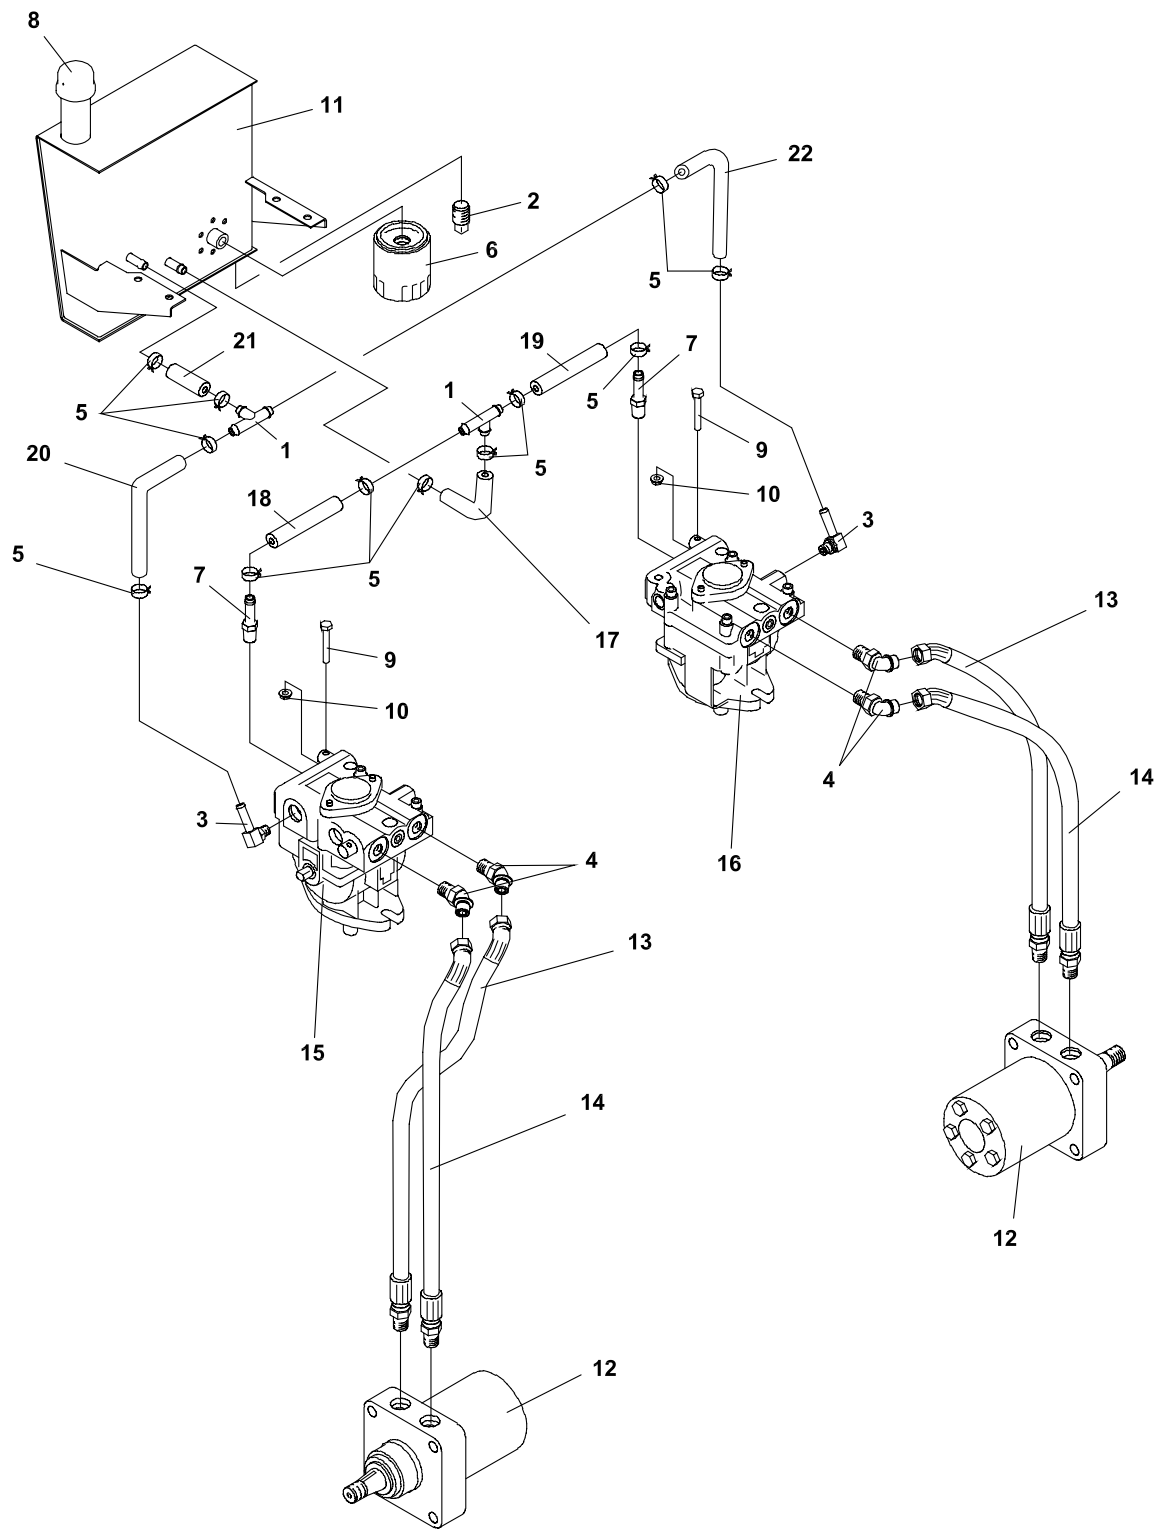


FIGURE 9

ITEM	PART NO.	DESCRIPTION	QTY
9-1	58026-01	3-WAY CONNECTOR	2
9-2	108029	PLUG, MAGNETIC	1
9-3	158058-04	FITTING-90 BARB, ADJ.	2
9-4	108205-02	ELBW-MALE 45 8X8 37-ORB	4
9-5	88042-04	CLAMP-HOSE 5/8"	12
9-6	2720396	FLTR, 25 MCRN SM CAM	1
9-7	69060-01	FTG-BARB 9/16 X 3/8 ST	2
9-8	69216.7	CAP-RESERVOIR	1
9-9	64123-60	BOLT, 1/4-20X2 HEX	2
9-10	64229-01	LOCKNUT-NYLON 1/4-20	2
9-11	2306127	S HYD RESER W/LABS	1
9-12	2308051	MOTOR WHEEL ROSS	2
9-13	2692300-01	HOSE-1/2 37/ORB X 18.5 LG	2
9-14	2692300-02	HOSE-1/2 37/ORB X 20.5 LG	2
9-15	4163317	PUMP-HYDRO RH (SEE FIG 16 FOR PARTS BREAKDOWN)	1
9-16	4163316	PUMP-HYDRO LH (SEE FIG 16 FOR PARTS BREAKDOWN)	1
(69053-05 IS A SERVICEABLE LENGTH OF 55")			
9-17	69053-05	3/8 HI TEMP HOSE 17.0"	1
9-18	69053-05	3/8 HI TEMP HOSE 5.0"	1
9-19	69053-05	3/8 HI TEMP HOSE 5.0"	1
9-20	69053-05	3/8 HI TEMP HOSE 7.5"	1
9-21	69053-05	3/8 HI TEMP HOSE 6.8"	1
9-22	69053-05	3/8 HI TEMP HOSE 12.0"	1

SERVICEABLE HYDRAULIC O-RINGS

SAE PORT 'O' RING		
PART NUMBER	THREAD SIZE	AS-568#
158061-10	9/16-18	-906
158061-11	3/4-16	-908
158061-12	7/8-14	-910
158061-13	1-1/16-12	-912
158061-14	1-5/16-12	-916
158061-16	1-5/8-12	-920
158061-03	1-7/8-12	-924

NOTE:
DO NOT use teflon tape on any hydraulic fittings.
 Use a liquid pipe sealant.

FIGURE 10

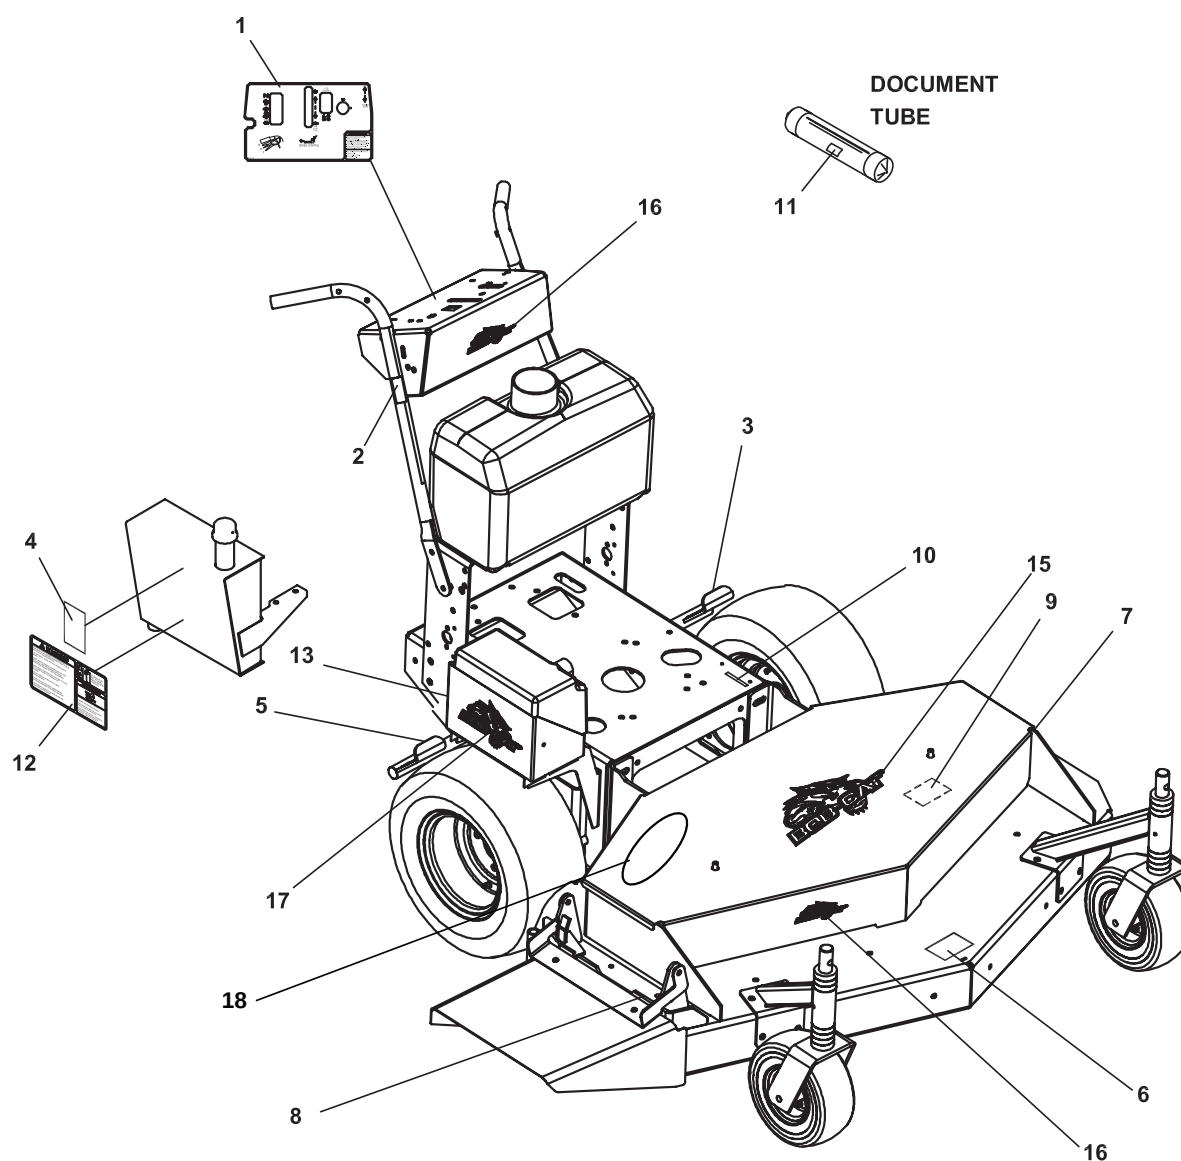


FIGURE 10

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
10-1	4122168	LABEL-CONTROL PNL HYD	1				
10-2	2000672	LABEL-PARKING BRAKE	1				
10-3	2000570	LABEL-WARN FUEL PICT	1				
10-4	340830	LABEL-CAUTION SPANISH	1				
10-5	2000571	LABEL-IMPORTANT	1				
10-6	4116761	LABEL-MADE IN USA	1				
10-7	2000572	LABEL-WARNING BLADES	1				
10-8	2000677	LABEL-DANGER/WARNING	1				
10-9	2000678	LABEL-ROT PRTS/B-WSHR	1				
		(LOCATED UNDER BELT COVER)					
10-10	2000704	LABEL-MIDSIZE PATENT	1				
10-11	2000673	LABEL - OP MAN/TIRES	1				
10-12	2000661	LABEL-HYD TANK WARN	1				
10-13	2000590	LABEL-WARNING BATTERY	1				
10-14*	4110260	LABEL-TRACKING CNTRL	1				
10-15	4158401	LABEL-BOBCAT, LARGE	1				
10-16	4158402	LABEL-BOBCAT, SMALL	2				
10-17	4158400	LABEL-BOBCAT, MEDIUM	1				
10/18	4163037	LABEL-DURADECK	1				

* NOT ILLUSTRATED

WIRE DIAGRAM-RECOIL START

Hydro
Midsized

FIGURE 11

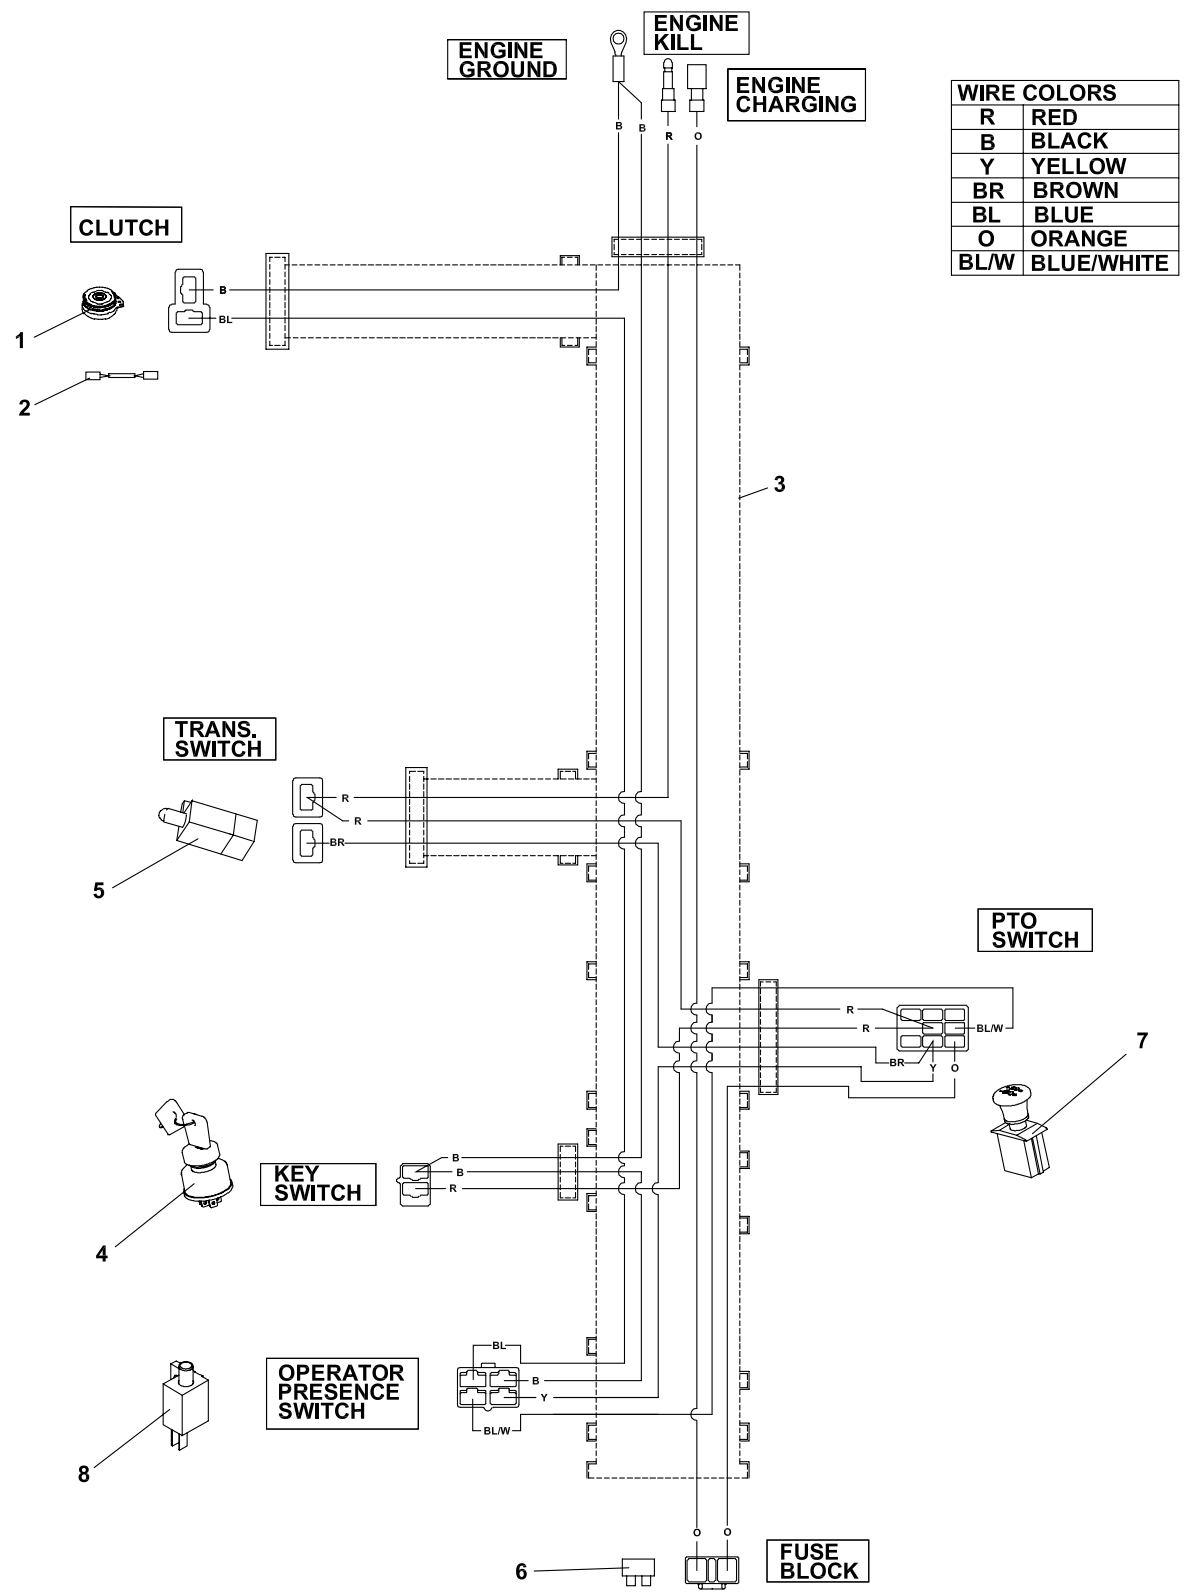


FIGURE 11

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
11-1	2721110	CLUTCH-ELECTRIC (INCLUDES ITEM 2)	1				
11-2	2720949	ASSY-CLUTCH WIRE	1				
11-3	4131438	HARNESS-MIDSIZE (INCLUDES ITEM 6)	1				
11-4	38148	SWITCH-ENGINE STOP	1				
11-5	38383	SWITCH-N.C.	1				
11-6	148082-10	FUSE 10 AMP	1				
11-7	2721505	SWITCH-PTO	1				
11-8	108208	SWITCH	1				

WIRE DIAGRAM-ELECTRIC START

Hydro
Midsized

FIGURE 12

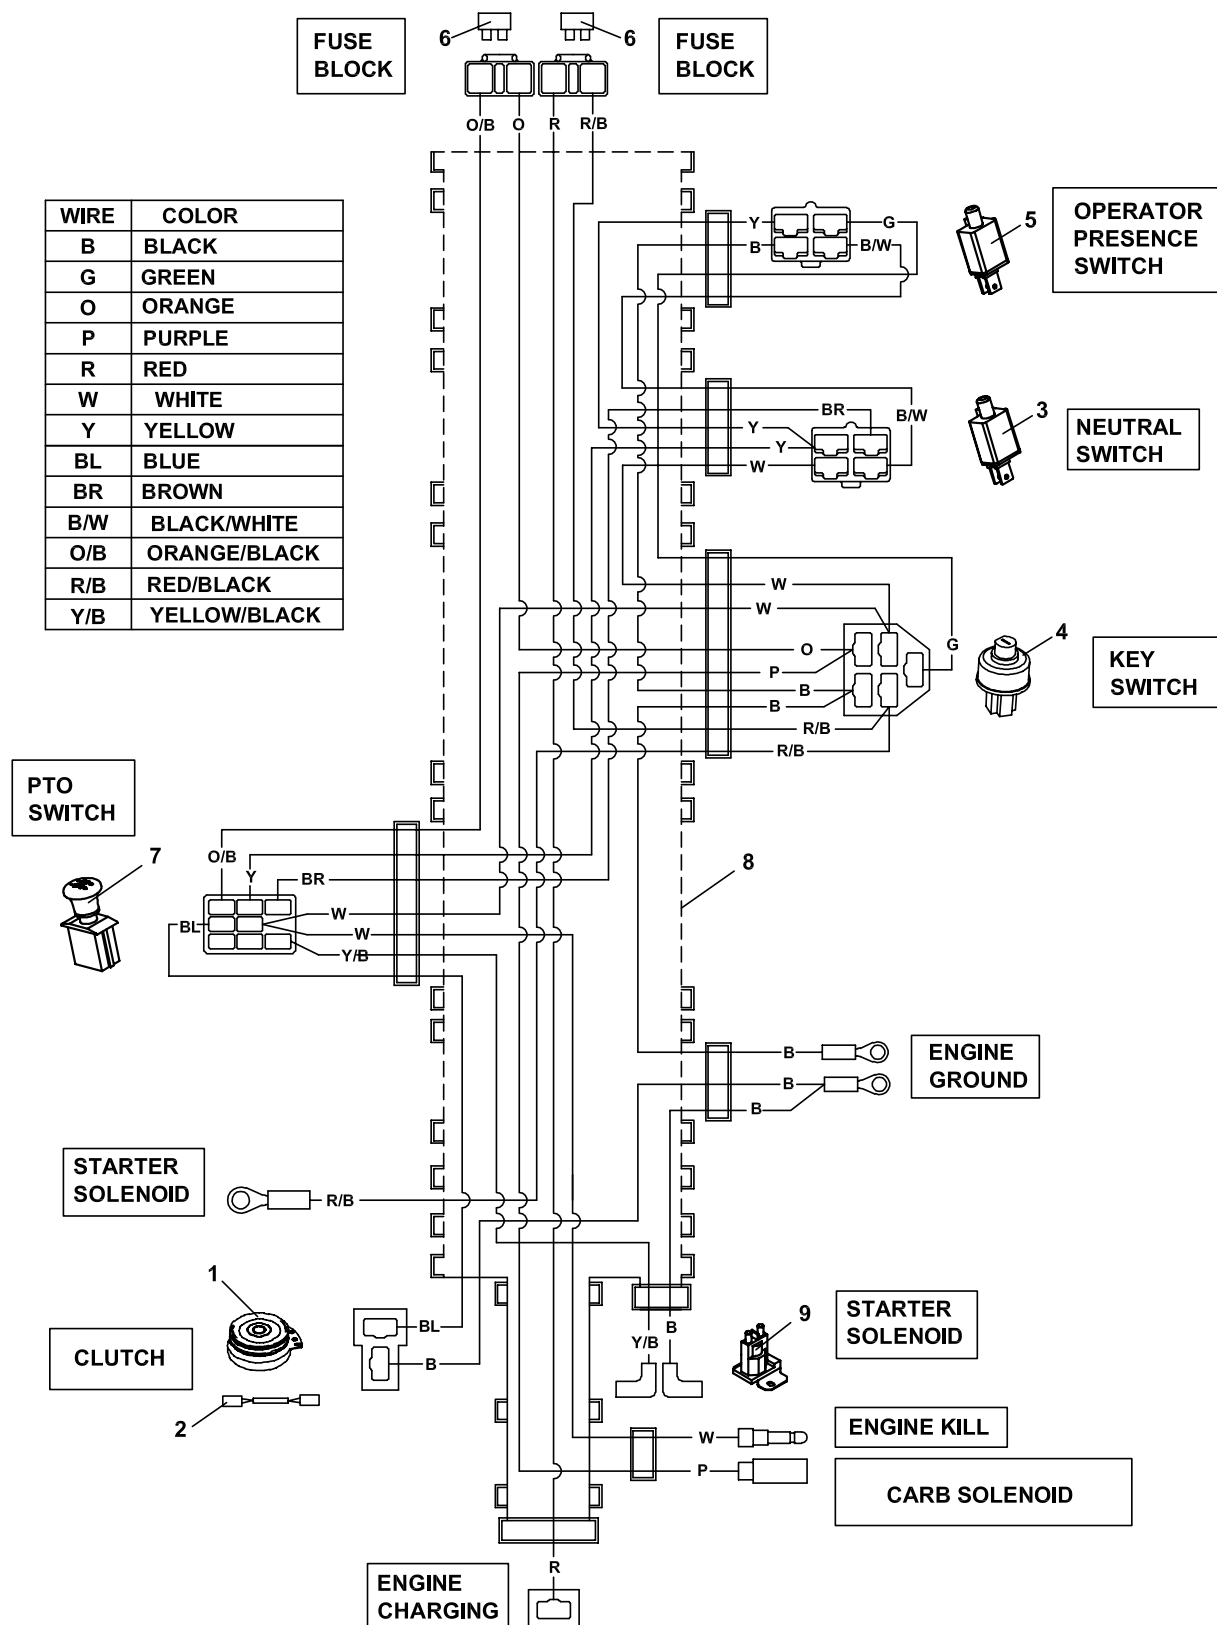


FIGURE 12

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
12-1	2721110	CLUTCH-ELECTRIC (INCLUDES ITEM 2)	1				
12-2	2720949	ASSY-CLUTCH WIRE	1				
12-3	108208	SWITCH DBL POLE	1				
12-4	128010	KEY SWITCH	1				
12-5	2308094	SWITCH-NCNC DBL POLE	1				
12-6	148082-20	FUSE 20 AMP	2				
12-7	2721505	SWITCH-PTO	1				
12-8	4128561	HARNESS-HYDRO MAIN (INCLUDES QTY OF 2 OF ITEM 6)	1				
12-9	38665	SOLENOID-STARTER	1				
12-10*108061-15		CABLE-BATTERY 6.5 RED (FROM STARTER SOLENOID TO STARTER)	1				
12-11*2722227-03		CABLE-BTTRY W/CONDUIT (FROM (+) POSITIVE BATTERY TERMINAL TO STARTER SOLENOID)	1				
12-12*108061-16		CABLE-BTTRY 31.5 BLACK (FROM (-) NEGATIVE BATTERY TERMINAL TO ENGINE BLOCK)	1				

*** NOT ILLUSTRATED**


WIRING SCHEMATIC-RECOIL START

Hydro
Midsized

FIGURE 13

REF. 4115548

WIRE	COLOR
R	RED
B	BLACK
Y	YELLOW
BR	BROWN
BL	BLUE
O	ORANGE
BLW	BLUE W/WHITE STRIPE

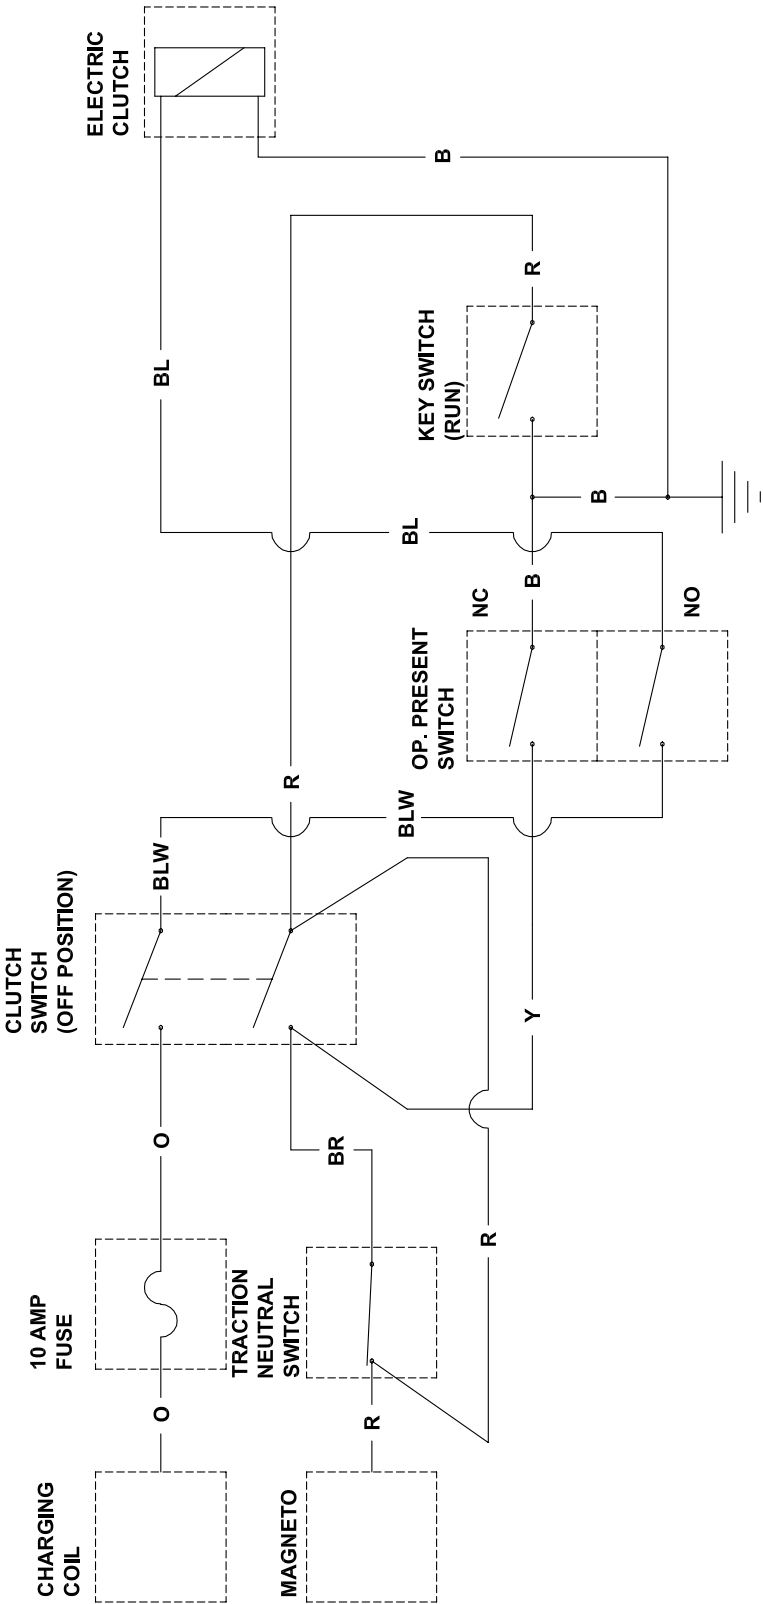

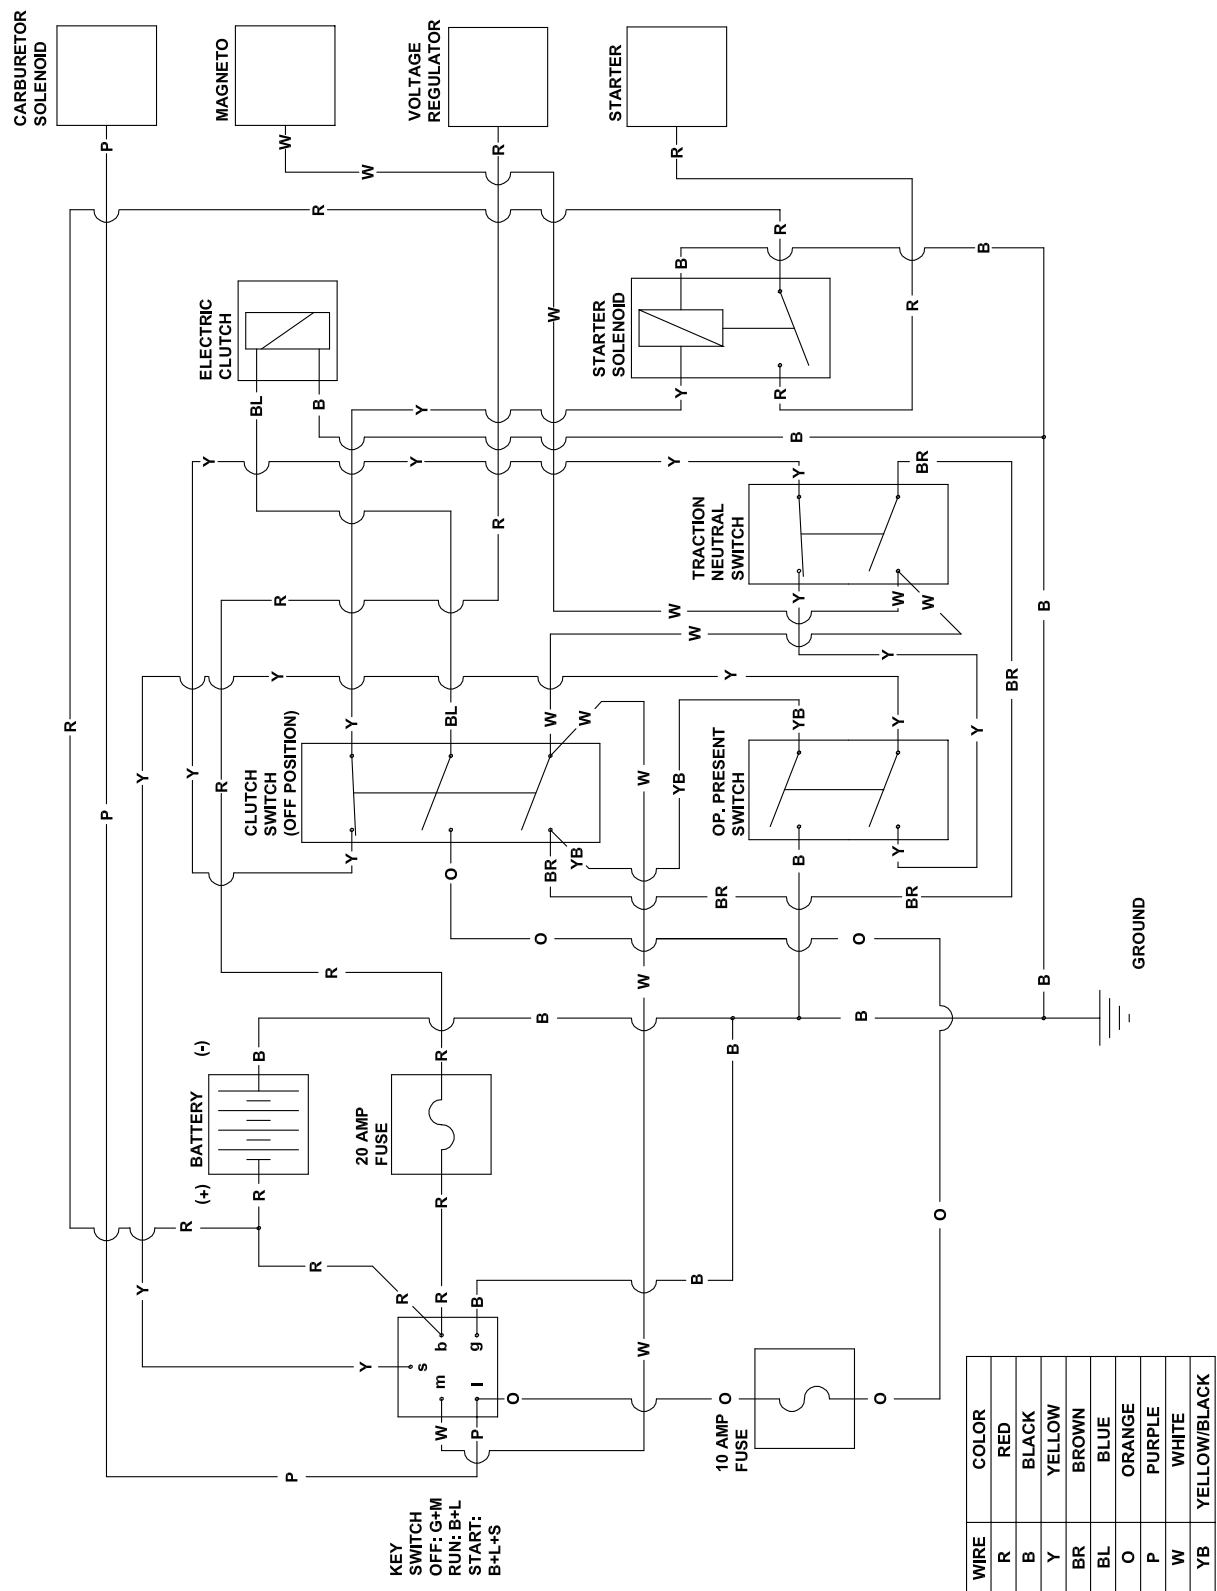


FIGURE 15


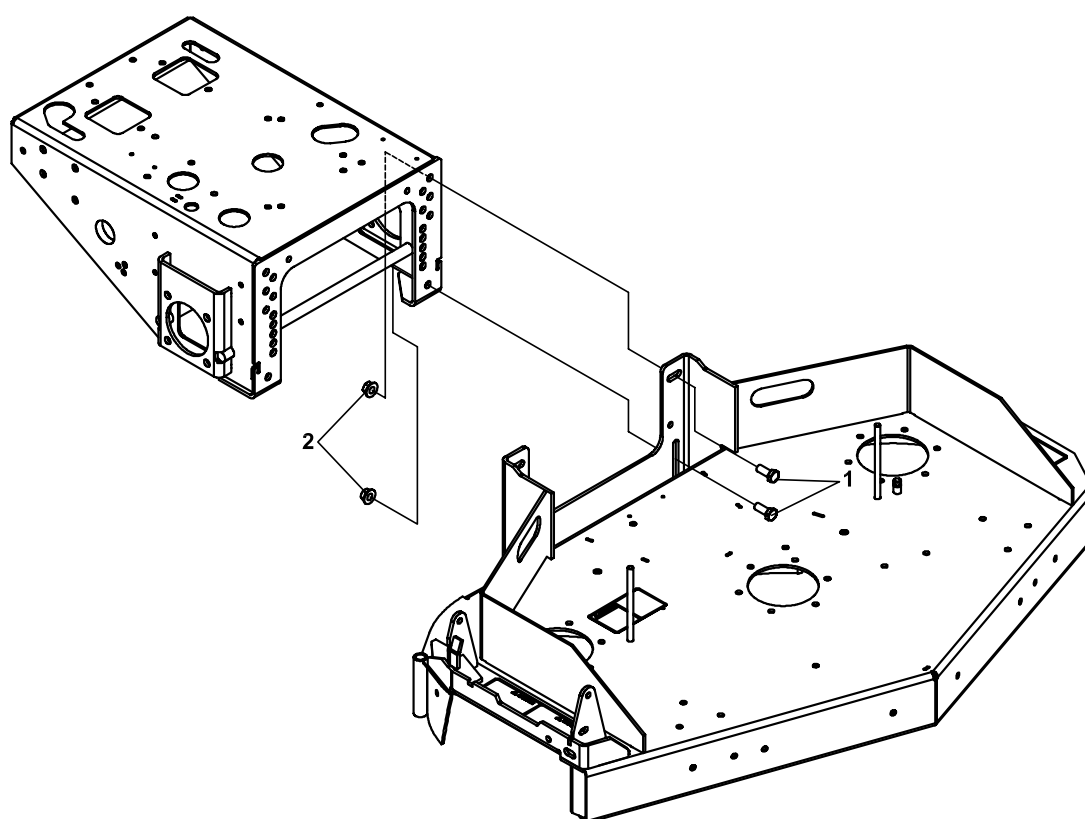


FIGURE 15

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
15-1	64263-018	BLT-FLG HD M12-1.75 X 30	4				
15-2	64246-04	NUT-WHIZ M12-1.75	4				

FIGURE 16

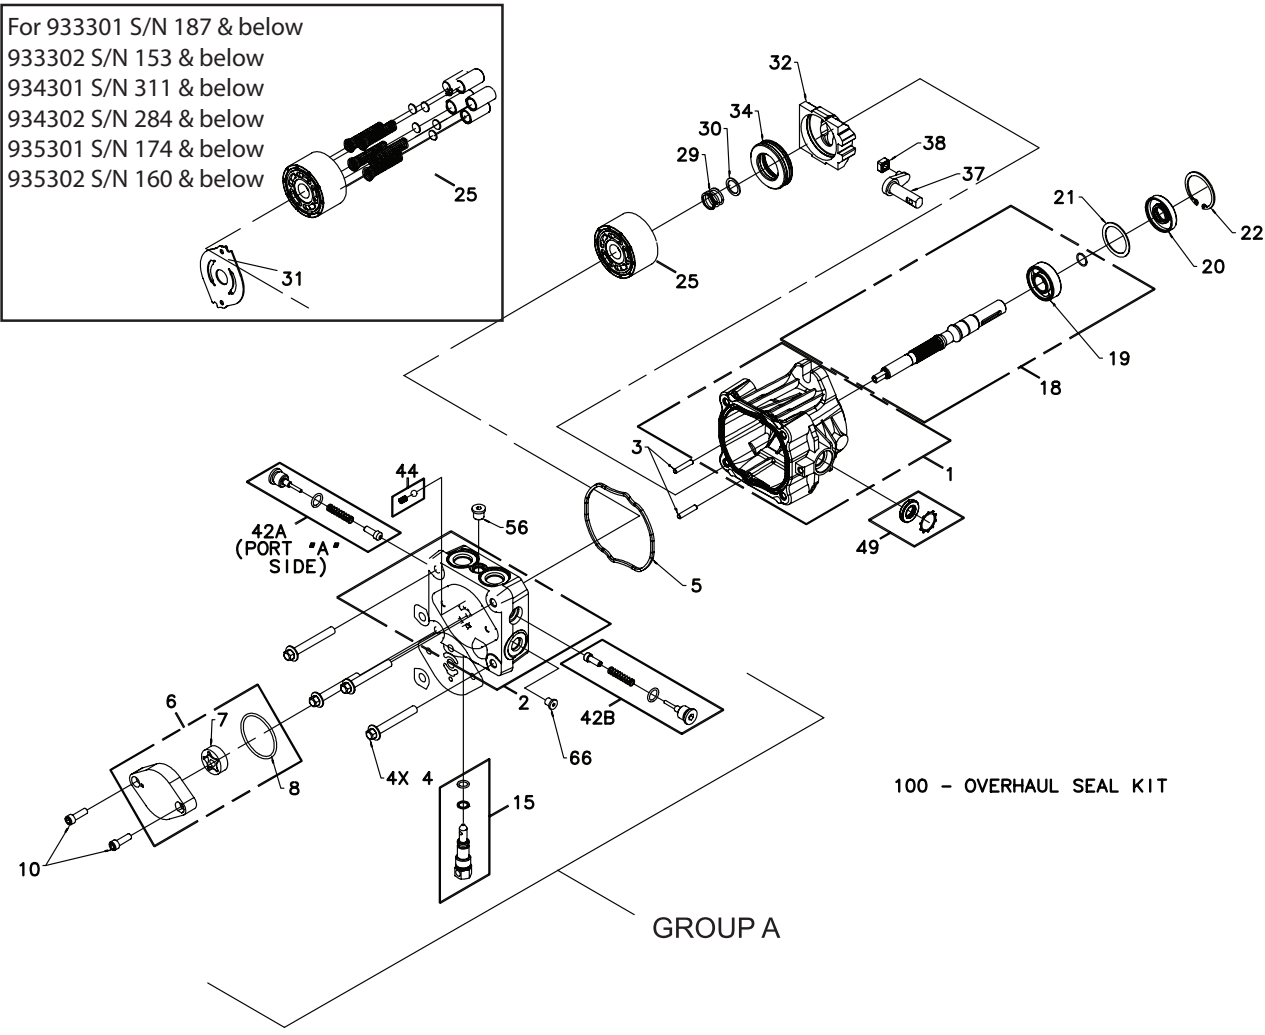

4112782 & 4163317 PUMP-HYDRO RH ILLUSTRATED AS SHOWN

2721615 & 4163316 PUMP-HYDRO LH ILLUSTRATED AS SHOWN EXCEPT GROUP A IS ROTATED 180° AROUND THE CENTERLINE OF THE PUMP.

ITEM	HYDROGEAR PART NO.	PART NO.	DESCRIPTION	QTY
12-1	70516	-----	HOUSING KIT	1
12-2	*70517	-----	END CAP KIT	1
	^71615	----	END CAP KIT	1
12-3	50641	-----	STRAIGHT HEADLESS PIN	2
12-4	50969	2721615-01	FLANGE BOLT M8-1.25 X 60	4
12-5	*51232	2721615-02	HOUSING O-RING	1
	^52629	4163316-01	HOUSING O-RING	1
12-6	2513027	2721615-03	CHARGE PUMP KIT (STD)	1
12-7	50273	2721615-04	STD GEROTOR ASSEMBLY	1
12-8	9004101-1340	2721615-05	O-RING	1
12-10	*50095	2721615-06	SOCKET HEAD M6-1.0 X 20	2
	^50975	4163316-02	SOCKET HEAD M6-1/0 X 20	2
12-15	2513030	-----	BYPASS VALVE KIT (BLANK)	1
12-18	70521	2721615-07	PUMP SHAFT KIT	1
12-19	50315	-----	BALL BEARING 17 X 40 X 12	1
12-20	51161	-----	LIP SEAL 17 x 40 x 12	1
12-21	50951	-----	SPACER	1
12-22	50329	-----	RETAINING RING	1
12-25	*70331	38345-12	CYLINDER BLOCK KIT	1
	^70723	4163316-03	CYLINDER BLOCK KIT	1
12-29	2003014	-----	BLOCK SPRING	1
12-30	2003017	-----	BLOCK THRUST WASHER	1
12-31	51246	2721615-09	VALVE PLATE	1
12-32	2003087	2721615-10	SWASHPLATE	1
12-34	50551	2721615-11	BALL THRUST BEARING	1
12-37	2003005	2721615-12	TRUNNION ARM	1
12-38	2000015	2721615-13	SLOT GUIDE	1
12-42A	2510027	2721615-14	CHECK VALVE KIT (.031")	1
12-42B	2510050	2721615-15	CHECK VALVE KIT (BLANK)	1
12-44	*70403	2721615-16	CHARGE RELIEF VALVE KIT	1
	^70402	4163316-04	CHARGE RELIEF VALVE KIT	1
12-49	2513043	2721615-17	TRUNNION SEAL/RETAINER KIT	1
12-56	9005110-4400	-----	STRAIGHT THREAD PLUG	1
12-66	9005110-3100	-----	5/16 SAE PLUG	1
12-100	70525	2721615-18	OVERHAUL SEAL KIT	1

* Use for :

933301 S/N 185 & below
 933302 S/N 153 & below
 934301 S/N 311 & below
 934302 S/N 282 & below
 935301 S/N 174 & below
 935302 S/N 160 & below

^ Use for :

933301 S/N 186 & above
 933302 S/N 154 & above
 934301 S/N 312 & above
 934302 S/N 283 & above
 935301 S/N 175 & above
 935302 S/N 161 & above

FIGURE 17

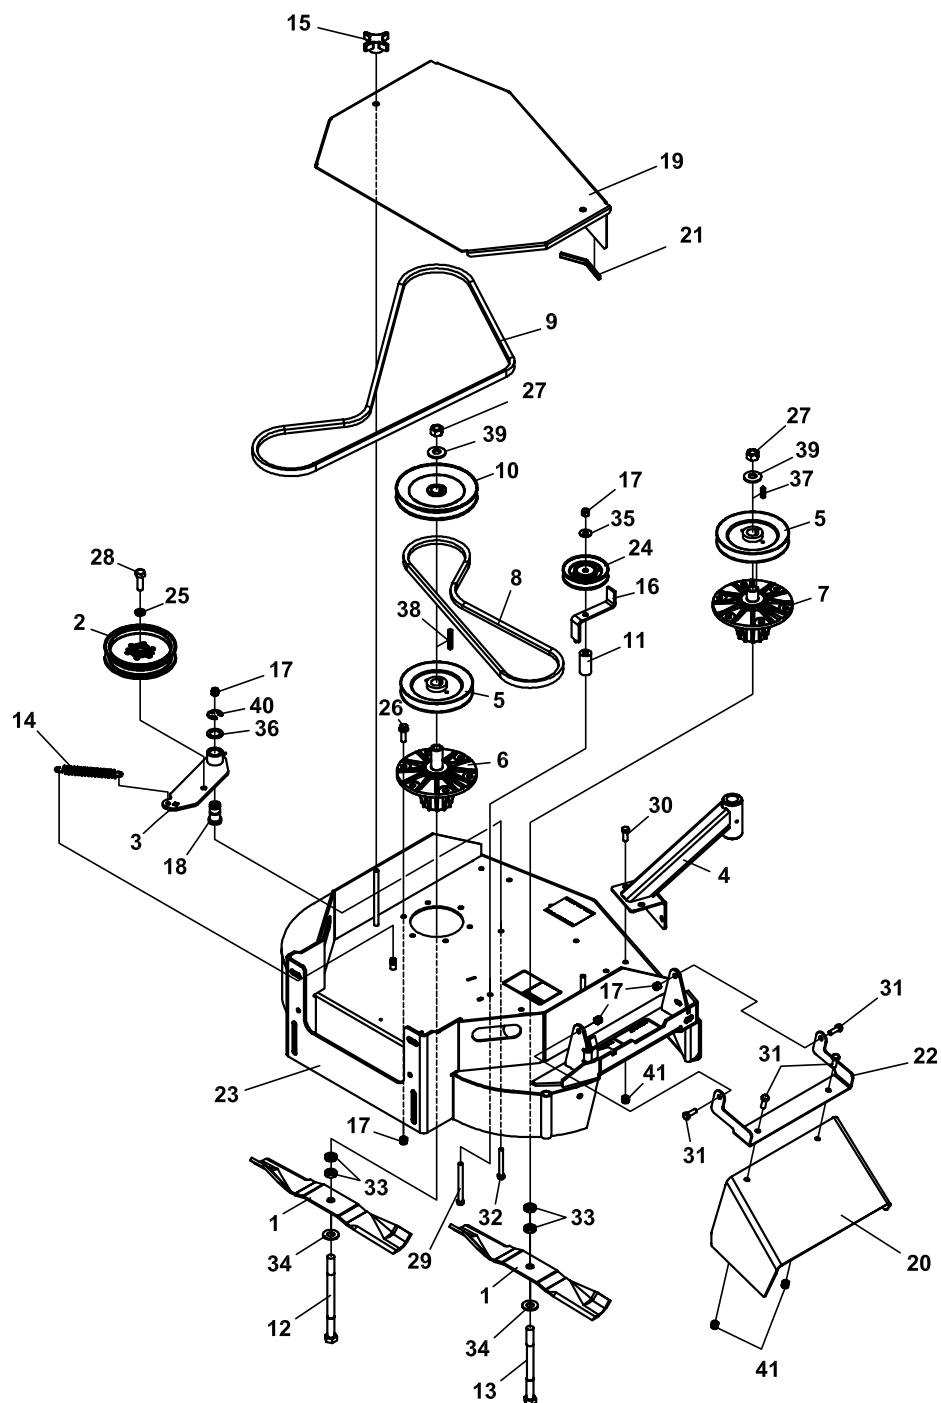


FIGURE 17

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
17-1	112111-02	BLADE 18.00 OFFST HLFT	2				
17-2	128169	PULLEY, IDLER 5.50	1				
17-3	4163871.7	WLDMT-DECK IDLER	1				
17-4	4124108	S CASTER SUPPORT	2				
17-5	2308140	PULLEY-ENGINE	2				
17-6	2721097	S-ASSY SPINDLE 6 LONG	1				
17-7	2721323	S-ASSY SPINDLE 6 SHORT	1				
17-8	2721477	BELT-HB 56.75	1				
17-9	2721478	BELT-HB 85.25	1				
17-10	2721479	PULLEY-6.75	1				
17-11	2721485	SPACER-IDLER	1				
17-12	64123-77	BLT-HEX 5/8-18X8 1/2	1				
17-13	64123-265	BLT-HEX HD 5/18-18X7 1/2	1				
17-14	38219	SPRING-TENSION	1				
17-15	38524	KNOB-4 PRONG 3/8-16	2				
17-16	4115420.7	GUIDE-BELT	1				
17-17	64229-03	LOCKNUT-NYLON 3/8-16	16				
17-18	4116661	PIN-PIVOT	1				
17-19	4119064.2	COVER-BELT, 36 FIXED	1				
17-20	4131477.2	CHUTE-DECK, 32-54 SD	1				
17-21	108074-13	FLEX TRIM 44.38	1				
17-22	4120257.2	BRKT-CHUTE SUPPORT	1				
17-23	4121969	S-36SDFIXED DK W/ LABS	1				
17-24	4135265	PULLEY-V IDLER	1				
17-25	64006-05	LOCKWSHR-HELICAL 1/2	1				
17-26	64262-012	BLT-FLG HD 3/8-16 X 1-1/4	12				
17-27	64025-16	NUT-HEX 5/8-18	2				
17-28	64123-05	BLT-HEX 1/2-20X1-1/2	1				
17-29	64123-139	BOLT-3/8-16X4 HEX	1				
17-30	64262-010	BLT-FLG HD 3/8-16 X 3/4	8				
17-31	64123-50	BOLT-HEX 3/8-16X1	4				
17-32	64123-88	BOLT, 3/8-16X2-3/4 HEX	1				
17-33	64163-12	.635/.640X1.0X.25 WASH	4				
17-34	64163-16	WSHR-41/64X1-3/8X12GA	2				
17-35	64163-31	WASHER, 25/64X1X12	1				
17-36	64163-65	WASHER-.890X1.375X18GA	1				
17-37	64164-12	KEY-1/4X1/4X1 SQ END	1				
17-38	64164-13	1/4X1/4X2 SQ KEY	1				
17-39	64209-03	SPRING WASHER.67 ID	2				
17-40	64221-04	E-RING.875	1				
17-41	64141-4	NUT-WLF 3/8-16	10				

FIGURE 18

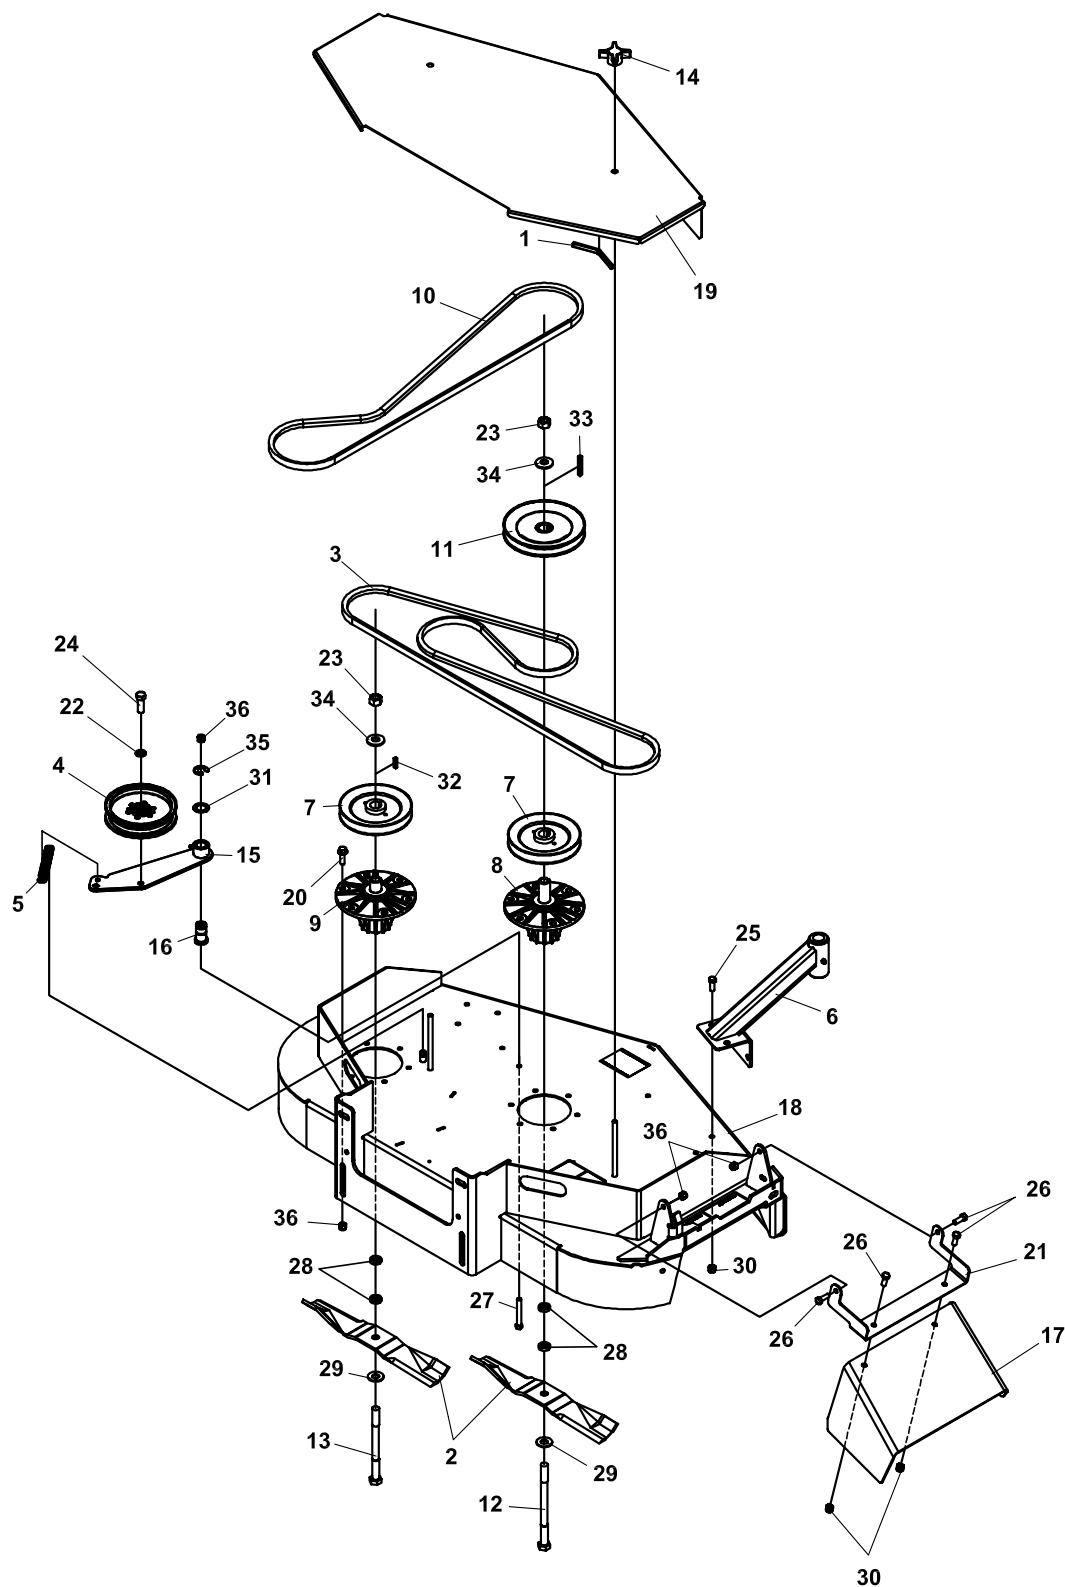


FIGURE 18

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
18-1	108074-09	S CHANNEL-FLEX TRIM 7.121	1				
18-2	112111-01	BLADE 16.25 OFFST HLFT	3				
18-3	128110	BELT-CUTTERDECK	1				
18-4	128169	PULLEY, IDLER 5.50	1				
18-5	2188131	SPRING-EXTENSION	1				
18-6	4124108	S CASTER SUPPORT	2				
18-7	2308140	PULLEY-ENGINE	3				
18-8	2721097	S-ASSY SPINDLE 6 LONG	1				
18-9	2721323	S-ASSY SPINDLE 6 SHORT	2				
18-10	2722160	BELT-HB 73.00	1				
18-11	2722161	PULLEY-6.75 EOD	1				
18-12	64123-77	BLT-HEX 5/8-18X8 1/2	1				
18-13	64123-265	BLT-HEX HD 5/18-18X7 1/2	2				
18-14	38524	KNOB-4 PRONG 3/8-16	2				
18-15	4110580.7	WLDMT-IDLER	1				
18-16	4116661	PIN-PIVOT	1				
18-17	4131477.2	CHUTE-DECK, 32-54 SD	1				
18-18	4119381	S 48 SD FIXED DK W/LABS	1				
18-19	4119515.2	COVER-BELT FIXED 48	1				
18-20	64262-012	BLT-FLG HD 3/8-16 X 1-1/4	18				
18-21	4120257.2	BRKT-CHUTE SUPPORT	1				
18-22	64006-05	LOCKWSHR-HELICAL 1/2	1				
18-23	64025-16	NUT-HEX 5/8-18	3				
18-24	64123-05	BLT-HEX 1/2-20X1-1/2	1				
18-25	64262-010	BLT-FLG HD 3/8-16 X 3/4	8				
18-26	64123-50	BOLT-HEX 3/8-16X1	4				
18-27	64123-88	BOLT, 3/8-16X2-3/4 HEX	1				
18-28	64163-12	.635/.640X1.0X.25 WASH	6				
18-29	64163-16	WASHR-41/64X1, 3/8X12GA	3				
18-30	64141-4	NUT-WLF 3/8-16	10				
18-31	64163-65	WASHER-.890X1.375X18GA	1				
18-32	64164-12	KEY-1/4X1/4X1 SQ END	2				
18-33	64164-13	1/4X1/4X2 SQ KEY	1				
18-34	64209-03	SPRING WASHER.67 ID	3				
18-35	64221-04	E-RING.875	1				
18-36	64229-03	LOCKNUT-NYLON 3/8-16	21				

FIGURE 19


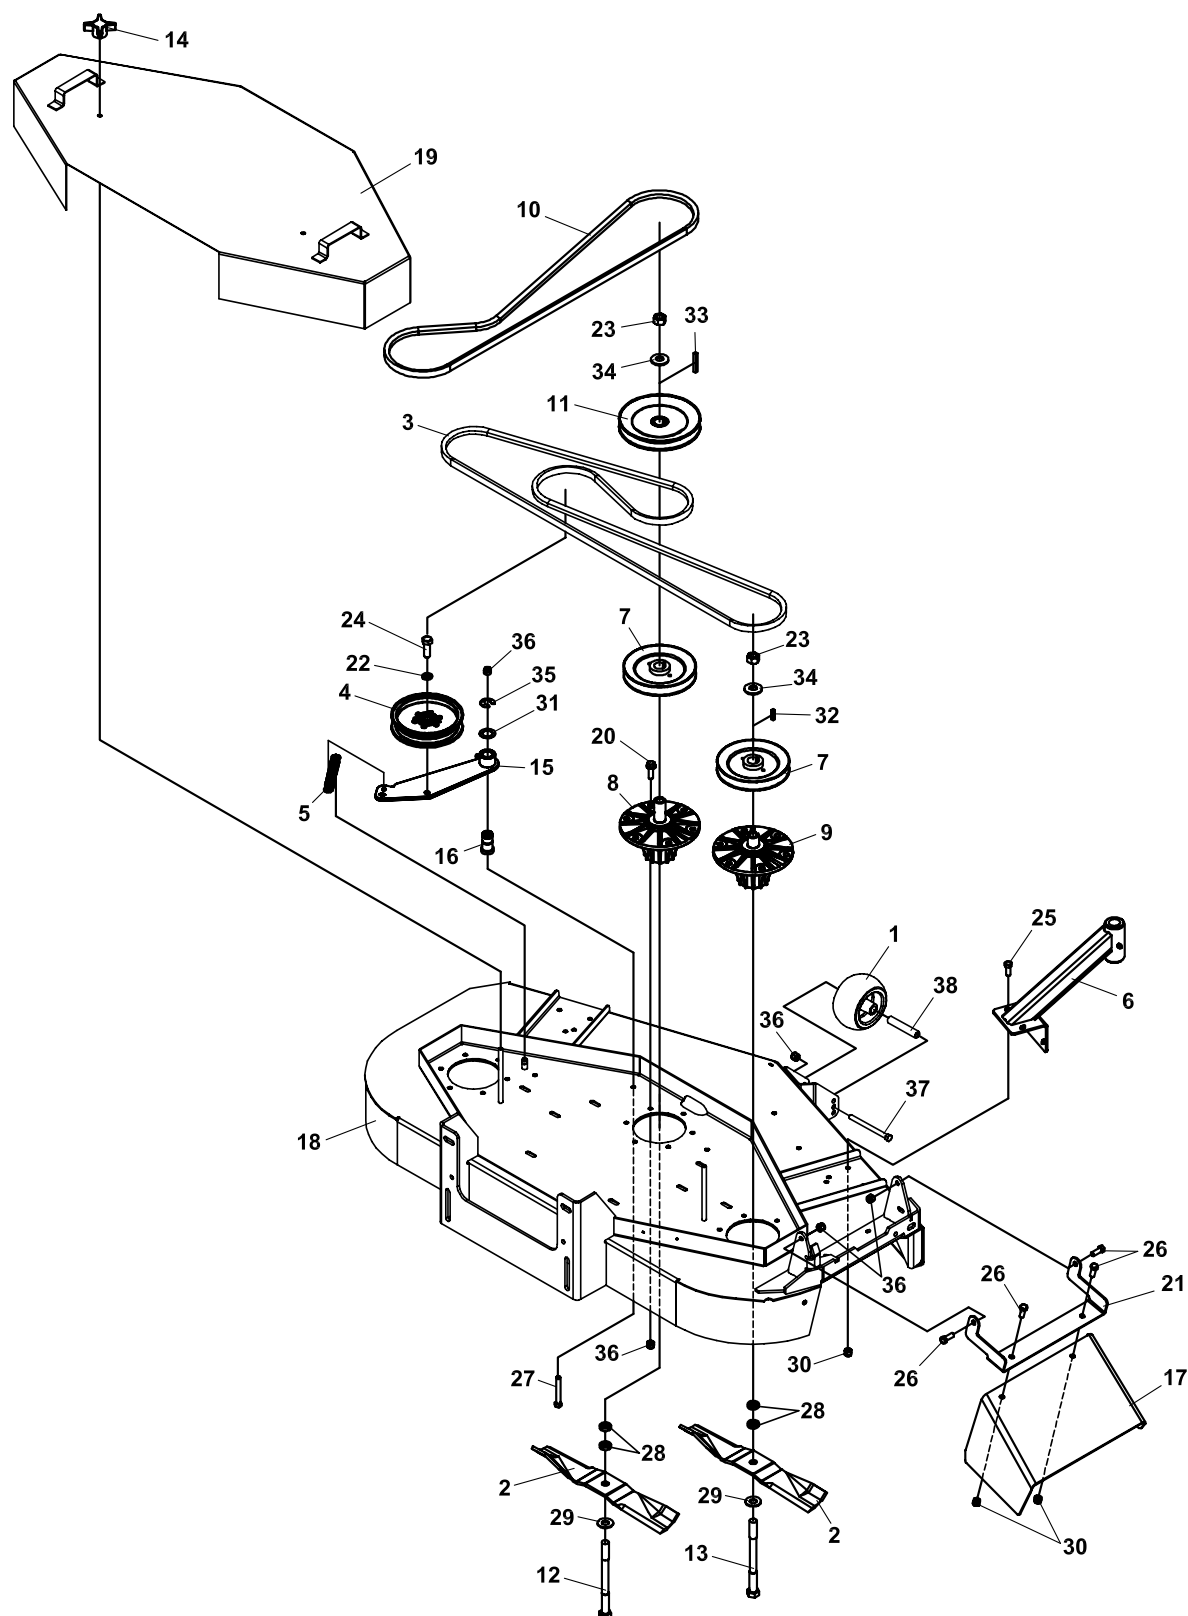


FIGURE 19

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
19-1	2721512	ROLLER-5X2.75 CENTERED	1				
19-2	112111-02	BLADE 18.00 OFFST HLFT	3				
19-3	2188176	BELT-CUTTERDECK 54	1				
19-4	128169	PULLEY, IDLER 5.50	1				
19-5	2188131	SPRING-EXTENSION	1				
19-6	4124108	S-CASTER SUPPORT 9 IN.	2				
19-7	2308140	PULLEY-ENGINE	3				
19-8	2721097	S-ASSY SPINDLE 6 LONG	1				
19-9	2721323	S-ASSY SPINDLE 6 SHORT	2				
19-10	2722570	BELT-HB 75.75	1				
19-11	2722161	PULLEY-6.75 EOD	1				
19-12	64123-77	BLT-HEX 5/8-18X8 1/2	1				
19-13	64123-265	BLT-HEX HD 5/18-18X7 1/2	1				
19-14	38524	KNOB-4 PRONG 3/8-16	2				
19-15	4110580.7	WLDMT-IDLER	1				
19-16	4116661	PIN-PIVOT	1				
19-17	4131477.2	CHUTE-DECK, 32-54 SD	1				
19-18	4128849	S 54 SD CUT DECK W/ LABS	1				
19-19	4129134.2	WLDMT-COVER BELT 54	1				
19-20	64262-012	BLT-FLG HD 3/8-16 X 1-1/4	18				
19-21	4120257.2	BRKT-CHUTE SUPPORT	1				
19-22	64006-05	LOCKWSHR-HELICAL 1/2	1				
19-23	64025-16	NUT-HEX 5/8-18	3				
19-24	64123-05	BLT-HEX 1/2-20X1-1/2	1				
19-25	64262-011	BLT-FLG HD 3/8-16 X 1	8				
19-26	64123-50	BOLT-HEX 3/8-16X1	4				
19-27	64123-88	BOLT, 3/8-16X2-3/4 HEX	1				
19-28	64163-12	.635/.640X1.0X.25 WASH	6				
19-29	64163-16	WASHR-41/64X1, 3/8X12GA	3				
19-30	64141-4	NUT-WLF 3/8-16	10				
19-31	64163-65	WASHER-.890X1.375X18GA	1				
19-32	64164-12	KEY-1/4X1/4X1 SQ END	2				
19-33	64164-13	1/4X1/4X2 SQ KEY	1				
19-34	64209-03	SPRING WASHER.67 ID	3				
19-35	64221-04	E-RING.875	1				
19-36	64229-03	LOCKNUT-NYLON 3/8-16	22				
19-37	64123-173	BLT-HEX 3/8-16X4-1/2	1				
19-38	2720685	SPACER-ROLLER	1				

FIGURE 20

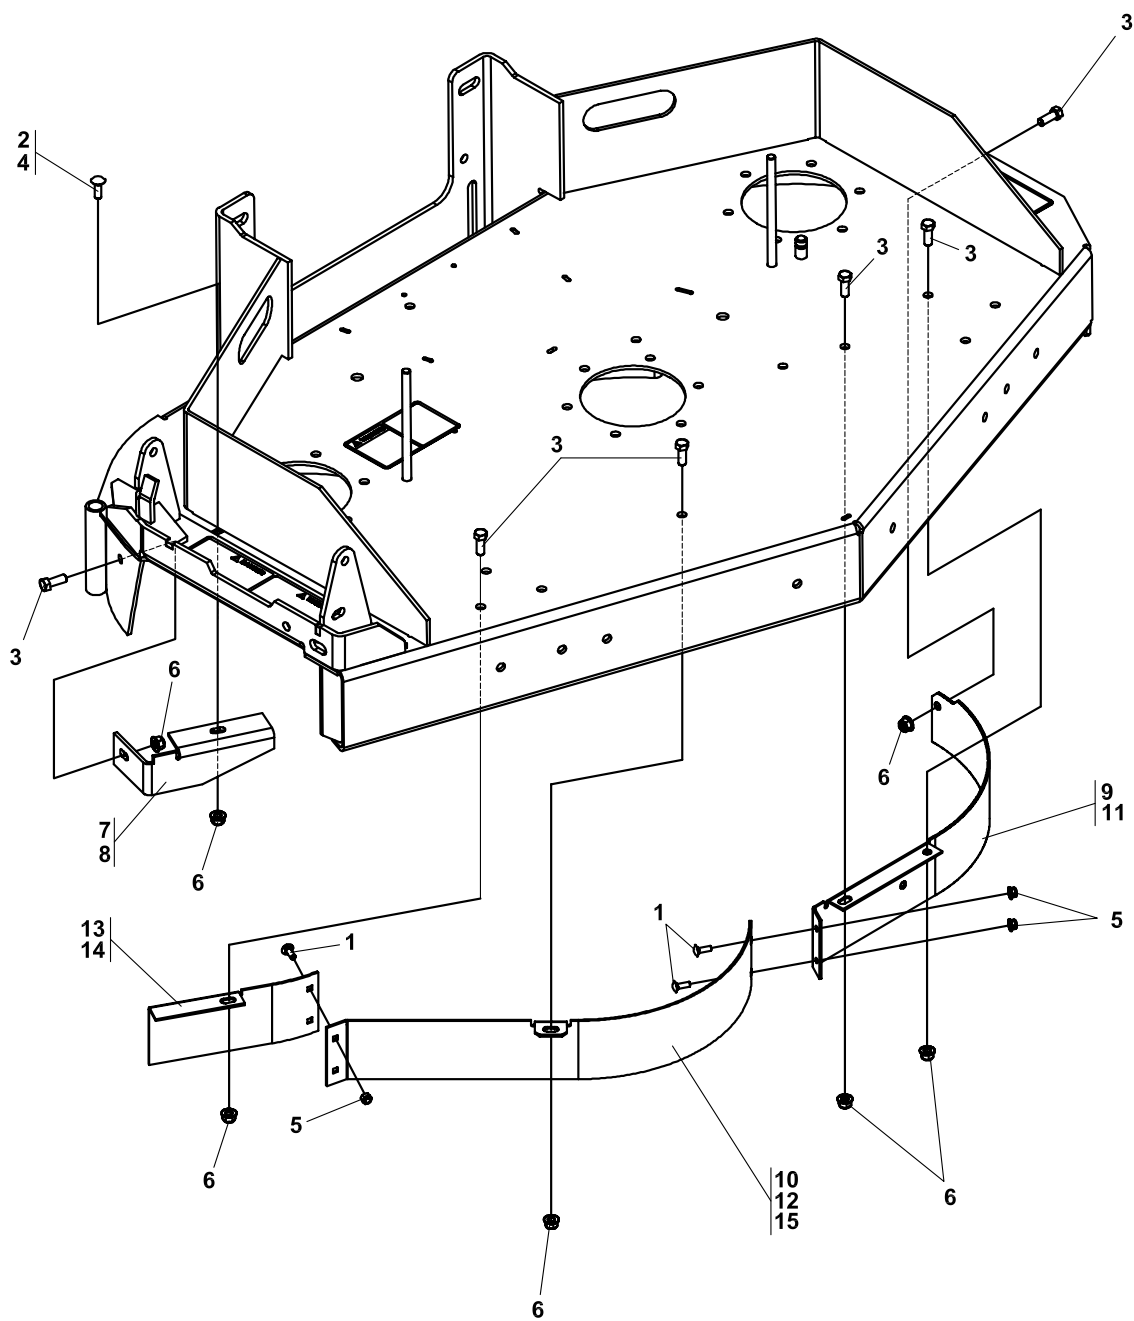

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
20-1	64018-2	BLT-CRG 1/4-20X3/4 (NOT USED ON 36" DECKS)	4				
20-2	64018-3	BLT-CRG 3/8-16X1 (NOT USED ON 48" DECKS)	1				
20-3	64123-50	BOLT-HEX 3/8-16X1					
		QTY USED ON 36" DECK	5				
		QTY USED ON 48" DECK	7				
		QTY USED ON 54" DECK	8				
20-4	64262-012	BLT-FLG HD 3/8-16 X 1-1/4 QTY USED ON 48" DECK	1				
20-5	64229-01	LOCKNUT-1/4-20 NYLON (NOT USED ON 36" DECKS)	4				
20-6	64268-03	NUT-FL NYLON LOCK 3/8-16					
		QTY USED ON 36" DECK	6				
		QTY USED ON 48" DECK	7				
		QTY USED ON 54" DECK	8				
20-7	4115864.7	BAFFLE-DISCHARGE (USED ON 36", 54" DECK)	1				
20-8	4120208.7	BAFFLE-DISCHARGE 32-48 (USED ON 48" DECKS ONLY)	1				
20-9	4120175.7	BAFFLE-48 FRONT LH (USED ON 48" DECKS ONLY)	1				
20-10	4134336.7	BAFFLE-FRONT CTR (USED ON 48" DECKS ONLY)	1				
20-11	4118427.7	BAFFLE-FRONT LH (USED ON 54" DECKS ONLY)	1				
20-12	4134338.7	BAFFLE-FRONT CTR (USED ON 54" DECKS ONLY)	1				
20-13	4134343.7	BAFFLE-RIGHT FRONT (USED ON 54" DECKS ONLY)	1				
20-14	4134342.7	BAFFLE-RIGHT FRONT (USED ON 48" DECKS ONLY)	1				
20-15	4147035.7	BAFFLE-FRONT DECK (USED ON 36" DECKS ONLY)	1				

FIGURE 21

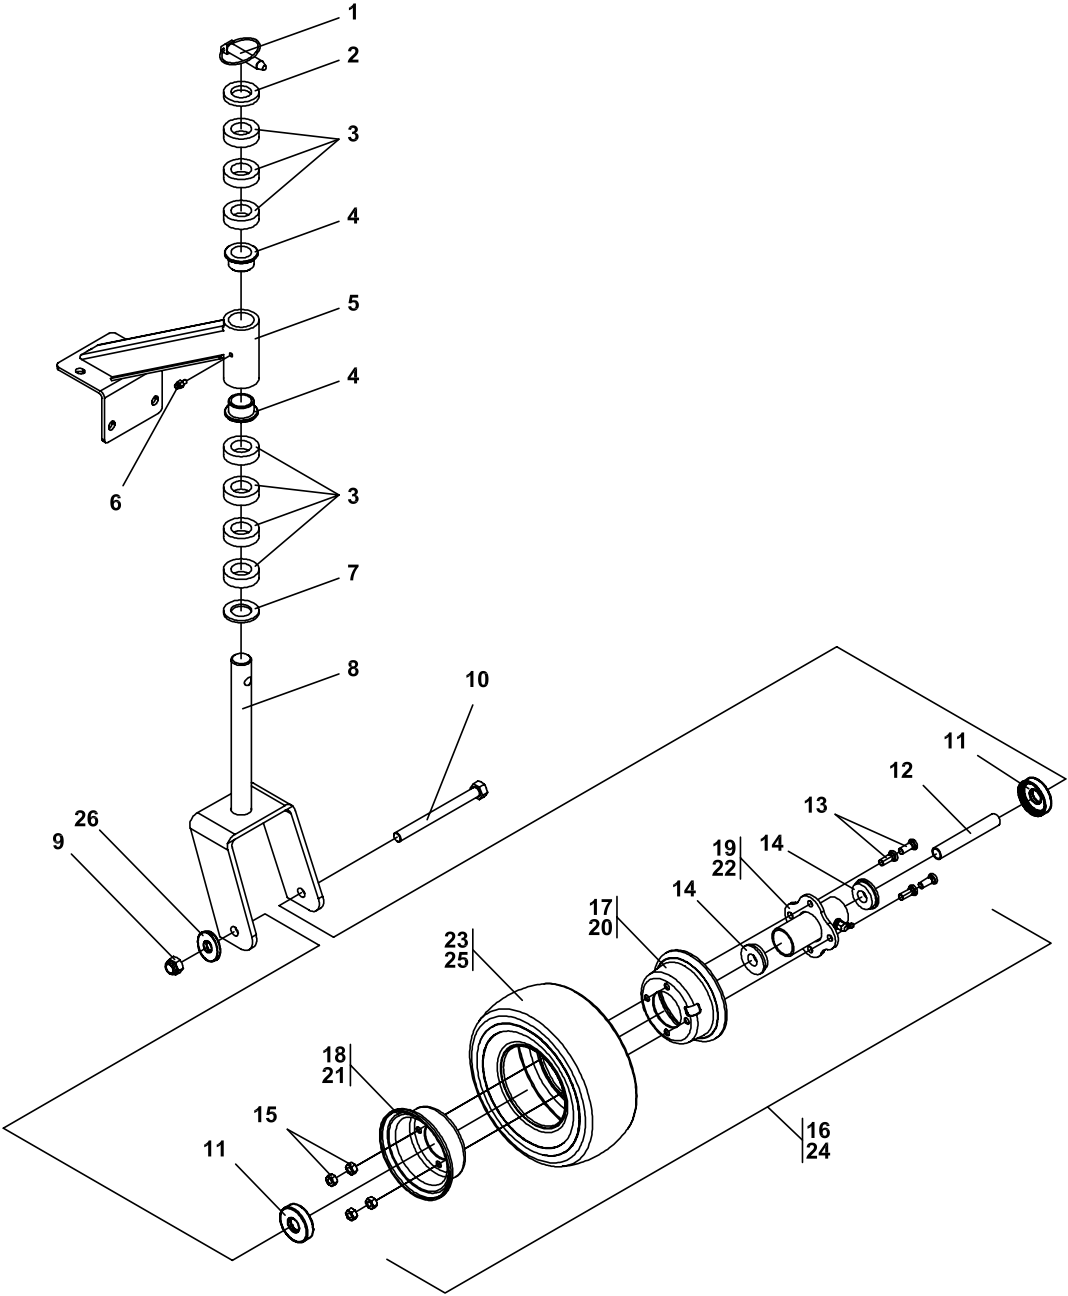


FIGURE 21

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
	4124110	ASSY-CASTER 9IN BOBCAT	2	21-23	38504	S TIRE-9x3.50-4 SMOOTH	1
	(INCLUDES ITEMS 1-3, 7-11 & 20 QTYs LISTED)			*	38505	S TUBE-9x3.50-4	1
	(NOTE 2 ASSYS REQUIRED PER MACHINE)				OPTIONAL FLAT PROOF WHEEL & TIRE		
21-1	64173-04	QUICK PIN	1	21-24	4114430	ASSY-WHEEL 9"CAREFREE	1
21-2	64163-07	1-1/32X1-3/4X1/4 WASH	1		(WITH 2.75 DIA. BOLT CIRCLE		
21-3	64163-22	1-1/32X1-3/4X1/2 WASHR	7		INCLUDES ITEMS 11-15, 17-19, 24 & 26)		
21-4	4129801	BUSHING-FLANGED	2		(WITH 2.81 DIA. BOLT CIRCLE		
21-5	4124108	S CASTER SUPPORT	1		INCLUDES ITEMS 11-15, 20-22, 24 & 26)		
	(INCLUDES ITEMS 4 & 6, QTYs LISTED)						
21-6	85010N	ZERK GREASE FITTING	1	21-25	4114430-01S-TIRE 9 CAREFREE		1
21-7	64163-84	WSHR-1.015 X 1.75 X .125	1	21-26	64251-005	WASHER	2
21-8	2721484.7	WLDMT-CASTER YOKE	1				
21-9	64229-05	LOCKNUT-NYLON 1/2-13	1				
21-10	64123-166	BLT-HEX 1/2-13X5-1/2	1				
21-11	2722591	SPACER-3/4 INCH BRG	2				
21-12	2722230-04	SPANNER	1				
21-13	64123-01	BLT-HEX 5/16-24X3/4	4				
21-14	2722682	BEARING-9" WHEEL	2				
21-15	64141-1	NUT-WLF 5/16-24	4				
21-16	2722681	ASSY-9" WHEEL	1				
	(INCLUDES ITEMS 11-15, 17-19 23 & 24)						
	(WITH 2.81 DIA. BOLT CIRCLE						
	INCLUDES ITEMS 11-15 & 20-24)						
21-17	2720644	S WHEEL HALF	1				
21-18	2720645	S WHL HALF, VALVE SD	1				
21-19	2722680	HUB-9"WHEEL W/BRGS	1				
	(INCLUDES ITEMS 13 & 14)						
21-20	4132614	S-WHEEL HALF VLV SIDE	1				
21-21	4132615	S-WHEEL HALF CLSD SIDE	1				
21-22	4132616	ASSY-HUB W/BEARINGS	1				
	(INCLUDES ITEMS 13 & 14)						

* NOT ILLUSTRATED

FIGURE 22

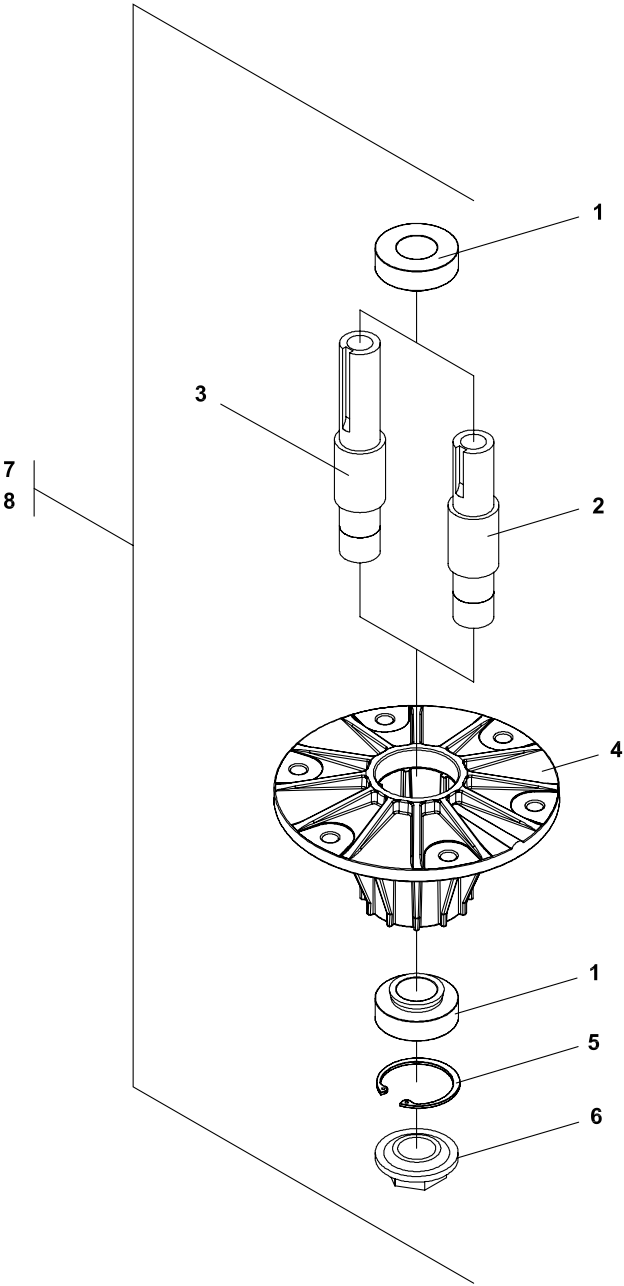


FIGURE 22

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
22-1	38348-01	BEARING-SPINDLE SEALED	2				
22-2	33179-02	SPINDLE-SHORT (USED IN ITEM 8)	1				
22-3	33179-01	SPINDLE-LONG (USED IN ITEM 7)	1				
22-4	2721096	HOUSING-SPINDLE 6 HOLE	1				
22-5	64144-38	SNAP-RING	1				
22-6	38315	NUT-SPINDLE	1				
22-7	2721097	ASSY-SPINDLE LONG (INCLUDES ITEMS 1, 3, 4-6)	1				
22-8	2721323	ASSY-SPINDLE SHORT (INCLUDES ITEMS 1, 2, 4-6)	1				

FIGURE 23

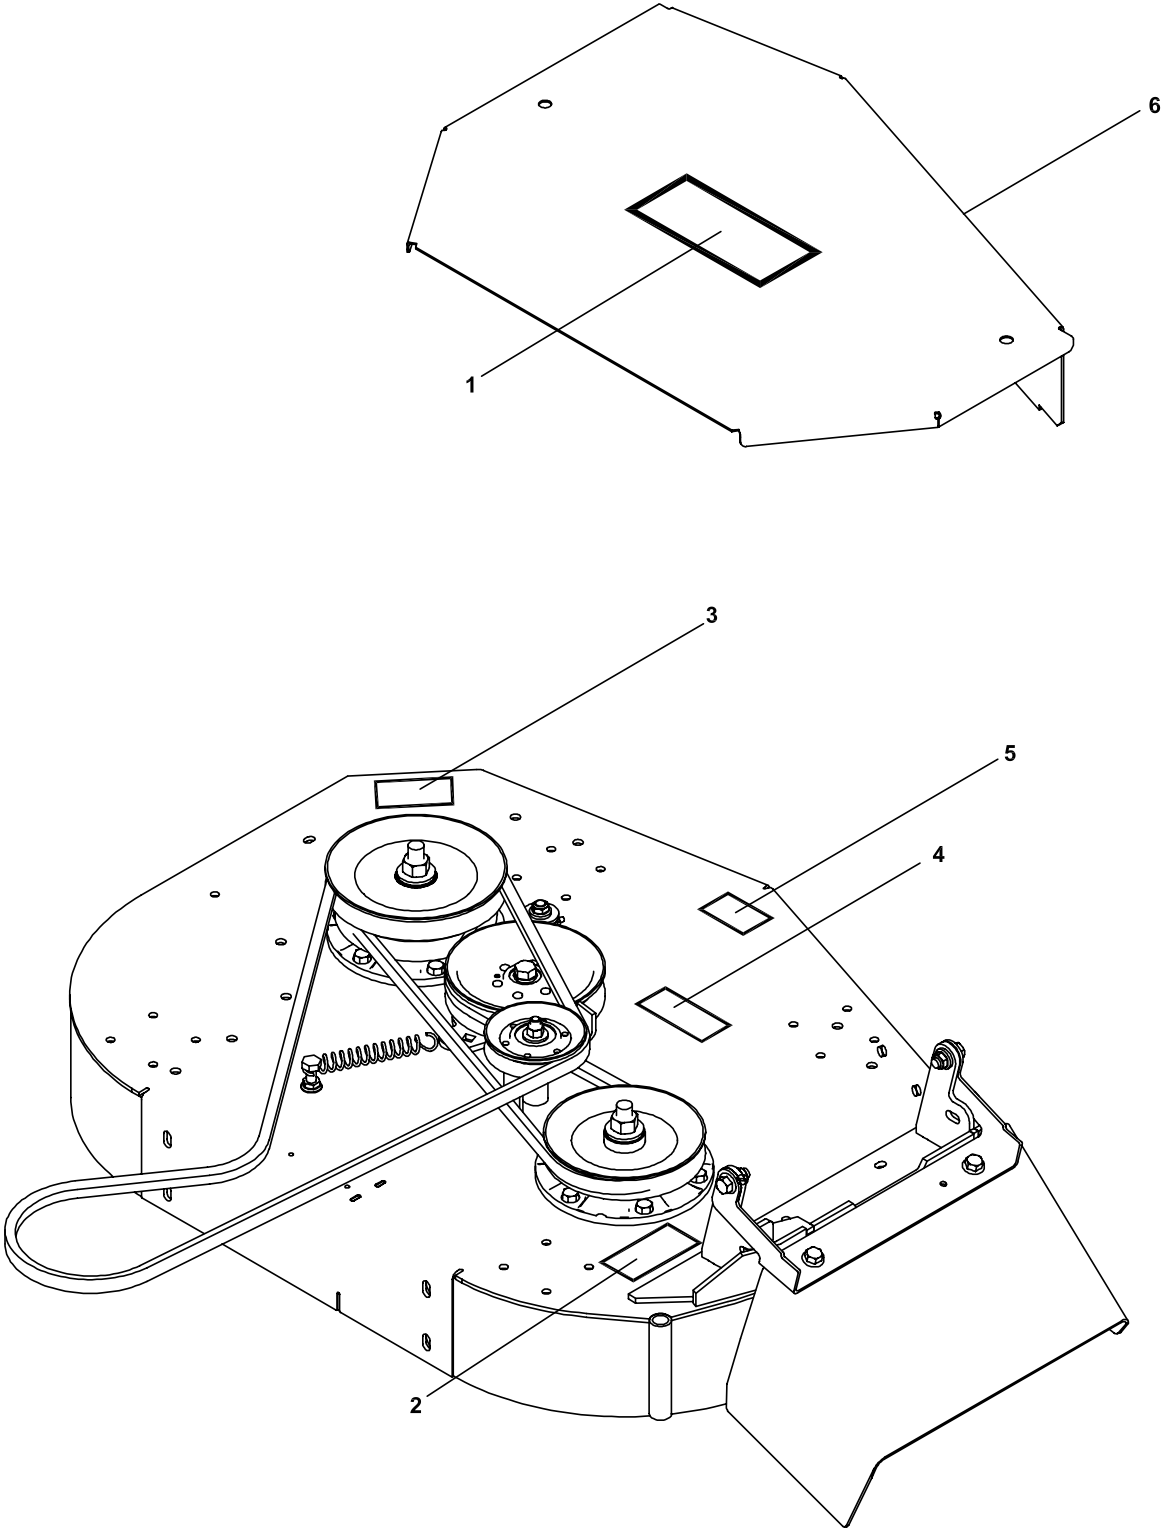


FIGURE 23

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
23-1	4158401	LABEL-BOBCAT, LARGE	1				
23-2	2000677	LABEL-DANGER/WARNING	1				
23-3	2000572	LABEL-WARNING BLADES	1				
23-4	2000678	LABEL-ROT PARTS/B-WSHR	1				
		QTY FOR 36" DECK	1				
		QTY FOR 48", 54" DECK	2				
23-5	4116761	LABEL-MADE IN USA	1				
23-6	4158402	LABEL-BOBCAT, SMALL	1				

FIGURE 24

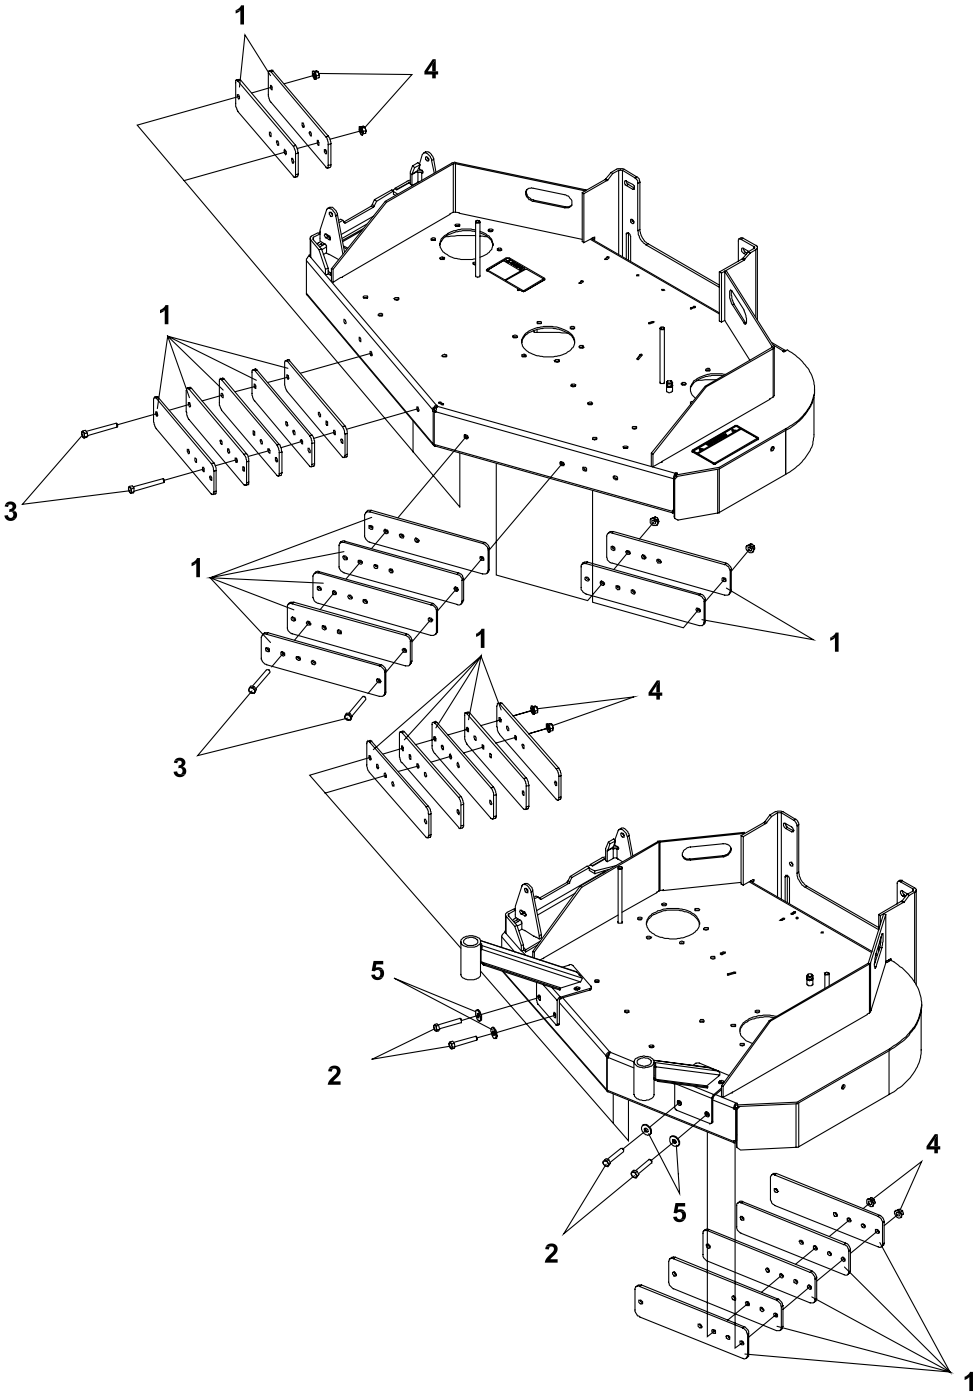


FIGURE 24

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
24-1	4162891.7	WEIGHT (QTY 10 USED ON 36" DECKS) (QTY 14 USED ON 48" DECKS)					
24-2	64123-100	BOLT-3/8-16X2-1/4 HEX (USED ON 36" DECKS ONLY)	4				
24-3	64123-75	BOLT, 3/8-16X3 HEX (USED ON 48" DECKS ONLY)	4				
24-4	64141-4	NUT-WLF 3/8-16	8				
24-5	64163-31	WASHER, 25/64X1X12 (USED ON 36" DECKS ONLY)	4				

SCHILLER GROUNDS CARE, INC.
ONE BOB-CAT LANE
P.O. BOX 469
JOHNSON CREEK, WI 53038
920-699-2000
www.schillergc.com



BOB-CAT BUNTON RYAN STEINER