



942509J

PREDATOR PRO GVT990-LP GEN LP W/61" SIDE DISCHARGE
(start S/N 00235)

942510J

PREDATOR PRO GVT990-LP GEN LP W/61" REAR DISCHARGE
(start S/N 00210)

942511J

PREDATOR PRO GVT990-LP GEN LP W/72" SIDE DISCHARGE
(start S/N 00207)

PARTS MANUAL

MAN 4171290
Rev. A 09-2014

OPERATOR'S MANUAL 4171310



SCHILLER

**GROUNDS
CARE**

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

⚠ WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

Californie Proposition 65 Avertissement

Les échappements des moteurs diesel et certains de leurs composés sont reconnus par l'Etat de Californie pour être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

⚠ AVERTISSEMENT

L'émission du moteur de ce matériel contient des produits chimiques que l'Etat de Californie considère être cancérigènes, provoquer des défauts congénitaux et d'autres dangers en matière de reproduction.

**California Advertencia
de la Proposicion 65**

El estado de California hace saber que los gases de escape de los motores diesel y algunos de sus componentes producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

⚠ ADVERTENCIA

El estado de California hace saber que los gases de escape de este producto contienen productos químicos que producen cáncer, defectos de nacimiento y otros daños en el proceso de reproducción humana.

CALIFORNIA

Proposition 65 Warning

Battery posts, terminals, wiring insulation, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
WASH HANDS AFTER HANDLING.

PREDATOR-PRO LP SERIES

IMPORTANT MESSAGE

Thank you for purchasing this Schiller Grounds Care, Inc. product. You have purchased a world class mowing product, one of the best designed and built anywhere.

This machine comes with an Operation and Safety Manual and a separate Setup, Parts and Maintenance Manual. The useful life and good service you receive from this machine depends to a large extent on how well you read and understand these manuals. Treat your machine properly, lubricate and adjust it as instructed, and it will give you many years of reliable service.

Your safe use of this Schiller Grounds Care, Inc. product is one of our prime design objectives. Many safety features are built in, but we also rely on your good sense and care to achieve accident-free operation. For best protection, study the manuals thoroughly. Learn the proper operation of all controls. Observe all safety precautions. Follow all instructions and warnings completely. Do not remove or defeat any safety features. Make sure those who operate this machine are as well informed and careful in its use as you are.

See a Schiller Grounds Care, Inc. dealer for any service or parts needed. Schiller Grounds Care, Inc. service ensures that you continue to receive the best results possible from Schiller Grounds Care, Inc. products. You can trust Schiller Grounds Care, Inc. replacement parts because they are manufactured with the same high precision and quality as the original parts.

Schiller Grounds Care, Inc. designs and builds its equipment to serve many years in a safe and productive manner. For longest life, use this machine only as directed in the manuals, keep it in good repair and follow safety warnings and instructions. You'll always be glad you did.

Schiller Grounds Care, Inc.
One Bob Cat Lane
Johnson Creek, WI 53038-0469

TABLE OF CONTENTS	FIGURES	PAGE
SAFETY		4
ASSEMBLY AND SETUP		5-7
MAINTENANCE CHART		8
MAINTENANCE RECORD		9
MAINTENANCE		10-16
ADJUSTMENTS.....		17-21
BELT REPLACEMENT		22
SPECIFICATIONS.....		23-26
PARTS SECTION.....		27
UPPER ENGINE DECK ASSY.....	FIGURE 1	28, 29
LOWER ENGINE DECK ASSY/CLUTCH.....	FIGURE 2	30, 31
BUMPER.....	FIGURE 3	32, 33
PROPANE FUEL /CONTROL PANEL	FIGURE 4	34, 35
BRAKES/REAR WHEEL	FIGURE 5	36, 37
OIL COOLER	FIGURE 6	38, 39
HYDRAULICS - FUEL LINES.....	FIGURE 7	40, 41
HYDROGEAR PUMP.....	FIGURE 8	42, 43
GENERAC WIRE HARNESS.....	FIGURE 9	44, 45
SEAT ASSEMBLY & ROPS	FIGURE 10	46, 47
FOLDING ROPS KIT	FIGURE 11	48, 49
STEERING/DECK LIFT	FIGURE 12	50, 51
CRADLE ASSEMBLY	FIGURE 13	52, 53
CRADLE & CASTER ASSEMBLY.....	FIGURE 14	54, 55
61" SIDE DISCHARGE.....	FIGURE 15	56, 57
61" REAR DISCHARGE	FIGURE 16	58, 59
72" SIDE DISCHARGE	FIGURE 17	60, 61
61" SIDE CHUTE, BAFFLES, & EDGES	FIGURE 18	62, 63
DECALS-POWER UNIT.....	FIGURE 19	64, 65
DECALS-CUTTERDECKS	FIGURE 20	66, 67

NOTICE !!!

Unauthorized modifications may present **extreme** safety hazards to operators and bystanders and could also result in product damage.

Schiller Grounds Care, Inc. strongly warns against, rejects and disclaims any modifications, add-on accessories or product alterations that are not designed, developed, tested and approved by Schiller Grounds Care, Inc. Engineering Department. Any Schiller Grounds Care, Inc. product that is altered, modified or changed in any manner not specifically authorized after original manufacture-including the addition of "after-market" accessories or component parts not specifically approved by CGC, Inc.-will result in the Schiller Grounds Care, Inc. Warranty being voided.

Any and all liability for personal injury and/or property damage caused by any unauthorized modifications, add-on accessories or products not approved by Schiller Grounds Care, Inc. will be considered the responsibility of the individual(s) or company designing and/or making such changes. Schiller Grounds Care, Inc. will vigorously pursue full indemnification and costs from any party responsible for such unauthorized post-manufacture modifications and/or accessories should personal injury and/or property damage result.



This Operator's Manual should be regarded as part of the machine. Suppliers of both new and second-hand machines must make sure that this manual is provided with the machine.



¡LEA EL INSTRUCTIVO!

Si no lee Ingles, pida ayuda a alguien que si lo lea para que le traduzca las medidas de seguridad.



This symbol means:
ATTENTION!
BECOME ALERT!

Your safety and the safety of others is involved.

Signal word definitions:

The signal words below are used to identify levels of hazard seriousness. These words appear in this manual and on the safety labels attached to Schiller Grounds Care, Inc. machines. For your safety and the safety of others, read and follow the information given with these signal words and/or the symbol shown above.

DANGER

DANGER indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.

WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices or property damage.

CAUTION

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, **MAY** result in property damage

Schiller Grounds Care, Inc.

One Bobcat Lane
Johnson Creek, WI 53038 U.S.A
Phone: 920-699-2000
Fax: 920-699-3683

MODEL NUMBER

SERIAL NUMBER

MODEL NUMBER: This number appears on sales literature, technical manuals and price lists.

SERIAL NUMBER: This number appears only on your mower. It contains the model number followed consecutively by the serial number. Use this number when ordering parts or seeking warranty information.

PREDATOR-PRO LP SERIES

ASSEMBLY AND SETUP

TOOLS REQUIRED FOR ASSEMBLY

- Wrecking bar
- Claw hammer
- Ratchets: 3/8", e
- Sockets: 9/16", 3/4"
- Wrenches: 3/8", 9/16", 3/4"
- Straight edge
- Tire pressure gauge
- Blocks (for deck leveling)

NOTE: All references below to the "right" or "left" are with respect to an operator at the controls.

1. UNCRATE UNIT

Discard packing materials. Remove and discard shipping brackets. Tighten caster wheel axle bolts against caster axle spanner bushings.

2. **72" in. deck models:** Tires need to be installed using eight 64187-03 wheel nuts included in hardware bag. Torque nut to 75 - 110 ft./lbs.
3. Set rear tire pressures to 12 lbs/in² (0.8 kg/cm²). Tires are overinflated for shipping. Front tires are no flat tires.

4. DECK LEVELING

- a) Park the machine on a smooth, level surface. Raise the deck to the transport position.
- b) **SIDE DISCHARGE:** Lower the deck onto a pair of equal height blocks **A** under the rear corners of the deck. Place another pair of adjustable blocks **A** under the front of the deck so that the deck top is level.




REAR DISCHARGE: Lower the deck onto a pair of equal height blocks **A** under the rear corners of the deck. Place another pair of adjustable blocks **A** under the front of the deck so that the deck is level.

NOTE: The front and rear of the deck are at different heights.

- c) Measure the height of the blade cutting edge above the ground. Remove pin **C** and set the height of cut lever **D** to that height.
- d) Loosen nuts **I** at all four corners of the deck.



NOTE: This will relieve tension on chains **H**.

- e) Loosen the jam nuts **E** on the height of cut clips **F** and adjusting screws **G**. Turn the adjusting screws **G** until the play is taken out of the chains **H** at all four corners. Tighten the jam nuts **E** against the clips **F** and at the adjusting screws **G**. Retighten nuts **I** at this time.

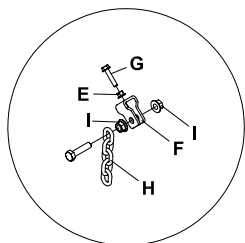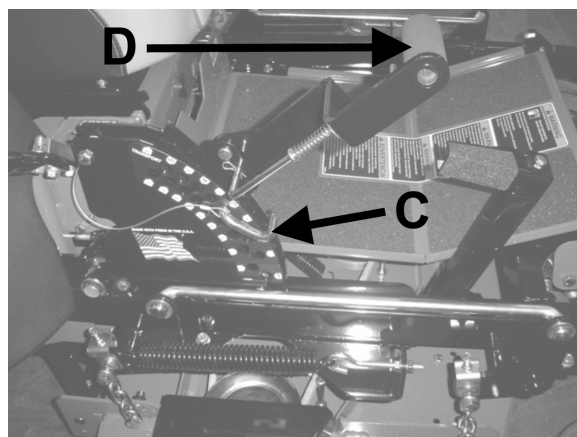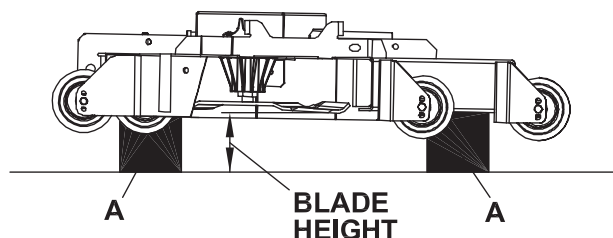

5. COUNTERBALANCE SPRINGS

- Raise the cutterdeck all the way.
- Adjust the spring **A** with nut **B**:
Approximately 1" of threads should be extending past the spring mounting bracket at nut **B**.
The springs may be tightened or loosened from this point according to personal preference.

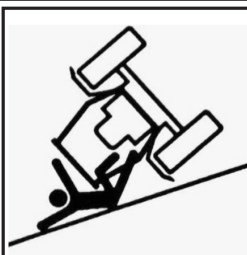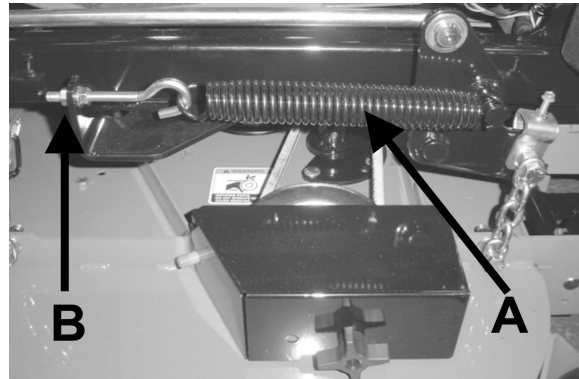

⚠ WARNING

SERIOUS INJURY OR DEATH MAY RESULT FROM MACHINE ROLLOVER

- DO NOT OPERATE MACHINE ON STEEP SLOPES OR NEAR DROP OFFS
- ALWAYS USE SEAT BELTS WITH ROPS IN RAISED POSITION
- AVOID SHARP AND/OR QUICK TURNS
- DO NOT EXCEED THE MACHINE WEIGHT RATING OF THE ROPS

⚠ WARNING

ROLLOVER MAY CAUSE PERMANENT INJURY OR DEATH.

- ROPS RAISES THE CENTER OF GRAVITY AND REDUCES STABILITY ON SLOPES.
- SUDDEN STARTS OR TURNS ON RAMPS OR SLOPES CAN CAUSE OVERTURN.
- USE GREATER CARE ON RAMPS AND AS THE SLOPE INCREASES.

6. ROPS (Roll Over Protection Structure)



The ROPS reduces the risk of serious or fatal injury in the unlikely event of a tip over, although the system cannot protect the operator from all possible injuries. It is not designed, made, or intended to provide protection for a machine that is driven off an embankment, retaining wall or similar situation. A ROPS does not replace the need to exercise care when operating on slopes.

IMPORTANT:

- Do not cut, drill, modify or repair a ROPS structure in any manner..
- Always replace a damaged ROPS.
- Inspect roll bar and seat belts for damage or loose hardware before use. Tighten/replace any loose/damaged hardware. Replace worn or damaged seat belts.

SET UP: Remove cotter pin **D** from hitch pin **C**. Pull out hitch pin **C**, rotate upper hoop to the upright position. Reinstall hitch pin **C**. Reinstall cotter Pin **D** through hitch pin **C**.

Ensure that seat plate is secured using spring-loaded latch. To flip forward, push down on handle **X**.

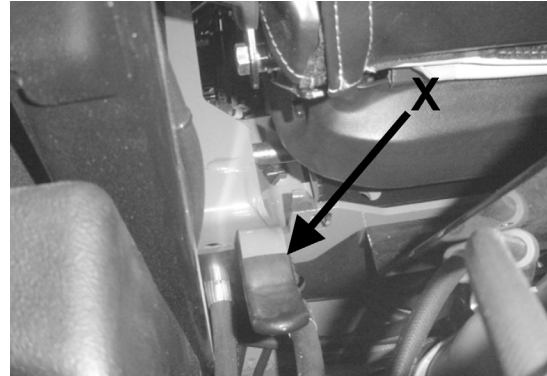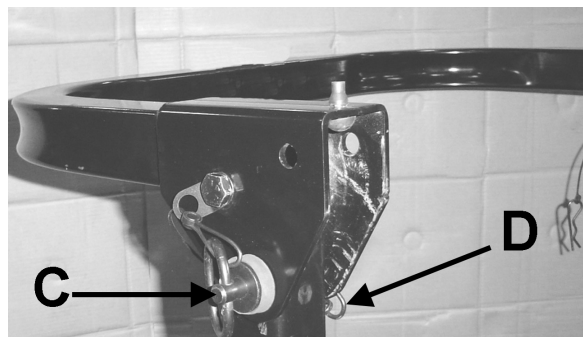

⚠ WARNING

This ROPS is certified for use on machines with a maximum gross vehicle weight (GVW) of 2000 LB. The GVW includes the weight of the base machine, operator, fuel, ROPS and any other attachments and payloads. When attachments are added, causing the GVW of the machine to be more than 2000 LB., the ROPS may not provide adequate protection resulting in serious injury or death. Use caution when installing attachments and **DO NOT EXCEED** the GVW rating of the ROPS.

7. FINAL PREPARATIONS

- Check the engine and hydraulic oil levels. Top up with the correct oil if necessary. Use SAE 10W30 motor oil for the engine. Use fresh, clean SAE 15W40 or SAE 20W50 motor oil or SAE 15W50 synthetic motor oil for the hydraulic system. After running for one hour, let hydraulic system oil cool. When cold check levels.
- Remove the battery from the machine. Fill the battery to the bottom of the vent wells with acid and trickle charge for several hours.



WARNING Battery acid is caustic and fumes are explosive and can cause serious injury or death.

Use insulated tools, wear protective glasses or goggles and protective clothing when working with batteries. Read and obey the battery manufacturer's instructions.

Be certain the ignition switch is OFF and the key has been removed before servicing the battery.

- a) Verify battery polarity before connecting or disconnecting the battery cables.
 - b) When installing the battery, always assemble the RED, positive (+) battery cable first and the ground, BLACK, negative (-) cable last.
 - c) Tighten cables securely to battery terminals and apply a light coat of silicone dielectric grease to terminals and cable ends to prevent corrosion. Keep terminal covers in place.
- Read Operation and Safety Manual before starting.
 - Deck can be adjusted to allow for the best horsepower, best quality of cut, or best pipping. See deck leveling procedure in the Adjustments Section in this manual to set as desired.
 - Run engine at full RPM for 5 minutes before engaging blades to allow the engine to be fully lubricated before load is applied.
 - Check the hydrostat neutral adjustment. Neutral is set at the factory but may require readjustment if air trapped during the initial oil fill has worked out of the system. See adjustments section later in this manual.
 - Do not use the machine without an approved grass collector, the grass discharge chute or mulching plates correctly fitted.

MAINTENANCE CHART

PREDATOR-PRO LP SERIES

MAINTENANCE OPERATION	Maintenance is an ongoing job. These intervals are maximum times between maintenance operations. Perform more often under severe conditions.						
	FIRST 5 HOURS	DAILY	EVERY 25 HOURS	EVERY 50 HOURS	EVERY 100 HOURS	EVERY 200 HOURS	EVERY 500 HOURS
ENGINE							
Consult the engine manual for additional information and instructions							
Check/Top Off Engine Coolant Level (Where Applicable)		X					
Check/Top Off Oil Level		X					
Check For Leaks		X					
Clean Air Intake Screen		X					
Clean Air Cleaner Precleaner			X*				
Clean Air Cleaner Element					X	X**	
Clean Cooling Fins					X		
Change Oil And Filter	X	See engine manufacturer's manual					
Check/Replace Spark Plugs						X	
* N/A IF EQUIPPED WITH HEAVY DUTY CYCLONIC AIR CLEANER							
**IF EQUIPPED WITH HEAVY DUTY CYCLONIC AIR CLEANER							
HYDRAULICS							
Check For Leaks	X	X					
Check/Top Off Oil Level	X				X		
Change Oil And Filter	X						X
MACHINE							
Inspect low pressure regulator for coolant leaks	Annually or every 1500 hours						
Rebuild or replace low pressure regulator	Every 2500 hours						
Check Interlock Operation		X					
Check Tire Pressures		X					
Check/Top Off Battery					X		
Lubricate All Points				X			
Check Fuel Shut-off Internal Filter							X
Check T-connector dust cap is secure		X					

MAINTENANCE RECORD

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and extend across the width of the page. There are no margins, text, or other markings on the paper.

9

CHECK DAILY

Operator Presence Interlock System - Start Operation

For the engine to crank, the parking brake must be on, the PTO (blades) off and traction levers in the neutral lock position. Sit in the seat and check, one by one, if the engine will crank with the parking brake off, the blades on, and either traction lever out of neutral lock.

Operator Presence Interlock System - Run Operation

The operator must be in the seat for the engine to run with the parking brake off, the traction levers moved out of the neutral lock position, or the blades on. To check:

- 1. Start the engine and run at 1/2 throttle with the operator on the machine but raised off the seat.
- 2. One by one: move the parking brake to the OFF position, traction levers out of the neutral lock position (check each independently), and turn the blades on. Each check should kill the engine after 1/2 second. (A 1/2 second delay is built into the system to prevent engine cutout when traversing rough terrain.)

Repair machine before using if the Operator Presence Interlock System does not operate correctly in start or run. Contact your authorized BOB-CAT dealer.

Hardware

Tighten any nuts and bolts found loose. Replace any broken or missing cotter pins. Repair any other problems before operating.

Tire pressure

Tires should be kept inflated at 12 lbs/in² (.84 kg/cm²). Improper tire inflation can cause rapid tire wear and poor traction. Uneven inflation can cause uneven cutting.

BATTERY


⚠ WARNING Battery acid is caustic and fumes are explosive and can cause serious injury or death.

Use insulated tools, wear protective glasses or goggles and protective clothing when working with batteries. Read and obey the battery manufacturer's instructions.

Be certain the ignition switch is OFF and the key has been removed before servicing the battery.

- 1. Verify battery polarity before connecting or disconnecting the battery cables.
- 2. When installing the battery, always assemble the RED, positive (+) battery cable first and the ground, BLACK, negative (-) cable last.
- 3. When removing the battery, always remove the ground, negative (-) cable first and the red, positive (+) cable last.

- 4. Check the electrolyte level every 100 hours of operation.
- 5. Clean the cable ends and battery posts with steel wool. Use a solution of baking soda and water to clean the battery. Do not allow the solution to enter into the battery cells.
- 6. Tighten cables securely to battery terminals and apply a light coat of silicone dielectric grease to terminals and cable ends to prevent corrosion. Keep terminal covers in place.

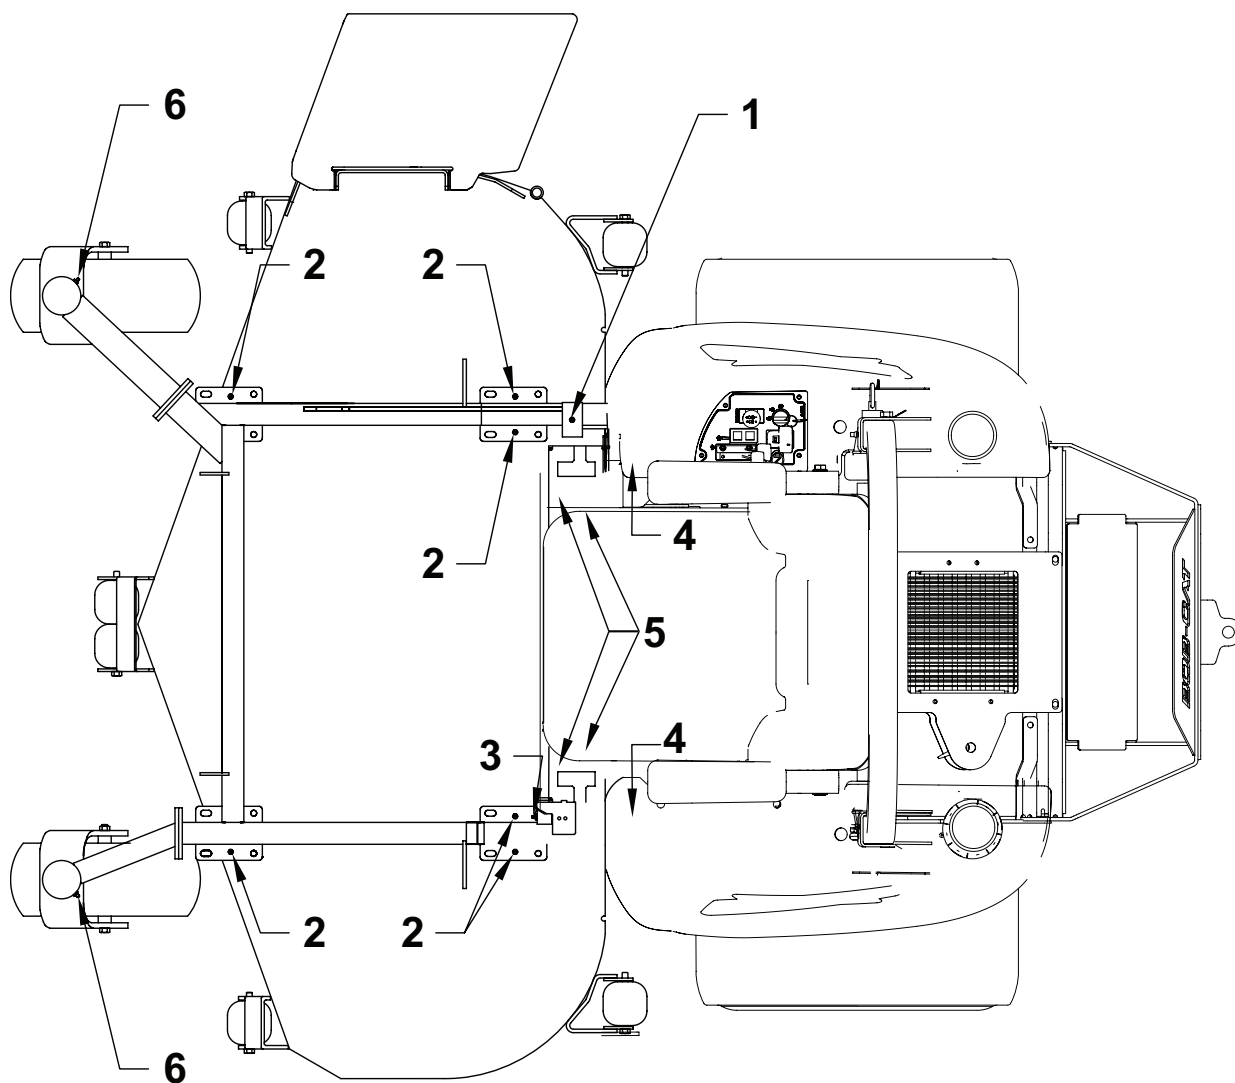

LUBRICATION

Every 50 hours of operation, lubricate the following points (1-4) with grease:

1. Deck lift rockshaft (1 point)
2. Deck lift pivots (6 points)
3. Brake lever pivot (1 point)
4. Push arms (2 points located at rear of cutterdeck under each fuel tank)
5. Isolation mounts (4 points located under seat at front of machine.)
6. Caster wheel pivots (2 points)
(Lubricate every 500 hours or once a year)

NOTE ON BLADE SPINDLES - The blade spindles on these machines use a superior sealed bearing that does not require relubrication.

HYDRAULIC SYSTEM

Fluid level in the hydraulic system should be checked after the first 5 hours of operation, and every 100 hours thereafter, or when a leak has occurred. If the fluid is low, check all components for leaks.

To check, remove reservoir cap **M**. The fluid level should be at the bottom of the filler tube. If low, top up (do not overfill). Use one of the oils listed below:

- SAE 15W40 motor oil
- SAE 20W50 motor oil
- 15W50 synthetic motor oil

AFTER FIRST FIVE (5) HOURS

1. Remove plug **N** to drain hydraulic reservoir. Dispose of used oil in accordance with local requirements.
2. Clean and replace the plug.
3. Change hydraulic oil filter **G**.
4. Fill the reservoir with fresh oil to the bottom of the reservoir filler tube, using an oil from the list above. Do not overfill.

PERIODIC OIL CHANGES

Change the hydraulic fluid and hydraulic filter after each 500 hours of operation using the same procedure given above.



NOTES:

Before servicing the hydraulic system, stop the engine, disconnect spark plug wires and disengage the PTO.


- After any hydraulic line is opened, plug or cap it promptly to reduce the risk of contamination.
- Do not use sealant tape on hydraulic pipe fittings. Use a liquid sealant that will dissolve into the system.
- Make sure all hydraulic connections are tight and hydraulic hoses and lines are in good condition before applying pressure to system.

WARNING

The machine's hydraulic system operates under high pressure. When checking for leaks, do not use your hands to attempt to find a leak. Instead, use cardboard or paper. Escaping hydraulic fluid can be under sufficient pressure to penetrate skin and cause serious injury. If hydraulic fluid is injected into the skin, it must be promptly removed by a doctor familiar with this form of injury or gangrene may result.

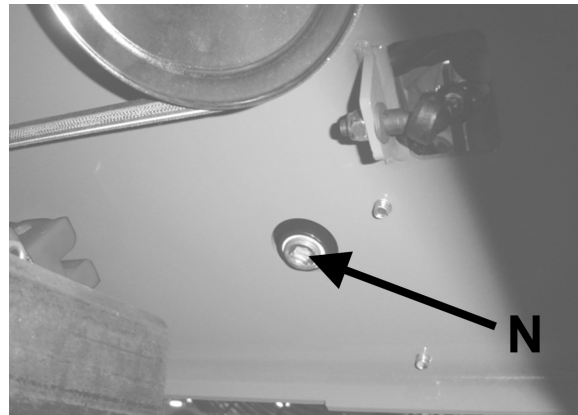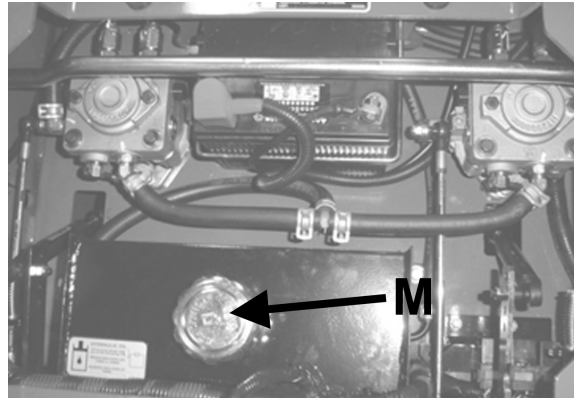

View from below machine

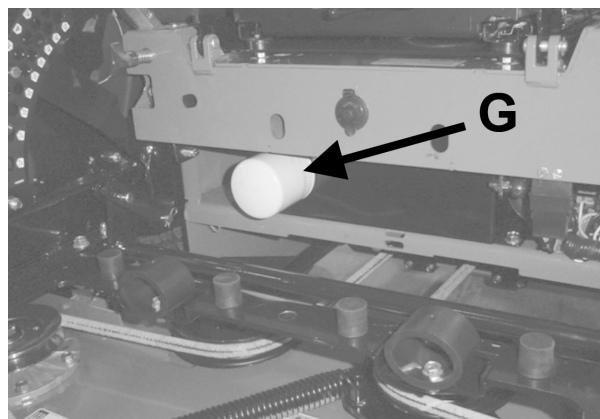

PREDATOR-PRO LP SERIES


ENGINE OIL

Do not perform engine maintenance without the engine off, spark plug wires disconnected and PTO disengaged.

AFTER FIRST FIVE (5) HOURS

While the engine is warm:

1. Release the oil drain hose assembly from the engine clip **J**. Lay hose assembly over the frame edge or through the frame cutout, which ever is most convenient.
2. Remove the rubber cap **D** from the tip of the hose assembly and turn the drain valve to allow oil to drain from the engine. Dispose of used oil in accordance with local requirements.
3. Clean drain valve and tighten the plastic portion of the drain valve back into the metal portion of the valve. Replace rubber cap over the tip of the valve. Replace hose assembly back into engine clip.
4. Change oil filter.
5. Fill the crankcase with fresh oil to the full mark. Do not overfill. See engine manual for oil specifications.

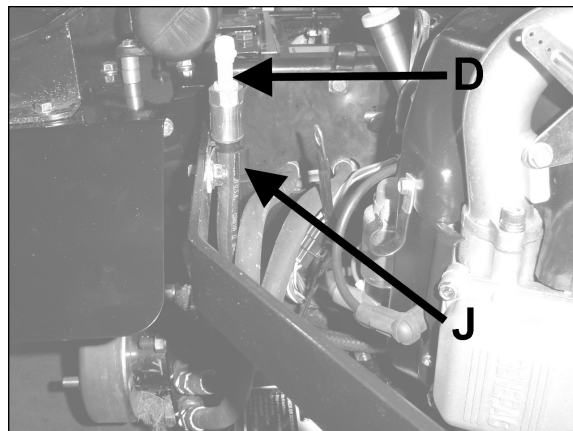


PERIODIC OIL CHANGES

1. See engine manual for oil and filter change intervals after the break-in period.
2. Follow instructions for first oil change, above.

DAILY

1. Check oil level with the dipstick.
2. If oil is needed, add fresh oil of proper viscosity and grade. See engine manual for oil specifications. Do not overfill.
3. Replace dipstick before starting engine.

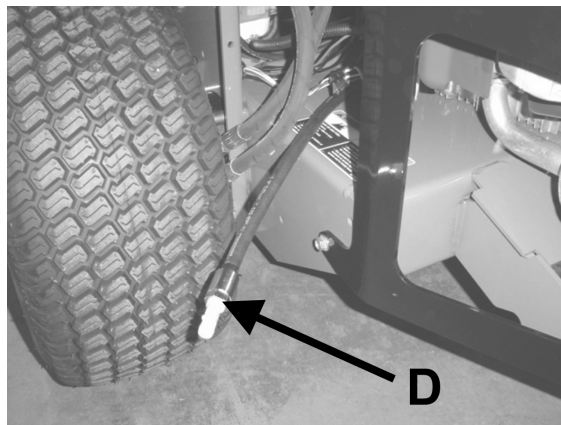

SPARK PLUGS


Remove each plug and check condition.

- Good operating conditions are indicated if the plug has a light coating of grey or tan deposit.
- A white blistered coating indicates overheating. A black coating indicates an “over rich” fuel mixture. Both may be caused by a clogged air cleaner or improper carburetor adjustment.
- Do not sandblast, wire brush or otherwise attempt to repair a plug in poor condition. Best results are obtained with a new plug.
- Set plug gap as specified in engine manual..

ENGINE COOLING

Continued operation with a clogged cooling system will cause severe overheating and can result in engine damage.

- **Daily:** Clean air intake screen **S** on air cooled engines.
- **Every 100 hours:** Clean cooling fins beneath blower housing **H** with reference to information in the engine manufacturer's manual.

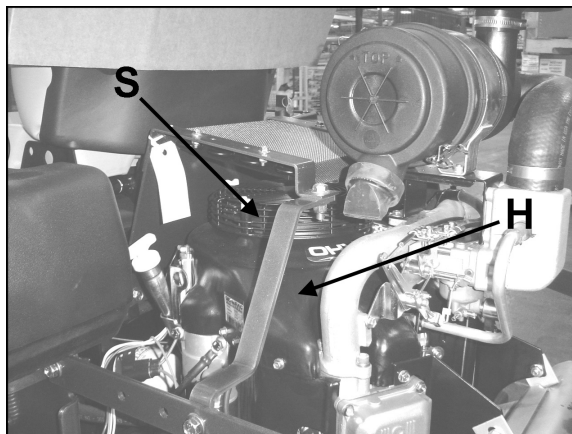


HEAVY DUTY CYCLONIC AIR CLEANER

Clean and replace the air cleaner element as specified in the service chart. Uneven running, lack of power or black exhaust fumes may indicate a dirty air cleaner.

To replace air cleaner elements:

1. Unclamp end cover **X** and remove existing cleaner elements.
2. Insert new elements **Y** and **Z** and replace cover. Ensure the breathing port **A** is pointing down and towards the front of the tractor.

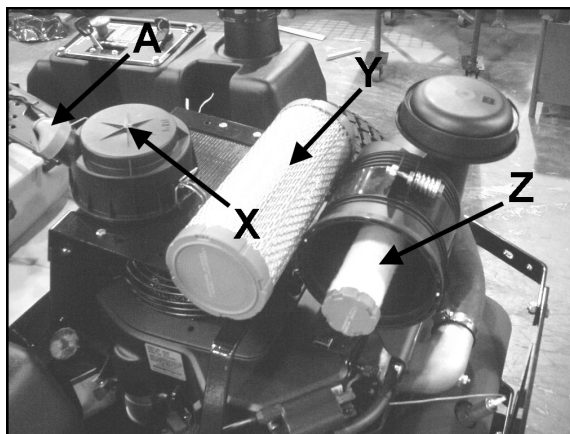

CLEANING MACHINE

Clean the machine after use. The machine will run cooler and last longer if kept free of clippings and other debris. A clean machine also reduces the risk of fire due to accumulation of combustible debris and chaff

Brush or blow clippings and debris off the cutterdeck and engine deck.

WASHING MACHINE


CAUTION: Improperly washing a machine can cause water to enter bearings and other components. This can greatly reduce component life.

- Do not use a pressure washer. Do not direct water at bearings or seals. High pressure water can blow past seals and enter sealed bearings.
- Allow the machine to cool down before washing. Water on a warm machine can be sucked into sealed bearings as they cool.
- Avoid getting electrical connections wet. Water can cause electrical faults and corrosion of electrical components.

BLADE REMOVAL

Follow these instructions to prevent injury during blade removal:


1. Loosen with a box wrench or a socket and long breaker bar. To gain additional leverage, slip a long pipe or thick-walled tube over breaker bar or wrench.
2. Insert wood block **A** as shown, with grain perpendicular to blade, to prevent blade from turning when loosening.
3. Wear thickly padded gloves. Keep hands clear of blade path. Blades may rotate when bolt releases.

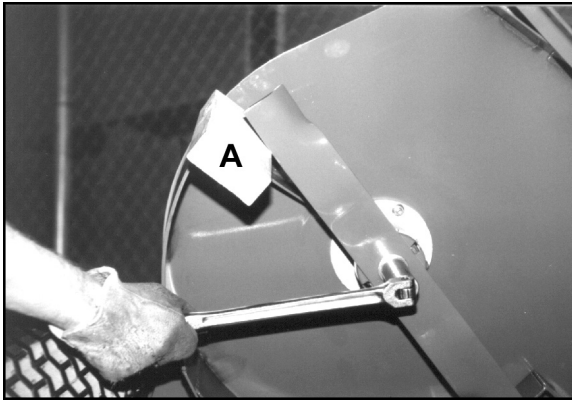

SHARPENING

Blades may be sharpened by filing or grinding.

- Inspect blades before sharpening.
- Replace bent or cracked blades.
- Replace blades when the lift portion has worn thin.
- Maintain cut angle at 30°.
- Do not overheat blades when sharpening.
- Always use Schiller Grounds Care, Inc. blades. Use of another manufacturer's blades may be dangerous.

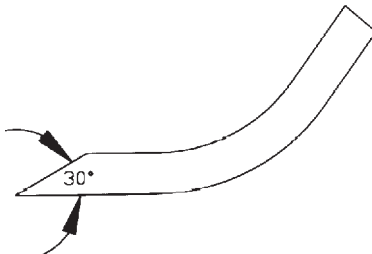

BLADE BALANCE


Blade balance must be maintained at 5/8 oz-in (19.4 g-cm) or less. Failure to keep blades balanced causes excess vibration, wear, and shortened life of most components of the machine.

To balance a blade:

1. Sharpen blade first.
2. Balance the blade at the center.
3. Attach a 1/8 oz (3.9 g) weight at a distance 5" (127 mm) from center on the light end. This should make the light end the heavy end:
 - If it does, the blade is balanced.
 - If does not, file or grind the heavy end until the addition of the weight makes the light end the heavy end.

BLADE INSTALLATION

1. Wear thickly padded gloves to prevent cuts from the sharp blade.
2. Insert the blade bolt, in order, through the conical washer (cup side toward the blade, as shown), the blade, and the blade spacer.
3. Install assembly on the blade spindle.
4. Torque the blade bolt to 70 ft-lbs.

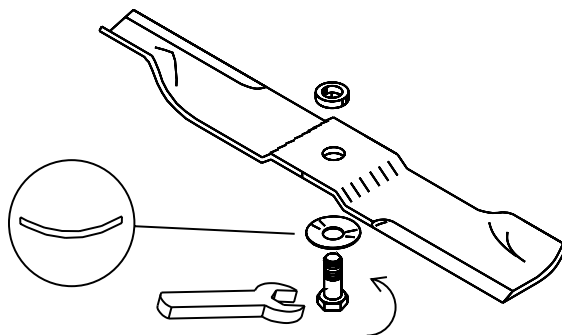

BELTS

All belts are tensioned by spring loaded idlers. No adjustment is required.

DECK LEVELING

- Park the machine on a smooth, level surface. Raise the deck to the transport position.
- Lower the deck onto a pair of equal height blocks **A** under the rear corners of the deck. Place another pair of adjustable blocks **B** under the front of the deck so that the deck top is pitched forward 1/8".

A 1/8" forward pitched deck provides the best horse-power.

A level deck provides the best quality of cut.

A 1/8" rearward pitched deck provides the best striping.

Certain grass types and conditions may vary.




NOTE: The front and rear of the deck are at different heights.

- Measure the height of the blade cutting edge above the ground. Remove pin **C** and set the height of cut lever **D** to that height.
- Loosen nuts **I** at all four corners of the deck.

NOTE: This will relieve tension on chains **H**.

- Loosen the jam nuts **E** on the height of cut clips **F** and adjusting screws **G**. Turn the adjusting screws **G** until the play is taken out of the chains **H** at all four corners. Tighten the jam nuts **E** against the clips **F** and at the adjusting screws **G**. Retighten nuts **I** at this time.

FORWARD PITCH SHOWN

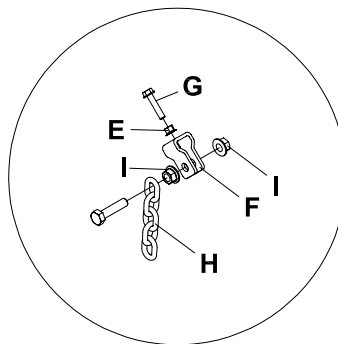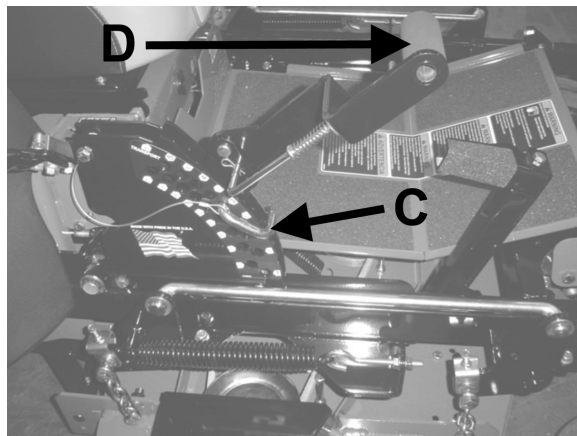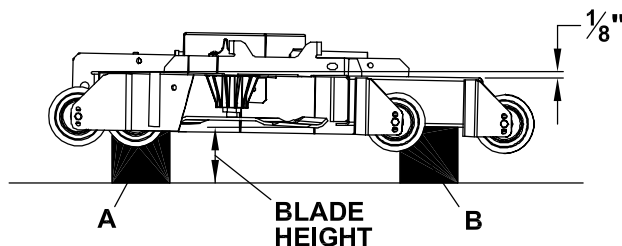

ADJUSTMENTS

PREDATOR-PRO LP SERIES

HEIGHT OF CUT


The height of cut is set by moving height of cut pin **C** to the hole designated for the height of cut desired.

To change the height of cut:

1. Lift the deck to the highest position.
2. Move pin **C** to the selected hole.
3. Lower the deck until the lift lever is stopped by the pin.


NOTES:

- Height of cut may vary due to the amount of tread on the tires, tire diameter or inflation pressure.
- For best results, adjust the rear deck rollers for the height of cut to be used (see below).

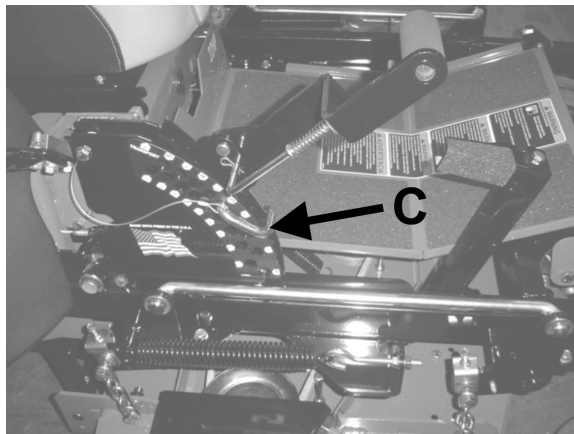

REAR DECK ROLLERS


The rear outside deck rollers are adjustable up and down to provide improved deck flotation and scalping protection at various heights of cut. They are not intended to ride continuously on the ground. Adjust no closer than 3/8" (10mm) to the ground.

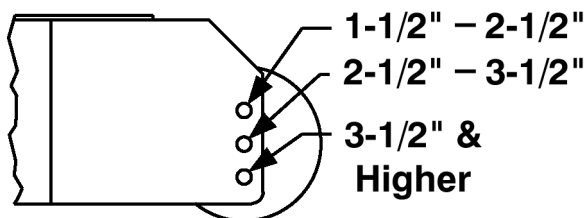

Height of cut ranges for roller adjustment

COUNTERBALANCE SPRINGS

1. Raise the cutterdeck all the way.
2. Adjust the spring **A** with nut **B**:
The spring length should be set at approximately 8-3/4", inside loop to inside loop, when in transport position.
The springs may be tightened or loosened from this point according to personal preference.

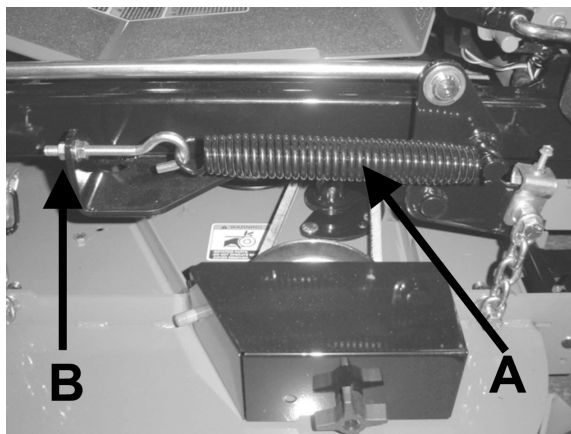

CONTROL LEVERS

There are two mounting positions for the control levers, upper and lower. The lower position works well for most people. Taller operators may need the upper position.


To adjust the height of the control levers:

- Remove bolts **A** and nuts **B**.
- Align holes in control lever **D** with appropriate holes in traction lever bracket **C**.
- Install bolts **A** and nuts **B**.

The upper mounting hole for the control levers is slotted to allow fore-aft adjustment and to allow alignment of the levers.

To adjust or align the control levers:

- Loosen nuts **B**.
- Adjust control lever position.
- Tighten nuts **B**.

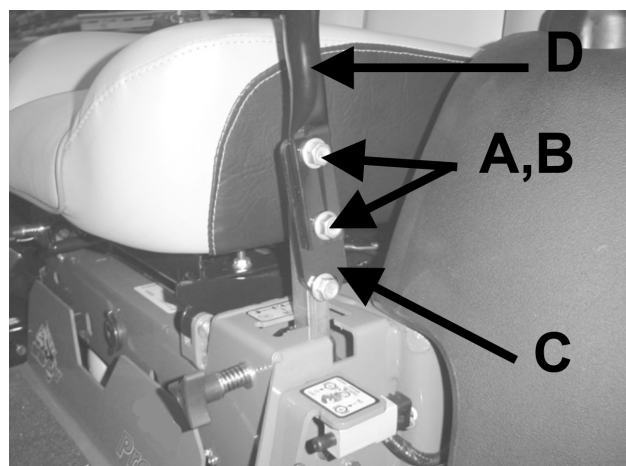


PARKING BRAKE

Park machine on a smooth level surface.

Support the machine with the rear wheels off the ground, using jack stands or equivalent. DO NOT rely on mechanical or hydraulic jacks.

1. Remove rear wheels.
2. Measure spring length **O** with parking brake **N** in the OFF position.
3. Move parking brake **N** to the ON position and measure length of spring **O** again. When spring deflects 3/8" it is properly adjusted.
4. If adjustment is required, return parking brake **N** to the OFF position.
5. Disconnect one end of rod **M** at the brake and loosen jam nut.
6. Adjust rod **M** in or out as required until 3/8" deflection in brake spring **O** is achieved with parking brake **N** in the ON position.
7. Reconnect rod **M** and retighten jam nut.
8. Repeat steps 2-7 on opposite side of machine.
9. Replace wheels and tighten wheel nuts.

NOTE: Parking brake must be in the OFF position to properly seat brake drums.

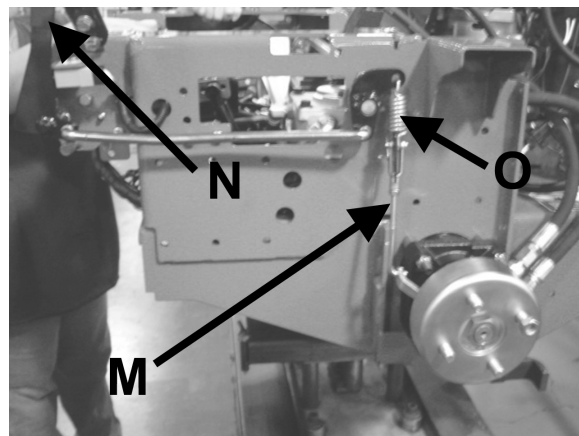

Parking brake assembly (tire and deck not shown for clarity - brake in ON position).

This adjustment will cause the brake springs to stretch 3/8" when the parking brake is in the ON position, providing the correct parking brake force without overloading the brake arm.


ADJUSTMENTS

PREDATOR-PRO LP SERIES

TRACKING HANDLES

An adjustment is provided to allow the operator to adjust machine tracking during operation.


1. Turn knob **W** clockwise to shorten control lever travel.
2. Turn knob **W** counter-clockwise to increase control lever travel.

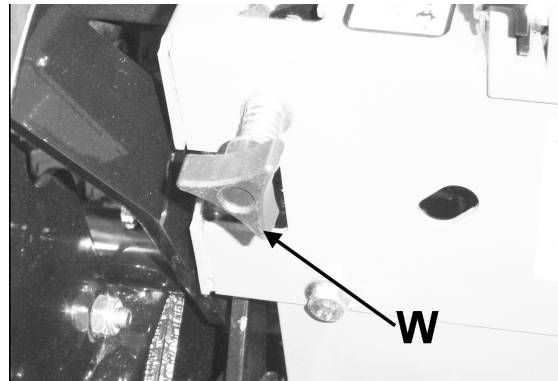

DAMPERS

Different damper mounting holes have been provided for various operator preferences with control lever motion.

1. For a stronger resistance feel, mount the dampers **X** in the outer most hole **Z** of the motion control weldment.
2. For a lighter resistance feel, mount the dampers **X** in the inner most hole **V** of the motion control weldment.

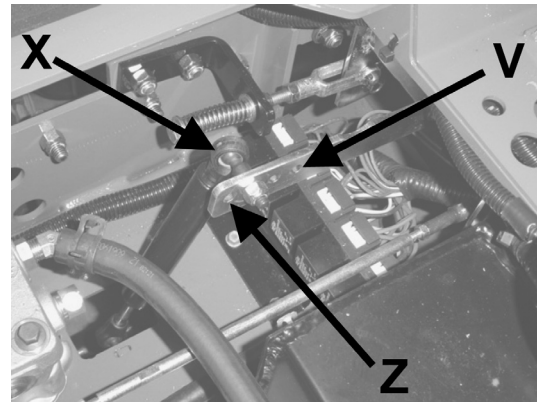


FRONT DECK LIP

Adjustable front deck lips have been provided on 61 in. cutterdecks for various cutting conditions.

To revise per conditions:

1. Loosen the front bolts **S**.
2. Adjust height of **H**.
3. Retighten **S** once you have desired height.

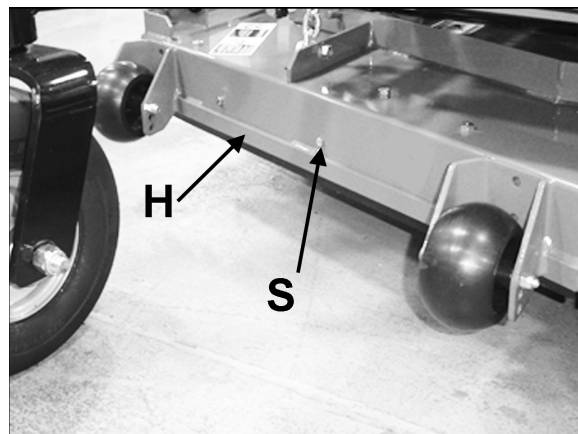

HYDROSTAT ADJUSTMENTS

A turnbuckle-style hydrostat neutral adjustment is provided.



Neutral:

1. Support the machine with the rear wheels off the ground. Use jackstands or equivalent support. Do not rely only on mechanical or hydraulic jacks.
2. Move the traction levers out into the neutral lock position and raise the seat.
3. Disconnect the seat switch wire **K** and temporarily connect the two terminals with jumper wire **J** as shown.
4. Start the engine and run at low speed.
5. Loosen jam nuts **T** at both ends of the control rod.
6. Rotate the control rod until the corresponding wheel stops turning. Lock the jam nuts. Run the engine up to high idle to check the adjustment. Readjust if necessary.
7. Repeat steps 5 and 6 for the opposite side.
8. Remove the jumper wire **J** and reconnect the seat switch.

Reverse Return:

1. Move traction levers out to the neutral lock position and raise the seat.
2. Locknut **U** should be run on the bolt as far as it will go.
3. Loosen jam nut **Y**. Adjust the clevis yoke by turning the head of the bolt until the clevis pin just makes contact with the rear of the slot in the lever it connects with. Tighten jam nut **Y**.
4. Repeat steps 2 and 3 for the opposite side.

NOTE: A slight creep in reverse is acceptable provided the wheel does not turn and the hydrostat pump does not whine when the parking brake is on.

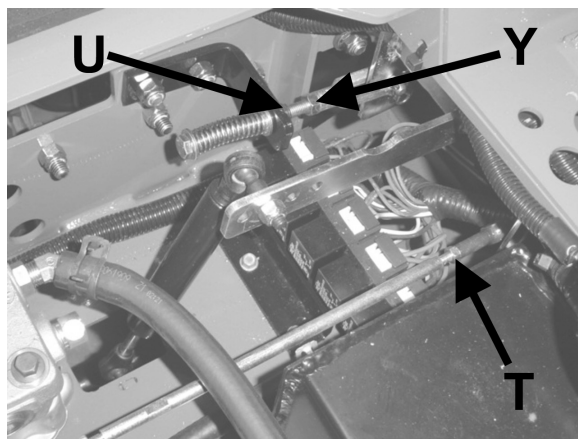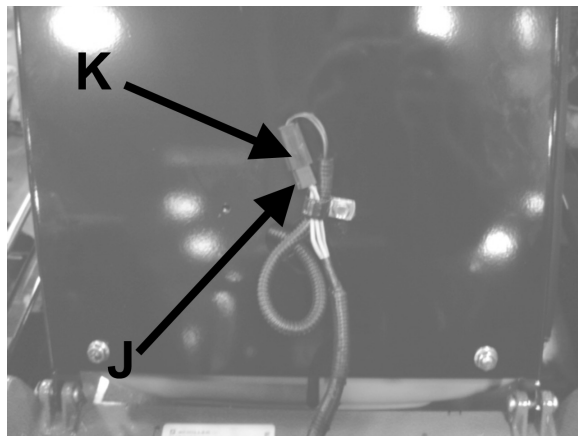

Right side adjustments

BELT REPLACEMENT

PREDATOR-PRO LP SERIES


Note: Always use Schiller Grounds Care, Inc. replacement belts, not general purpose belts. Schiller Grounds Care, Inc. belts are specially designed for use on commercial mowers and will normally last longer.

CUTTERDECK BELT

1. Tilt floorplate all the way forward.
2. Set the cutterdeck in a middle height-of-cut position.
3. Use a 3/8" ratchet and extension to back tensioning idler off to remove belt from idler. Remove belt from cutterdeck pulleys.


NOTE: Use the 3/8" ratchet in the square hole **A** on the idler.

4. Remove belt from clutch pulley.
5. Install the new belt by performing these steps in reverse order.

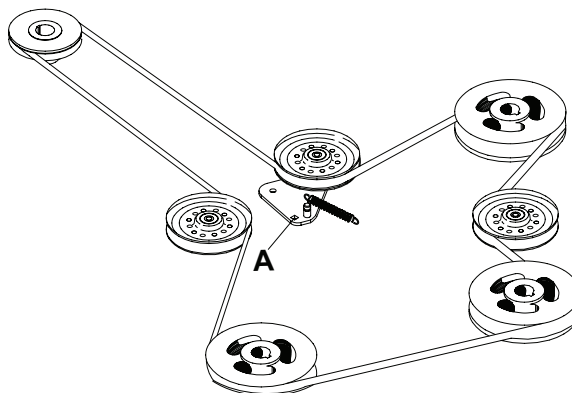

PUMP-DRIVE BELT

1. Remove engine-cutterdeck belt (see engine-cutterdeck belt replacement).
2. Attach an extension to a 3/8" drive ratchet. Insert the ratchet extension in the square hole of the pump drive idler arm. Use the ratchet handle to rotate it enough to remove the pump drive belt.
3. Install a new pump drive belt in the same manner as it was removed.
4. Re-install engine-cutterdeck belt (see engine-cutterdeck belt replacement).

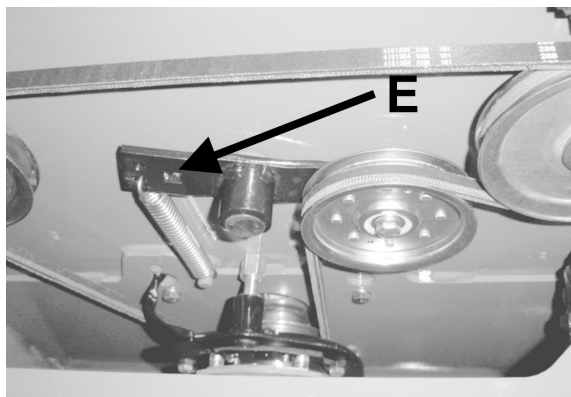

POWER UNITS

ENGINES:

Construction: Aluminum block with cast-in cast iron sleeves. Aluminum head.

Configuration: 4-stroke, vertical shaft, V-twin cylinder, overhead valve, air-cooled or liquid cooled.

DRIVE SYSTEM:

Full hydrostatic pump and wheel motor combination for independently controlled drive wheels.

Pump: Hydrogear 16cc variable displacement piston pump.

Motors: Parker displacement MB series. Direct drive 1-1/4" (31.8mm) diameter output shaft.

Turn Radius: True Zero

OPERATOR PRESENCE

INTERLOCK SYSTEM:

Start: The PTO (blades) must be off, traction levers in neutral lock, and parking brake on for engine to crank.

Run: Operator must be in seat to take parking brake off, to move traction levers out of the neutral lock position, or to turn the PTO (blades) on or the engine will kill. The parking brake must be off for the traction levers to move out of the neutral lock position.

The operator may leave the seat with the engine running if the parking brake is on, the PTO (blades) is off, and the traction levers are in the neutral lock position. A time delay eliminates annoying engine cutout from operation over rough terrain.

WEIGHT:

1293 lbs. (587 kg) w/ 61" deck

1404 lbs. (683 kg) w/ 72" deck

CONTROLS:

Throttle; power takeoff (PTO) clutch switch; traction levers; parking brake lever; lift lever.

FUEL SYSTEM:

One 33.5 lbs. LP tank on each side of operator, each with an individual shutoff.

MAXIMUM GROUND SPEEDS:

Forward: Generac: 13.5 mph (21.1 km/h)

Reverse: 4 mph (6.4 km/h)

WHEELS & TIRES:

Drive wheels:

942509J, 942510J, 942511J: 24 X 12.00-12 4-Ply
Turf Tread Tires

Casters: 13 X 6.5-6 No Flat Tires

Pressure: 12 p.s.i. (.84 kg/cm²)

BRAKING:

Parker brakes. Spring applied for overload protection.

SEAT:

High back, foam padded seat with standard armrests. Fore and aft adjusters, hinged for easy tilt-up access to pumps and battery. Internally mounted seat switch.

ENGINE	
MODEL NUMBERS	942509J, 942510J, 942511J
MANUFACTURER	Generac
MODEL	GTV990-LP
CYLINDERS	2
COOLING	AIR
BORE/STROKE	3.54 X 3.07" (90 X 78mm)
DISPLACEMENT	60 cu. in. (992cc)
COMPRESSION	9:1
OUTPUT POWER	See engine manufacturer's specifications and website
LUBRICATION	FULL PRESSURE
GOVERNOR	Mechanical
AIR CLEANER	Heavy Duty Cyclonic
IGNITION SYSTEM	Electronic
CHARGING SYSTEM	20 amp, regulated
BATTERY	BCI group U1
FUSES	Two, 20 amp blade

PREDATOR-PRO LP SERIES

SPECIFICATIONS

GENERAL	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS	DATE	HRS
Check Tire Pressures												
Lubricate All Points												
Check Nuts & Bolts												
ENGINE												
Check Engine Coolant Level (Where Applicable)												
Check Oil Level												
Change Oil												
Clean Air Cleaner Element												
Clean Cooling Fins												
Replace Air Cleaner Element												
Clean & Gap Spark Plugs												
NOTE: After first 5 hours of operation replace engine oil, hydraulic oil and both filters.												

SPECIFICATIONS

PREDATOR-PRO LP SERIES

CUTTERDECKS			
MODEL NUMBER	942509J	942510J	942511J
TYPE	Side Discharge	Rear Discharge	Side Discharge
CUTTING WIDTH	61.0" (155 cm)	61.0" (155 cm)	71.5" (181 cm)
WIDTH (CHUTE UP)	62.0" (157 cm)	62.0" (157 cm)	72.5" (184 cm)
WIDTH (CHUTE DOWN)	73.0" (185 cm)	N/A	84.0" (213 cm)
BLADE	high lift (low lift optional)	one low lift blade	high lift (low lift optional)
NUMBER OF BLADES	3	3	3
BLADE LENGTH	21" (53 cm)	21" (53 cm)	24.5" (63 cm)
BLADE THICKNESS	0.25" (6.35 mm)	0.25" (6.35 mm)	0.25" (6.35 mm)
TIP SPEED	18100 ft/min 5517 m/min @ 3800 Engine RPM	18850 ft/min 5745 m/min @ 3800 Engine RPM	18153 ft/min 5533 m/min @ 3800 Engine RPM
DAILY PRODUCTION (8 hr @ 6 mph)	Up to 29.5 acres (11.9 ha)	Up to 29.5 acres (11.9 ha)	Up to 34.7 acres (14.0 ha)

CONSTRUCTION:

Fabricated and welded 10-gauge, double-layer steel top with 7-gauge side skirts. Full floating design.

CUTTERDECK DRIVE SYSTEM:

Electric clutch/brake drives belt directly from engine to center spindle of cutterdeck. No twists in drive belt.

SPINDLES:

Top mounted and maintenance free, with 1" shaft in precision machined, aluminum housing

SPECIFIC TORQUES

BLADE BOLT TORQUE: 70 FT-LBS (95 Nm)

WHEEL HUB NUTS: 225 FT-LBS (237 Nm)

ENGINE CRANKSHAFT BOLT: 50 FT-LBS (68 Nm)

ANTI-SCALP ROLLERS:

61" Side Discharge Cutterdecks - 7 Rollers

61" Rear Discharge Cutterdecks - 6 Rollers

72" Side Discharge Cutterdecks - 7 Rollers

CUTTING HEIGHT & PRODUCTION:

Height: Spring assisted lift lever allows easy setting of cut heights from 1" to 5 1/2" in 1/4" increments.


"Set and forget" feature allows height of cut to be set and returned to without searching from operator position.

PARTS SECTION

UPPER ENGINE DECK ASSY

PREDATOR-PRO LP SERIES

FIGURE 1

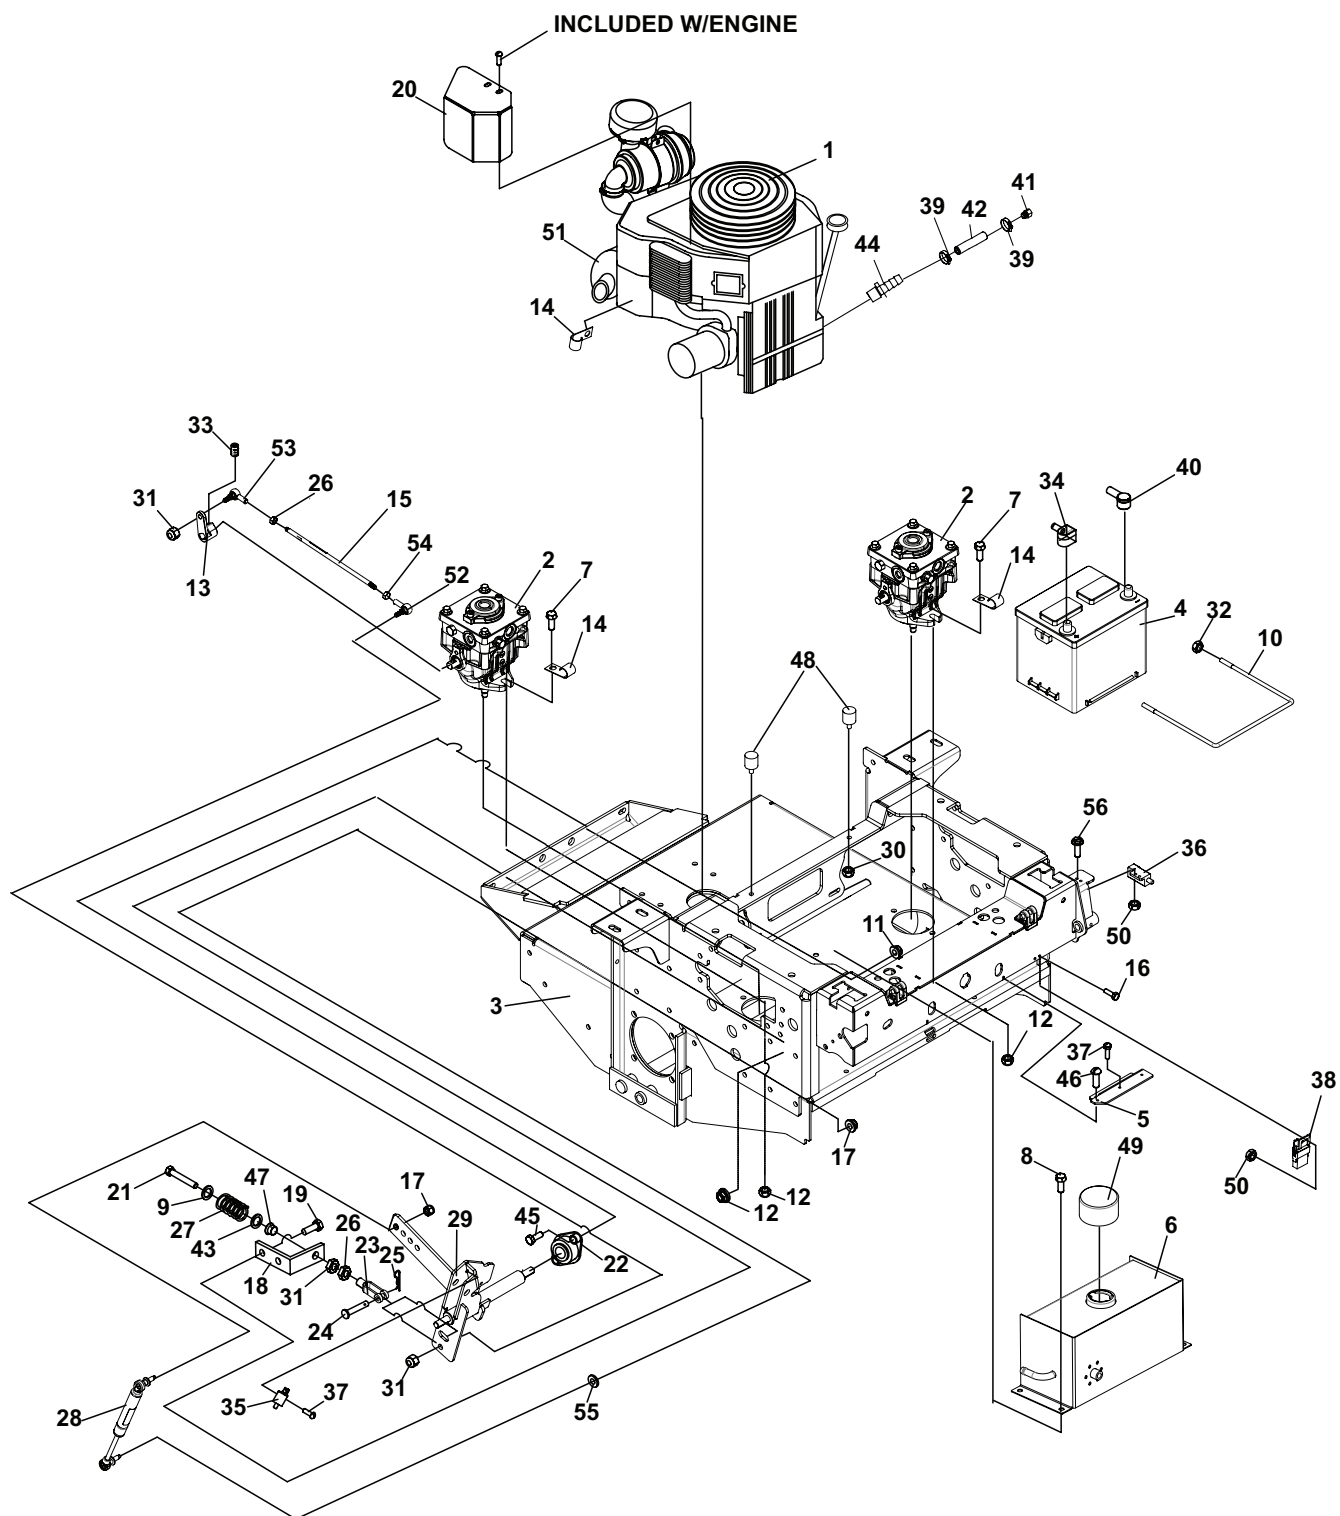

PREDATOR-PRO LP SERIES

UPPER ENGINE DECK ASSY

FIGURE 1


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4164734	ENGINE-GVT990-LP GENERAC	1	30	64141-6	NUT-WLF 5/16-18	2
*	2198147-01	ELEMENT	1	31	64229-08	LOCKNUT NYLON 5/16-24	6
*	4135662	AIR FILTER SECONDARY	1	32	64268-02	NUT-FL NYLON LOCK 5/16-18	2
*	4135663	FILTER-OIL	1	33	64192-06	SETSCR SQHD 5/16-18X3/4	2
*	4136930	SPARK PLUG	1	34	112386	BOOT,BAT TERM POS	1
*	4136939	GASKET-VALVE COVER	1	35	108208	SWITCH DBL POLE	2
2	4165664	PUMP-HYDROSTATIC 16CC (SEE FIGURE 8 FOR BREAKDOWN)	2	36	2188156	SWITCH-NONO DBL POLE	1
3	4167906	S-ENGINE DECK W/LABS	1	37	64197-015	BLT-TDFM 10-32X1/2 TORX	6
4	33-015	BATTERY	1	38	2188154	MODULE-DELAY	1
5	4165497.7	BRACKET-RELAY MNTG	1	39	88042-03	CLAMP-HOSE 5/8	2
6	4167655	S HYD RESERVOIR W/LABS	1	40	2308095	COVER-TERMINAL	1
7	64262-012	BLT-FLG HD 3/8-16 X 1-1/4	4	41	4164251	VALVE-OIL DRAIN	1
8	64197-016	BLT-TDFM 3/8-16X1/2	4	42	69053-03	HOSE, HYDRAULIC 18"	1
9	64163-02	WSHR .321X.593X11GA	2	43	64163-55	WASHER .328X.75X14 GA	4
10	4143570	STRAP-BATTERY	1	44	4164252-001	FITTING-3/8NPT TO 3/8	1
11	64141-4	NUT-WLF 3/8-16	8	45	64123-15	BOLT-3/8-16X3/4 HEX	8
12	64268-03	NUT-FL NYLON LOCK 3/8-16	8	46	64197-025	BLT-TDFM 1/4-20X5/8	2
13	4159521	ARM-PUMP	2	47	38304-02	BRG, FLGD PLASTIC	2
14	48412-01	CLAMP-J	3	48	4143354	BUMPER-RUBBER	2
15	4167289	ROD-LINK ASSY	2	49	4167240	CAP-RESERVOIR	1
16	64152-46	SCREW-SLT HH 10-24X1/2	2	50	64025-15	NUT-HEX #10-24 KEPS	4
17	64237-05	LOCKNUT-NYLON M8-1.25	4	51	4164626	MUFFLER-GENERAC	1
18	2182405.7	BRKT-REVERSE RETURN	2	52	4167343-02	ROD END-5/16 FEMALE LH	2
19	64123-50	BLT-HEX 3/8-16X1	4	53	4167343-01	ROD END-5/16 FEMALE RH	2
20	4162803.7	DEFLECTOR-AIRFLOW	1	54	64025-33	NUT-HEX 5/16-24 LH	2
21	64123-205	BLT-HEX 5/16-24X4	2	55	64025-03	NUT-HEX 5/16-24 RH	2
22	2188145	BEARING-.75ID BRZ	4	56	64152-49	SCREW-SLT HH 10-24X3/4	2
23	38020N	CLEVIS YOKE, 5/16 PLATE	2	57	64163-95	WSHR-.344X.688X.065	2
24	64188-02	PIN, CLEVIS 5/16X1	2				
25	64168-2	COTTER-HAIRPIN.08X1.19	2				
26	64025-03	NUT-HEX 5/16-24	2				
27	2188139	SPRING-COMPRESSION	2				
28	4171612	DAMPER	2				
29	4167143	WLDMT-MOTION CTRL LH	1				
*	4167144	WLDMT-MOTION CTRL RH	1				

* NOT ILLUSTRATED

LOWER ENGINE DECK ASSY

PREDATOR-PRO LP SERIES

FIGURE 2

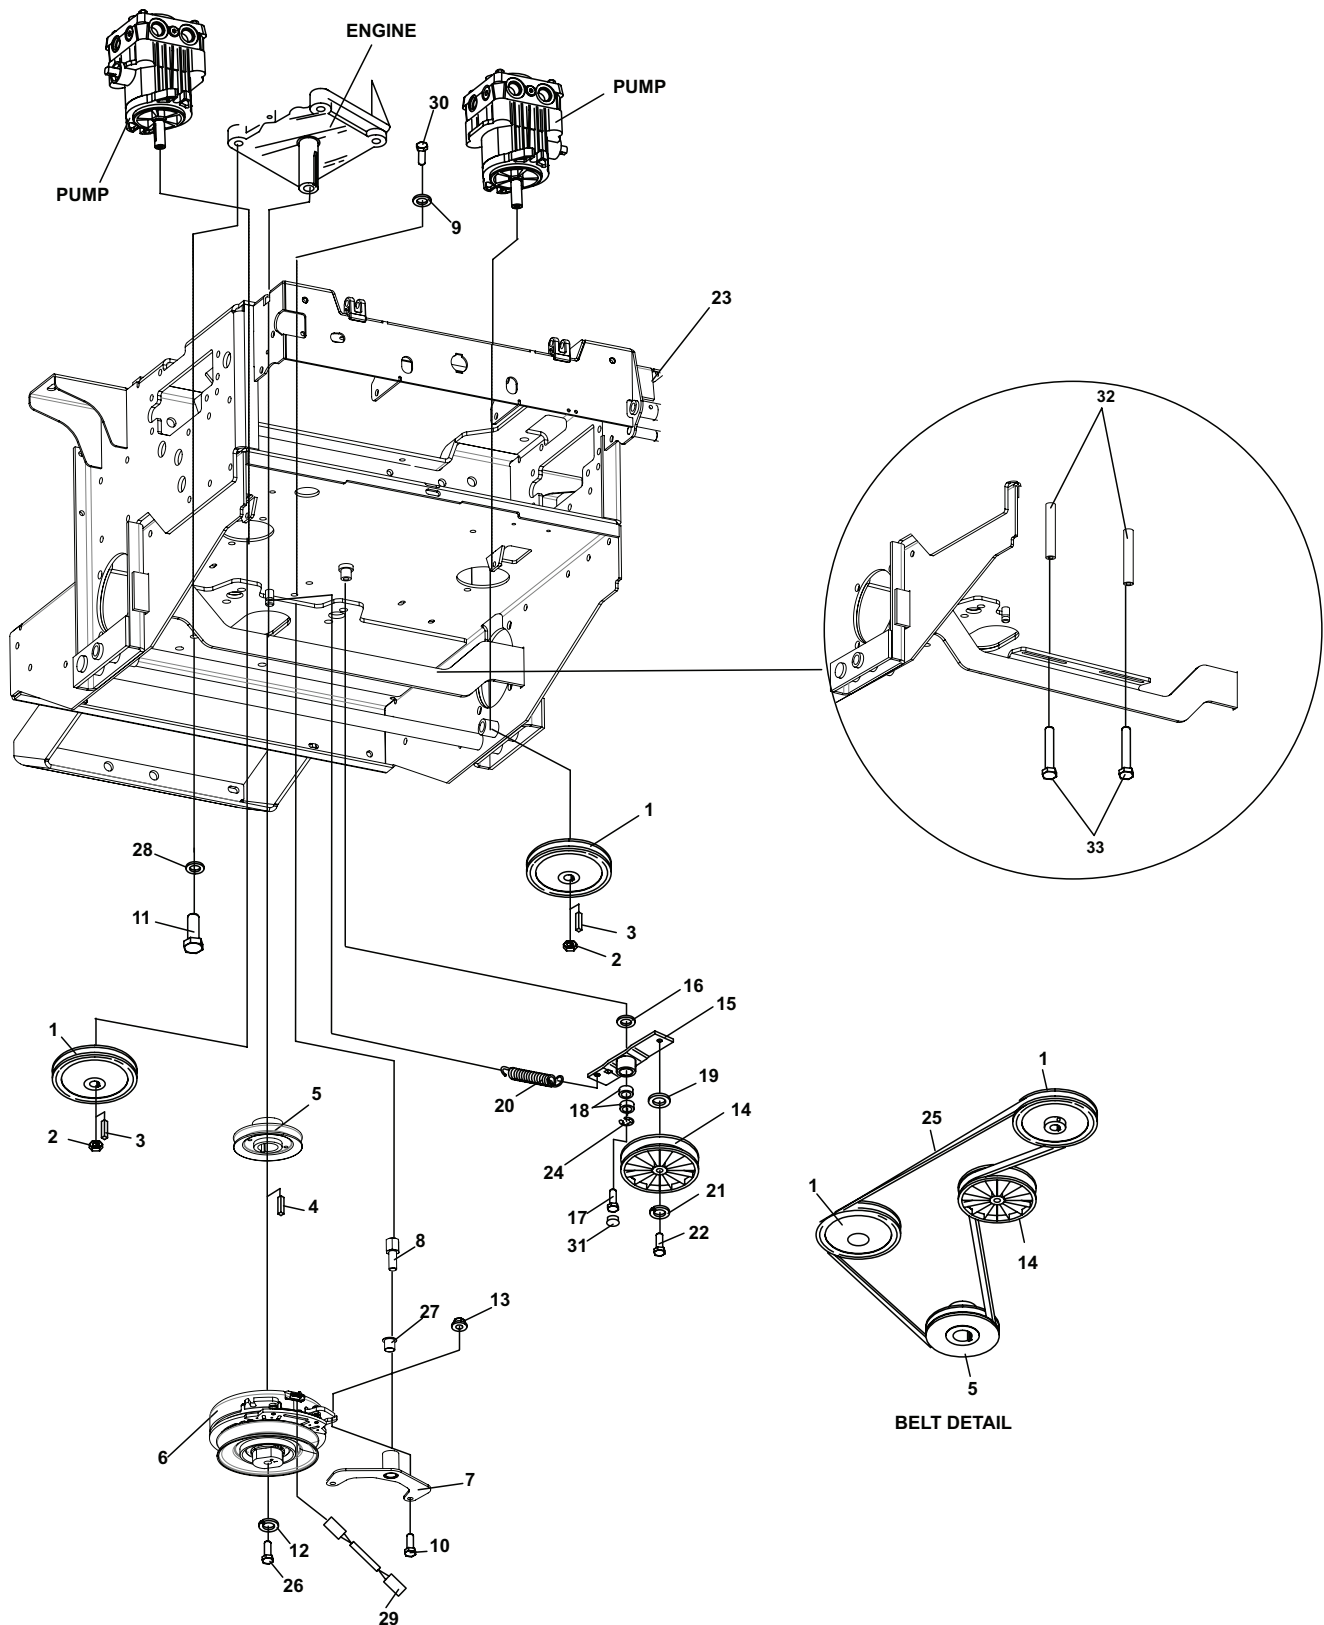

PREDATOR-PRO LP SERIES

LOWER ENGINE DECK ASSY


FIGURE 2

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4157180	PULLEY-PUMP	2				
2	64151-26	NUT-7/16-20 NYLN INST.	4				
3	64164-29	KEY-MET 3/16X3/4	2				
4	64164-12	KEY	1				
5	4165507	PULLEY-ENGINE	1				
6	4165784	CLUTCH-ELECTRIC, 250	1				
7	4165570.7	WLDMT-CLUTCH STOP	1				
8	4121540	PIN-CLUTCH	1				
9	64006-03	LOCKWSHR-3/8 HELICAL	1				
10	64123-54	BLT-HEX 5/16-18X3/4	2				
11	64123-70	BLT-HEX 3/8-16X1-1/2	4				
12	64006-06	LCKWSHER-HELICAL 7/16	1				
13	64268-02	NUT-FL NYLON LCK 5/16-18	2				
14	2308000	PULLEY-IDLER 4.00 EOD	1				
15	4128923	S-ASSY-IDLER ARM PUMP	1				
		(INCLUDES ITEMS 16, 18 & 24)					
16	4127999	SEAL	1				
17	64270-01	BOLT-MET HEX M10-1.5X30	1				
18	4128004	BEARING	2				
19	33148-01	SPACER-0.379X0.750X0.25	1				
20	2188131	SPRING-EXTENSION	1				
21	64006-03	WSHR, 3/8 HELICAL LOCK	1				
22	64123-21	BLT-HEX 3/8-24X1-1/4	1				
23	4167906	S-ENGINE DECK W/LABS	1				
		(INCLUDES ITEMS 32 & 33)					
24	64144-40	SNAP RING	1				
25	4157920	BELT PUMP DRIVE	1				
26	64123-216	BLT-HEX 7/16-20X2-1/4	1				
27	38304-03	BEARING-FLNGD PLASTIC	1				
28	64006-03	LOCKWSHR-3/8 HELICAL	4				
29	2720949	ASSY-CLUTCH WIRE	1				
30	64123-15	BLT-HEX 3/8-16X3/4	1				
31	4128002	END CAP	1				
32	4166355	PIN-BELT GUIDE	2				
33	64262-006	BLT-5/16-18X1	2				

BUMPER

**PREDATOR-PRO
LP SERIES**

FIGURE 3

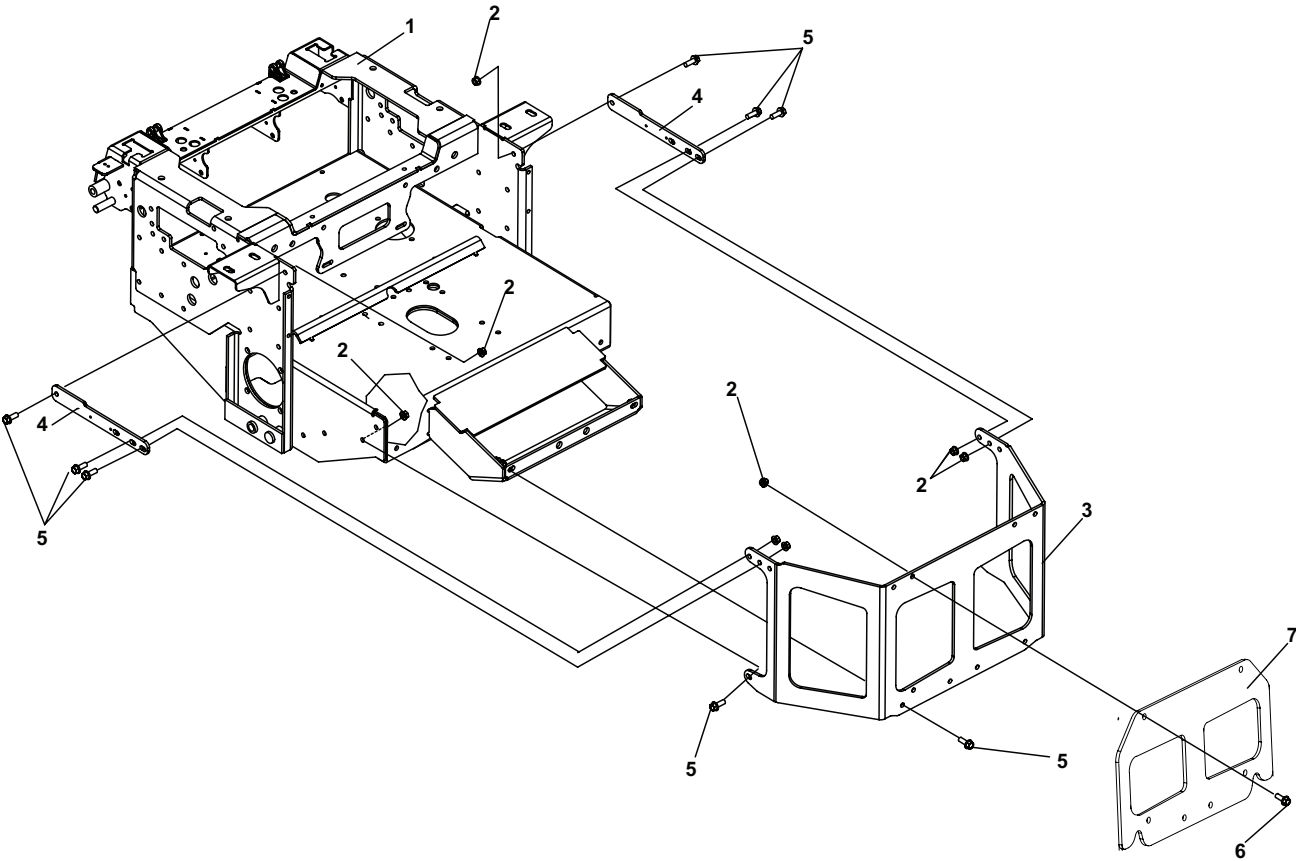


PREDATOR-PRO LP SERIES

BUMPER

FIGURE 3

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4167906	S-ENG DECK W/LABS	1				
2	64268-03	NUT-FL NYLON LOCK 3/8-16					
		QTY 10 ON 61" DECK					
		QTY 14 ON 72" DECK					
3	4165490.7	WRAPPER-BUMPER	1				
4	4165492.7	STRAP-BUMPER	2				
5	64262-012	BLT-FLG HD 3/8-16 X 1-1/4	10				
ITEMS 2 & 7 USED ON 72" DECKS ONLY							
6	64262-014	BLT-FLANGE HD 3/8-16 X 2	4				
7	4165424.7	WEIGHTS	5				

FIGURE 4

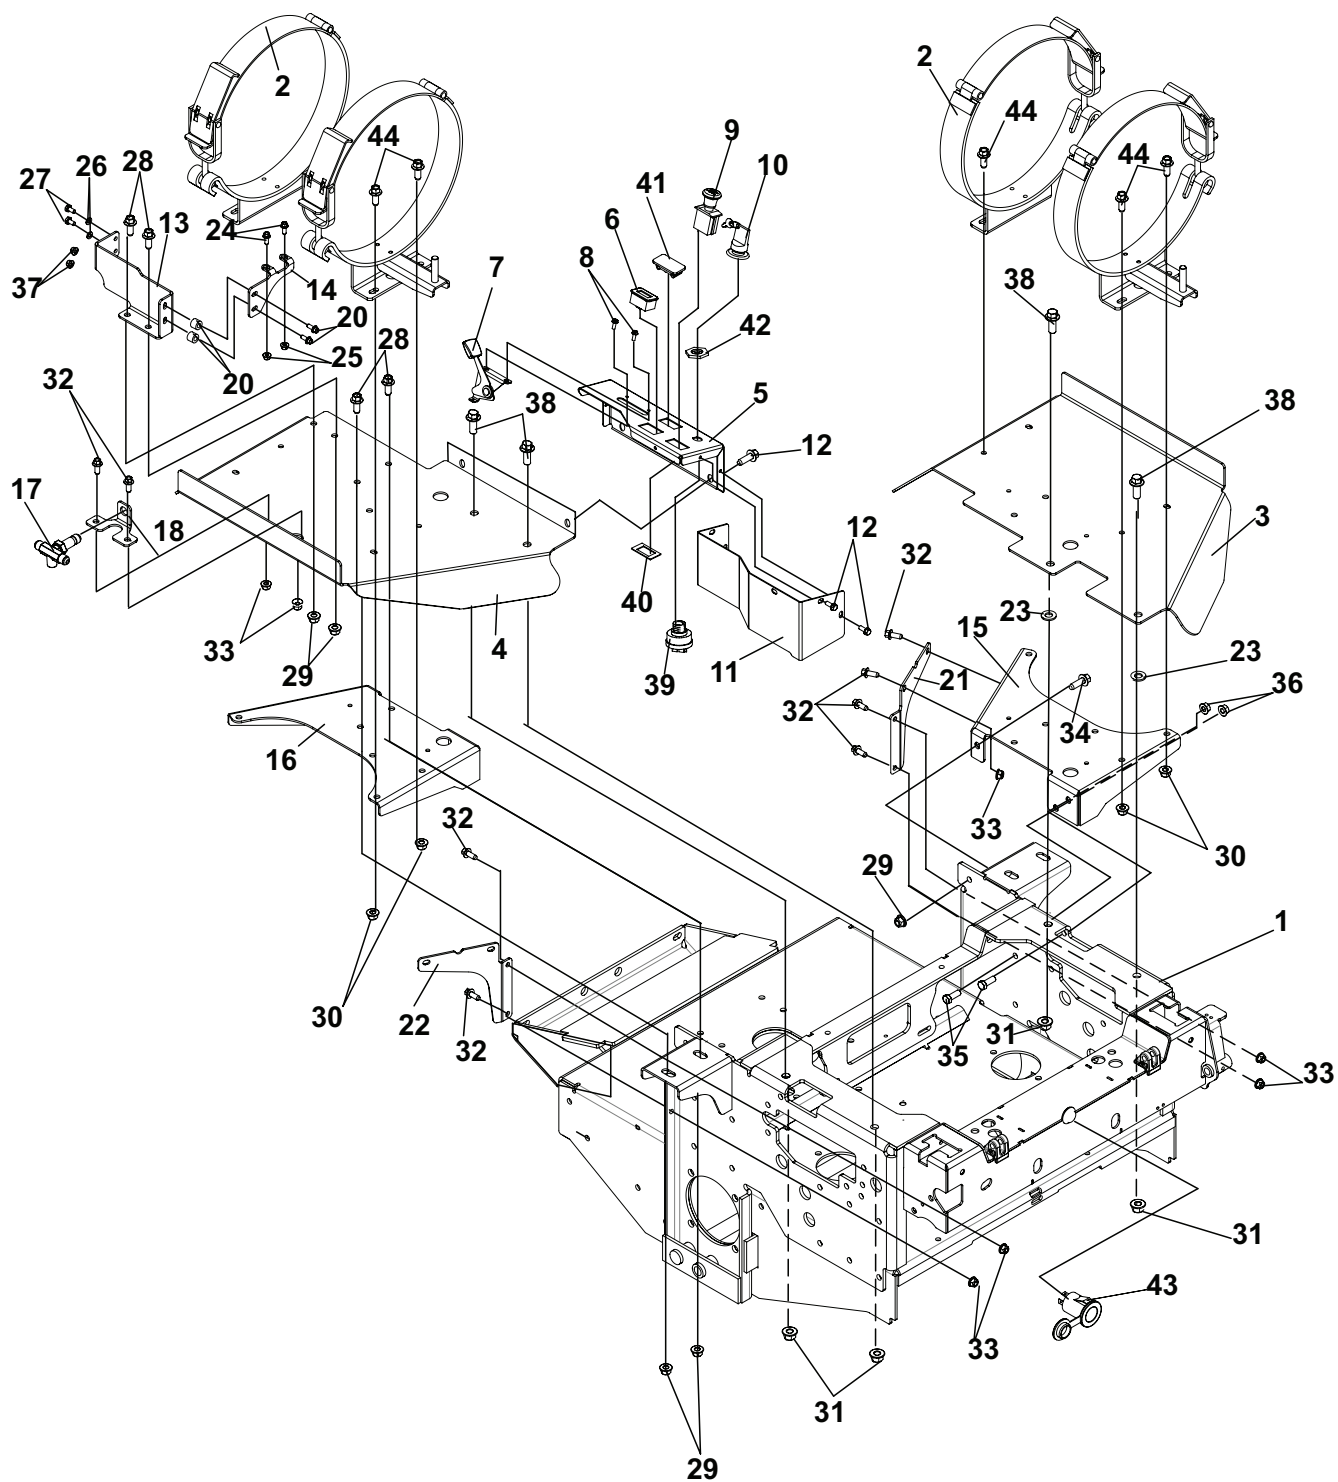

PREDATOR-PRO LP SERIES


PROPANE TANKS / CONTROL PANEL

FIGURE 4

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4167906	S-ENG DECK W/ LABS	1	40	2188178	RETAINER-SWITCH	1
2	4164737	ASSY-LP TANK MOUNTING	2	41	4110023	PLUG-SWITCH HOLE	1
	4164737-03	LATCH-TOGGLE		42	128010-01	S-KEY SWITCH NYLON NUT	1
3	4165184	S-FENDER,LH	1	43	1412266	CONNECTOR-12V	1
4	4166513	S-FENDER,RH	1	44	64262-007	BLT-FLG HD 5/16-18 X 1	8
5	4166659	PANEL-CONTROL	1	45*	4165296	CAP- DUST, PROPANE	1
6	4165120	METER-HOUR	1				
7	118020-16	CABLE-THROTTLE 48.00	1				
8	64152-46	SCREW-SLT HH 10-24X1/2	2				
9	2721505	SWITCH-PTO	1				
10	128010	SWITCH-KEY 5 TERM MAG	1				
11	4166125.7	COVER-CONTROL PANEL	1				
12	64152-27	SCREW-SP 1/4-20X5/8	10				
13	4165908.7	BRKT-REGULATOR MNTNG	1				
14	4164293.7	BRKT-FUEL FILTER	1				
15	4164613.7	GUSSET-FENDER LH	1				
16	4164614.7	GUSSET-FENDER, RH	1				
17	4164736	VALVE-DUAL CHECK	1				
18	4164628.18	BRKT-FUEL VALVE	1				
19*	970391	KIT-LIGHT ACCESSORY	1				
20	64262-002	BLT-FLG HD 1/4-20 X 3/4	2				
21	4164975.7	GUSSET-TANK MNTNG LH	1				
22	4165062.7	GUSSET-TANK MNTNG RH	1				
23	64163-67	WSHR-.516X1X12GA	2				
24	64262-002	BLT-FLG HD 1/4-20 X 3/4	2				
25	64229-01	NUT-NYLON LOCK 1/4-20	4				
26	64006-01	LOCKWSHR-1/4 HELICAL	2				
27	64123-49	BLT-HEX 1/4-20X1/2	2				
28	64262-011	BLT-FLG HD 3/8-16 X 1	8				
29	64268-03	NUT-FL NYLON LOCK 3/8-16	8				
30	64229-02	NUT-NYLON LOCK 5/16-18	8				
31	64268-05	NUT-FL NYLON LOCK 1/2-13	4				
32	64262-006	BLT-FLG HD 5/16-18 X 3/4	10				
33	64262-02	NUT-FL NYLON LOCK 5/16-18	10				
34	64262-012	BLT-FLG HD 3/8-16 X 1-1/4	4				
35	64123-50	BLT-HEX 3/8-16 X 1	4				
36	64141-4	NUT-WLF 3/8-16	4				
37	64141-2	NUT-WLF 1/4-20	2				
38	64262-016	BLT-FLG HD 1/2-13 X 1-1/2	4				
39	128010-03	KEY-SWITCH	1				

*NOT ILLUSTRATED

FIGURE 5

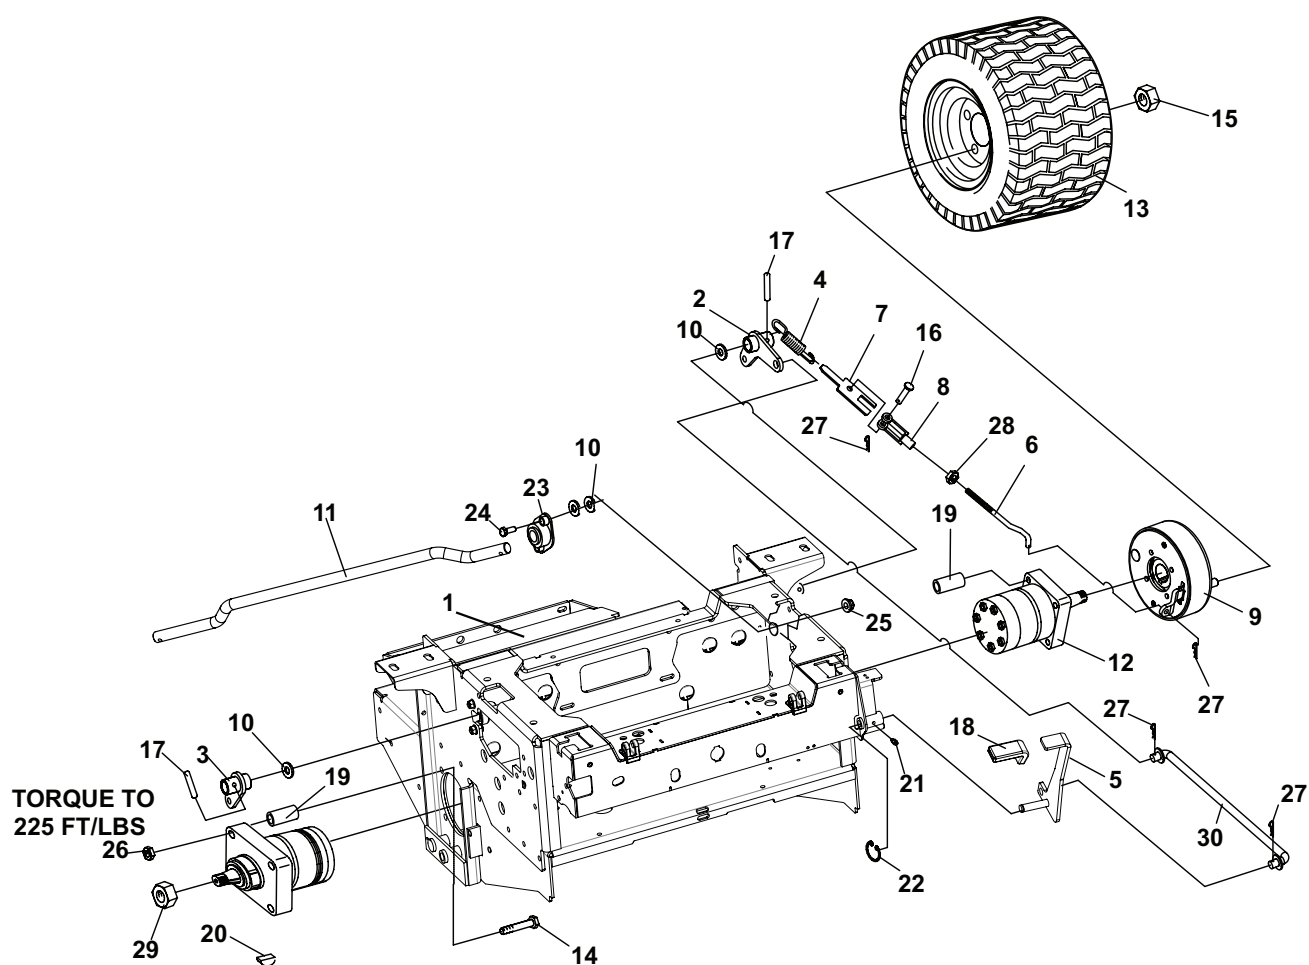

PREDATOR-PRO LP SERIES

BRAKES / REAR WHEEL

FIGURE 5


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4167906	S-ENGINE DECK W/LABS	1	21	85010N	ZERK, 1/4-28 STR SLFTHRD	1
2	4165701.7	WLDMT-BRAKE ARM LH	1	22	64144-34	SNAP RING.50	1
3	4165700.7	WLDMT-BRAKE ARM RH	1	23	2188145	BEARING-.75ID SELF ALIGN	2
4	128102	SPRING,EXTENSION	2	24	64123-15	BOLT-3/8-16X3/4 HEX	4
5	4165449.7	WLDMT-BRAKE LEVER	1	25	64141-4	NUT-WLF 3/8-16	4
6	4159701	ROD-BRAKE CONTROL	2	26	64229-05	NUT-NYLON LOCK 1/2-13	8
	(USED ON 52" & 61" DECKS)			27	64168-2	COTTER-HAIRPIN.08X1.19	4
	4159700	ROD-BRAKE CONTROL		28	64025-03	NUT-HEX 5/16-24	2
	(USED ON 72" DECK)			29	64025-31	NUT 1-20 UNSLOTTED TRW	2
				30	4159242	WLDMT-PRK BRAKE ROD	1
7	2182387.7	GUIDE-SPRING	2				
8	38020N	CLEVIS YOKE, 5/16 PLATE	2				
9	4167999	BRAKE-PARKER	2				
9A*	4167999-01	BRAKE-BACK PLATE	1				
9B*	4167999-02	BRAKE-DRUM	1				
9C*	4159281-003	BRAKE-SCREW	4				
10	64163-06	WSHR,.768/.756X1.25X14	A/R				
11	4159000	BAR-PARKING BRAKE	1				
12	4159280	MOTOR-PARKER	2				
	(INCLUDES ITEMS 20 & 29)						
*	970438	KIT-WHEEL HUB PULLER					
13	4171869	WHEEL-ASSY, 24X12.00-12	2				
	4171868-02	RIM12X8.50					
	4171869-01	TIRE-24X12.00-12					
	(61" & 72" DECKS ONLY)						
	4171868	WHEEL-ASSY, 23X10.5-12	2				
	4171868-02	RIM12X8.50					
	4171868-01	TIRE-23X10.50-12					
	(52" DECKS ONLY)						
14	64189-21	BLT-HEX SOC 1/2-13X4 1/2	8				
	(USED ON 52" & 61" DECKS ONLY)						
	64189-22	BLT-HEX SOC 1/2-13 X 6					
	(USED ON 72" DECKS ONLY)						
15	64187-03	WHEEL NUT-1/2-20	8				
16	64188-02	PIN, CLEVIS 5/16X1	2				
17	64061-25	ROLL PIN-1/4X1-1/4	2				
18	2188155	GRIP, 1/4X1X4-1/2	1				
19	2183063-01	SPACER, 32MM LONG	8				
	(USED ON 52" & 61" DECKS ONLY)						
	2183063-05	SPACER, 19-05X12.97X4	16				
	(USED ON 72" DECKS ONLY)						
20	64164-08	S-KEY FOR WHEEL MOTOR	2				

*NOT ILLUSTRATED

OIL COOLER

PREDATOR-PRO LP SERIES

FIGURE 6

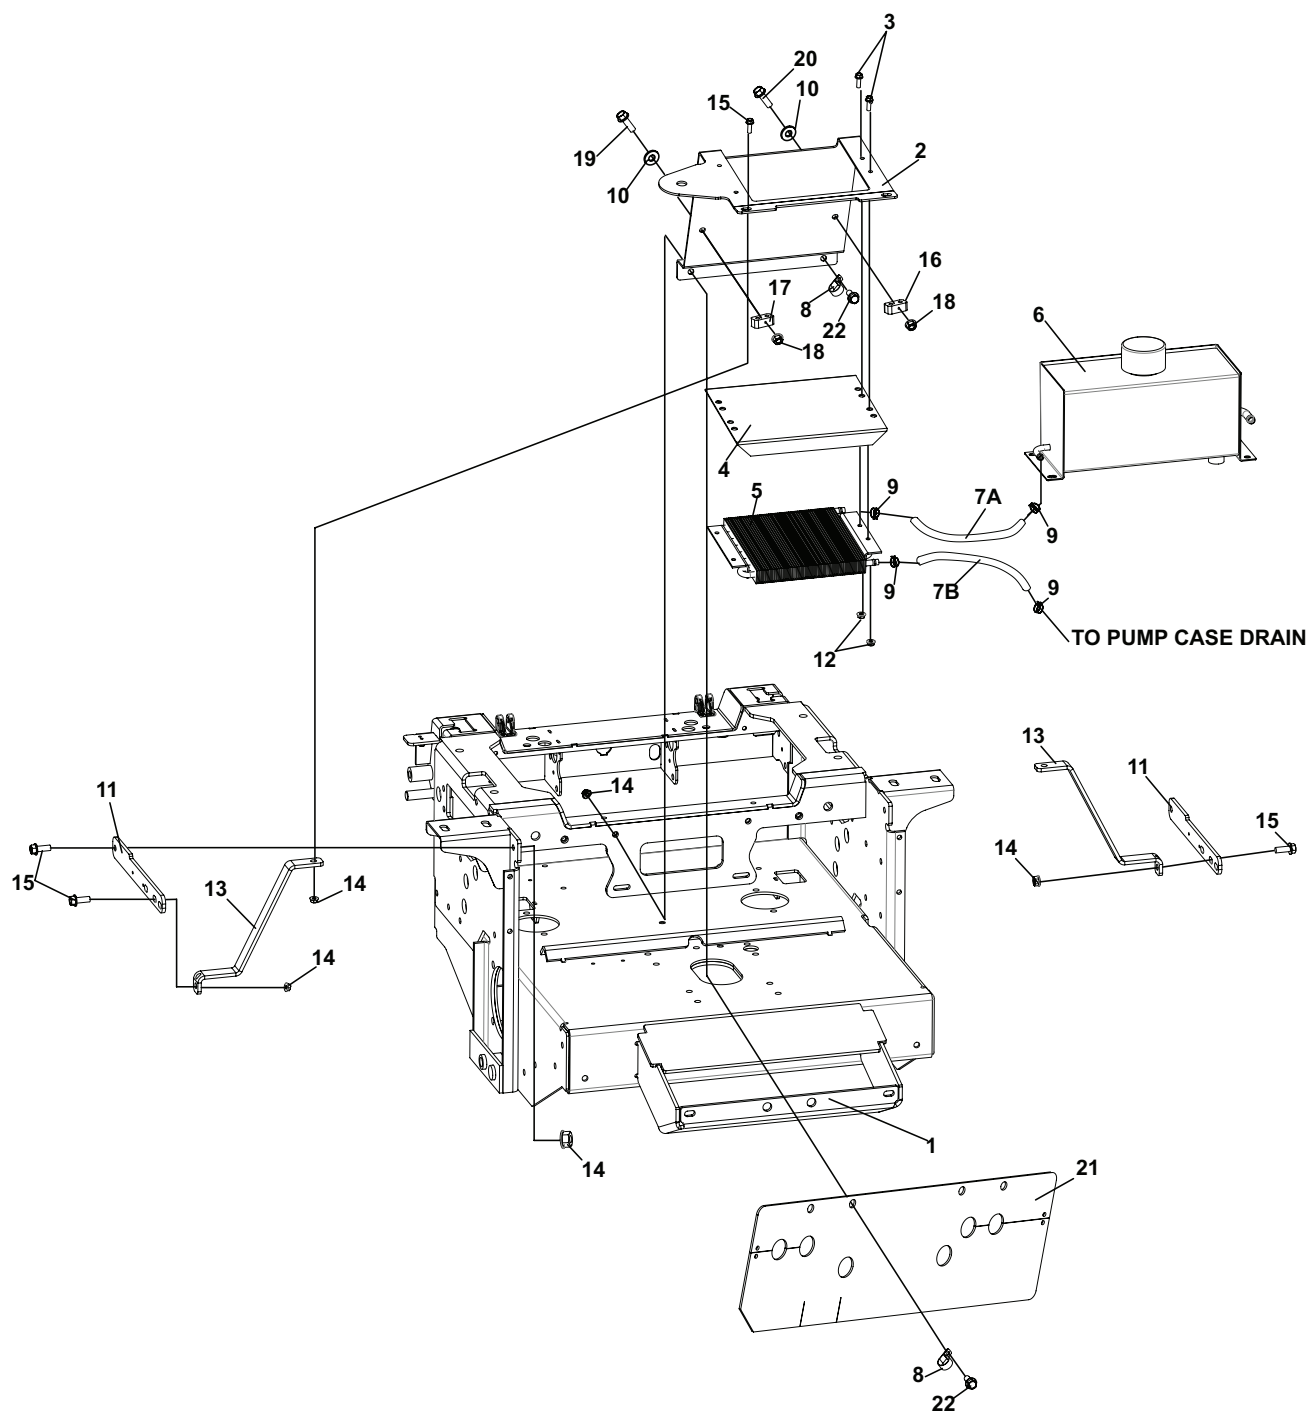


PREDATOR-PRO LP SERIES

OIL COOLER

FIGURE 6

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4167906	S ENGINE DECK W/LABS	1				
2	4166418.7	BRKT-COOLER FRONT	1				
3	64262-002	BLT-FLG HD 1/4-20 X 3/4	4				
4	2720891.7	SCREEN-OIL COOLER	1				
5	2188173	COOLER-OIL	1				
6	4167655	S HYD RSRVR W/LABS	1				
(69053-05 IS A SERVICEABLE LENGTH OF 55")							
7A	69053-05	3/8 HIGH TEMP HOSE	1				
7B	69053-05	3/8 HIGH TEMP HOSE	1				
8	48412-01	CABLE-CLIP N	2				
9	88042-04	CLAMP-3/4 CLIP	4				
10	64163-03	WSHR .256X.62X18GA	2				
11	4165492.7	ARM-BUMPER	2				
12	64229-01	NUT-NYLON LOCK 1/4-20	4				
13	4169246.7	BRKT-COOLER REAR	1				
14	64268-03	NUT-FL NYLON LOCK 3/8-16	8				
15	64262-012	BLT-FLG HD 3/8-16 X 1-1/4	4				
16	4165752	CLAMP-HOSE, 5/8IN	1				
17	4165751	CLAMP-HOSE, 1/2IN	1				
18	64229-01	NUT-NYLON LOCK 1/4-20	2				
19	64123-07	BLT-HEX 1/4-20X1-1/2	1				
20	64123-60	BLT-HEX 1/4-20X2	1				
21	4165457	SHIELD-HEAT	1				
22	64262-01	BLT-FLG HD 3/8-16 X 1	4				

FIGURE 7

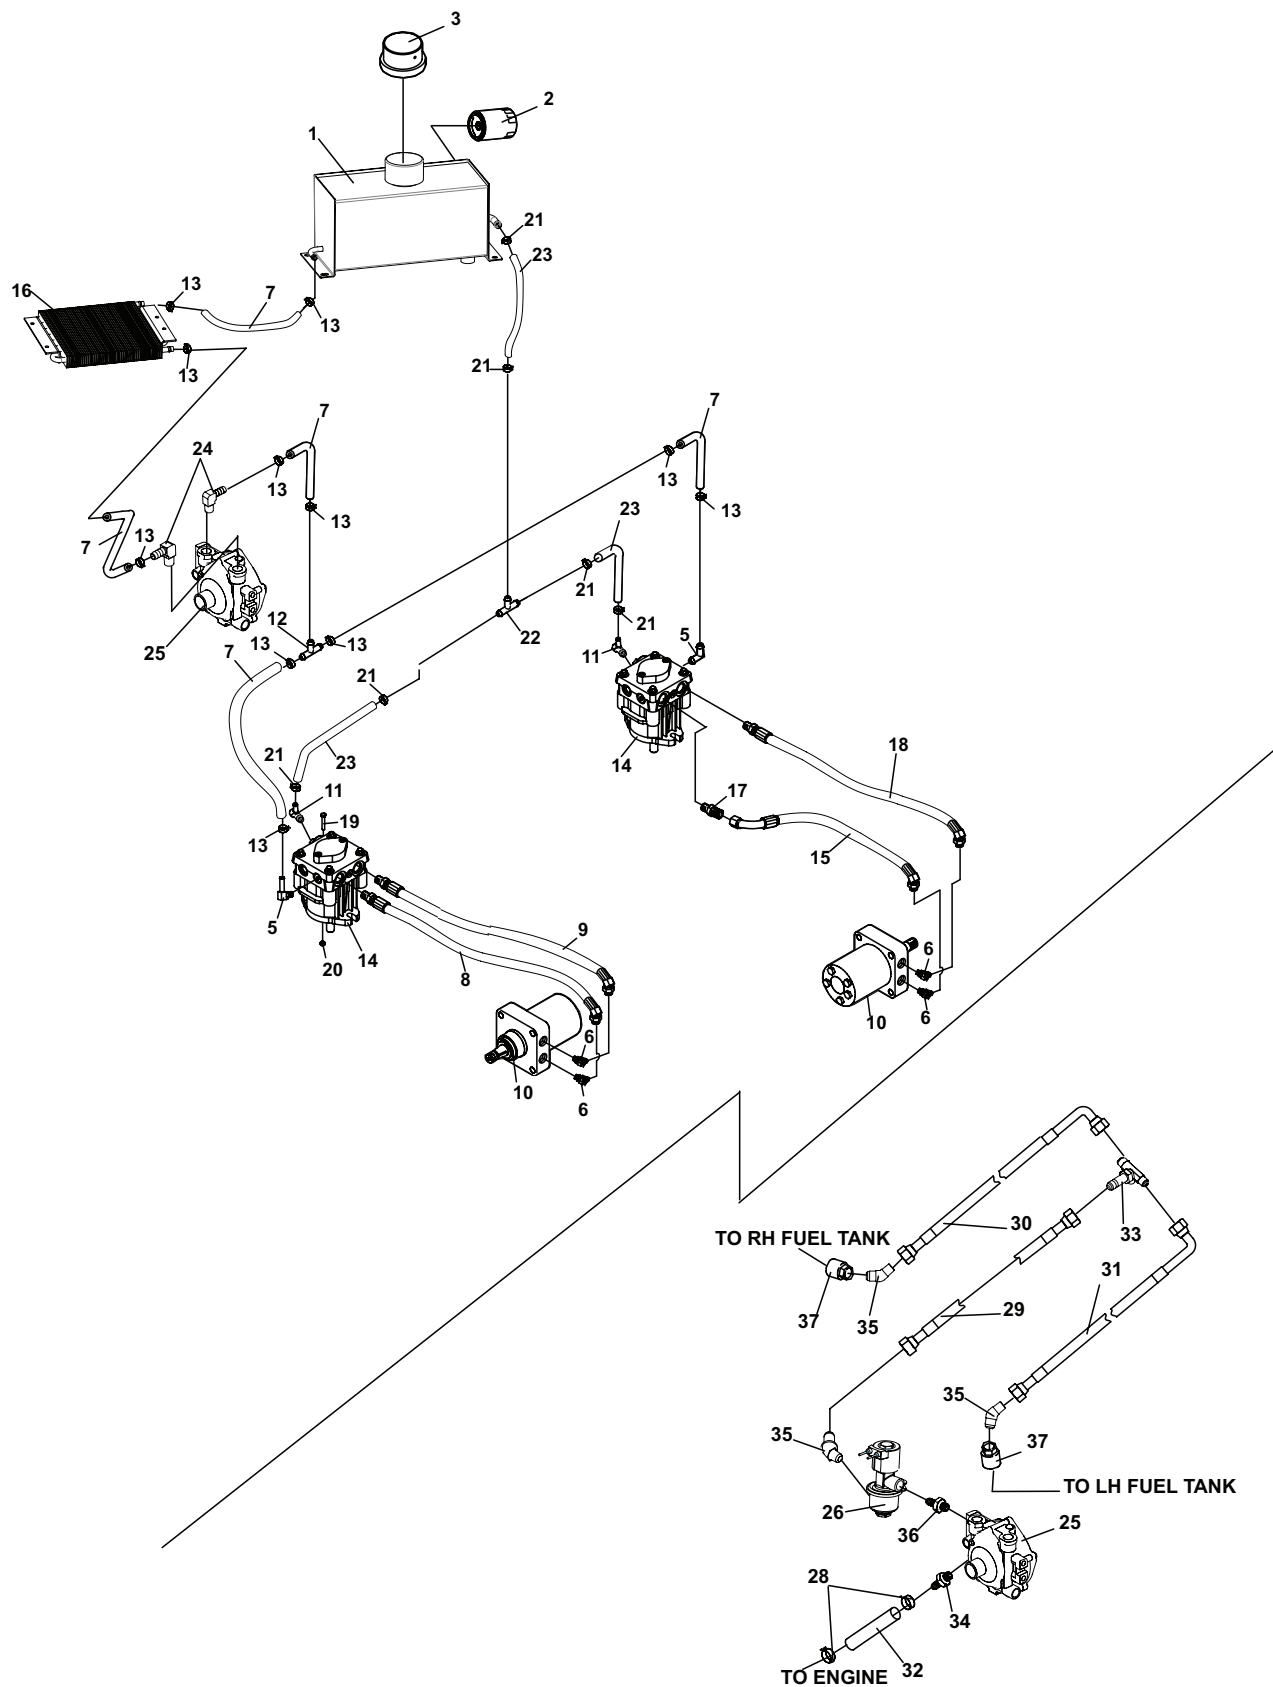

PREDATOR-PRO LP SERIES

FUEL LINES / HYDRAULICS


FIGURE 7

ITEM	PART NO.	DESCRIPTION	QTY
1	4167655	S HYD RESERVOIR W/LAB	1
2	2720396	FILTER 25 MICRON	1
3	4167240	CAP-RESERVOIR	1
4	4160243	PLUG-HYDRAULIC TANK	1
5	158058-04	FTG-90 BRB 9/16-18X.38	2
6	108205-03	ELBOW-MALE 45 37-ORB	4
7	69053-05	3/8 HIGH TEMP HSE (69053-05 IS A SERVICEABLE LENGTH OF 55")	4
8	2188157-02	LH PUMP PORT B-HOSE	1
9	2188157-01	LH PUMP PORT A-HOSE	1
10	4159280	MOTOR-PARKER	2
11	158058-19	FTG-90 ORB X 90 BARB	2
12	58026-01	3 WAY CONNECTOR 3/8	2
13	88042-04	CLAMP-HOSE 5/8	14
14	4165664	PUMP-HYDRO 16cc	2
15	2720320-01	RH PUMP PORT B-HOSE	1
16	2188173	OIL COOLER	1
17	48089-03	FTG-STRGHT 8 ORB X 8 JIC	1
18	2188157-01	RH PUMP PORT A-HOSE	1
19	64123-60	BOLT, 1/4-20X2 HEX	2
20	64229-01	LOCKNUT-NYL 1/4-20	2
21	88042-05	CLAMP-HOSE 13/16	6
22	58026-04	3 WAY CONNECTOR 3/16	1
23	4165341-02	HOSE-HYDR, (4165341-02 IS A SERVICEABLE LENGTH OF 55")	3
24	4164939-01	FTG-ELB1/4 MNPT X 3/8	2
25	4166327	REGULATOR-PROPANE	1
26	4164940	SOLENOID-PROPANE	1
27*	4165171	KIT - FILTER, SOLENOID LP	1
28	108094-06	CLAMP-HOSE SAE10	2
29	4164788	HOSE-PROPANE 12.5"	1
30	4166397	HOSE-PROPANE	1
31	4166398	HOSE-PROPANE	1
32	4164743-001	HOSE-LOCKON	1
33	4164736	CONNECTOR-T,DUAL CHECK	1
34	4164939-02	FTTNG-ELB 3/8 NPT X1/2	1
35	4164941-001	FTTNG-ELB 45,1/4NPTX3/8M45	3
36	4165204-001	FTTNG-HEX 1/4 X 1/4MNPT ST	1
37	4164891	FITTING-FML CPLER ACME	2
38*	4165296	CAP - DUST	1

SAE PORT 'O' RING		
PART NUMBER	THREAD SIZE	AS-568#
158061-10	9/16-18	-906
158061-11	3/4-16	-908
158061-12	7/8-14	-910
158061-13	1-1/16-12	-912
158061-14	1-5/16-12	-916
158061-16	1-5/8-12	-920
158061-03	1-7/8-12	-924

* NOT ILLUSTRATED

FIGURE 8

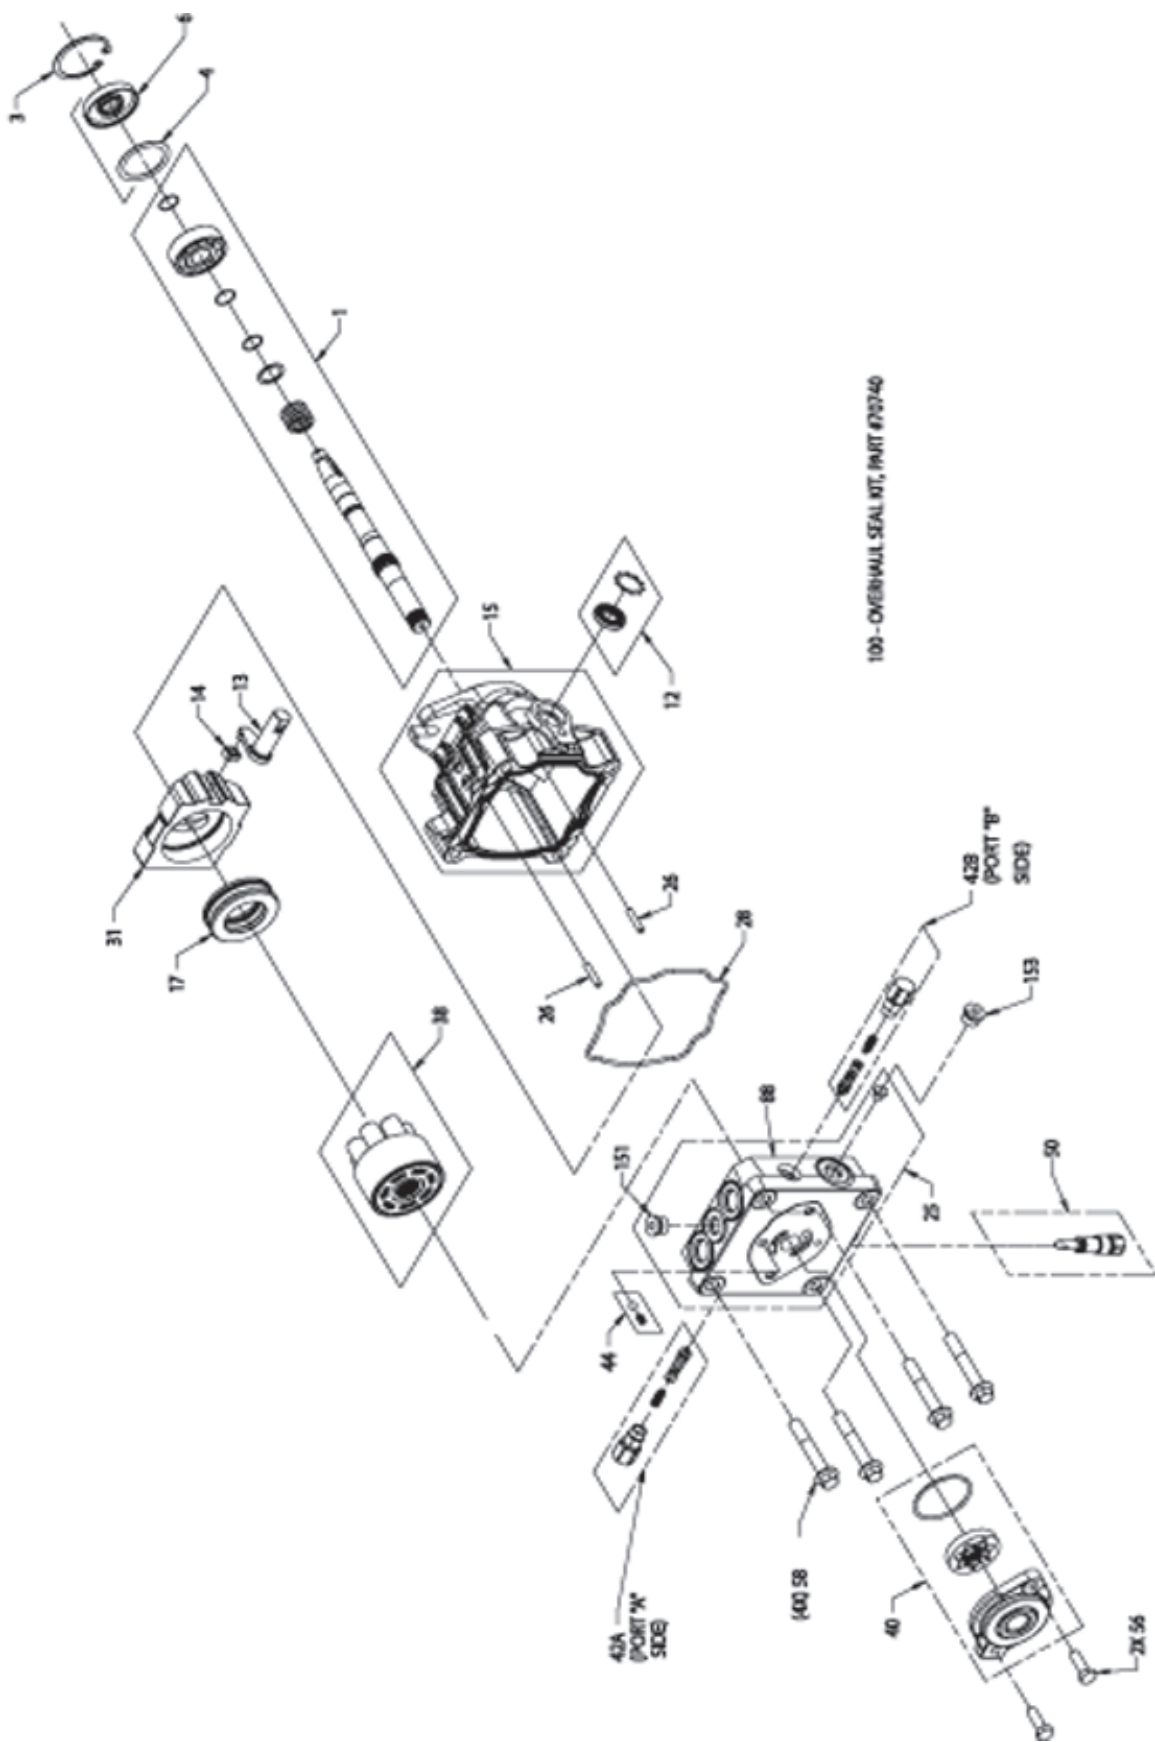

PREDATOR-PRO LP SERIES

HYDROGEAR PUMP


FIGURE 8

ITEM	HYDROGEAR PART NO.	CGC, INC. PART NO.	DESCRIPTION	QTY
1	71019	4157242-001	PUMP SHAFT KIT-TAPERED	1
3	2000038	4157242-002	RETAINING RING	1
4	2000023	4157242-003	SPACER	1
6	51092	4157242-004	LIP SEAL	1
12	70739	4157242-005	TRUNNION SEAL/RETAINER	1
13	2000014	4157242-006	TRUNNION ARM	1
14	2000015	188059-09	SLOT GUIDE	1
15	70738	4157242-007	HOUSING KIT	1
17	51462	4157242-008	BALL THRUST BEARING	1
25	72161	415664-001	END CAP KIT (STD)	1
	(ORDER 28 AND 38 ALSO)			
26	50641	4157242-010	STRAIGHT HEADLESS PIN	2
28	51436	4155664-002	HOUSING O-RING	1
	(ORDER 25 AND 38 ALSO)			
29	52371	4157242-012	VALVE PLATE	1
31	51436	4157242-013	SWASHPLATE	1
38	72158	4165664-003	CYL BLOCK KIT (16 cc)	1
	(ORDER 28 AND 25 ALSO)			
40	2510071	4157242-015	CHARGE PUMP KIT	1
42A	70743	4121354	SHOCK VALVE KIT (0.031" ORF	1
42B	70741	4121355	SHOCK VALVE KIT (BLANK)	1
44	70402	4157242-016	CHARGE RELIEF VALVE KIT	1
50	2513030	4157242-019	BYPASS VALVE KIT (BLANK)	1
56	50173	4157242-021	HEX FLANGE BOLT-M8-1.25X25	2
58	51457	4157242-022	FH M10 X 65	4
100	70740	4157242-023	OVERHAUL SEAL KIT	1
153	9005100-5600	4157242-025	9/16 STEEL PLUG	1

GENERAC WIRE HARNESS

FIGURE 9

PREDATOR-PRO LP SERIES

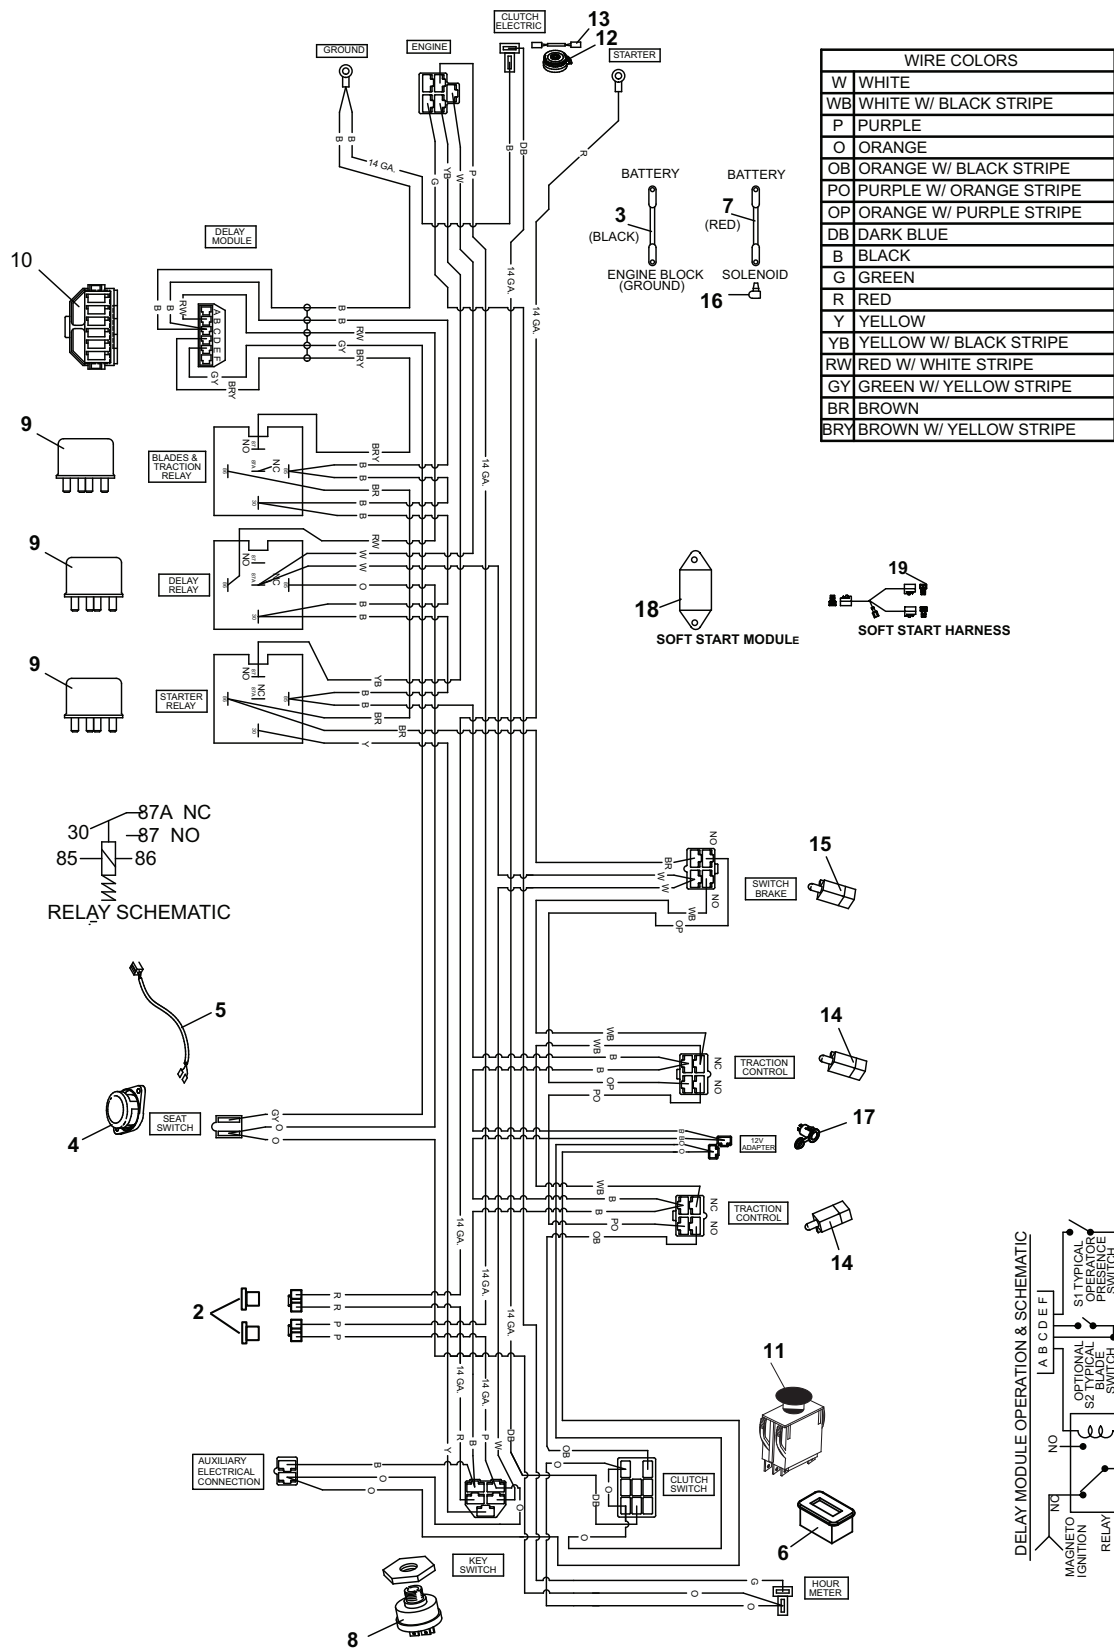

PREDATOR-PRO LP SERIES

GENERAC WIRE HARNESS

FIGURE 9


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4165575	HARNESS-WIRING MAIN	1				
2	148082-20	FUSE-20 AMP	2				
3	33-015	CABLE-BATTERY 4GA 30"	1				
	*30-105	COVER-TERMINAL, NEG	1				
4	4124009	SWITCH-SEAT, NO	1				
5	4143068	JUMPER-SEAT SWITCH	1				
6	4165120	METER-HOUR	1				
7	30-166	CABLE-BATTERY RED	1				
	*56-081-36	SLEEVING,0.77ID NYLON	1				
	*30-098	COVER-TERMINAL, POS.	1				
8	128010	KEY-SWITCH	1				
9	2722325	RELAY-40AMP SEALED	3				
10	2188154	MODULE-DELAY	1				
11	2721505	SWITCH-PTO	1				
12	4165784	CLUTCH-ELECTRIC	1				
	(INCLUDES ITEM 13)						
13	2720949	ASSY-CLUTCH WIRE	1				
14	108208	SWITCH-DBL POLE	2				
15	2188156	SWITCH-NONO DBL POLE	1				
16	2308095	COVER - TERMINAL	1				
17	4142266	CONNECTOR-12V	1				
18	4169459	CONTROL-SOFT START	1				
19	4165923	HARNESS-SOFT START	1				

***NOT ILLUSTRATED**

SEAT ASSEMBLY

PREDATOR-PRO LP SERIES

FIGURE 10

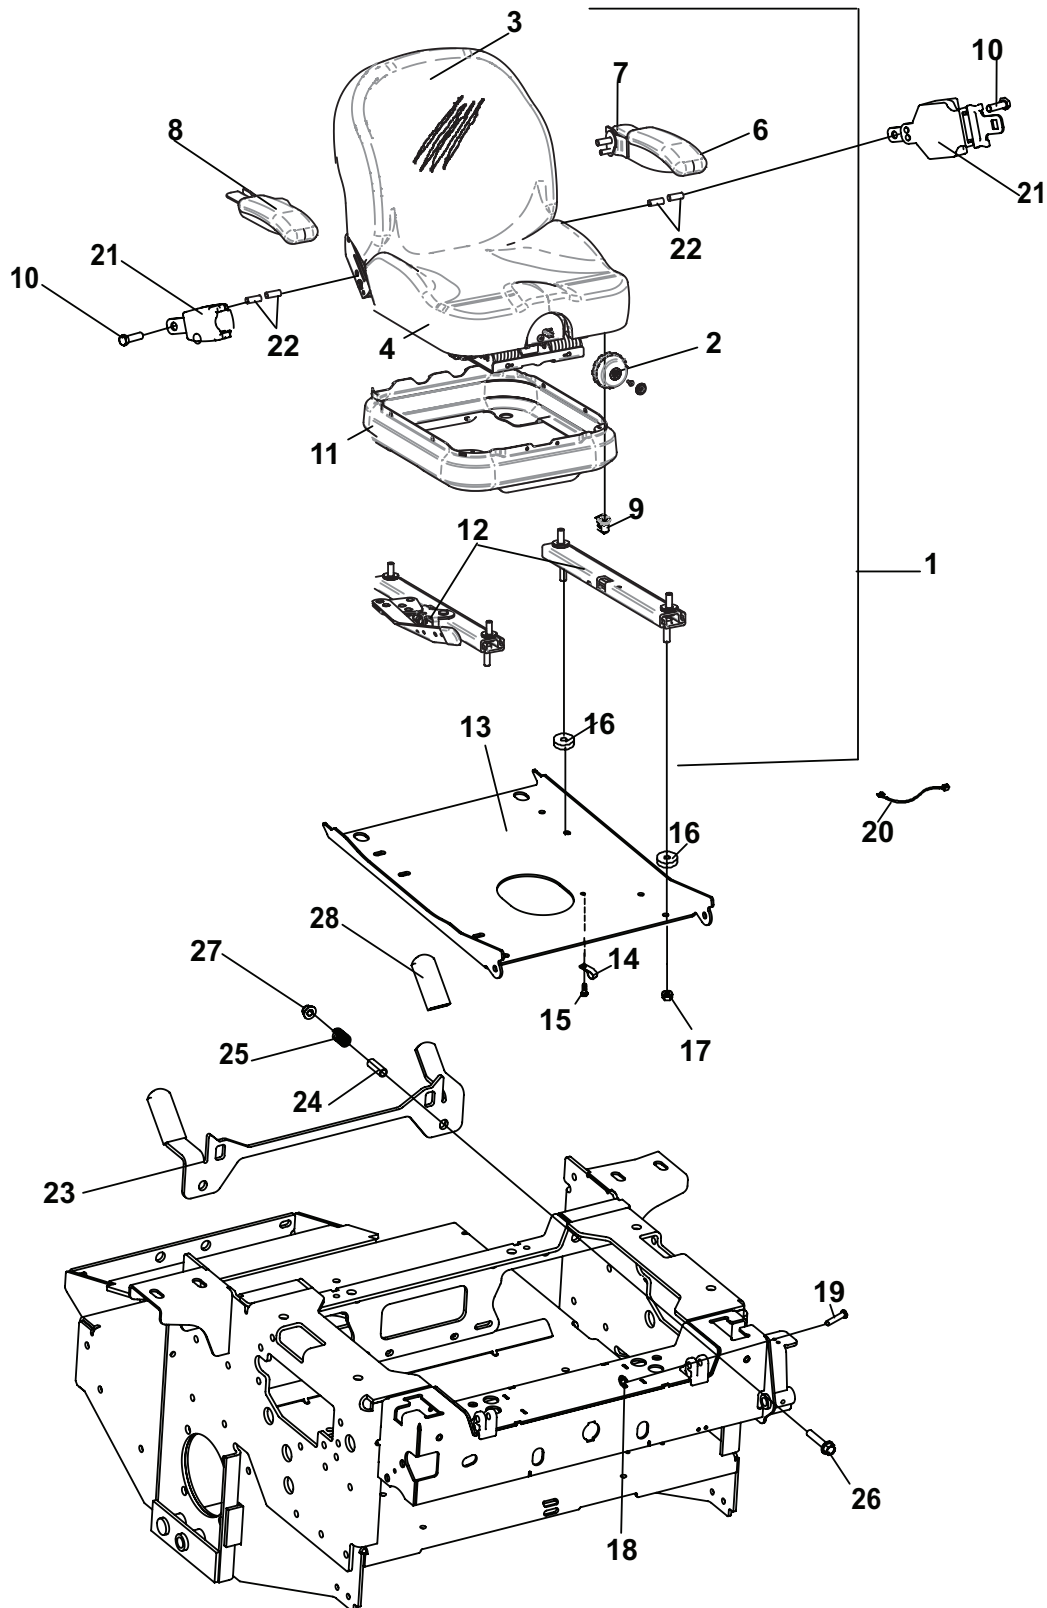

PREDATOR-PRO LP SERIES

SEAT ASSEMBLY

FIGURE 10


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4169768	SEAT ASSY (INCLUDES ITEMS 2-8, 11-12)	1				
2	4169768-05	KNOB-WGHT ADJUST	1				
3	4169768-01	COVER- BACK VINYL	1				
4	4169768-06	COVER-CUSHION	1				
5*	4169768-08	KIT-ARM RH & LH (INCLUDES ITEMS 7&8)	1				
6	4165316-02	PAD-ARM SINGLE	2				
7	4169768-02	ARM KIT-LH	1				
8	4169768-07	ARM KIT-RH	1				
9	4143068	SWITCH-SEAT NO	1				
10	64123-216	BLT-7/16-20 X2-1/4	2				
11	4169768-03	BELLOWS W/HRDWR	1				
12	4169768-04	TRACK SET-SEAT	1				
13	4169779.7	PLATE-SEAT	1				
14	48228A	CABLE CLIP-INSULATED	2				
15	64152-23	SCREW 1/4-20X3/8	2				
16	2720975-07	SPACER	4				
17	64141-6	NUT-WLF 5/16-18	4				
18	64144-30	SNAP RING	2				
19	33138-09	PIN-CLEVIS	2				
20	4143068	JUMPER-SEAT SWITCH	1				
21	4169768-09	KIT-SEAT BELT (INCLUDES ITEMS 10, 22)	2				
22	4167820-02	SPACER	4				
23	4169777.2	BRKT-LATCH,SEAT	1				
24	4169778	SPACER-LATCH,SEAT	2				
25	41-053	SPRING COMP .681X1.125	2				
26	64262-014	BLT-FLANGE HD 3/8-16 X 2	2				
27	64268-03	NUT-FL NYLON LOCK 3/8-16	2				
28	4135868	COVER-HANDLE	2				

* NOT ILLUSTRATED

FOLDING ROPS

FIGURE 11

PREDATOR-PRO LP SERIES

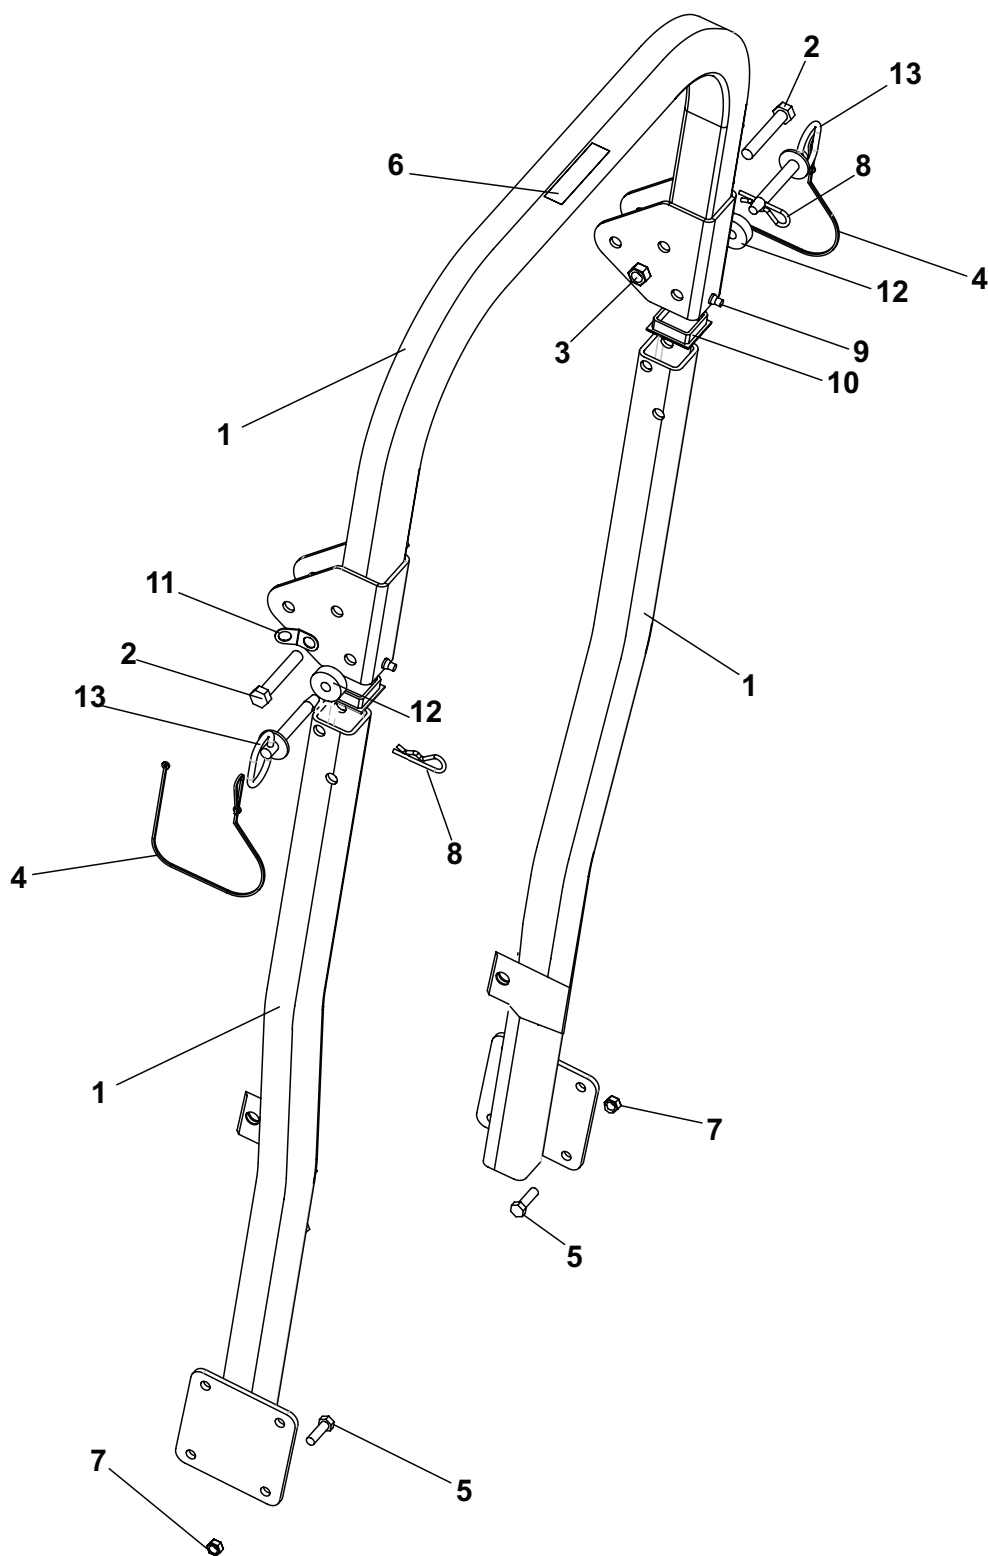

PREDATOR-PRO LP SERIES


FOLDING ROPS

FIGURE 11

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4168257	S-ROPS W/ LABELS (INCLUDES ITEMS 2-14)	1				
2	64123-31	BOLT-1/2-13 X 3	2				
3	64151-7	LOCKNUT- 1/2-13	2				
4	4162880	LANYARD-NYLON	2				
5	64262-011	BLT-FLG HD 3/8-16X1	8				
6	4160347	LABEL-WARNING ROPS	1				
7	64268-03	NUT-FL NYLN LOCK 3/8-16	8				
8	64168-1	PIN-COTTER	2				
9	4160343	BUMPER RUBBER	2				
10	4160344	PLUG	2				
11	4160348	WASHER-FORMED	2				
12	4162878	WASHER-RUBBER	2				
13	4162879	PIN-HITCH 1/2	2				
14*	4168073	LABEL-ROPS, TEST INFO	1				

*NOT ILLUSTRATED

FIGURE 12

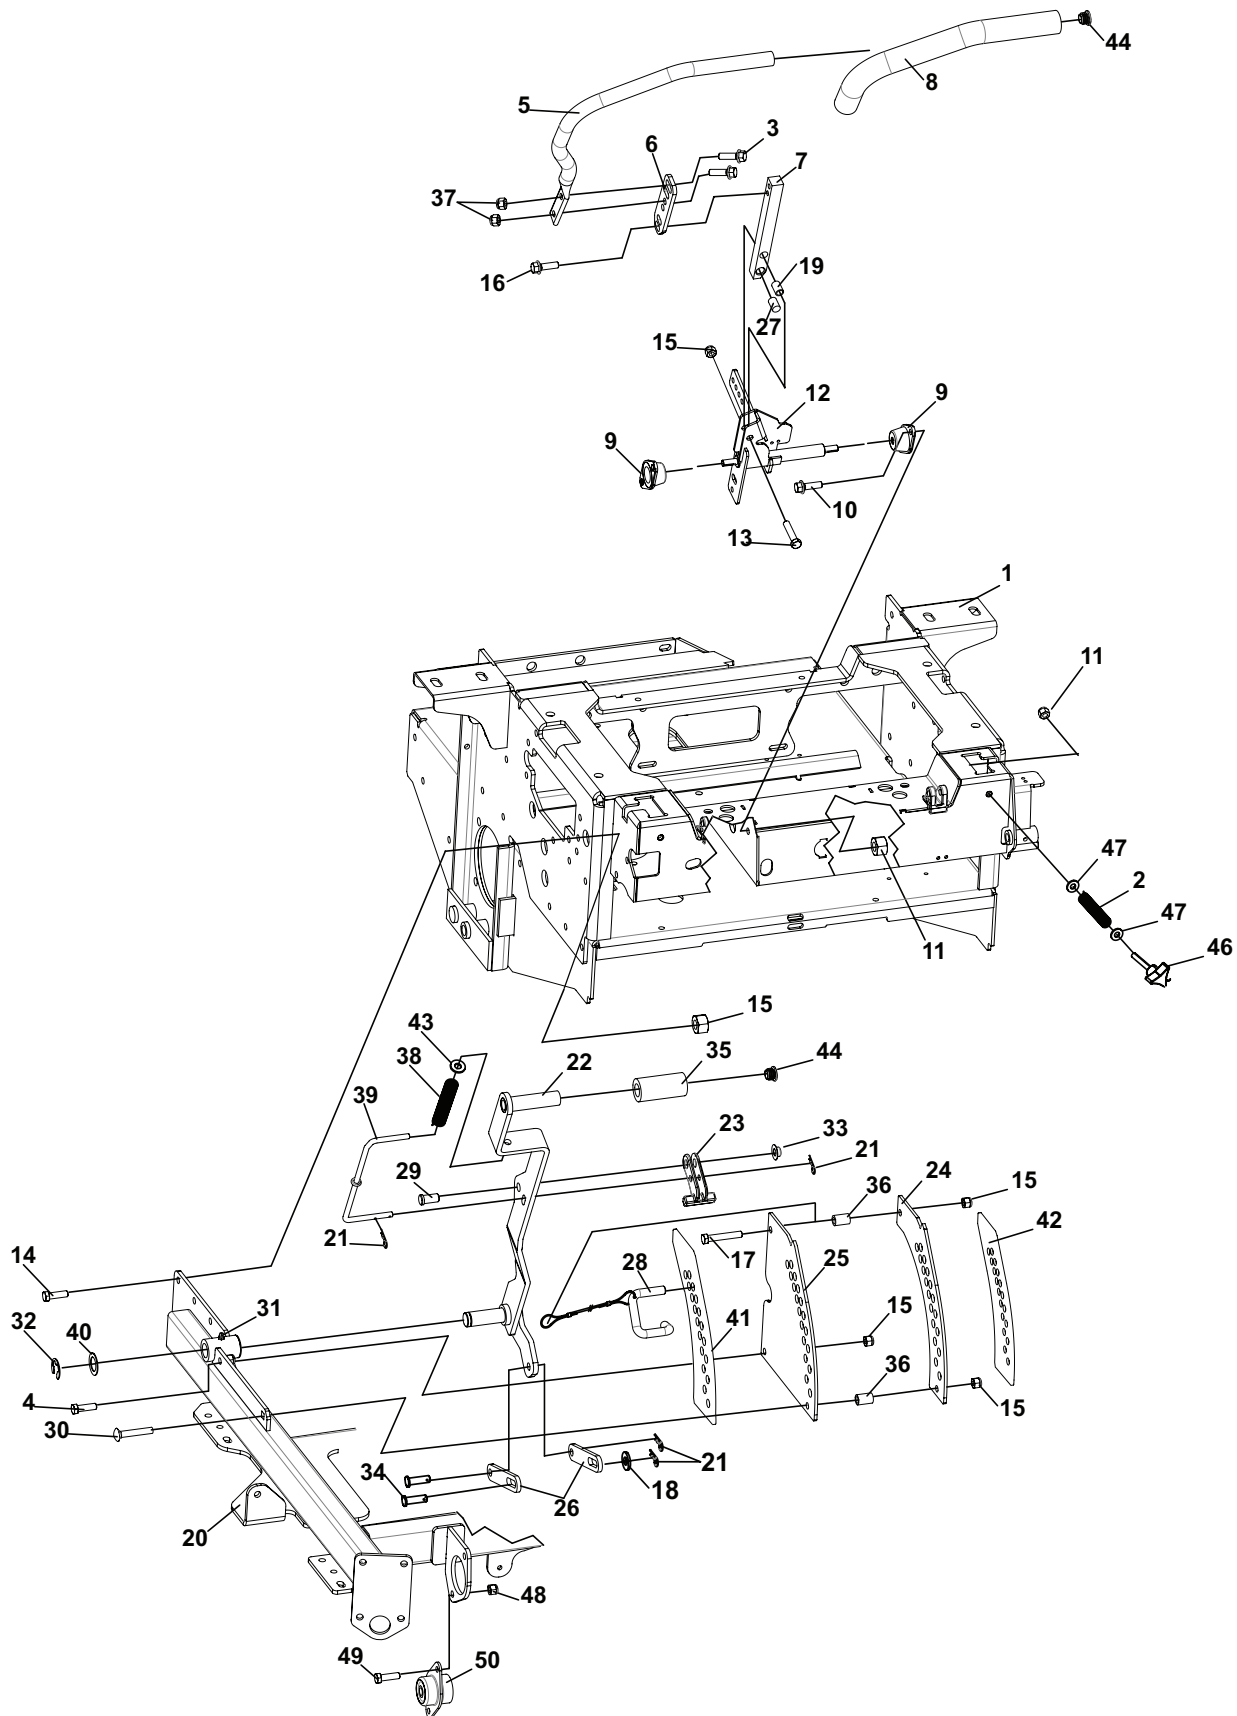

PREDATOR-PRO LP SERIES

STEERING / DECK LIFT

FIGURE 12


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4167906	S ENGINE DECK W/LABS	1	36	2183071-03	SPACER-15.88X10.32X24	2
2	4163746	SPRING	2	37	64268-03	NUT-FL NYLON LOCK 3/8-16	4
3	64018-7	BLT-CRG 3/8-16X1-1/4	4	38	2720544	SPRING-COMPRESSION	1
4	64123-50	BLT-HEX 3/8-16X1	1	39	4165448	ROD-LIFT STOP	1
5	4165426.7	LEVER-TRACTION CNTRL	2	40	64163-65	WSHR .890X1.375X18GA	6
6	4166920.7	BRKT-TRACTION LEVER	2	41	4165654	LBL-ZT200 HT CUT OUTER	1
7	4169529	BAR-TRACTION CONTROL	2	42	4165655	LBL-ZT200 HT CUT INNER	1
8	4165432	GRIP-HANDLE	2	43	64163-29	WASHER-21/64 X 1 X 11GA	2
9	2188145	BEARING-.75ID BRZ	4	44	4163692	CAP-END	3
10	64123-15	BOLT-3/8-16X3/4 HEX	8	45	64229-02	NUT-NYLON LOCK 5/16-18	2
11	64141-4	NUT-WLF 3/8-16	12	46	4163446	KNOB	2
12	4167143	WLDMT-MTN CONTRL LH	1	47	64163-55	WSHR .328X.75X14 GA	4
*	4167144	WLDMT-MTN CONTRL RH	1	48	64229-03	NUT-NYLON LOCK 3/8-16	4
13	64123-87	BLT-HEX 3/8-16X1-3/4	2	49	64262-011	BLT-FLG HD 3/8-16 X 1	4
14	64123-16	BLT-HEX 3/8-16X1-1/4	12	50	4165682	MOUNT-ISOLATION, FOOT	2
15	64229-03	NUT-NYLON LOCK 3/8-16	20				
16	64262-012	BLT-FLG HD 3/8-16 X 1-1/4	4				
17	64123-67	BLT-HEX 3/8-16X2	1				
18	64163-43	WSHR.443/.454X1X11GA	1				
19	4165474	SPACER	2				
20	4165390.7	WLDMT-CRADLE	1				
21	64168-2	COTTER-HAIRPIN.08X1.19	4				
22	4165380.7	WLDMT-DECK LIFT LEVER	1				
23	4162904.7	WLDMT-LVR STOP LATCH	1				
24	4165384.7	BRKT-INNER DECK LIFT	1				
25	4165385.7	BRKT-OUTER DECK LIFT	1				
26	4165389.7	BRACKET-LIFT LINK	2				
27	4162999	SPACER	1				
28	4165656	ASSY, PIN & LANYARD	1				
29	64188-53	PIN-CLEVIS 1/2X1.0	1				
30	64018-38	BOLT-CRG 3/8-16 X 2-1/4	1				
31	85010N	ZERK, 1/4-28 STR SELF TH	11				
32	64221-04	E-RING .875	1				
33	64175-05	NUT-PUSH 1/2	1				
34	64188-36	PIN, CLEVIS 7/16X1-1/4	2				
35	4165466	GRIP	1				

***NOT ILLUSTRATED**

CRADLE ASSEMBLY

PREDATOR-PRO LP SERIES

FIGURE 13

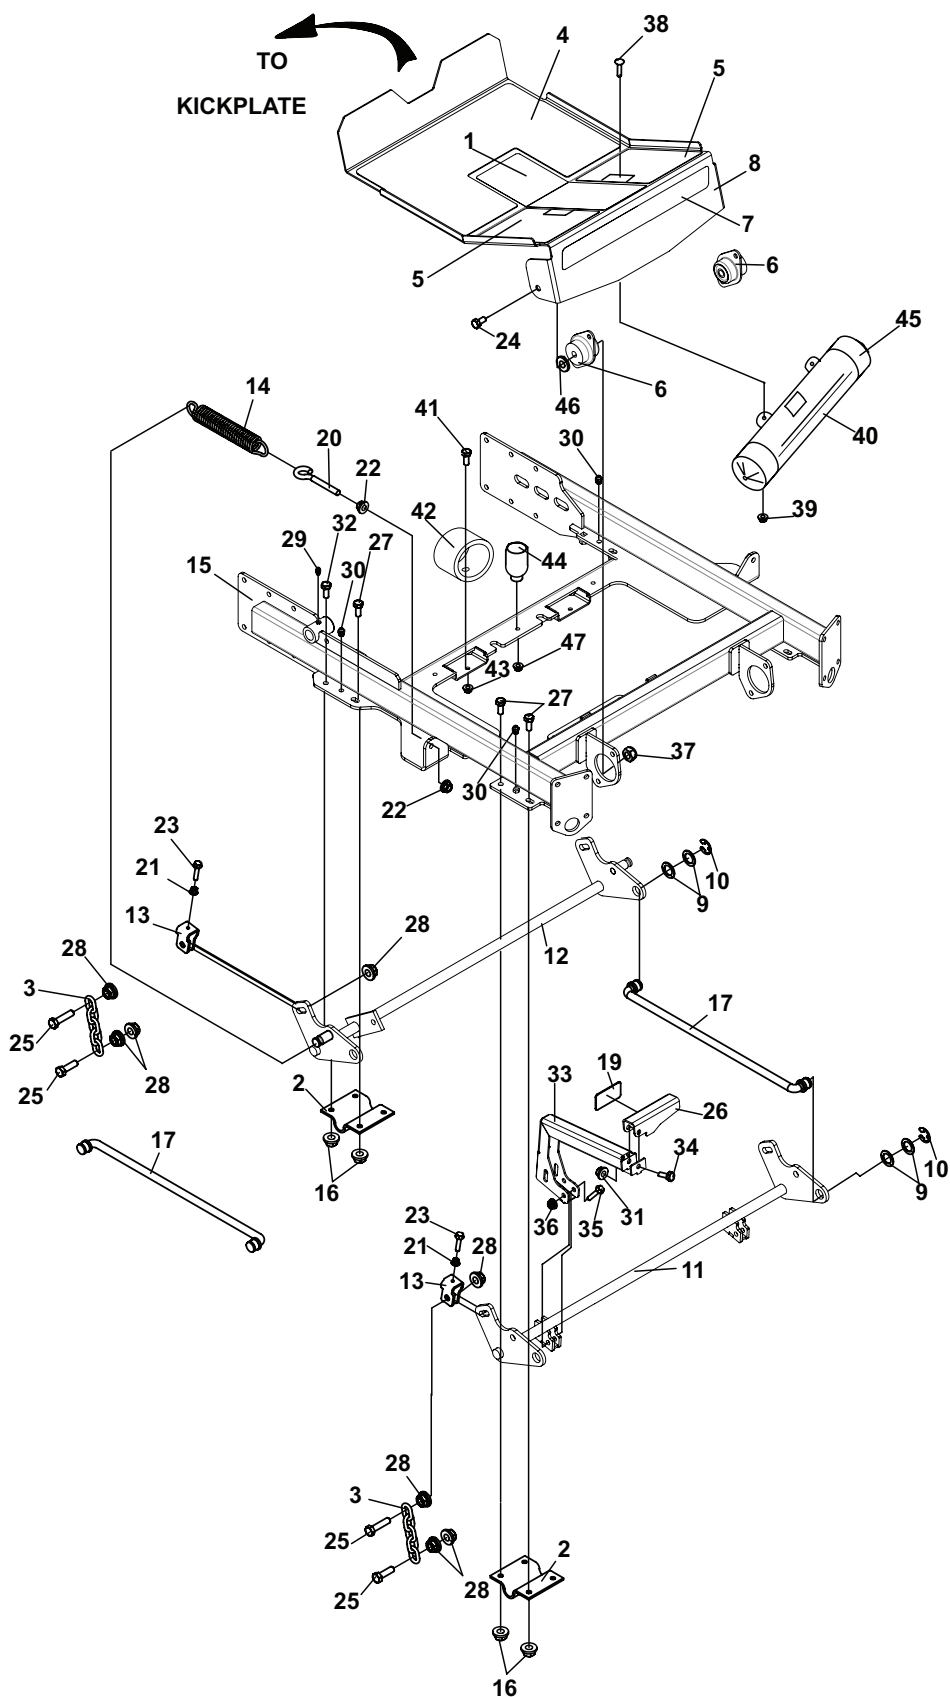

PREDATOR-PRO LP SERIES

CRADLE ASSEMBLY

FIGURE 13


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4165610	LABEL-WARNING	1	31	64229-03	NUT-NYLON LOCK 3/8-16	1
2	2182356.7	BRACKET-SHAFT HANGER	4	32	64018-3	BLT-CRG 3/8-16X1	2
3	2188127	CHAIN-6.35 (.250) 5 LINKS		33	4165593.7	WLDMT-FOOT PEDAL	1
		QTY 4 USED ON 52" & 61" DECKS		34	64123-100	BLT-HEX 3/8-16X2-1/4	1
		QTY 2 USED ON 72" DECK		35	64123-67	BLT-HEX 3/8-16X2	2
	2722454	CHAIN-6.35 (.250) 3 LINKS		36	64001-6	NUT-HEX JAM 3/8-16	2
		QTY 2 USED ON 72" DECK		37	64229-05	NUT-NYLON LOCK 1/2-13	2
				38	64018-2	BLT-CRG 1/4-20X3/4	2
4	4165647	MAT-FOOT PLATE LOWER	1	39	64268-01	NUT-FL NYLON LOCK 1/4-20	2
5	4166266	MAT-FOOT PLATE MIDDLE	2	40	4160281	DOCUMENT TUBE	1
6	4165682	MOUNT-ISOLATOR	2	41	64262-006	BLT-FLG HD 5/16-18 X 3/4	2
7	4165866	LABEL-BOB-CAT	1	42	4165676	BUMPER-RADIAL	2
8	4166267	S-FOOT PLATE (BOBCAT)	1	43	64268-02	NUT-FL NYLON LOCK 5/16-18	2
		(INCLUDES ITEMS 4, 5, 7, 38,39,40, 45)		44	4164210	BUMPER-RUBBER	3
				45	38061A	CAP-DOCUMENT TUBE	1
9	64163-65	WASHER-.890X1.375X18GA	8	46	64163-67	WSHR-.516X1X12GA	2
10	64221-04	E-RING.875	4	47	64141-6	NUT-WLF 5/16-18	3
11	4165379.7	WLDMT-DECK LIFT, FRONT	1				
12	4165427.7	WLDMT-DECK LIFT, REAR	1				
13	2722630	CLIP-DECK HEIGHT ADJ	4				
14	4165675	SPRING-DECK LIFT	2				
15	4165390.7	WLDMT-CRADLE	1				
16	64268-03	NUT-FL NYLN LCK 3/8-16	16				
17	4167826	ROD-DECK LIFT	2				
18 *	4111842.7	BRKT-SPRING ANCHOR LH	1				
19	4165556	MAT-FOOT LIFT	1				
20	4113682	ROD-SPRING MOUNT	2				
21	64141-2	NUT-WLF 1/4-20	4				
22	64141-4	NUT-WLF 3/8-16	4				
23	64197-020	BLT-TDFM 1/4-20X1-1/2	4				
24	64123-31	BLT-HEX 1/2-13X3	2				
25	64123-281	BLT-HEX 1/2-13X2 FL THRD	8				
26	4165596.7	BRKT-FOOT, LIFT LEVER	1				
27	64262-011	BLT-FLG HD 3/8-16 X 1	16				
28	64141-13	NUT WLF 1/2-13	16				
29	85010N	ZERK, 1/4-28 STR SLFTHRD	1				
30	85051	ZERK-1/8 PIPE	6				

***NOT ILLUSTRATED**

CRADLE & CASTER ASSEMBLY

PREDATOR-PRO LP SERIES

FIGURE 14

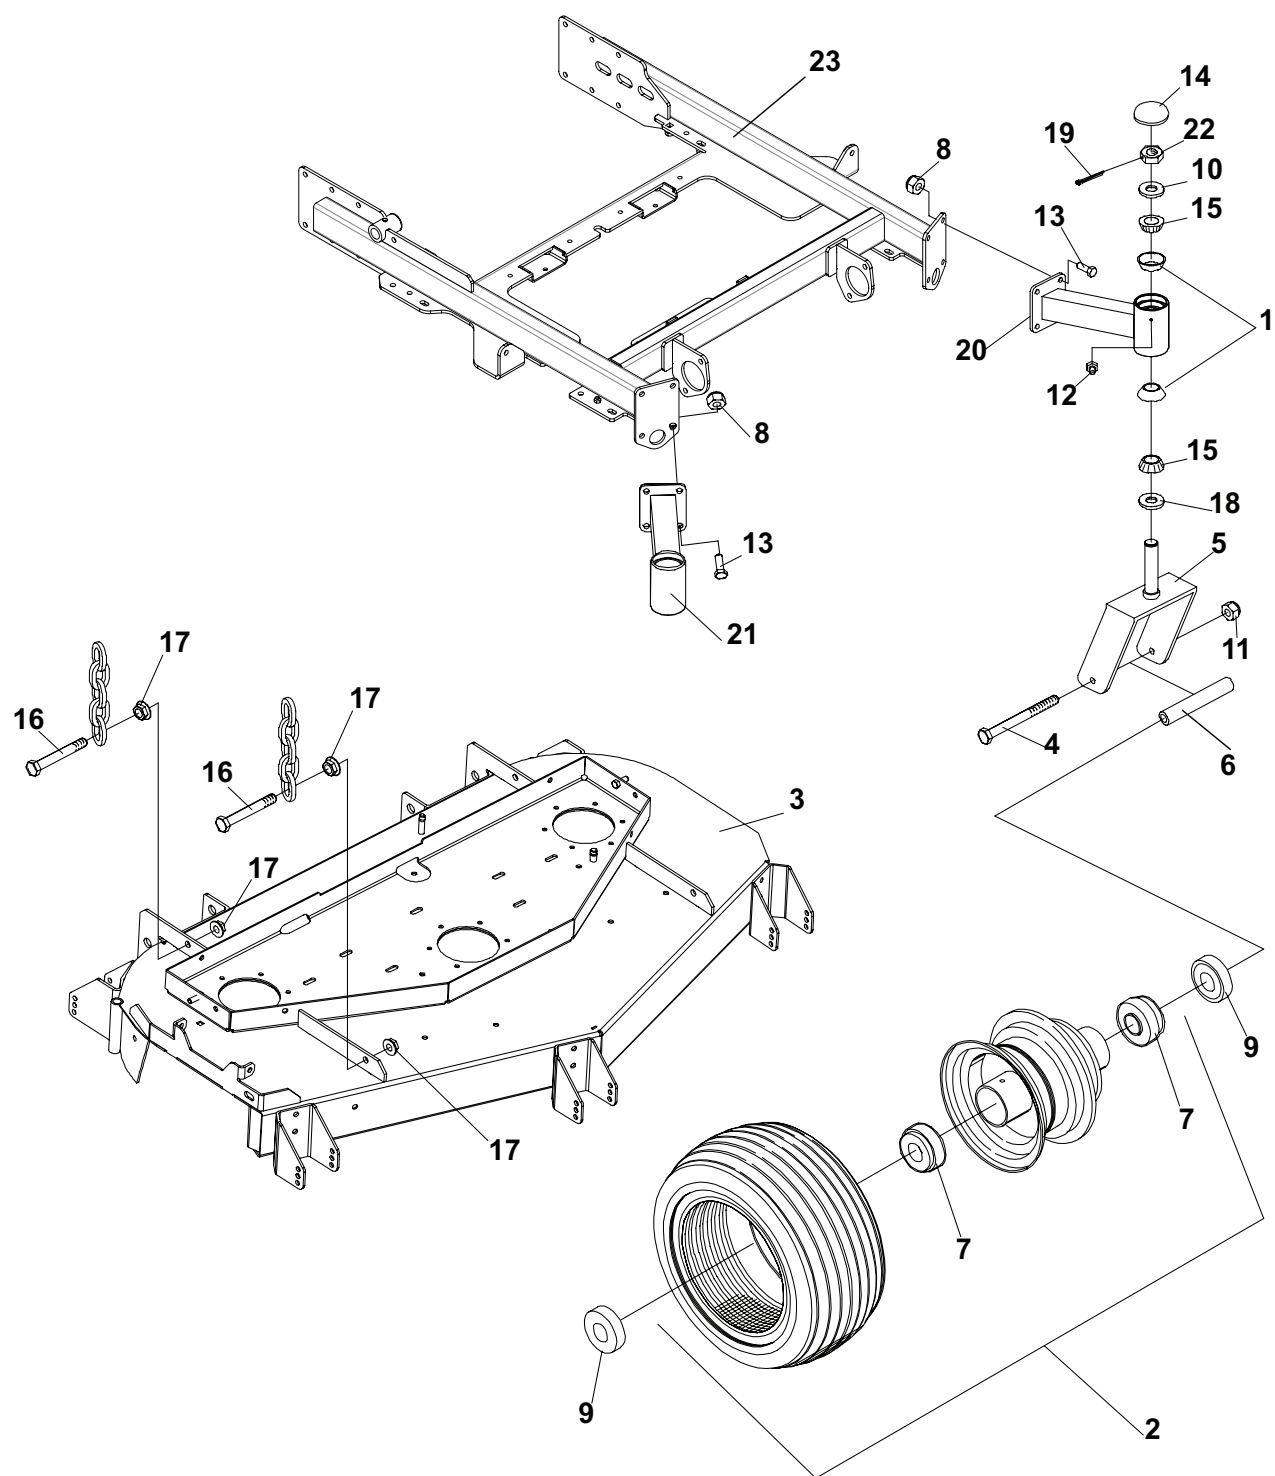

PREDATOR-PRO LP SERIES

CRADLE & CASTER ASSEMBLY


FIGURE 14

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	48043-03C	CUP, OUTER BEARING	4				
2	4165278	ASSY-WHL 13X6.5-6 (INCLUDES ITEM 7)	2				
	4167970	ASSY-WHL HIGH CROWN (OPTIONAL)					
3	DECK	DECK/W LABS					
4	64123-223	BOLT-3/4-10 X 10	2				
5	2722452.7	WLDMT-CASTER YOKE	2				
6	2722230-03	SPANNER	2				
7	2722228-03	BEARING	2				
8	64229-03	NUT-NYLON LOCK 3/8-16	8				
9	2722231	SPACER-END	4				
10	64163-26	WASHER	2				
11	64229-07	LOCKNUT-NYLON 3/4-10	2				
12	85010N	ZERK, 1/4-28 STR SLF THD	2				
13	64262-011	BLT-HEX 3/8-16X1	8				
14	4162986	END CAP	2				
		USED ON 72" MODELS					
	2188135	END CAP					
		USED ON 61" MODELS					
15	48043-04C	CONE, OUTER BEARING	4				
16	64123-281	BLT-HEX 1/2-13X2 FLLTHD	8				
17	64141-13	NUT WLF 1/2-13	16				
18	4840	SEAL CR 12411	2				
19	64140-5	COTTER PIN	2				
20	4165327.7	WLDMT-CSTR ARM 61 LH	1				
		(USED WITH 61" DECKS)					
	4171078.7	WLDMT-CSTER ARM 72 LH					
		(USED WITH 72" DECKS)					
21	4165324.7	WLDMT-CSTER ARM 61 RH	1				
		(USED WITH 61" DECKS)					
	4171075.7	WLDMT-CSTER ARM 72 RH					
		(USED WITH 72" DECKS)					
22	64025-20	NUT-HEX 3/4-16 SLOT U	2				
23	4165390.7	WLDMT-CRADLE	1				

61" SIDE DISCHARGE

PREDATOR-PRO LP SERIES

FIGURE 15

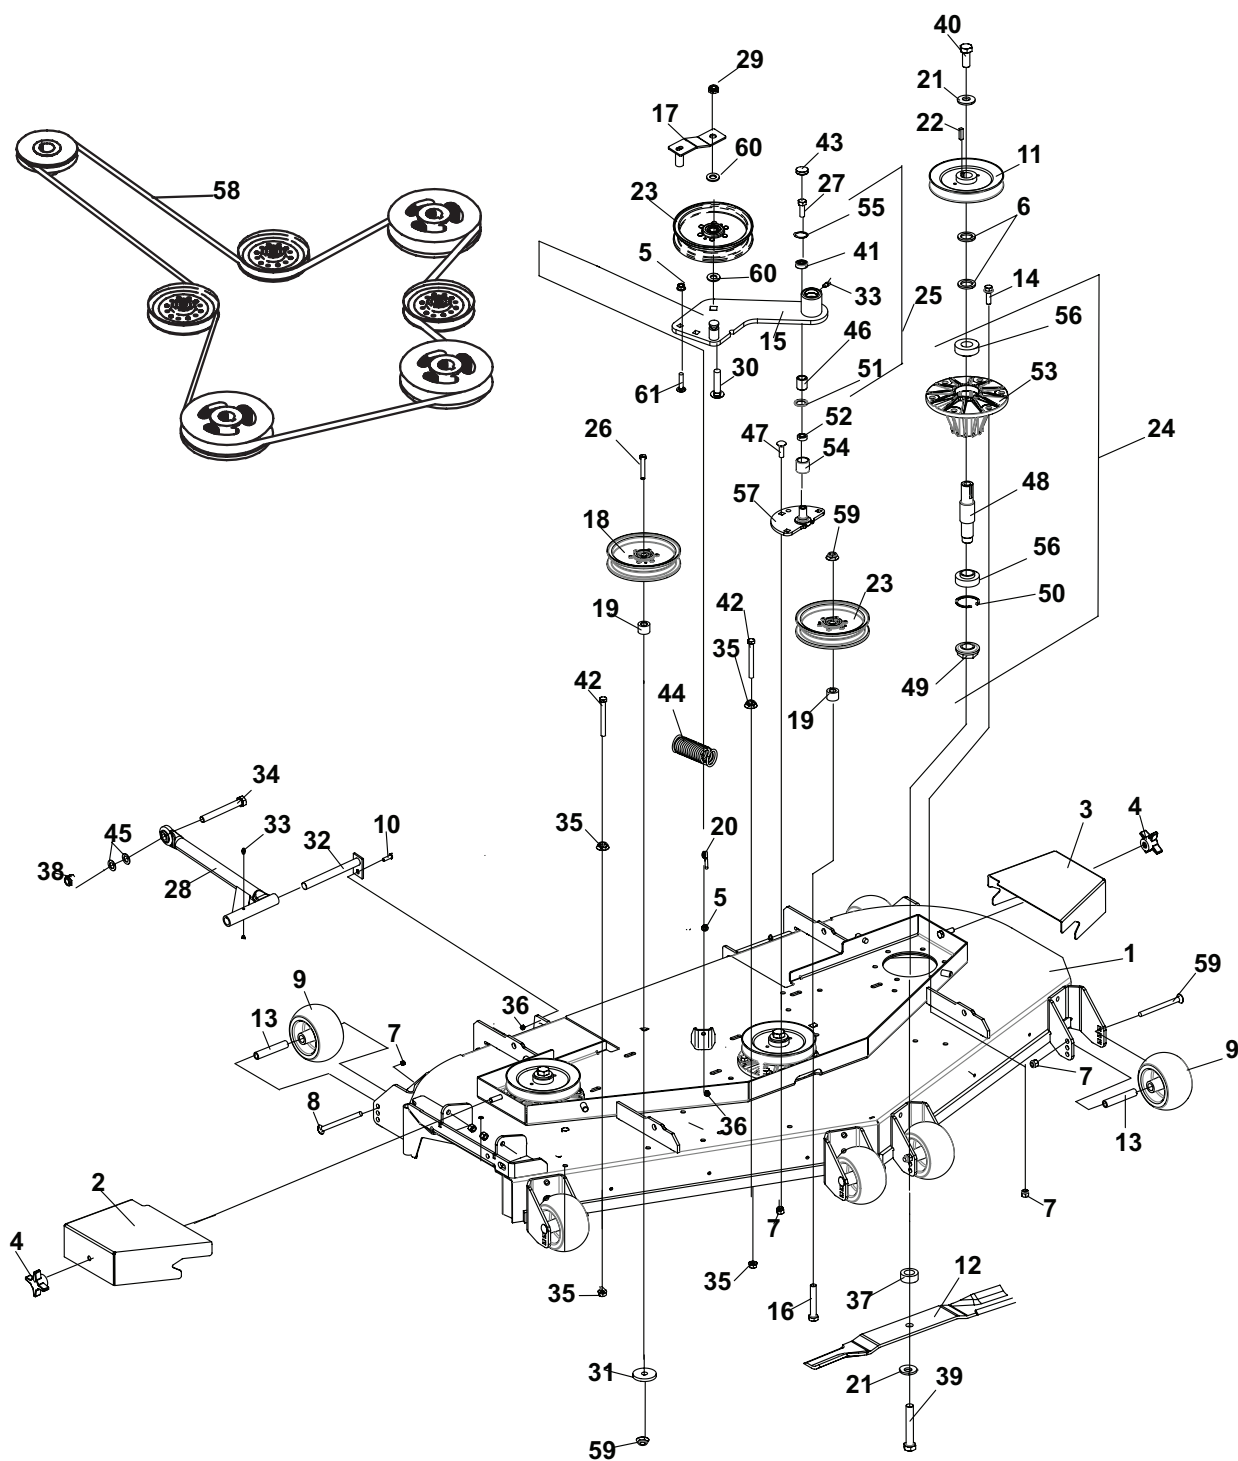

PREDATOR-PRO LP SERIES

61" SIDE DISCHARGE

FIGURE 15


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4170630	S-DECK W/ LABELS 61"	1	46	548138	BRG NDL .88 1.21	1
2	4165456.7	BELT COVER-RH	1	47	64018-7	BOLT-CRG 3/8-16 C 1-1/4	3
3	4165455.7	BELT COVER-LH	1	48	2183070-02	SHAFT-SPINDLE	3
4	38524	KNOB-4 PRONG 3/8-16	2	49	38315	NUT-SPINDLE	3
5	64141-6	NUT-WLF 5/16-18	2	50	64144-38	RING-SNAP	3
6	64163-68	WSHR-1.015X1.5X9GA	6	51	521438	GREASE SEAL	1
7	64229-03	NUT-NYLON LOCK 3/8-16	27	52	4163014	SPACER	1
8	64123-173	BLT-HEX 3/8-16X4-1/2	3	53	4164948	HOUSING-SPINDLE 6 HOLE	3
9	2721512	ROLLER-5X2.75 CENTERED	6	54	4163155	INNER RING	1
10	64123-68	BLT-HEX 5/16-18X1	2	55	64144-40	SNAP RING-2NTERNL	1
11	2308140	PULLEY-ENGINE	3	56	41675554-01	BEARING-SPINDLE SEALED	6
12	112111-03	BLADE 21.00 OFFST HLFT	3	57	4170021.7	WLDMT-IDLER PIN	1
13	2720685	SPACER-ROLLER	6	58	4169714	BELT-DECK 61" GENERAC	1
14	64262-012	BLT-FLG HD 3/8-16 X 1-1/4	18	59	64268-05	NUT-FL NYLON LOCK 1/2-13	2
15	4168888.7	WLDMT-IDLER ARM	1	60	64163-67	WSHR-5/16 X 1X 12 GA	2
16	64018-46	BLT-CRG 1/2-13X3-1/2	3	61	64018-34	BLT-CRG 5/16-18 x 1-1/2	1
17	4168884.7	GUIDE, BELT	1				
18	4165953	PULLEY-IDLER, 6.0	1				
19	4152578-02	SPACER-2.0 X .515 X1.07	2				
20	4169597	EYE BOLT-5/16-18 X 1-1/2	1				
21	64209-03	SPRING WASHER.67 ID	6				
22	64164-12	KEY-1/4X1 SQ	3				
23	128169	PULLEY IDLER 5.50	2				
24	4171231	ASSY-CTTERDECK SPNDL	3				
		(INCLUDES ITEMS 48, 50, 53, & 56)					
25	4168886	ASSY-IDLER ARM 48-52	1				
		(INCLUDES ITEMS 15, 33, 41, 46, 51, & 55)					
26	90-0828	S/B BOLT 1/2-13X3 1/2 NC	1				
27	64270-02	BLT-HEX M10-1.5x30 ISO	1				
28	4133155.7	WLDMT-PUSH ARM ZT2	2				
29	64151-37	NUT-HEX, 1/2-13NYLON JAM	1				
30	64018-45	BLT-CRG, 1/2-13 X 2-1/4	1				
31	64163-74	WSHR-.516X2.00X.25 PLT	1				
32	2186125	WLDMT-LOCK PUSHBAR	2				
33	85010N	ZERK 1/4-28 STR SLF THRD	5				
34	64123-152	BLT-HEX 5/8-11X5	2				
35	64141-4	NUT-WLF 3/8-16	4				
36	64229-02	NUT-NYLON LOCK 5/16-18	3				
37	4118314	SPACER-BLADE 16MM	3				
38	64229-06	NUT-NYLON LOCK 5/8-11	2				
39	64123-187	BLT-HEX 5/8-18 X 3 3/4	3				
40	64123-208	BLT-HEX 5/8-18X1-1/2	3				
41	4128004	BEARING-BALL 10 X 26 X 8	1				
42	64123-171	BLT-HEX 3/8-16X3-1/2	2				
43	4128002	CAP-26 X 7 END	1				
44	4168493	SPRING-EXTENSION	1				
45	64163-93	WSHR-.635 X 1.12 X.062	4				

* NOT ILLUSTRATED

61" REAR DISCHARGE

PREDATOR-PRO LP SERIES

FIGURE 16

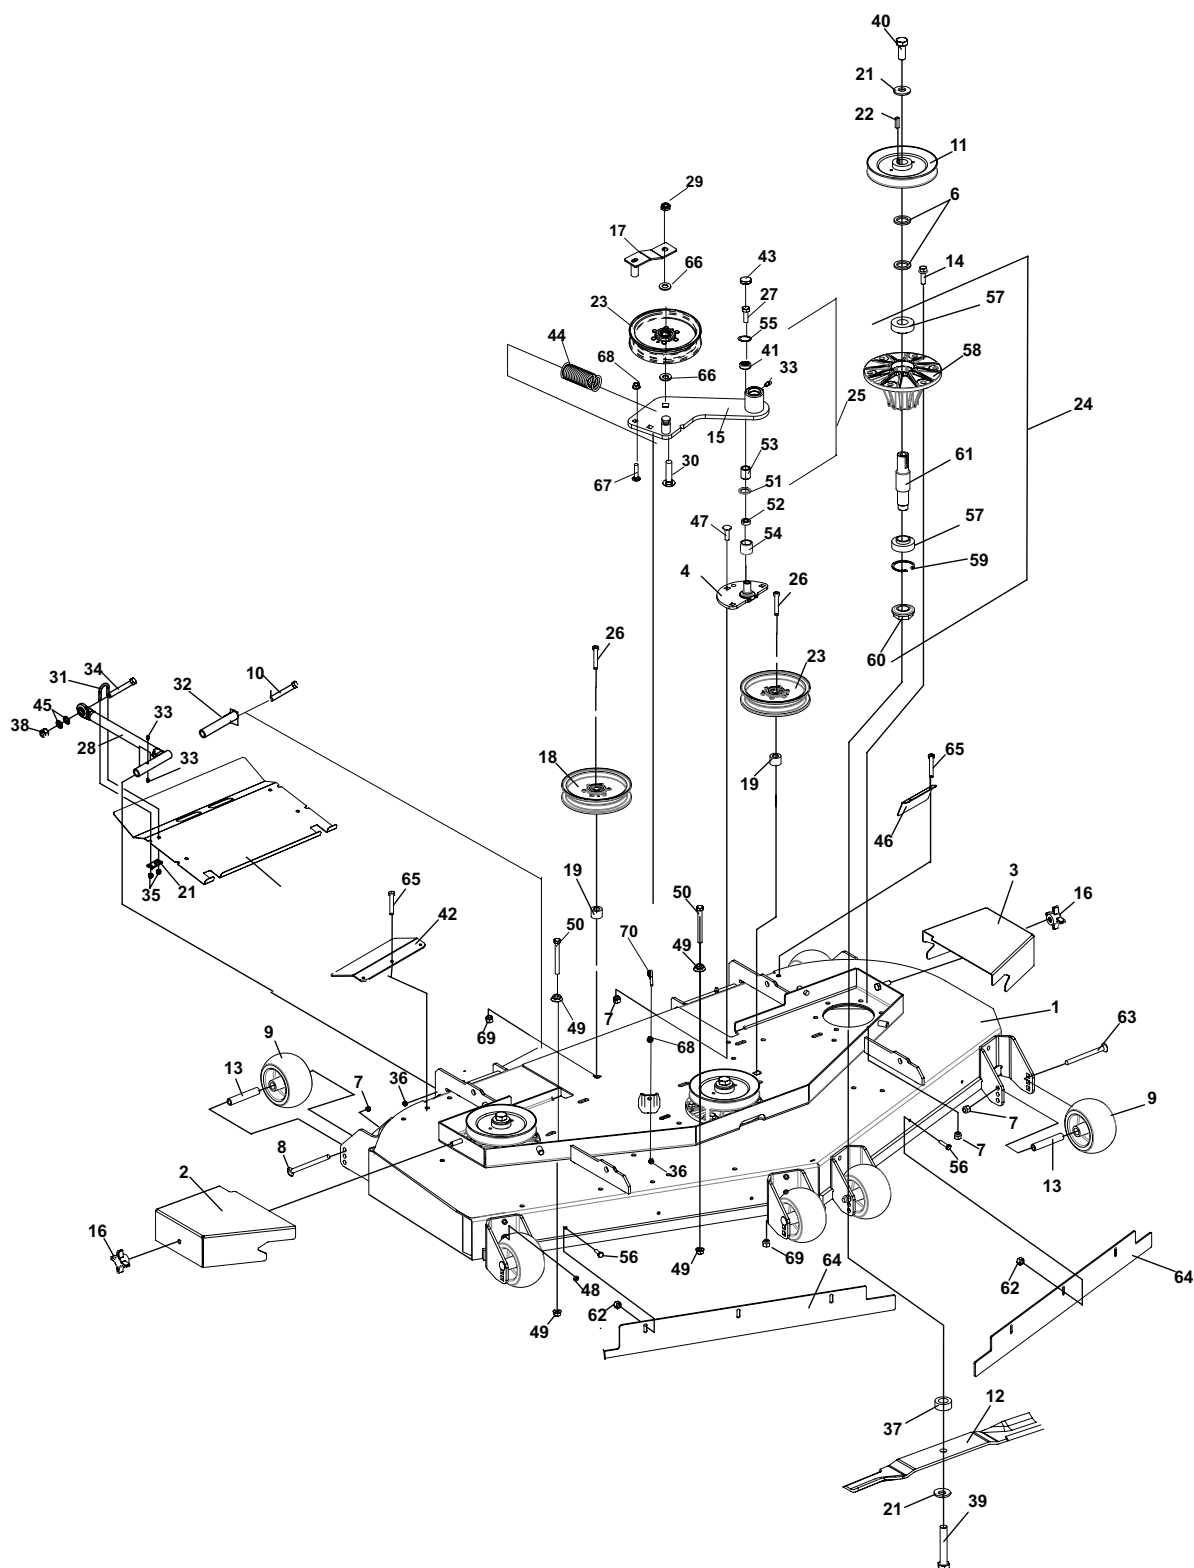

PREDATOR-PRO LP SERIES

61" REAR DISCHARGE

FIGURE 16


ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4170631	S-DECK W/ LABELS 61" ZT2	1	47	64018-7	BLT-CRG 3/8-16X1-1/4	3
2	4165456.7	BELT COVER-RH	1	48	64163-55	WSHR .328X.75X14 GA	1
3	4165455.7	BELT COVER-LH	1	49	64141-4	NUT-WLF 3/8-16	4
4	4170021.7	WLDMT-IDLER PIN	1	50	64123-171	BLT-HEX 3/8-16X3-1/2	2
5	4166373.7	PLATE-GRASS DEFLECTOR	1	51	521438	GREASE SEAL	1
6	64163-68	WSHR-1.015X1.5X9GA	6	52	4163014	SPACER	1
7	64229-03	NUT-NYLON LOCK 3/8-16	27	53	548138	BRG NDL.88 1.12 1	1
8	64123-173	BLT-HEX 3/8-16X4-1/2	2	54	4163155	INNER RING	1
9	2721512	ROLLER-5X2.75 CENTERED	6	55	64144-40	SNAP RING-26MM INTENA	1
10	64123-68	BLT-HEX 5/16-18X1	2	56	64123-114	BLT-HEX 1/4-20X1	7
11	2308140	PULLEY-ENGINE	1	57	4167554-01	BEARING-SPINDLE SEALD	6
12	2722543-03	BLADE 21.00 OFFST HLFT	3	58	4164948	HOUSING-SPINDLE 6 HOLE	3
13	2720685	SPACER-ROLLER	6	59	64144-38	RING-SNAP	3
14	64262-012	BLT-FLG HD 3/8-16 X 1-1/4	18	60	38315	NUT-SPINDLE	3
15	4168888.7	WLDMT-IDLER ARM	1	61	2183070-02	SHAFT-SPINDLE	3
16	38524	KNOB-4 PRONG 3/8-16	2	62	64141-2	NUT-WLF 1/4-20	7
17	4168884.7	GUIDE, BELT	1	63	64018-30	BLT-CRG 3/8-16 X 4-1/2	4
18	4165953	PULLEY-IDLER, 6.0	1	64	4166481.2	EXTENSION-61"LH	2
19	4152578-02	SPACER-2.0 X .516 X 1.07	2	65	64197-002	BLT-TDFM 1/4-20X3/4	5
20	4116605.7	SPACER-U BOLT	4	66	64163-67	WSHR-5/16 X 1X 12 GA	2
21	64209-03	SPRING WASHER.67 ID	6	67	64018-34	BLT-CRG 5/16-18 x 1-1/2	1
22	64164-12	KEY-1/4X1 SQ	3	68	64141-6	NUT-WLF 5/16-18	2
23	128169	PULLEY IDLER 5.50	2	69	64268-05	NUT-FL NYLON LOCK 1/2-13	2
24	4171231	ASSY-CTTERDCK SPINDLE (INCLUDES ITEMS 57-61)	3	70	4169597	EYE BOLT-5/16-18 X 1-1/2	1
25*	4165755	ASSY-IDLER ARM (INCLUDES ITEMS 15, 33, 41, 51, 55, & 53)	1	71	4169714	BELT-DECK 61" GENERAC	1
26	90-0828	S/B BOLT 1/2-13X3 1/2 NC	2				
27	64270-02	BLT-HX M10-1.5x30 ISO	1				
28	4133155.7	WLDMT-PUSH ARM ZT2	2				
29	64151-37	NUT-HEX, 1/2-13 JAM	3				
30	64018-45	BLT-CRG, 1/2-13 X 2-1/4	1				
31	64225-05	U-BOLT 5/16-18 X 1-3/8	4				
32	2186125	WLDMT-LOCK PUSHBAR	2				
33	85010N	ZERK 1/4-28 STR SLF THRD	5				
34	64123-152	BLT-HEX 5/8-11X5	2				
35	64268-02	NUT-FL NYLON LCK 5/16-18	8				
36	64229-02	NUT-NYLON LOCK 5/16-18	3				
37	4118314	SPACER-BLADE 16MM	3				
38	64229-06	NUT-NYLON LOCK 5/8-11	2				
39	64123-187	BLT-HEX 5/8-18 X 3 3/4	3				
40	64123-208	BLT-HEX 5/8-18X1-1/2	3				
41	4128004	BEARING-BALL 10 X 26 X 8	1				
42	4166379.7	PLATE-GRASS DFLCTR, LH	1				
43	4128002	CAP-26 X 7 END	1				
44	4168493	SPRING-EXTENSION	1				
45	64163-93	WSHR-.635 X 1.12 X.062	4				
46*	4166378.7	PLATE-GRASS DFLCTR,RH	1				

NOT ILLUSTRATED

72" SIDE DISCHARGE

FIGURE 17

PREDATOR-PRO LP SERIES

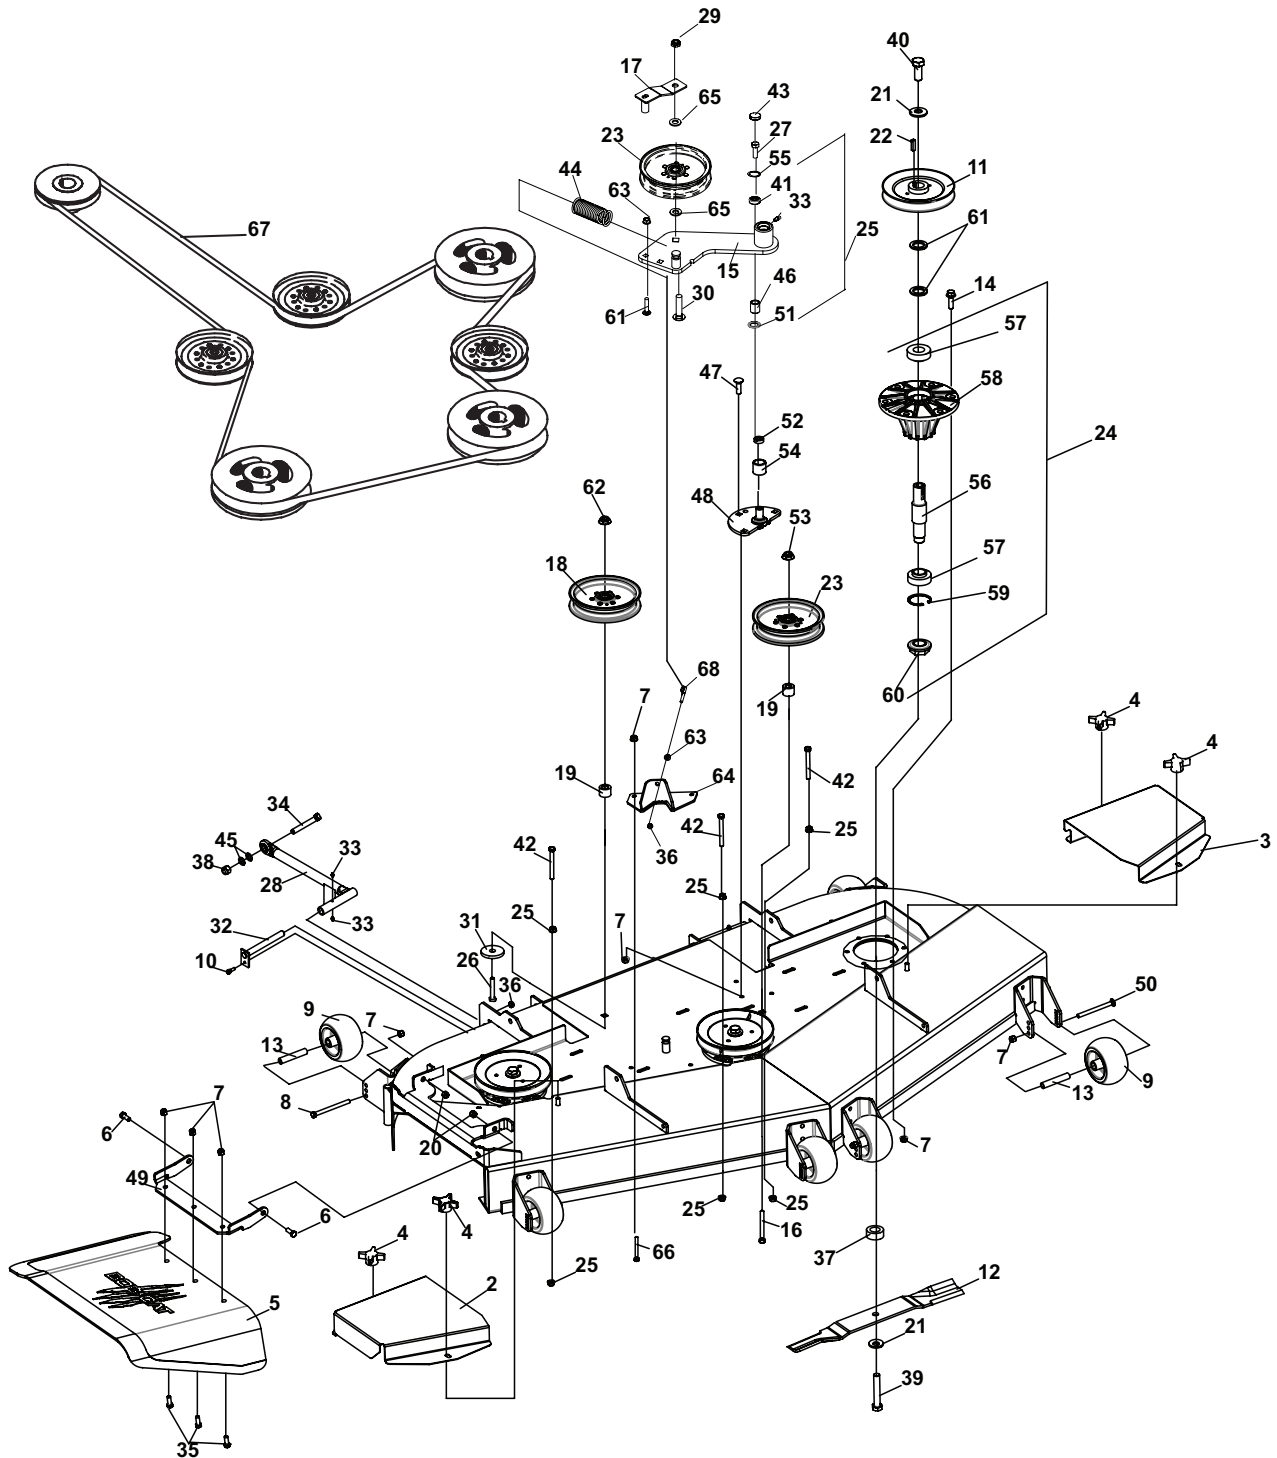

PREDATOR-PRO LP SERIES


72" SIDE DISCHARGE

FIGURE 17

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4166120	S-DECK W/ LABELS 72" ZT2	1	50	64018-30	BLT-CRG 3/8-16 X 4-1/2	4
2	4165564.7	GUARD-BELT RH	1	51	521438	GREASE SEAL	1
3	4165563.7	GUARD-BELT LH	1	52	4163014	SPACER	1
4	38524	KNOB-4 PRONG 3/8-16	4	53	64268-05	NUT-FL NYLON LOCK 1/2-13	2
5	4165439	CHUTE-RUBBER ASSY, 72	1	54	4163155	INNER RING	1
6	64123-39	BLT-HEX 1/2-13X1-1/4	2	55	64144-40	SNAP RING-26MM INTRNL	1
7	64229-03	NUT-NYLON LOCK 3/8-16	33	56	2183070-02	SHAFT-SPINDLE	3
8	64123-173	BLT-HEX 3/8-16X4-1/2	3	57	4167554-01	BEARING-SPINDLE SEALD	6
9	2721512	ROLLER-5X2.75 CENTERED	7	58	4164948	HOUSING-SPINDLE 6 HOLE	3
10	64123-68	BLT-HEX 5/16-18X1	2	59	64144-38	RING-SNAP	3
11	4165620	PULLEY-SPINDLE	3	60	38315	NUT-SPINDLE	3
12	112111-07	BLADE 24.50 OFFST HLFT	3	61	64163-68	WSHR-1.015X1.5X9GA	6
13	2720685	SPACER-ROLLER	7	62	64018-34	BLT-CRG 5/16-18X 1-1/2	2
14	64262-012	BLT-FLG HD 3/8-16 X 1-1/4	18	63	64141-6	NUT-WLF 5/16-18	2
15	4168888.7	WLDMT-IDLER ARM	1	64	4170156.2	WLDMT-IDLER SPRG MNT	1
16	64018-46	BLT-CRG 1/2-13X3-1/2	1	65	64163-67	WSHR-5/16-1 X 12GA	2
17	4168884.7	GUIDE, BELT	1	66	64018-3	BLT-CRG 3/8-16 X 1	2
18	4165953	PULLEY-IDLER, 6.0	1	67	4170172	BELT-DECK 72" KAWASAKI	1
19	4152578-02	SPACER-2.0 X .516 X1.07	2	68	64158-11	EYE BOLT-5/16-18 X 3.61	1
20	64229-05	NUT-NYLON LOCK 1/2-13	2				
21	64209-03	SPRING WASHER.67 ID	6				
22	64164-12	KEY-1/4X1 SQ	3				
23	128169	PULLEY IDLER 5.50	2				
24	4171231	ASSY-CTTERDCK SPNDLE	3				
25	4168886	ASSY-IDLER ARM	1				
26	90-0828	S/B BOLT 1/2-13X3 1/2 NC	1				
27	64270-02	BLT-HEX M10-1.5x30 ISO	1				
28	4133155.7	WLDMT-PUSH ARM ZT2	2				
29	64151-37	NUT-HEX 1/2-13 NY IN JAM	1				
30	64123-156	BLT-CRG 1/2-13 X 2-1/4	1				
31	64163-74	WSHR-.516X2.00X.250	1				
32	2186125	WLDMT-LOCK PUSHBAR	2				
33	85010N	ZERK 1/4-28 STR SLF THRD	5				
34	64123-152	BLT-HEX 5/8-11X5	2				
35	64123-50	BLT-HEX 3/8-16X1	3				
36	64229-02	NUT-NYLON LOCK 5/16-18	3				
37	4118314-01	SPACER-BLADE 11MM	3				
38	64229-06	NUT-NYLON LOCK 5/8-11	2				
39	64123-187	BLT-HEX 5/8-18 X 3 3/4	3				
40	64123-208	BLT-HEX 5/8-18X1-1/2	3				
41	4128004	BEARING-BALL 10 X 26 X 8	1				
42	64123-171	BLT-HEX 3/8-16X3-1/2	3				
43	4128002	CAP-26 X 7 END	1				
44	4168493	SPRING-EXTENSION	1				
45	64163-93	WSHR-.635 X 1.12 X.062	2				
46	548138	BRG NDL.88 1.12 1.00	1				
47	64018-7	BLT-CRG 3/8-16X1-1/4	3				
48	4170021.7	WLDMT-IDLER PIN	1				
49	4165445.7	HINGE-CHUTE 72IN	1				

PREDATOR-PRO LP SERIES

FIGURE 18

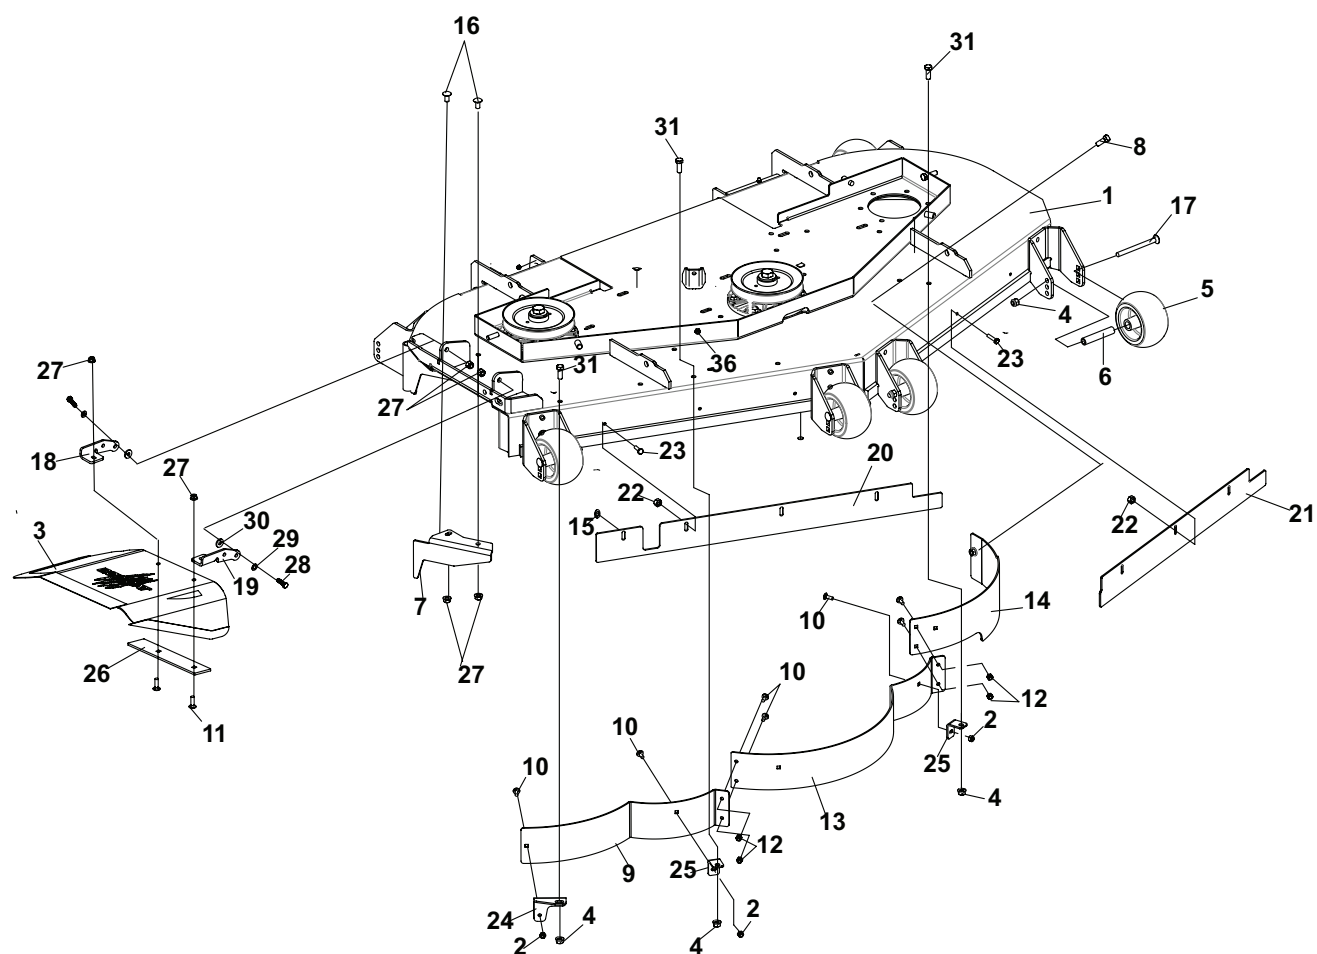


61" SIDE CHUTE, BAFFLES, & EDGES

PREDATOR-PRO LP SERIES

FIGURE 18

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4170630	S-DECK W/ LABELS 61"	1				
2	64268-01	NUT-FL NYLON LOCK 1/4-20	3				
3	4168131	CHUTE-RUBBER ASSY	1				
4	64229-03	NUT-NYLON LOCK 3/8-16	7				
5	2721512	ROLLER-5X2.75 CENTERED	7				
6	2720685	SPACER-ROLLER	7				
7	4171432.2	BAFFLE-DISCHARGE	1				
8	64123-50	BLT-HEX 3/8-16X1	7				
9	4171792.7	BAFFLE-FRONT,RH 61IN	1				
10	64018-2	BLT-CRG 1/4-20X3/4	7				
11	64018-7	BLT-CRG 3/8-16X1-1/4	5				
12	64229-01	NUT-NYLON LOCK 1/4-20	7				
13	4168642.7	BAFFLE-FRONT,CNTR 61IN	1				
14	4165968.7	BAFFLE-FRONT,LH 61IN	1				
15	64163-55	WSHR .328X.75X14 GA	1				
16	64018-23	BLT-CRG 3/8-16X3/4	2				
17	64018-30	BLT-CRG 3/8-16 X 4-1/2	4				
18	4169849.7	BRKT-CHUTE, REAR	1				
19	4169850.7	BRKT-CHUTE, FRONT	1				
20	4166480.2	EXTENSION-61"RH	1				
21	4166481.2	EXTENSION-61"LH	1				
22	64141-2	NUT-WLF 1/4-20	7				
23	64123-114	BLT-HEX 1/4-20X1	7				
24	4168487.2	BRKT-BAFFLE MNTG 61"	1				
25	4168523.2	BRKT-BAFFLE MNTG 61"	2				
26	4169851.7	PLATE-CHUTE	1				
27	64268-03	NUT-FL NYLON LOCK 3/8-16	6				
28	64123-16	BLT-HEX 3/8-16 X 1-1/4	2				
29	4169871	WSHR-BELLVILLE .382 UD	2				
30	4169895	WSHR-FRICTION, UHMW	2				
31	64123-15	BLT-HEX 3/8-16X3/4	3				

FIGURE 19

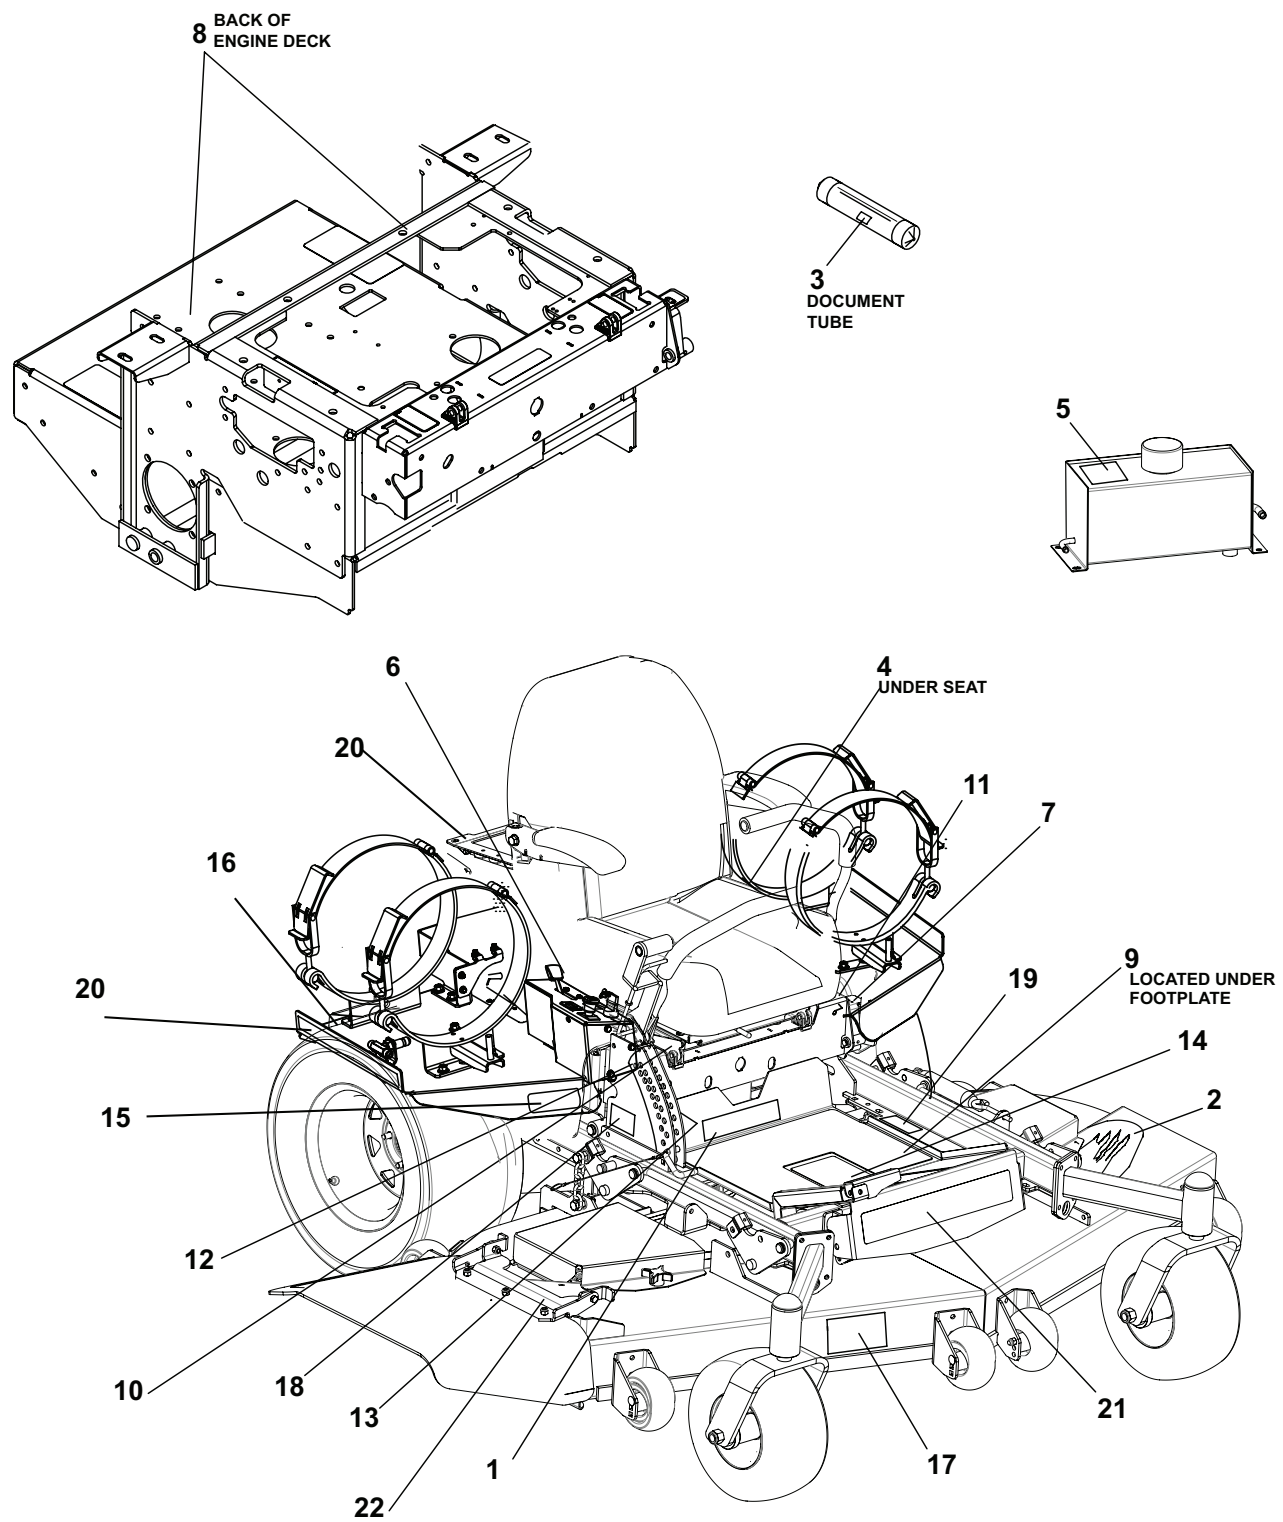

PREDATOR-PRO LP SERIES


DECALS

FIGURE 19

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4165866	LABEL-PREDATOR-PRO	1				
2	4168522	MAT-CLAW MARKS	1				
3	2000735	LABEL-OPER MAN	1				
4	2000590	LABEL, WARN BATTERY	1				
5	4165722	LABEL - HYDR OIL FILL	1				
6	4164708	LABEL-CONTROL PANEL	1				
7	2000693	LABEL - PARK BRAKE	1				
9	4171486	LABEL-ZT INFORMATION	1				
10	4165615	LABEL - RH TRACTION	1				
11	4165616	LABEL - LH TRACTION	1				
12	4165654	LABEL-HT CUT OUTER	1				
13	4165655	LABEL-HT CUT INNER	1				
14	4165610	LABEL-WARNING	1				
15	4165180	LABEL-WRNG, TANK REPLACE	2				
16	4165179	LABEL-WRNG PRESS FUEL SYS	2				
17	4162917	LABEL-DECK SIZE, 72"	1				
	4162916	LABEL-DECK SIZE, 61"					
18	4116761	LABEL-MADE IN USA	1				
19	4165730	LABEL-MANUAL LOCATION	1				
20	4164946	LABEL-BOBCAT	3				
21	4165657	LABEL-BOB-CAT	1				

NOT ILLUSTRATED

FIGURE 20

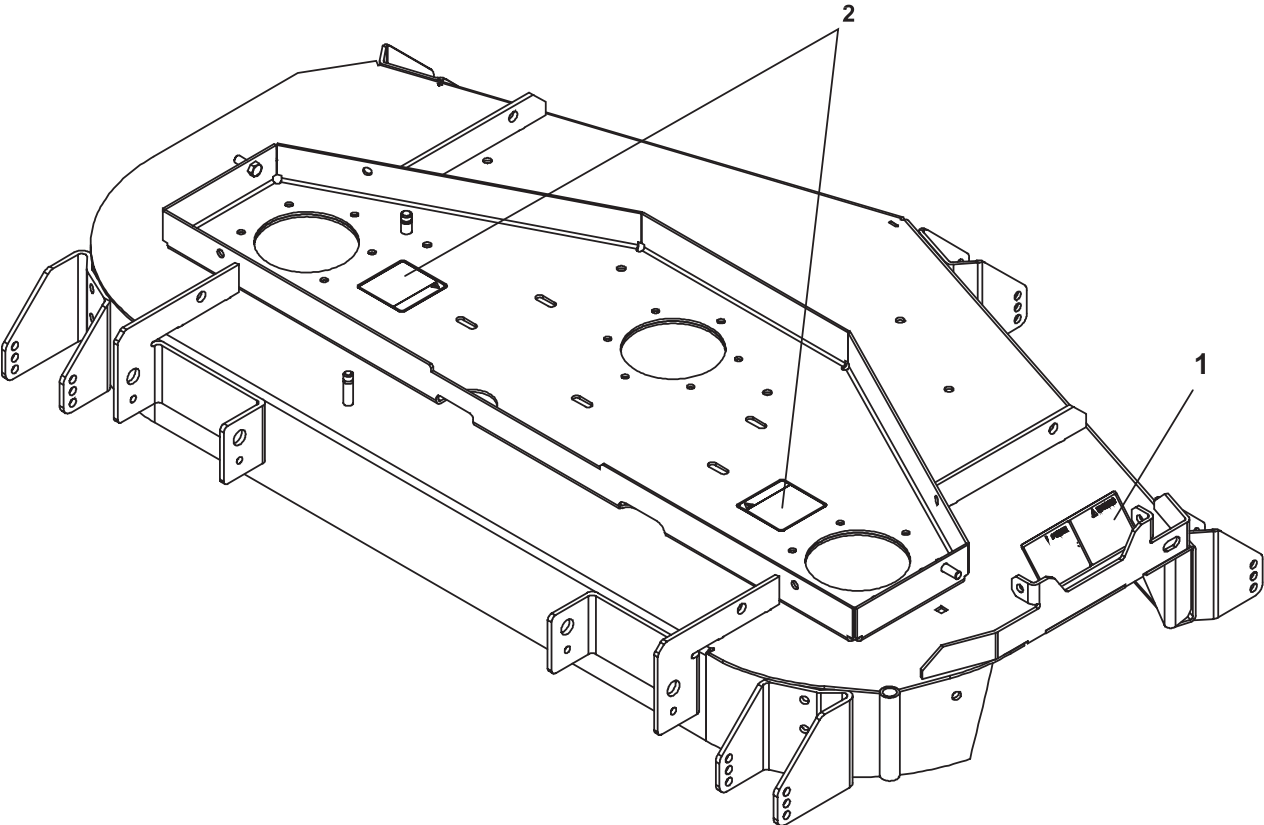

PREDATOR-PRO LP SERIES

DECALS-CUTTERDECKS

FIGURE 20

ITEM	PART NO.	DESCRIPTION	QTY	ITEM	PART NO.	DESCRIPTION	QTY
1	4164269	LABEL-WARNING BLADES	1				
2	2000577	LABEL-WARNING	2				

SCHILLER GROUNDS CARE, INC.
ONE BOB-CAT LANE
P.O. BOX 469
JOHNSON CREEK, WI 53038
920-699-2000
www.schillergc.com



©Schiller Grounds Care, Inc. 2010