


INTRODUCTION: This instruction sheet covers the installation of the 3" wheel extension kit for the Steiner power unit.

ASSEMBLY INSTRUCTIONS:

1. Raise the tractor with a jack and remove wheel and retain hardware.
2. Fit the 3 inch extension weldment (Item 1) onto the axle studs and bolt it down with the hardware removed in step 1 to 85 ft. lbs.
3. Install wheel onto the studs of the extension using nuts (Item 2) and tighten to 85 ft. lbs.

SPECIAL INSTRUCTION AND OPERATING PRECAUTIONS:

-Watch for tire clearance around gates, buildings, posts, and trees due to the increased width of the machine with the 3 inch extensions being added.

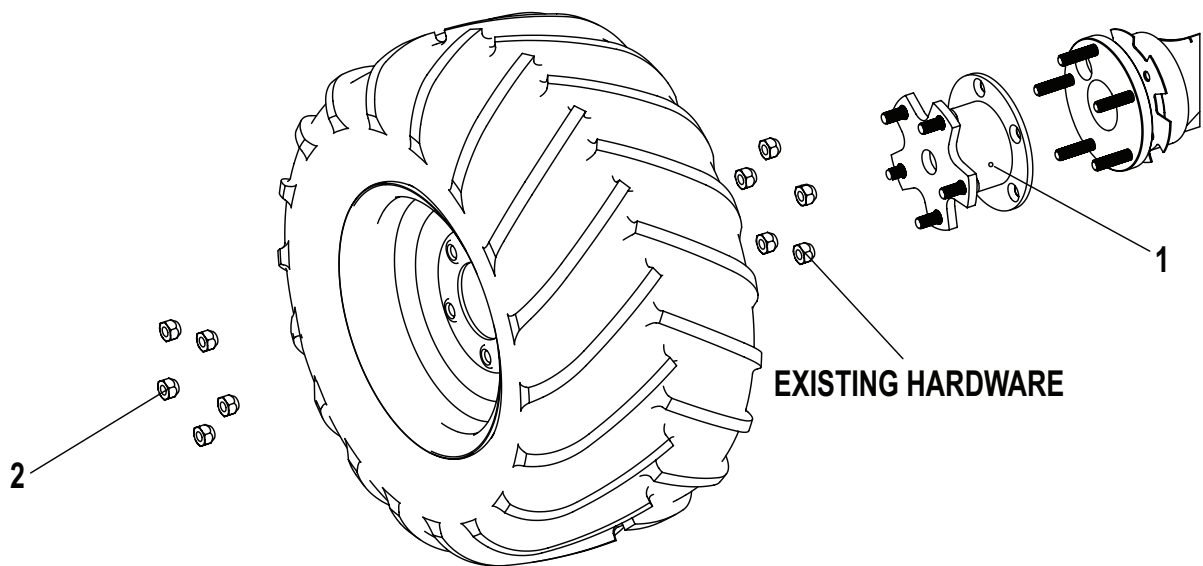

| KIT PARTS LIST | | | |
|----------------|-----------|---------------------|-----|
| ITEM | PART NO. | DESCRIPTION | QTY |
| 1 | 4167424.7 | WLDMT-3IN WHEEL EXT | 4 |
| 2 | 64187-02 | NUT-WHEEL 7/16-20 | 20 |