

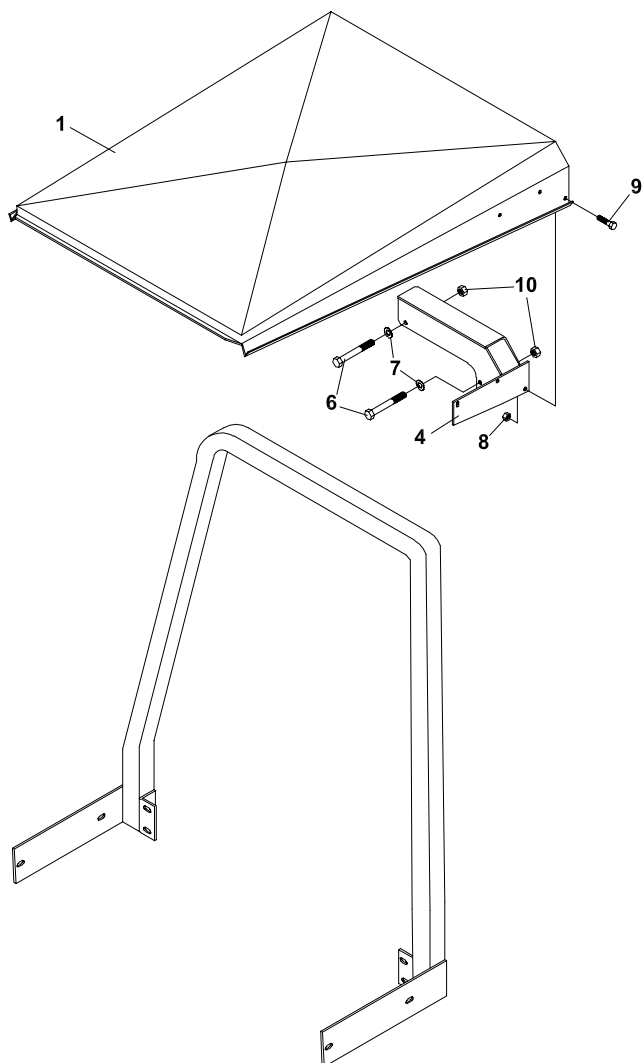
INTRODUCTION: This instruction sheet covers the installation of the Sun Shade Canopy Kits (75-70722 for the 325 power unit, 75-70732 for the 230 power unit and 75-70742 for the 430 power unit.)

- 1) Install the right and left canopy mounts **4** & **5** on the rollbar, with the long end of the mounting plates facing toward the front of the unit, with (4) 3/8" X 3" bolts **6**, (4) flat washers **7**, and (4) flanged locknuts **10**.

NOTE: Do not tighten fasteners at this time.

- 2) Install the canopy **1** with (6) 5/16" X 3/4" flanged bolts **9** and (6) flanged nuts **8**.

- 3) Tighten all fasteners.


KITS PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY
1	6106015.17	CANOPY, 325 (SUPPLIED WITH 75-70722)	1
	6106001.17	CANOPY, 230 (SUPPLIED WITH 75-70732)	1
	6106014.17	CANOPY, 430 (SUPPLIED WITH 75-70742)	1
2	*	6106019 INSULATION-FOAM (SUPPLIED WITH 75-70722)	1
	*	6106009 CANOPY HEADLINER (SUPPLIED WITH 75-70732)	1
	*	6106022 CANOPY HEADLINER (SUPPLIED WITH 75-70742)	1
3	*	4128372 LABEL-STEINER	1
4		6106010.7 MOUNT, RH CANOPY 325 (SUPPLIED WITH 75-70722)	1
		6106020.7 MOUNT, RH CANOPY (SUPPLIED WITH 75-70732 & 75-70742)	1
5	*	6106011.7 MOUNT, LH CANOPY 325 (SUPPLIED WITH 75-70722)	1
	*	6106021.7 MOUNT, LH CANOPY (SUPPLIED WITH 75-70732 & 75-70742)	1
6		64123-75 BOLT, 3/8-16X3 HEX	4
7		64163-61 WSHR .81X.406X16GA	4
8		64141-6 NUT, 5/16-18	6
9		64139-08 BOLT-5/16-18X3/4 WLF	6
10		F3013 NUT, FLNG STOVER LCK	4

*** NOT ILLUSTRATED**