

**INTRODUCTION:** This instruction sheet covers the installation of the Rear Weight Bar Kit (75-70467) on the 220/230 power units.


1. Bolt weight bar **3** to the rear bumper, using (2) 1/2-13 X 1 bolts **4** and (2) 1/2-13 nuts **2**.

**NOTE:** Prior to SN 2188, the mounting holes will need to be drilled in the rear bumper. Use the weight bar as a template and mark and drill (2) 17/32" holes.

2. Place the weights **1** on the weight bar **3** and secure with the security bar **5** and presto pin **6**.

(2) Rear Weights are recommended for the following attachments:

MX460 and MD472 mowers, RM674 and RM684 reel mowers and the SB348 snowblower.

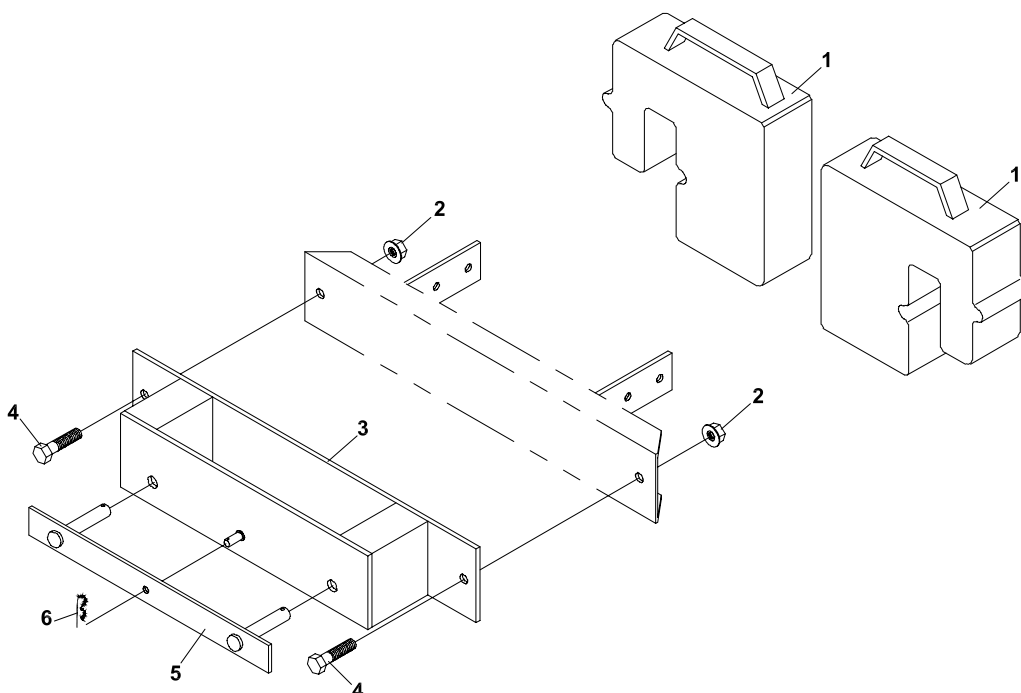

## KIT PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY
1	62-540.7	WEIGHT	2
2	64141-13	NUT WLF 1/2-13	2
3	62-830.7	BASE-WEIGHT BAR MNT	1
4	90-0808	BOLT	2
5	64-865.7	SECURITY BAR	1
6	02-PP0313	PIN-PRESTO	1