

INTRODUCTION: This instruction sheet covers the installation of the muffler exhaust deflector kit (970350) for the Steiner 230 tractor.

1. Mark and drill (2) 5/16" diameter holes on center as shown in Figure 1 on the left hand rear fender of the tractor.


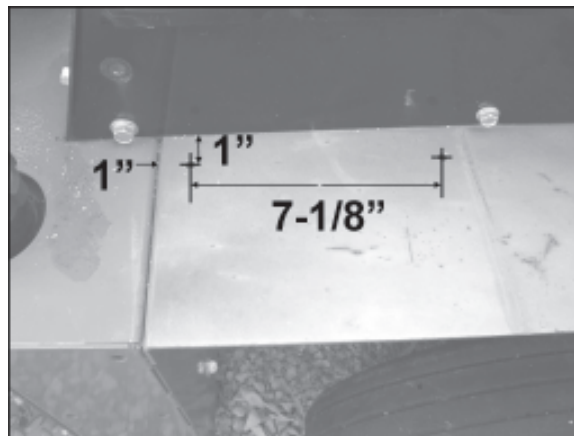


FIGURE 1

2. Mount deflector plate 1 to the left hand rear fender of the tractor, as shown, using (2) 1/4-20 X 3/4" bolts 2 and (2) 1/4-20 locknuts 3, not illustrated and tighten.

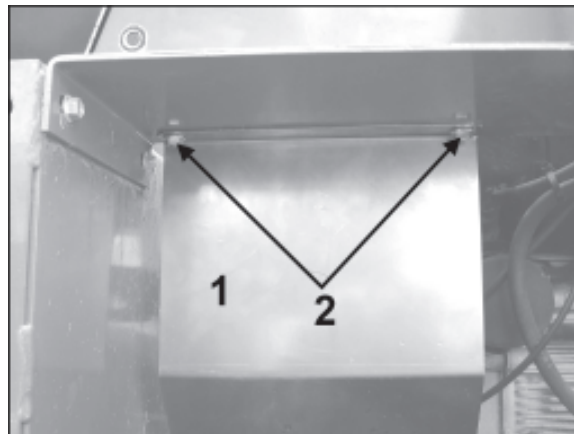

KIT PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY
1	4156949.7	PLATE-DEFLECTOR	1
2	64139-04	BOLT-WLF 1/4-20 X 3/4	2
3	64229-01	LOCKNUT-1/4-20	2