


I.S.-61" DECK EXTENSION (970335)

4141590 REVA

INTRODUCTION: This instruction sheet covers the installation of the 61" deck extension kit (970335).

TOOLS REQUIRED: (1) 7/16" box end wrench and (1) 7/16" socket and ratchet.

- 1) Install right hand extension bracket **1** using (4) 1/4-20 X 3/4 bolts **3** and (4) 1/4-20 locknuts **4**.
- 2) Install left hand extension bracket **2** using (4) 1/4-20 X 3/4 bolts **3** and (4) 1/4-20 locknuts **4**.
- 3) Tighten all fasteners at this time.

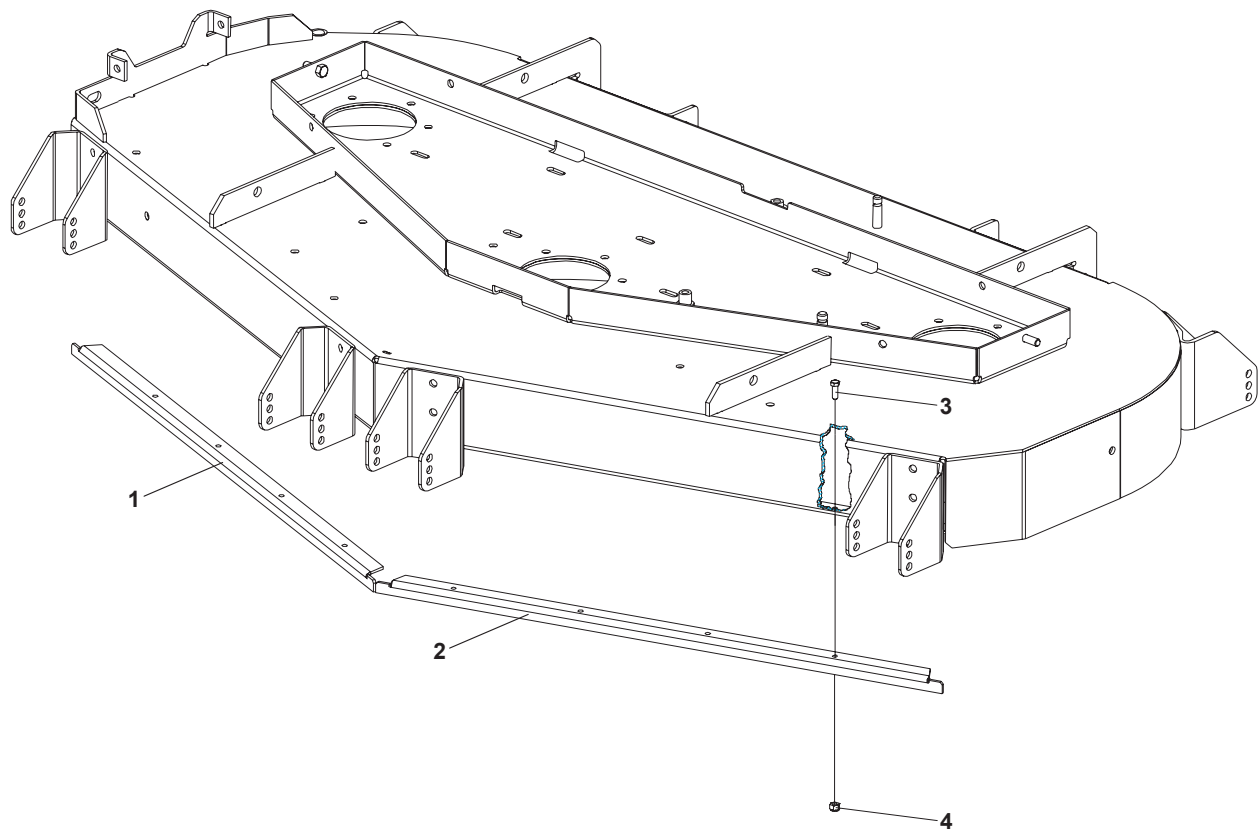

KIT PARTS LIST

ITEM	PART NO.	DESCRIPTION	QTY
1	4140884.7	EXTENSION-61 RH	1
2	4140885.7	EXTENSION-61 LH	1
3	64123-89	BOLT-HEX 1/4-20X3/4	8
4	64229-01	LOCKNUT-1/4-20 NYLON	8