

I.S.-KIT-POLY WEAR EDGES FOR DOZER BLADES (970420, 970421, 970422)


4167518 REV A

INTRODUCTION: These instructions explain how to install the poly wear edges for the 48", 60" and 72" dozer blades.

INSTALLATION:

1. Remove standard steel wear edge from the dozer blade. Retain wear edge and hardware for future use.
2. Assemble the new poly wear blades per Figure 1.

Figure 1

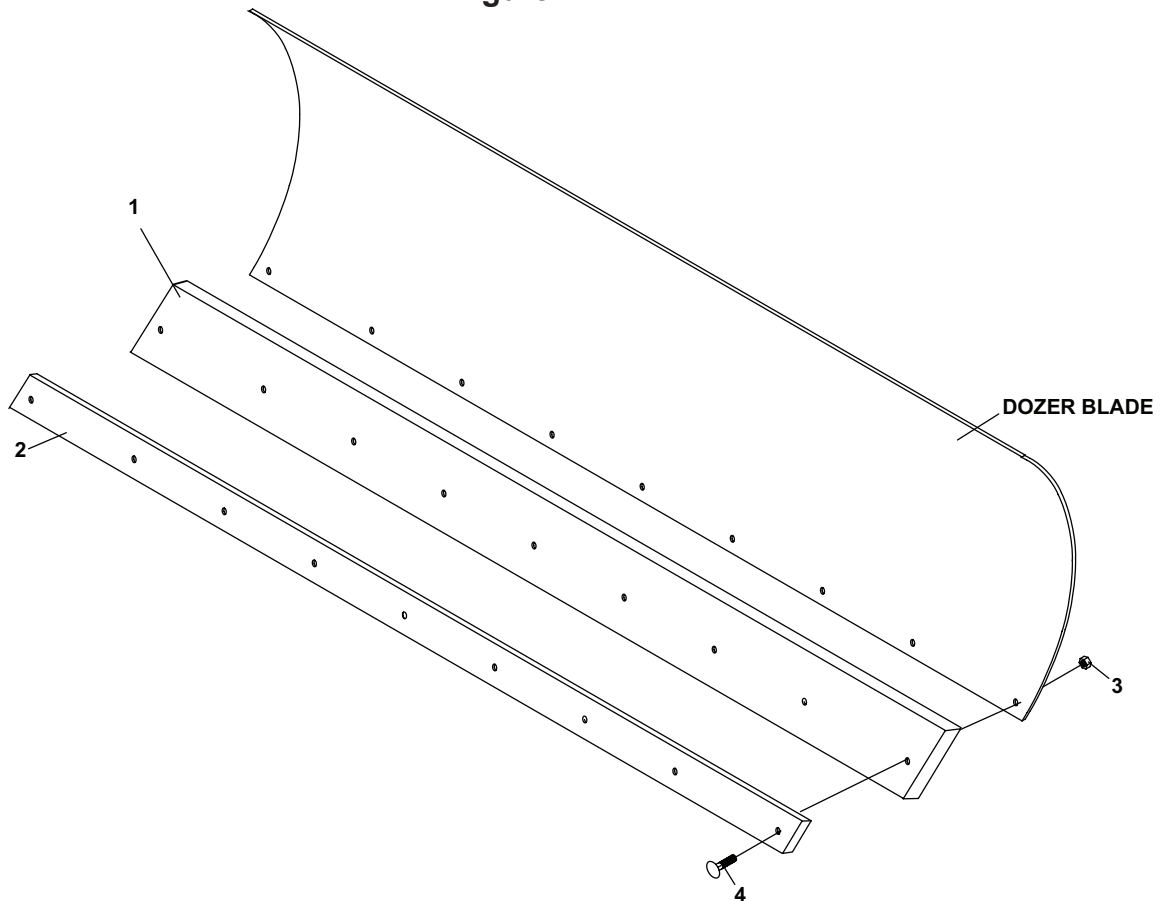

ITEM	PART NO.	DESCRIPTION	QTY
1	4166356	WEAR EDGE-BLADE, POLY 48"	1
	4166357	WEAR EDGE-BLADE, POLY 60"	1
	4166358	WEAR EDGE-BLADE, POLY 72"	1
2	4167290.7	PLATE-SUPPORT, POLY 48"	1
	4167291.7	PLATE-SUPPORT, POLY 60"	1
	4167292.7	PLATE-SUPPORT, POLY 72"	1
3	64229-03	NUT-NYLON LCK 3/8-16 (48")	7
	64229-03	NUT-NYLON LCK 3/8-16 (60")	9
	64229-03	NUT-NYLON LCK 3/8-16 (72")	10
4	64218-08	SCRW-3/8-16X2 1/4 BTTN (48")	7
	64218-08	SCRW-3/8-16X2 1/4 BTTN (60")	9
	64218-08	SCRW-3/8-16X2 1/4 BTTN (72")	10