



One BOB-CAT Lane, P.O. Box 469
Johnson Creek, WI 53038 U.S.A.
(920) 699 2000
Fax: (920) 699 6836

Information Bulletin

Date: 7/25/2016


Bulletin No: JC-16-07

Product Type: ProCat and SE units with adjustable suspension seat

Customer Issue: Cannot turn adjusting knob to change seat weight setting.

Cause: Adjuster needs lubrication maintenance.

Action Required: Per the illustrations below, lubricate the adjusting mechanism periodically.

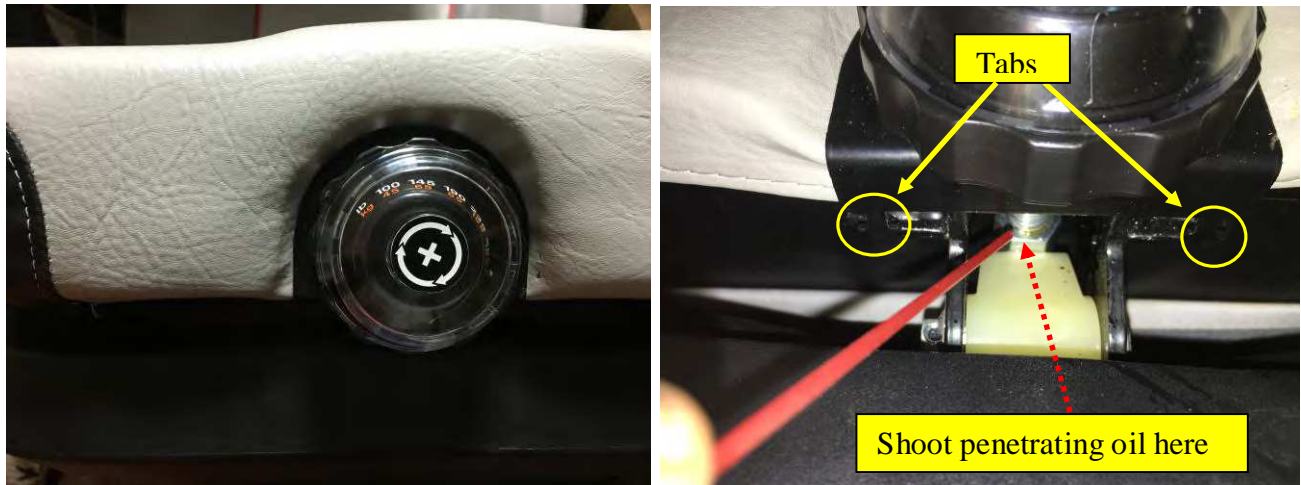

Units that have this style adjusting knob, have a rubber skirt at the front of the seat. The rubber skirt is simply held on by two metal tabs. Push the skirt back and shoot penetrating oil on the adjuster bolt as shown in the picture above.

If the adjuster is stuck due to not being lubricated in a while, remove the plastic adjuster knob by lifting the center decal off and removing the Phillips head screw as shown below. Put a Crescent wrench on the shaft and work it back and forth while applying lubricant. Note: be aware the shaft will get shorter when turned counter-clockwise. So if you screw it in, you have to screw it back out to put the knob back on.



One BOB-CAT Lane, P.O. Box 469
Johnson Creek, WI 53038 U.S.A.
(920) 699 2000
Fax: (920) 699 6836



Warranty: Does not apply

If you have any questions, please contact our Customer Service Department at 920-699-2000.

This bulletin is relevant to the departments checked below. Please circulate as appropriate.

SERVICE ☒ WARRANTY ☒ SALES ☒ PARTS ☐